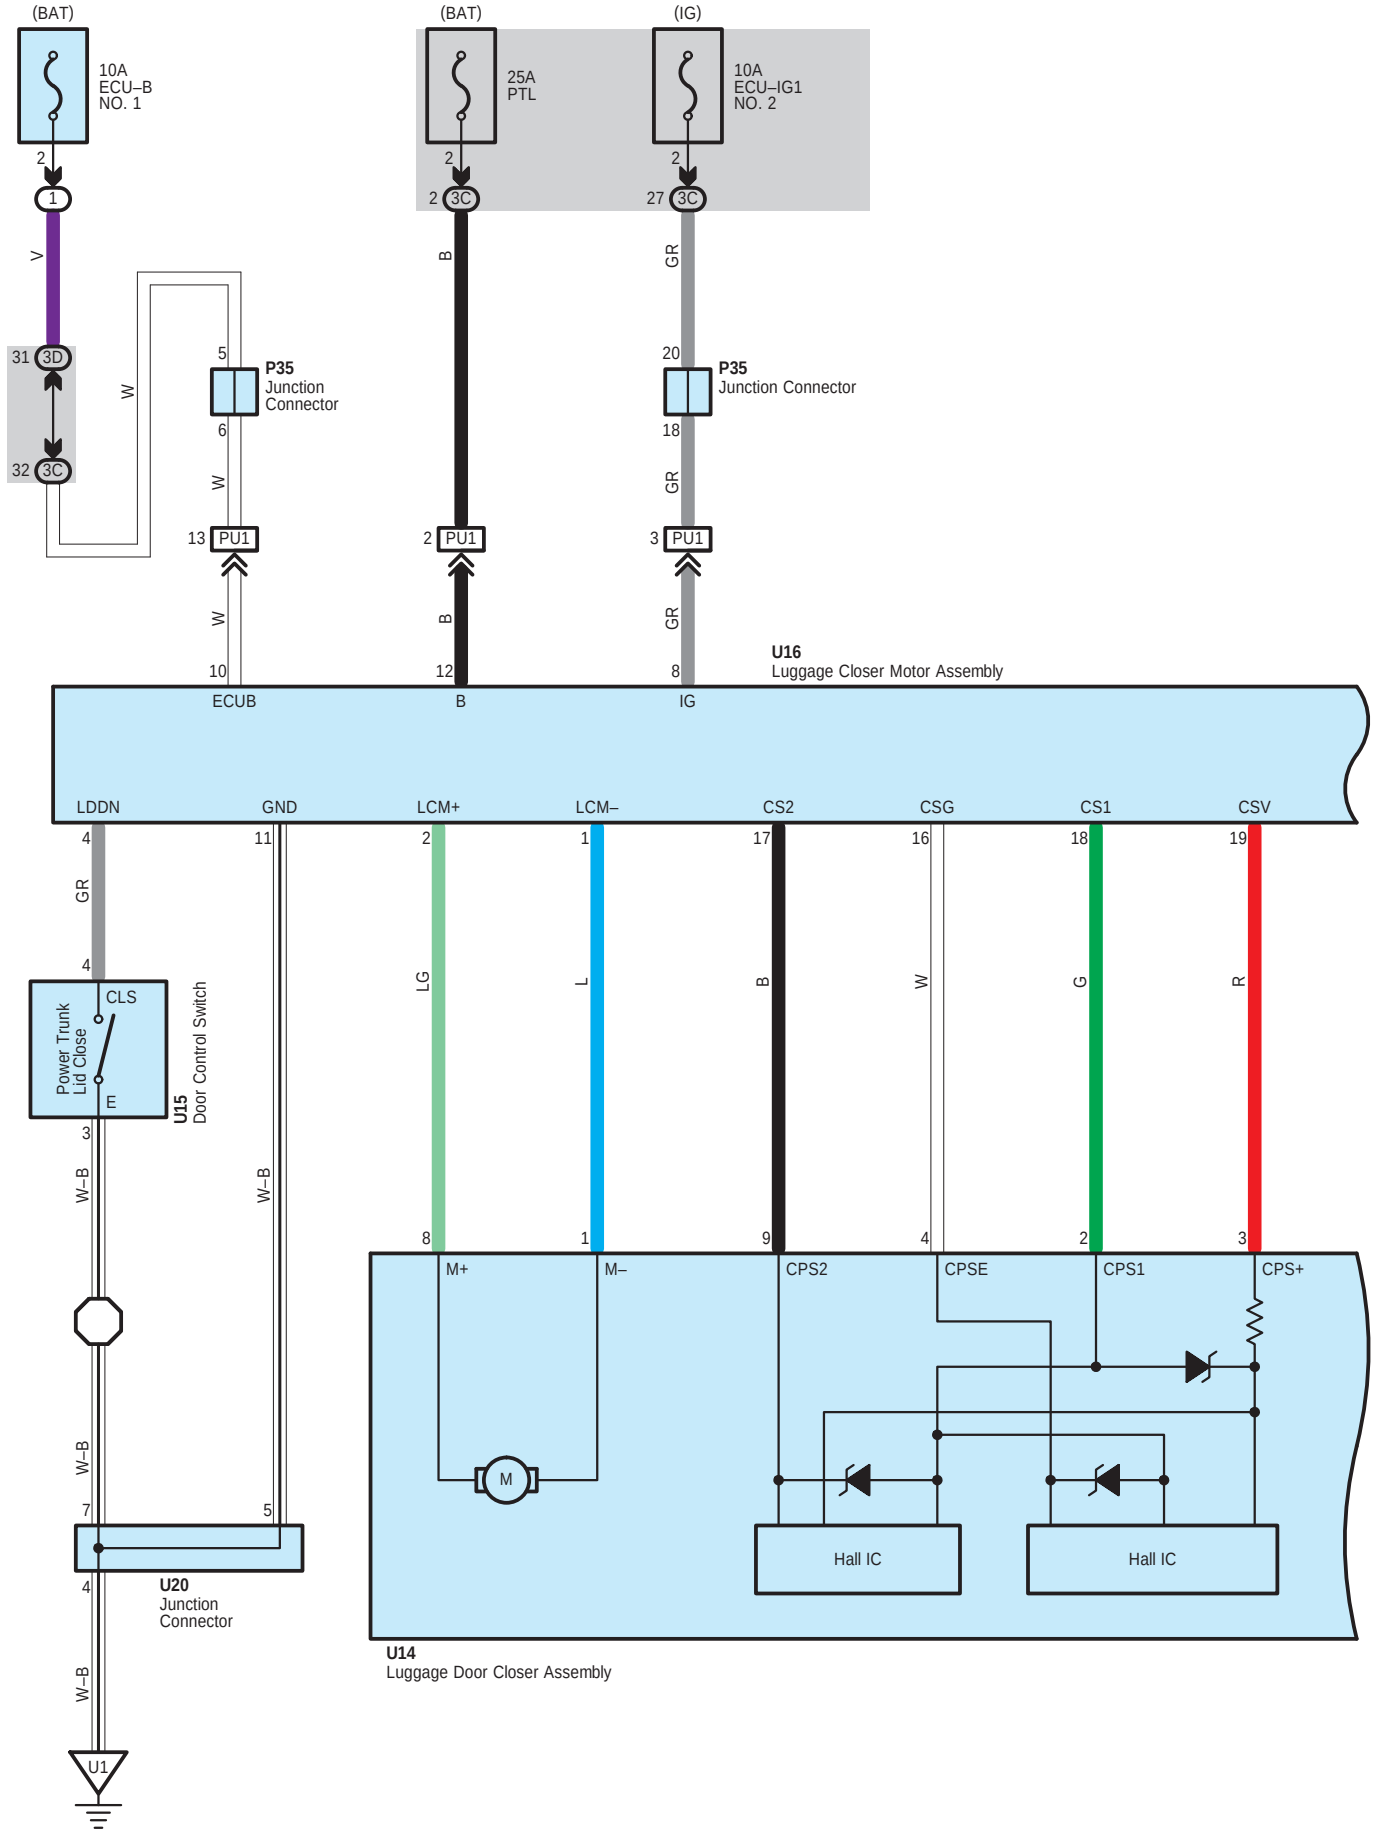
(BAT)
10A
ECU–B
NO. 1
(BAT)
25A
PTL
(IG)
10A
ECU–IG1
NO. 2
P35
Junction
Connector
P35
Junction Connector
U16
Luggage Closer Motor Assembly
ECUB
B
IG
LDDN
GND
LCM+
LCM–
CS2
CSG
CS1
CSV
Power Trunk
Lid Close
CLS
E
U15
Door Control Switch
U20
Junction
Connector
U1
M+
M–
CPS2
CPSE
CPS1
CPS+
M
Hall IC
Hall IC
U14
Luggage Door Closer Assembly

∗ 5 : Before Aug. 2016 Production
∗ 6 : From Aug. 2016 Production

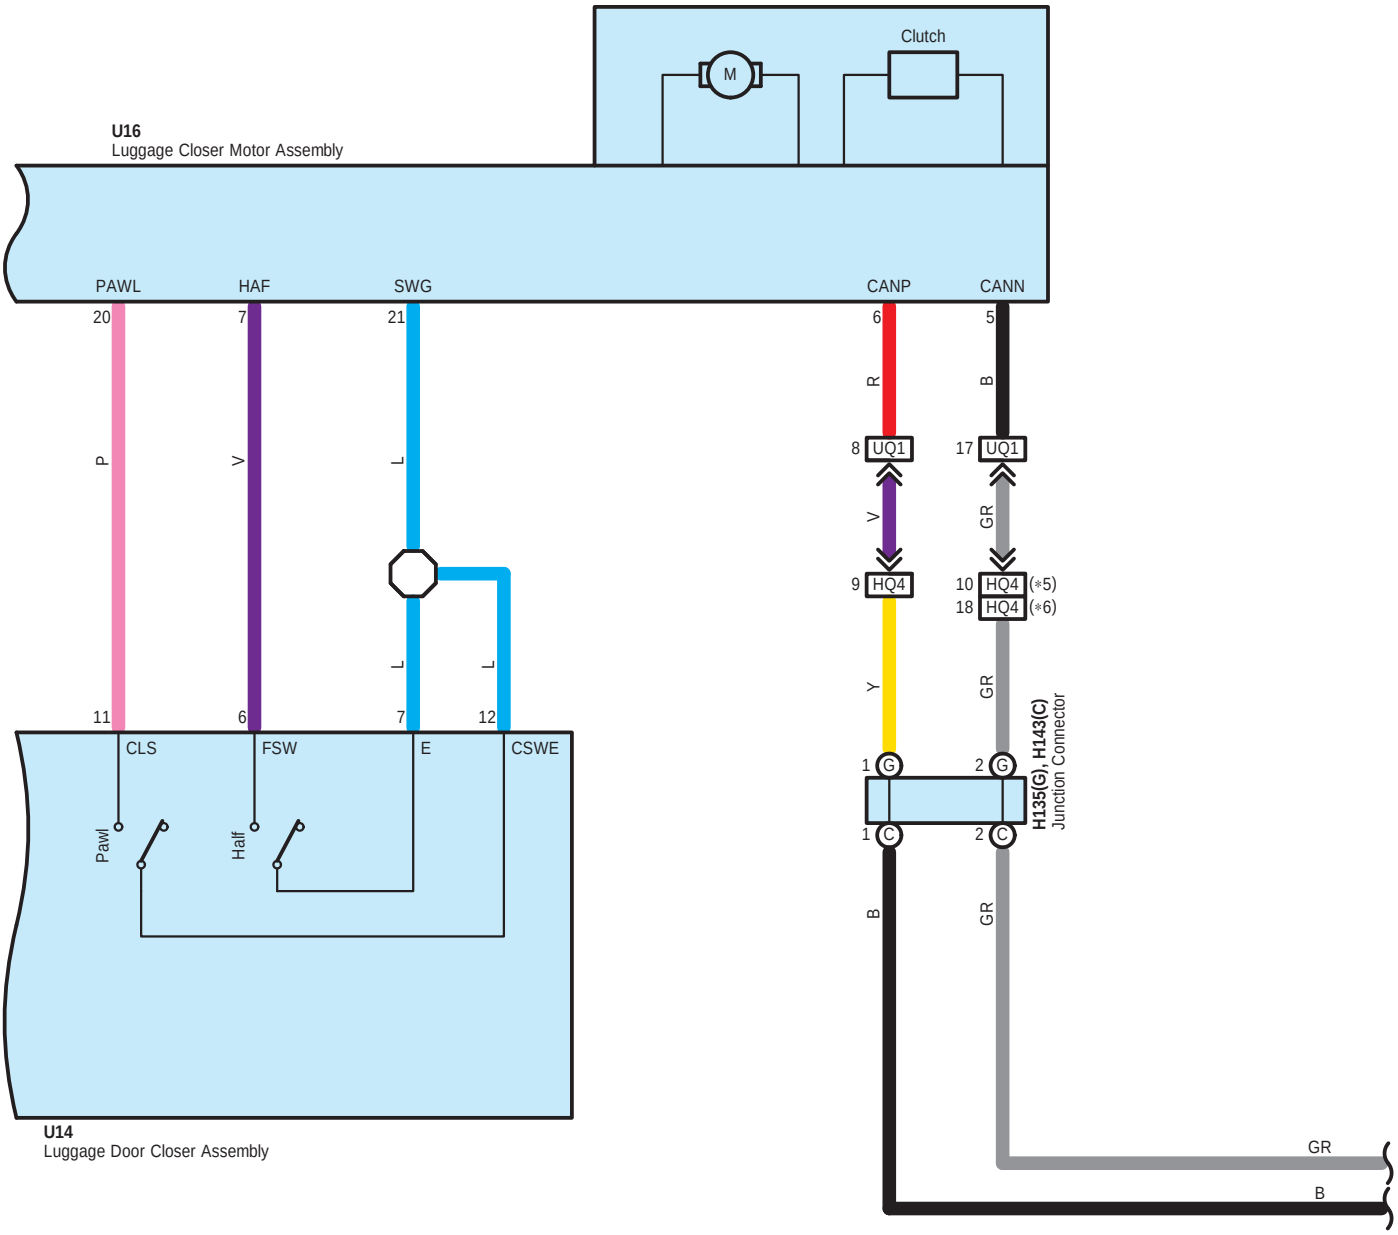

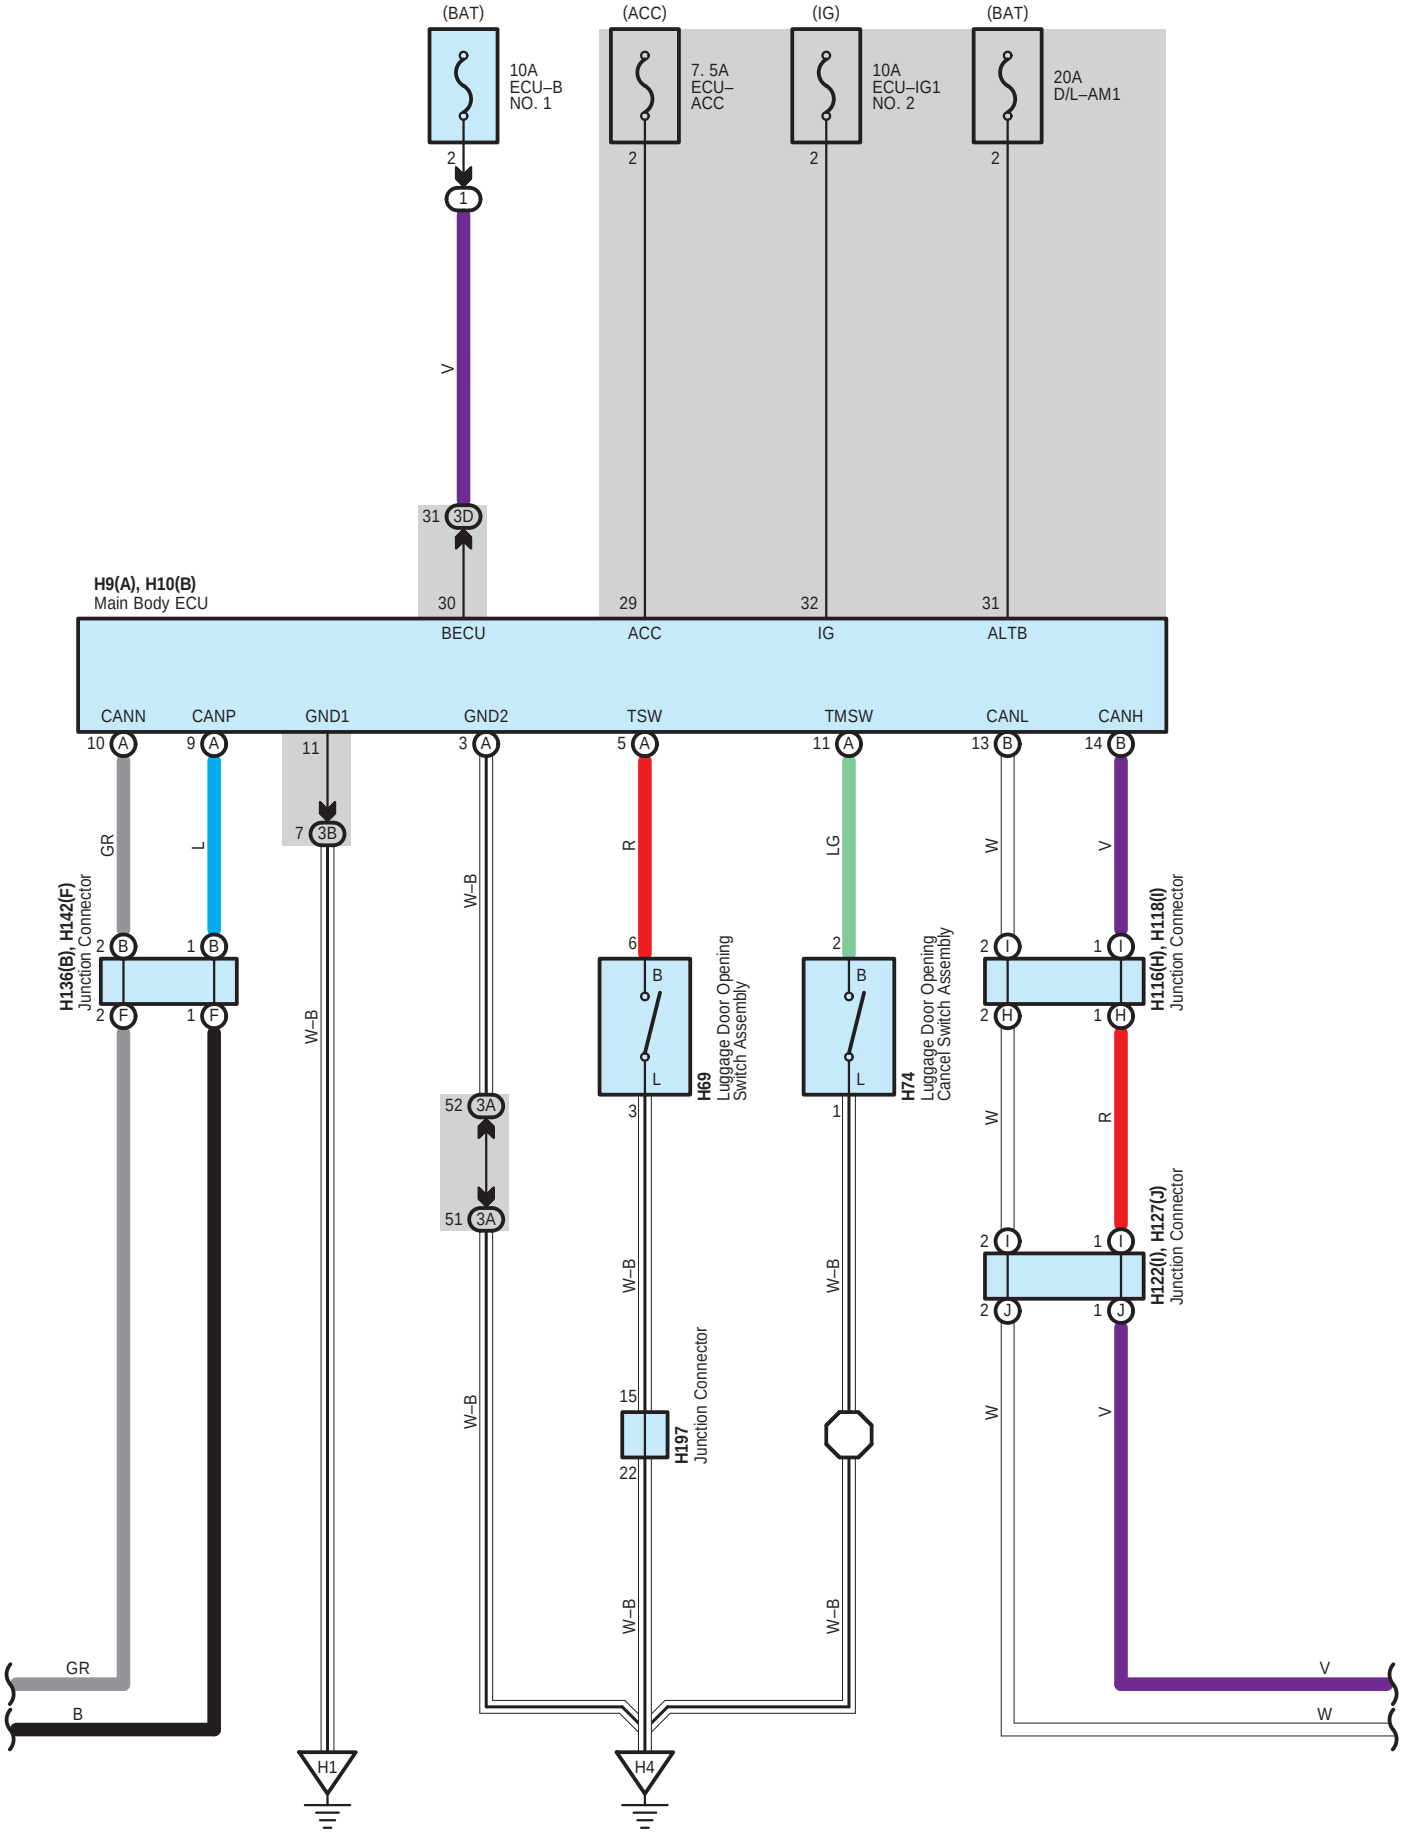
(BAT)
10A
ECU–B
NO. 1
(ACC)
7. 5A
ECU–
ACC
(IG)
10A
ECU–IG1
NO. 2
(BAT)
20A
D/L–AM1
H9(A), H10(B)
Main Body ECU
BECU
ACC
IG
ALTB
CANN
CANP
GND1
GND2
TSW
TMSW
CANL
CANH
H136(B), H142(F)
Junction Connector
H69
Luggage Door Opening
Switch Assembly
H74
Luggage Door Opening
Cancel Switch Assembly
H116(H), H118(I)
Junction Connector
H122(I), H127(J)
Junction Connector
H197
Junction Connector
H1
H4

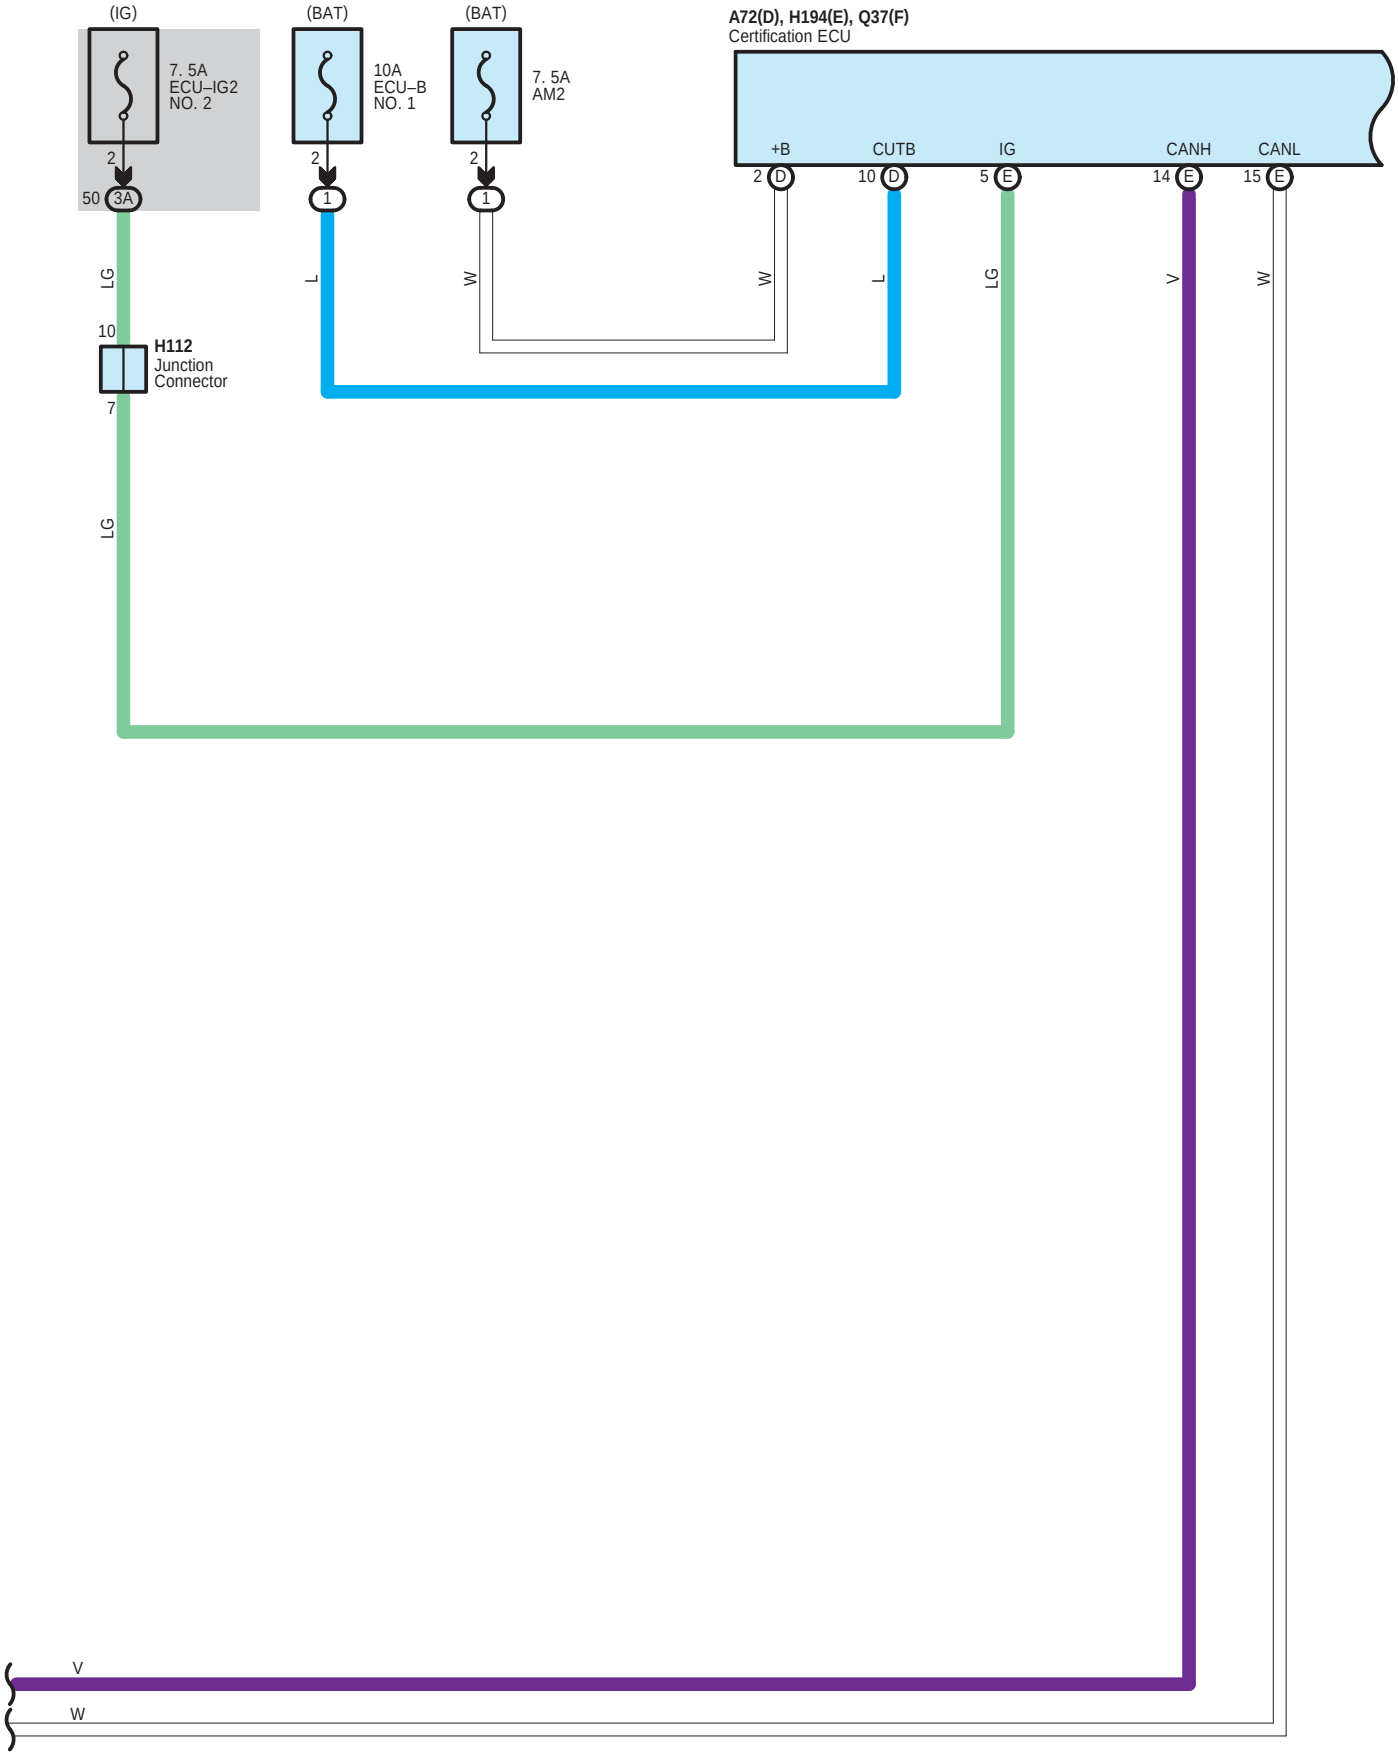
(IG)
7. 5A
ECU–IG2
NO. 2
2
50 3A
(BAT)
10A
ECU–B
NO. 1
2
1
(BAT)
7. 5A
AM2
2
1
A72(D), H194(E), Q37(F)
Certification ECU
+B
CUTB
IG
CANH
CANL
2 D
10 D
5 E
14 E
15 E
LG
L
W
W
L
LG
V
W
10
H112
Junction
Connector
7
LG
V
W

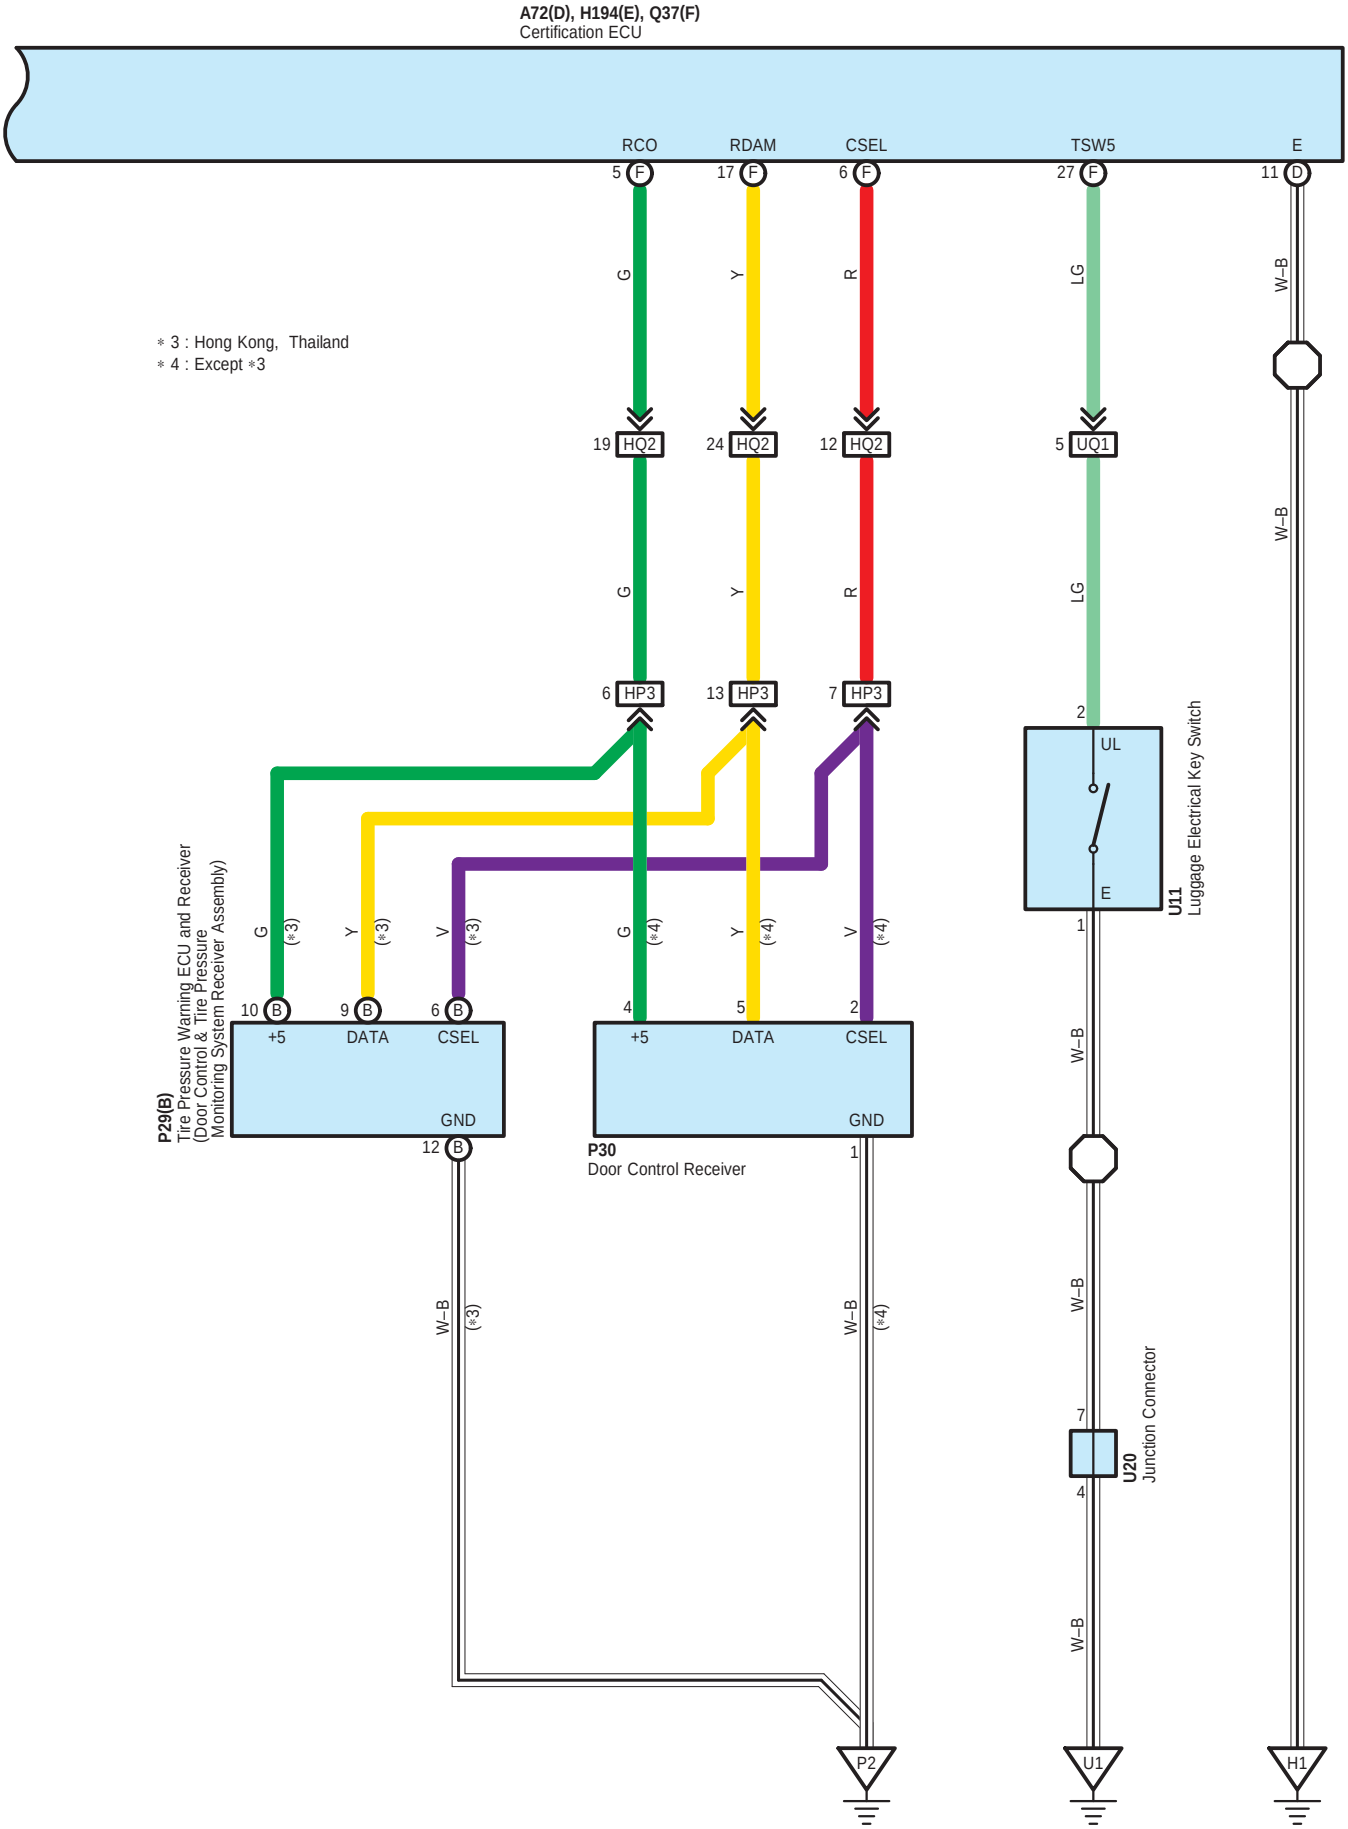
A72(D), H194(E), Q37(F)
Certification ECU
RCO
RDAM
CSEL
TSW5
E
5 F
17 F
6 F
27 F
11 D
G
Y
R
LG
W–B
∗ 3 : Hong Kong, Thailand
∗ 4 : Except ∗3
19 HQ2
24 HQ2
12 HQ2
5 UQ1
6 HP3
13 HP3
7 HP3
2
UL
E
U11
Luggage Electrical Key Switch
1
(∗3)
(∗4)
10 B
9 B
6 B
4
5
2
+5
DATA
CSEL
GND
12 B
1
P29(B)
Tire Pressure Warning ECU and Receiver
(Door Control & Tire Pressure
Monitoring System Receiver Assembly)
P30
Door Control Receiver
7
4
U20
Junction Connector
P2
U1
H1

A 72
White

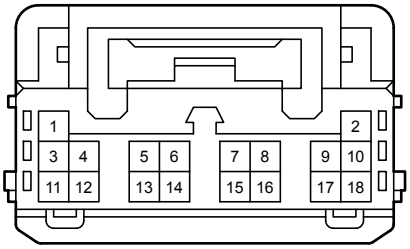

H 9
White

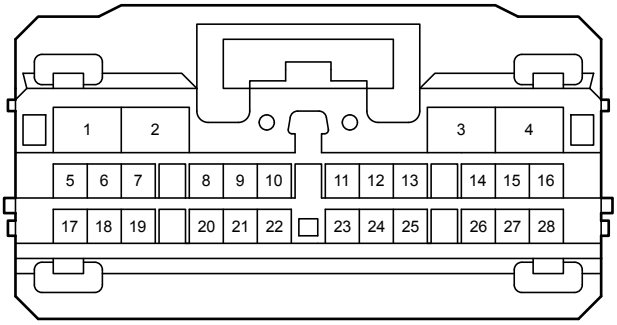

H 10
White

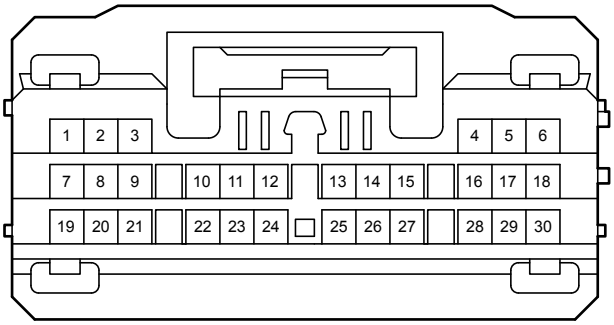

H 69
Black

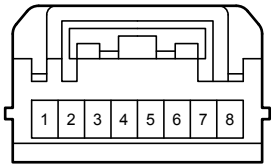

H 74
Blue



H112
White

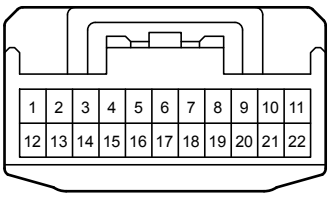

H116
White



H118
White



H122
White



H127
White



H135
White



H136
White



H142
White



H143
White



H194
White

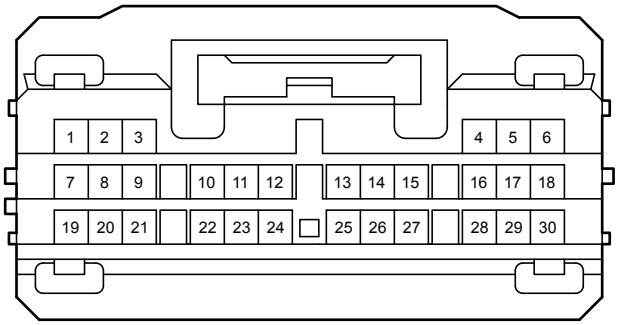

H197
White

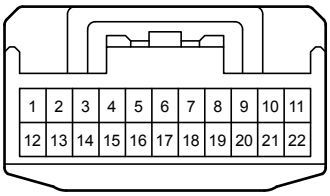

P 29
White

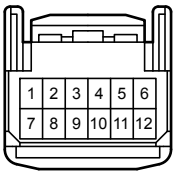

P 30
Blue

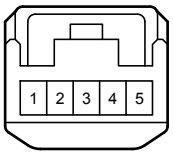

P 35
White

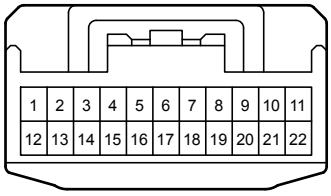

Q 37
White

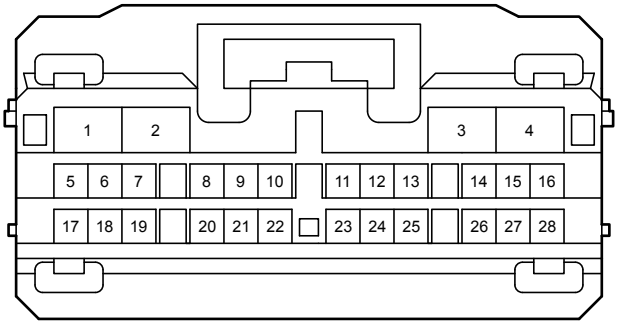

U 11
White



U 14
White

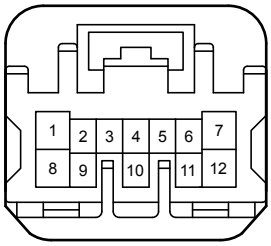

U 15
Black

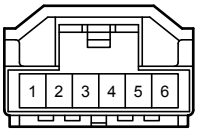

U 16
White

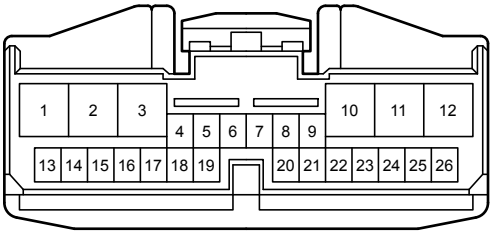

U 20
White

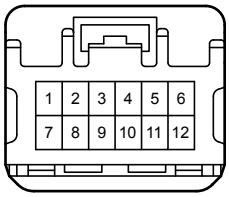

3A
White

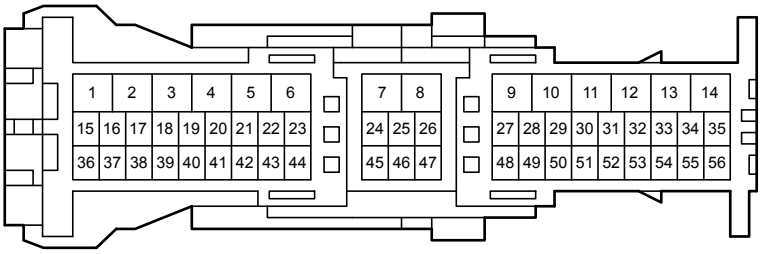

3B
White

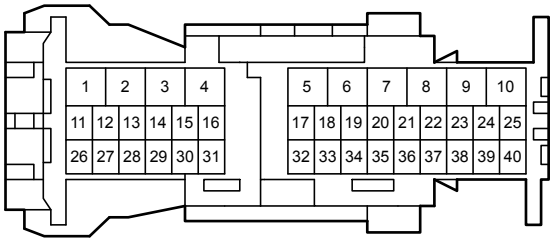

3C
White

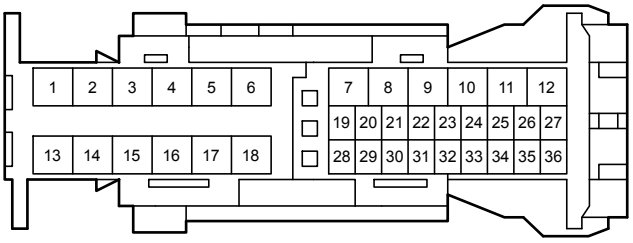

3D
White

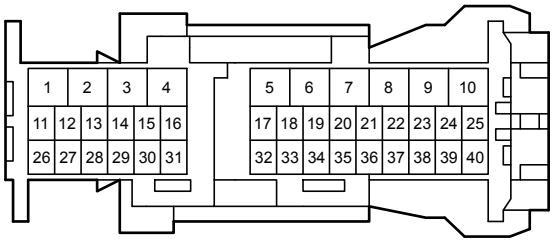

HP3
White

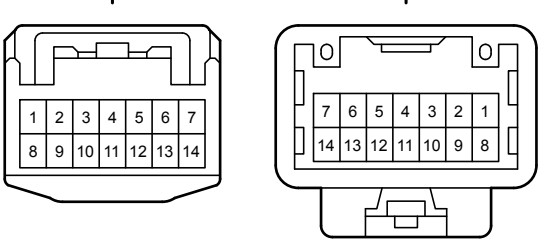

HQ2
White

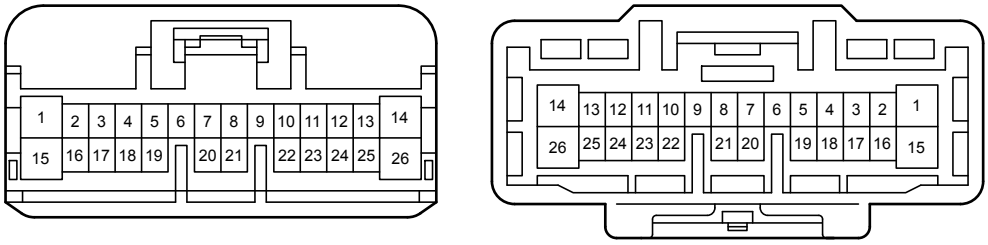

HQ4
White

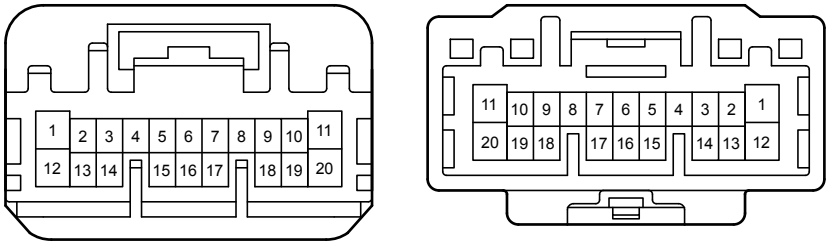

PU1
White

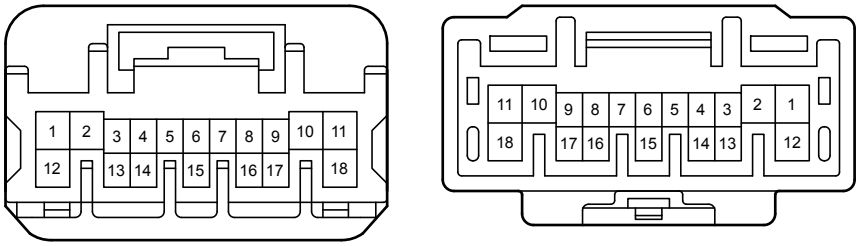
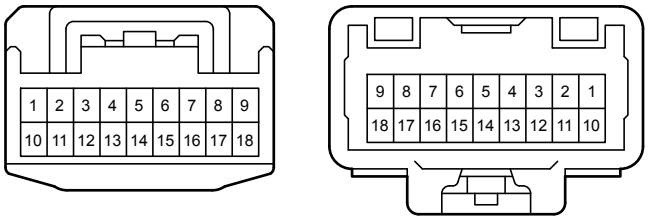
UQ1
White