(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

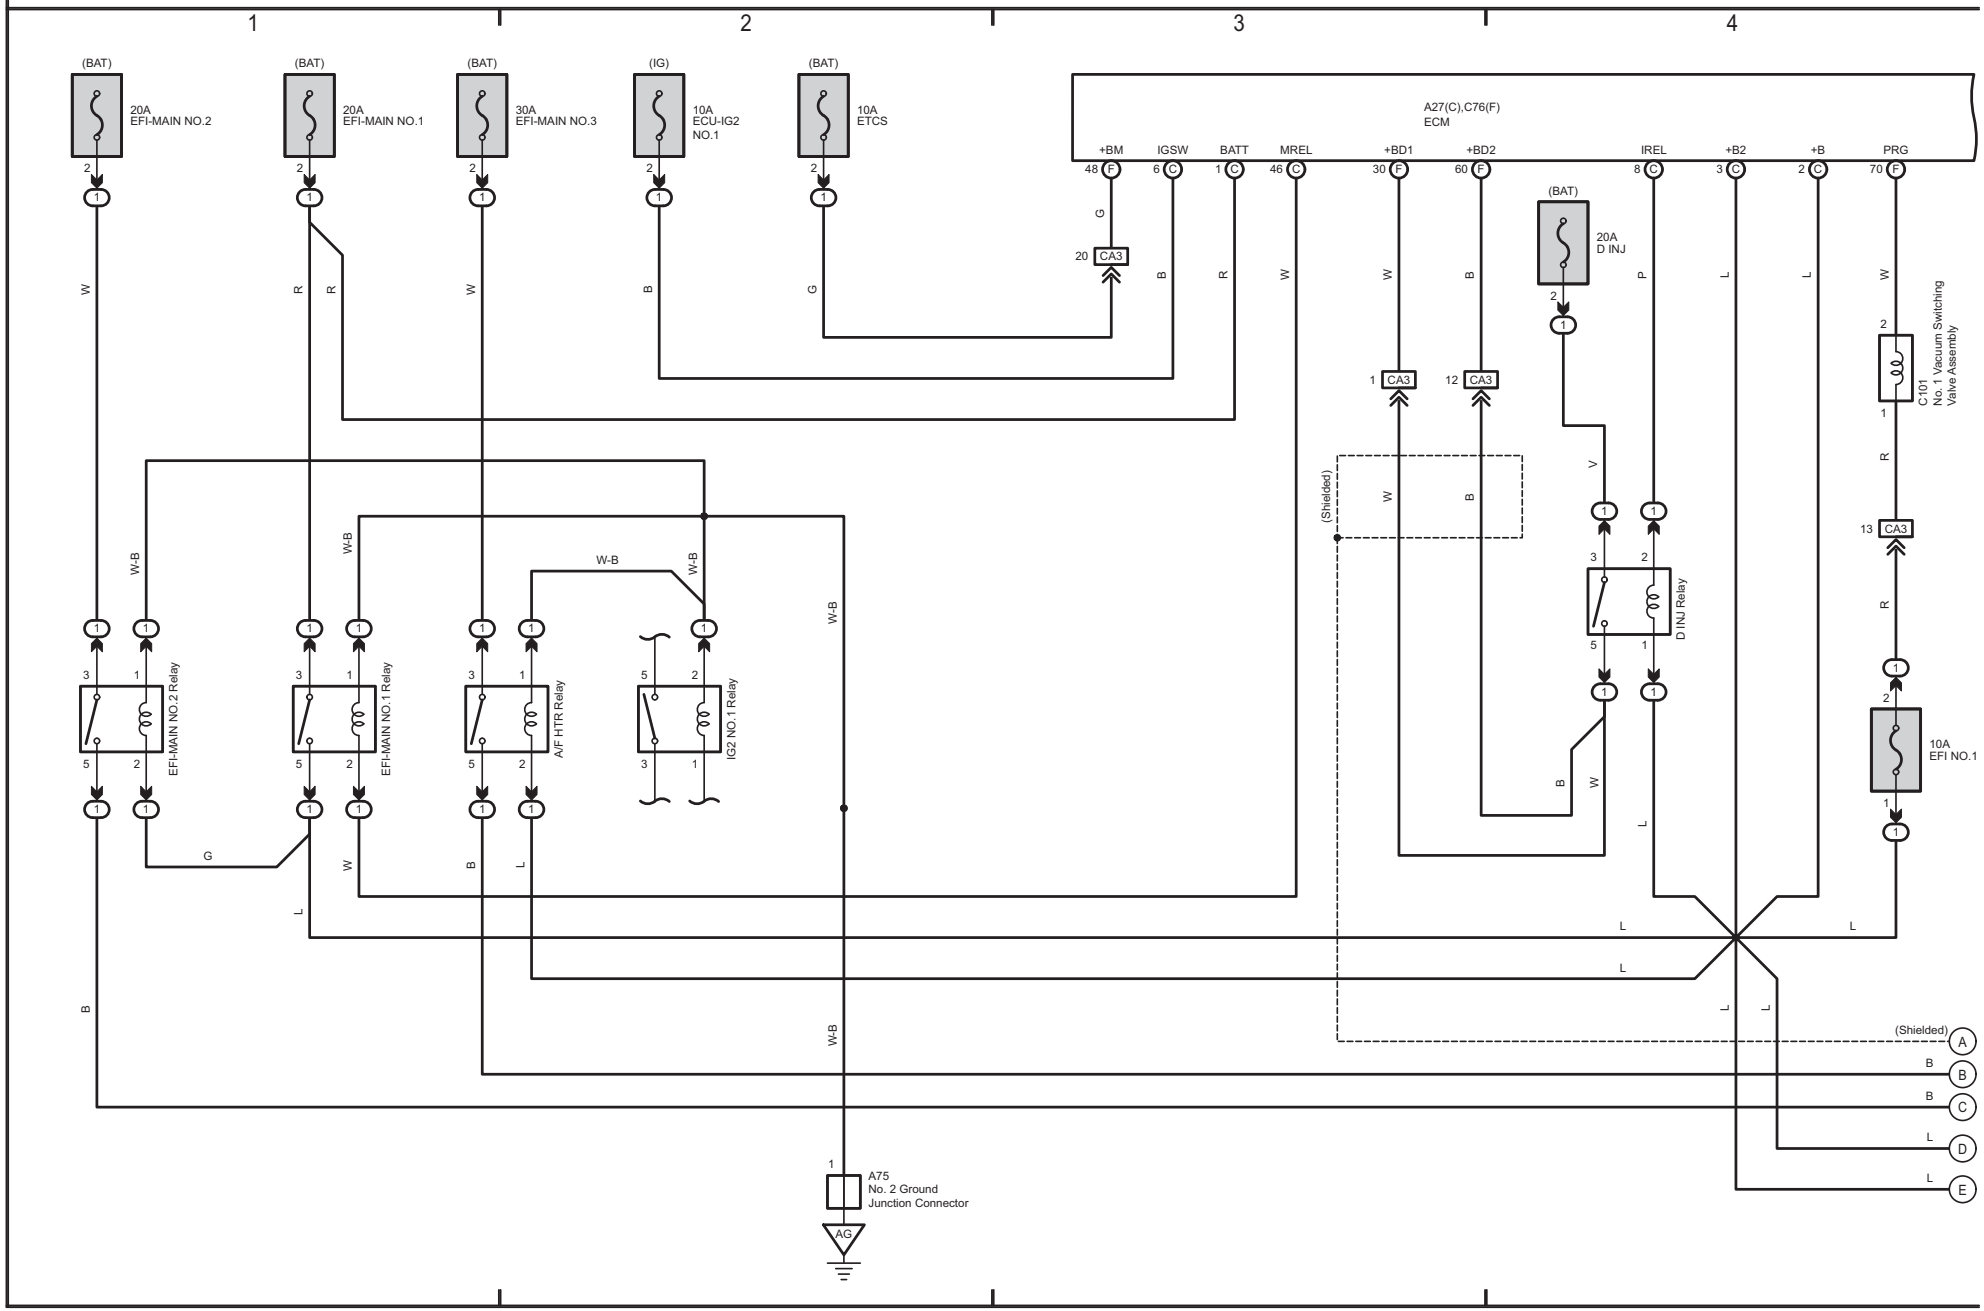

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

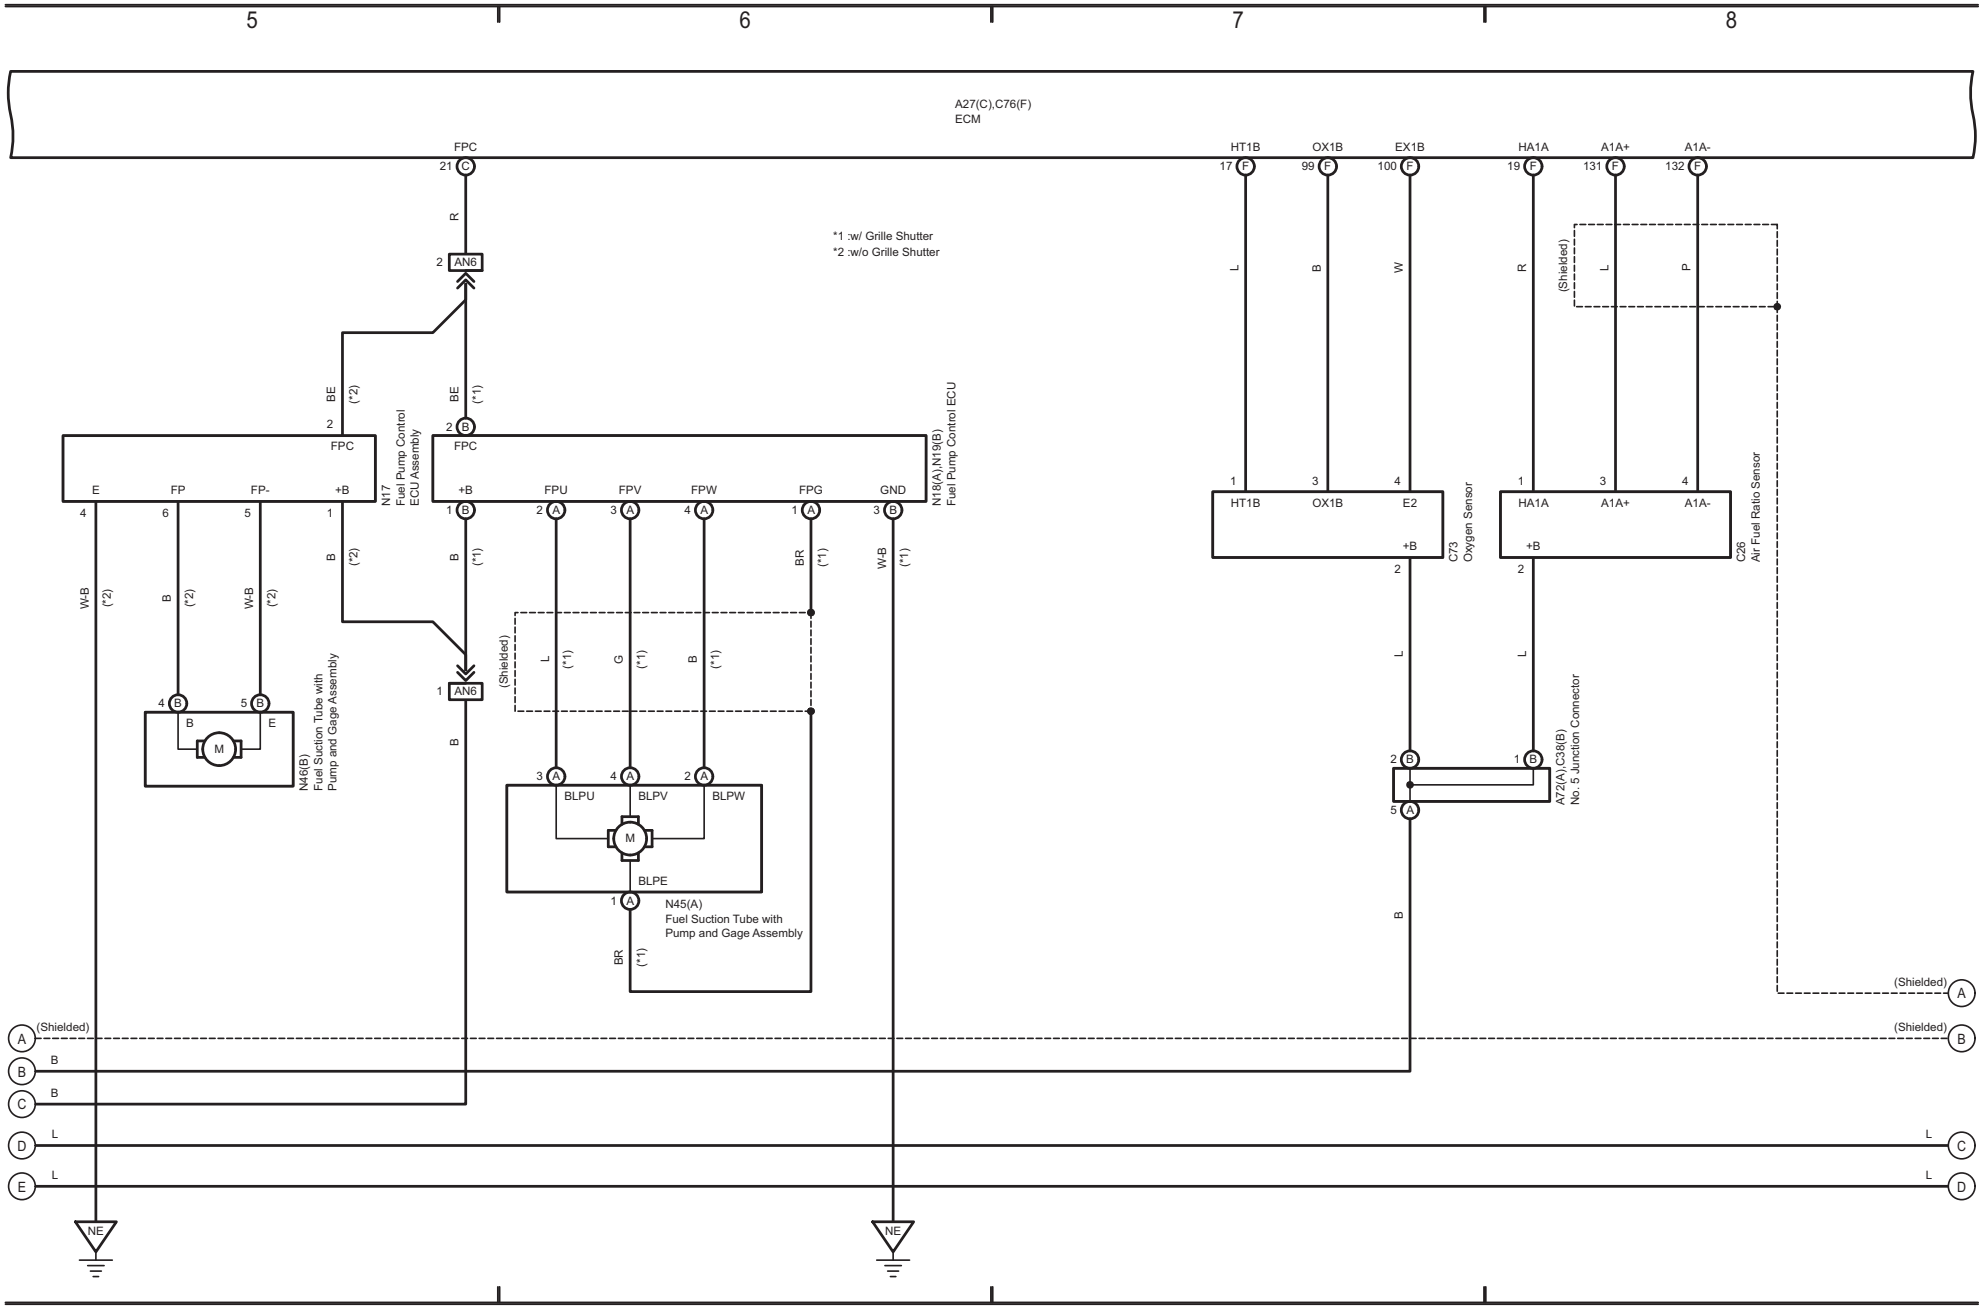

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

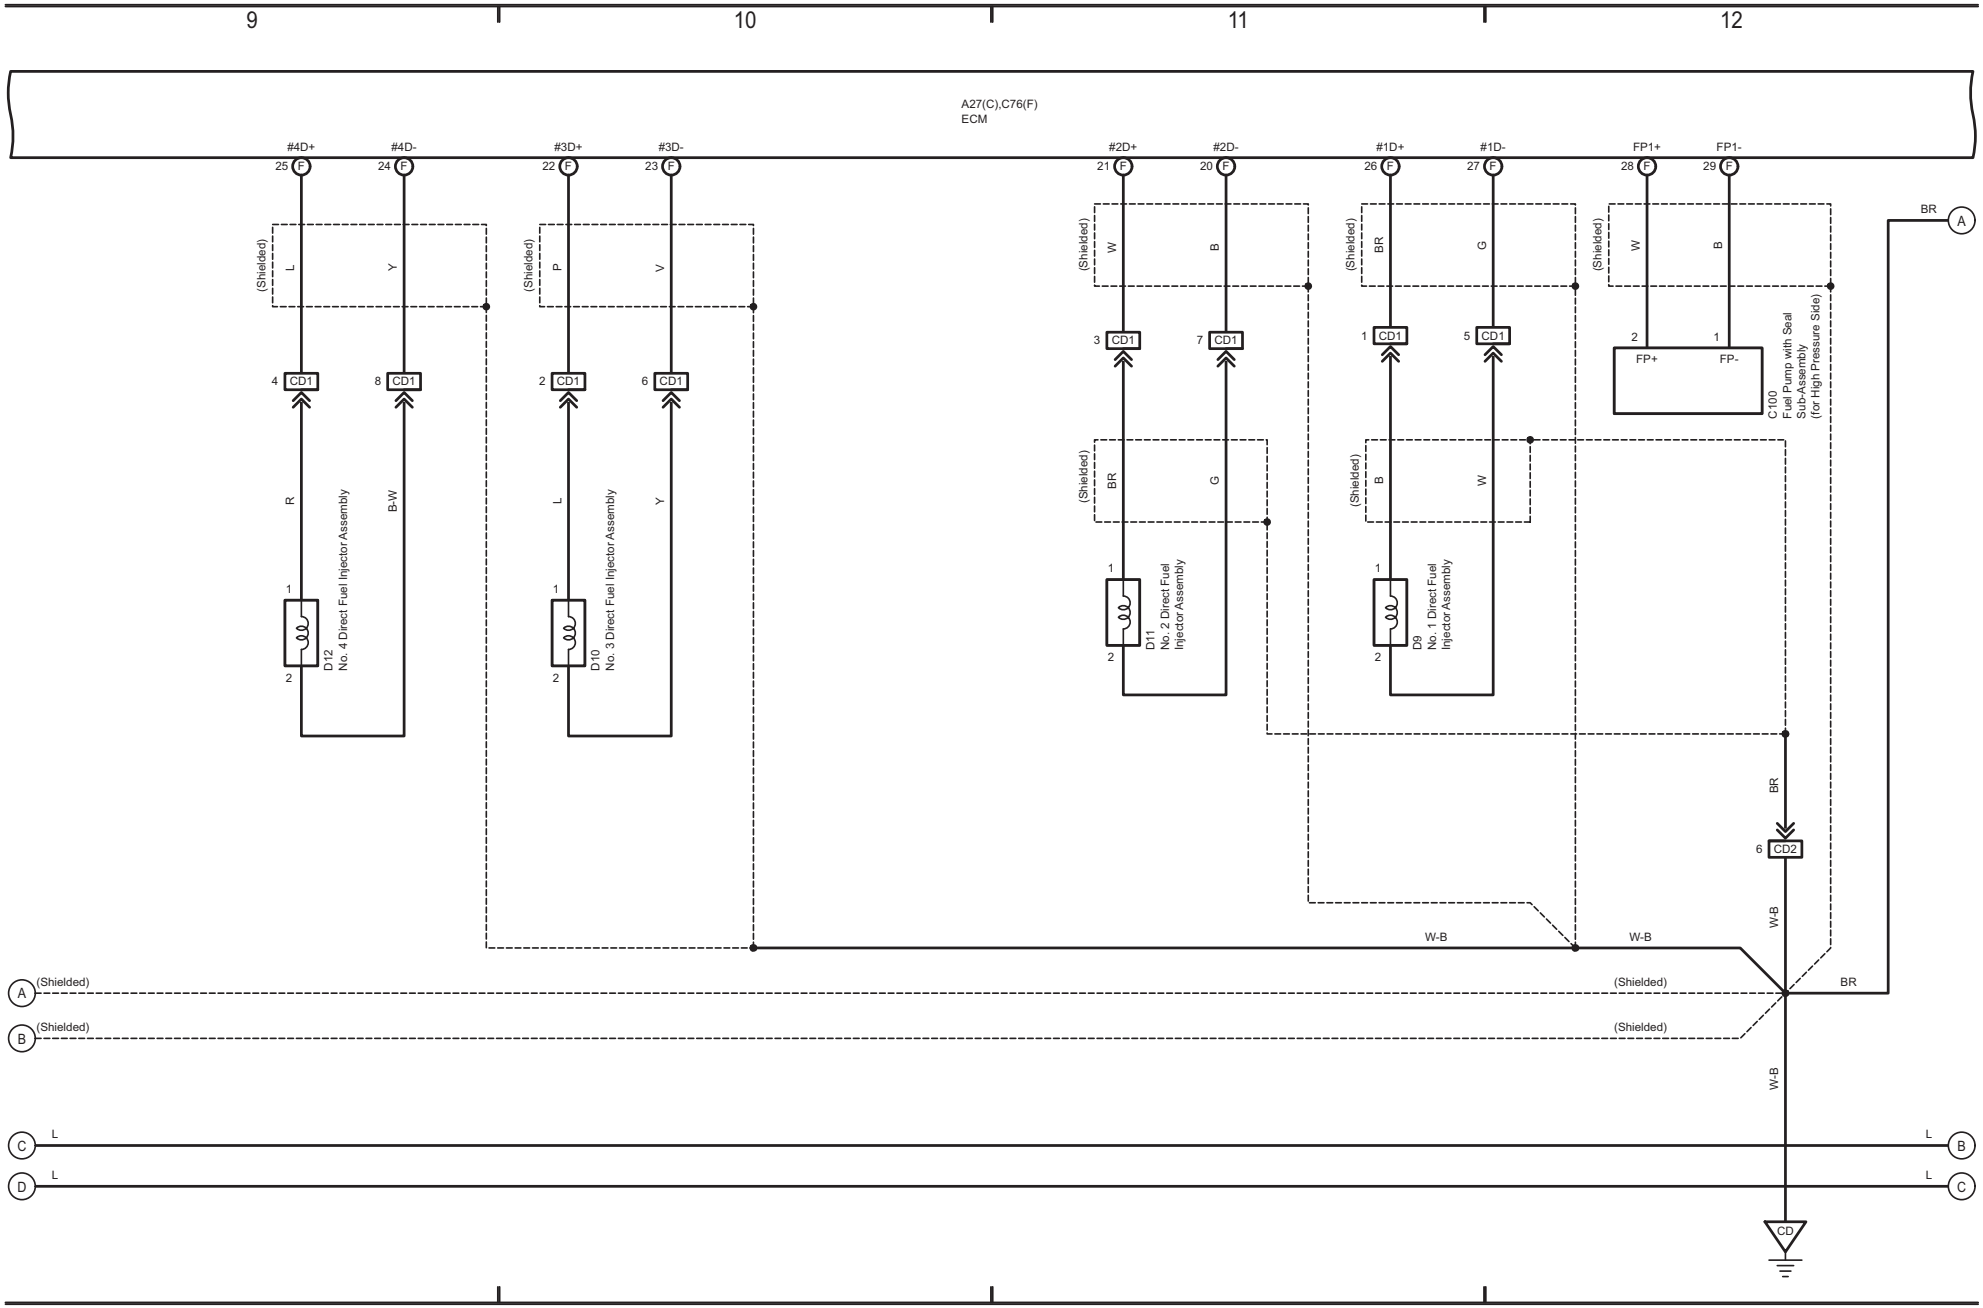

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

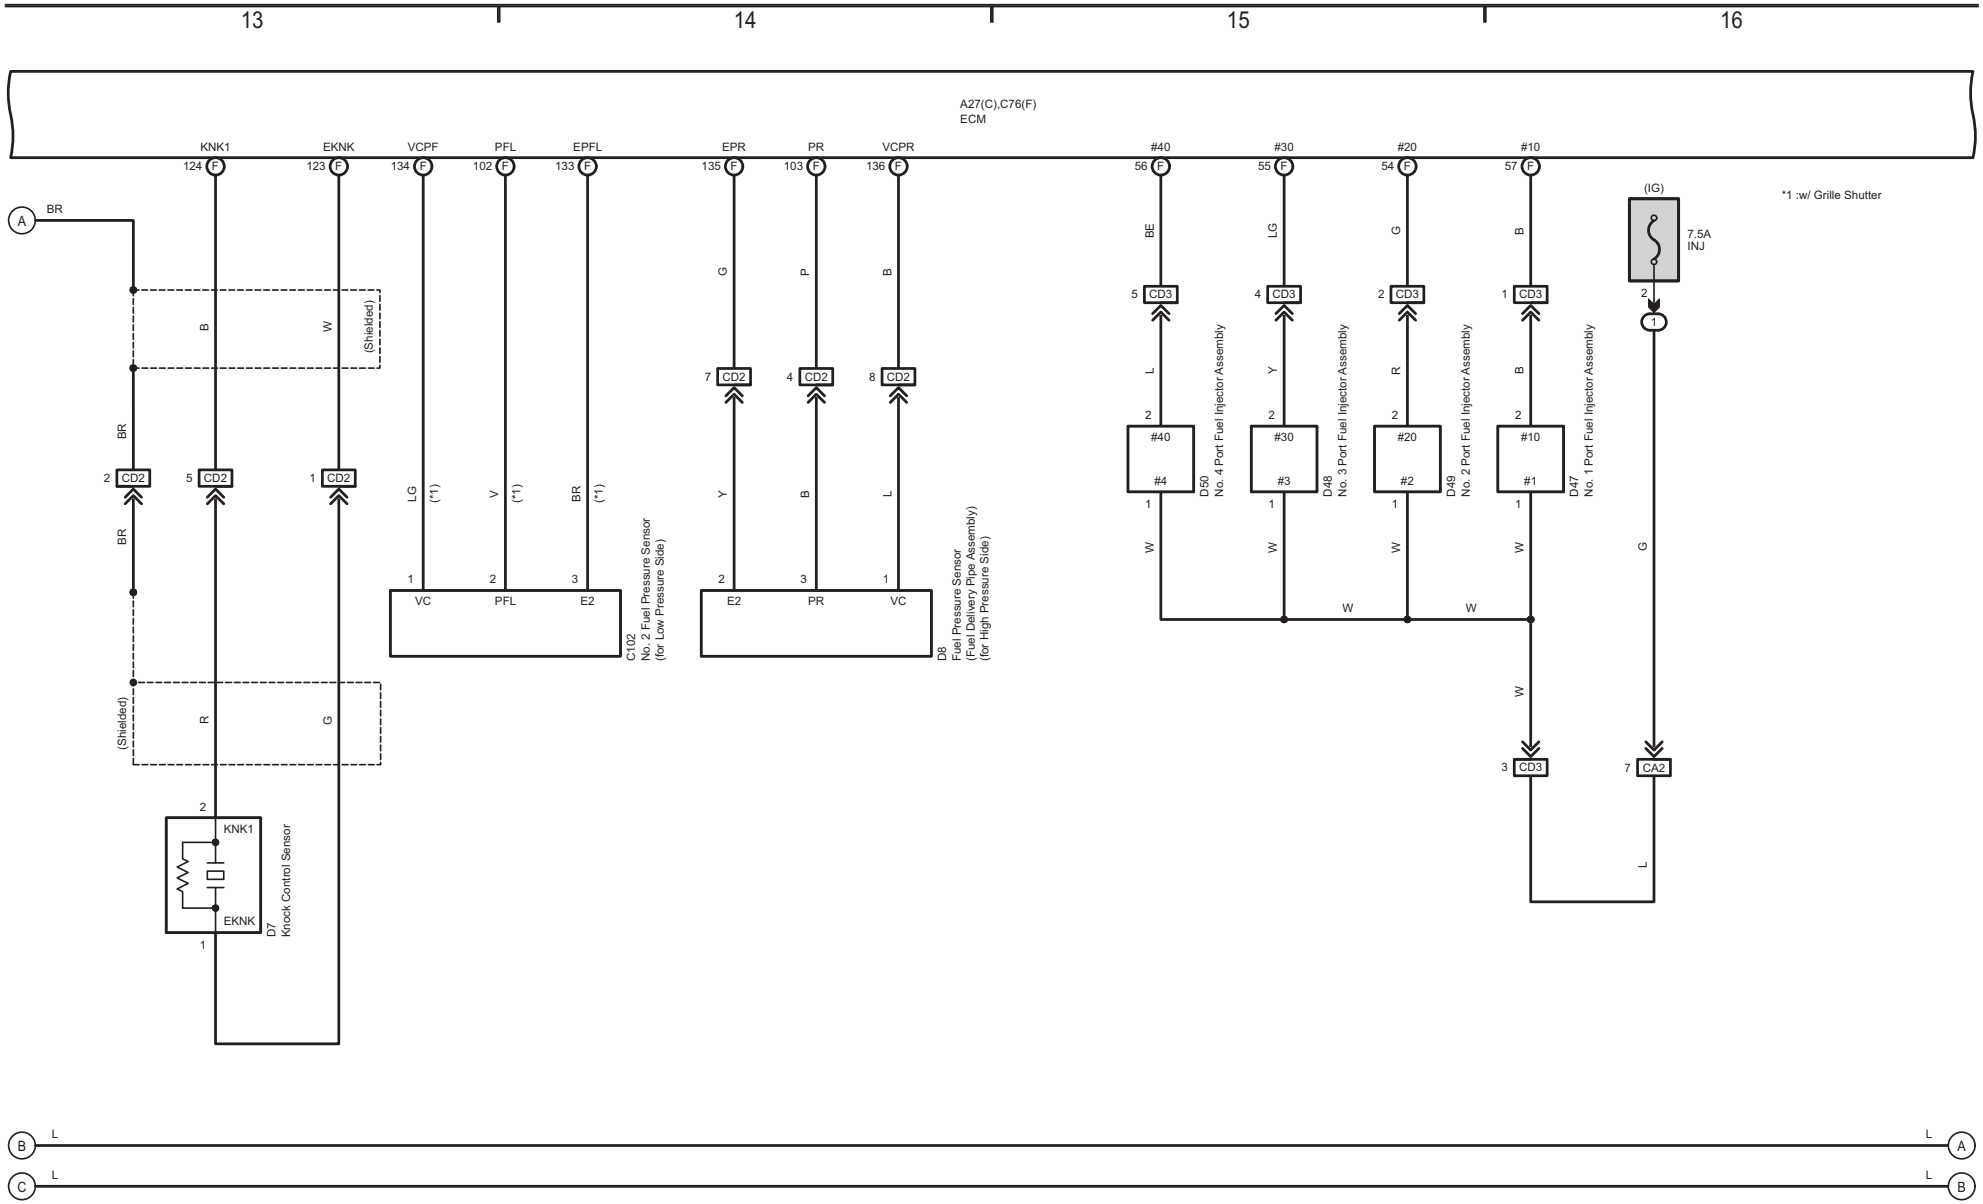

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

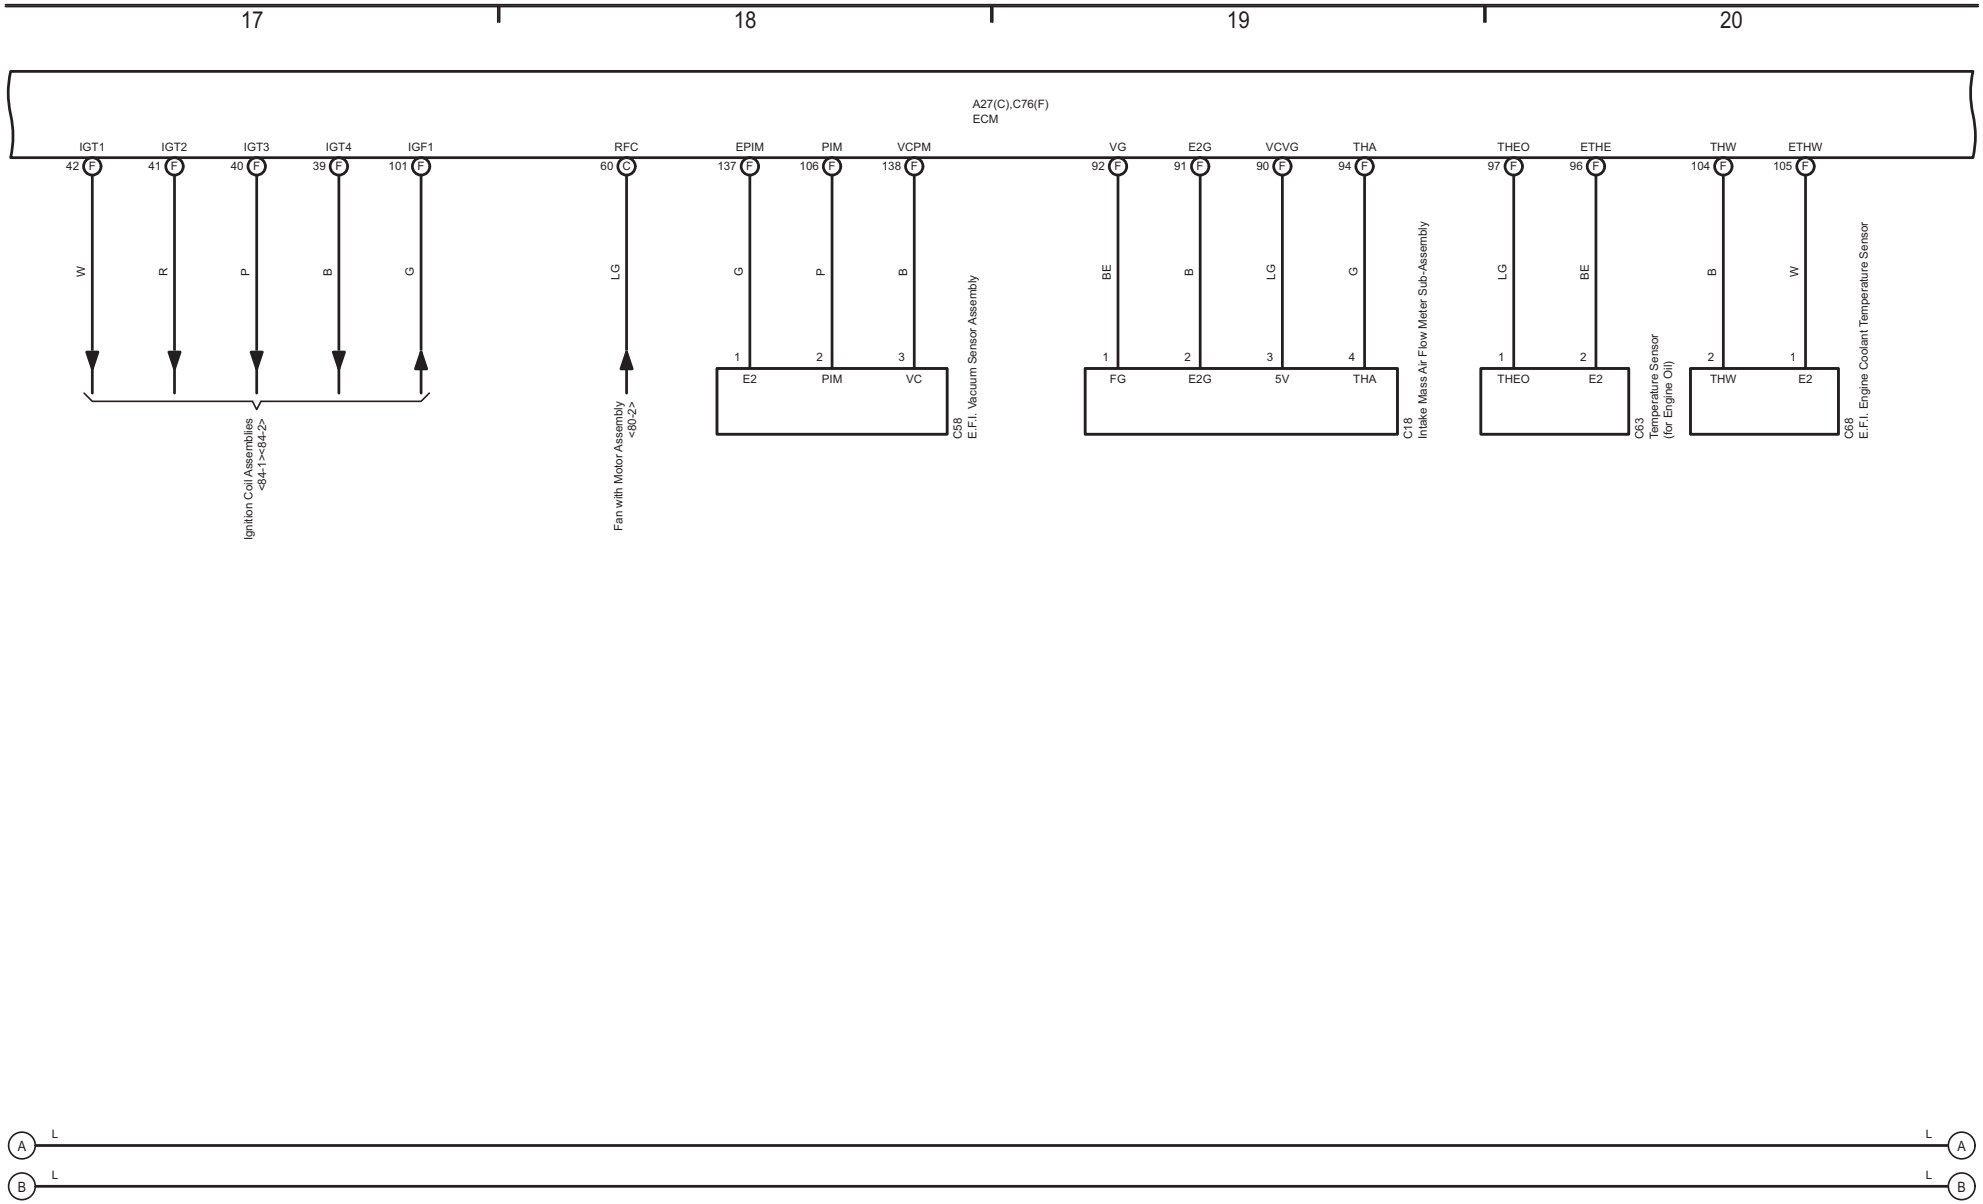

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

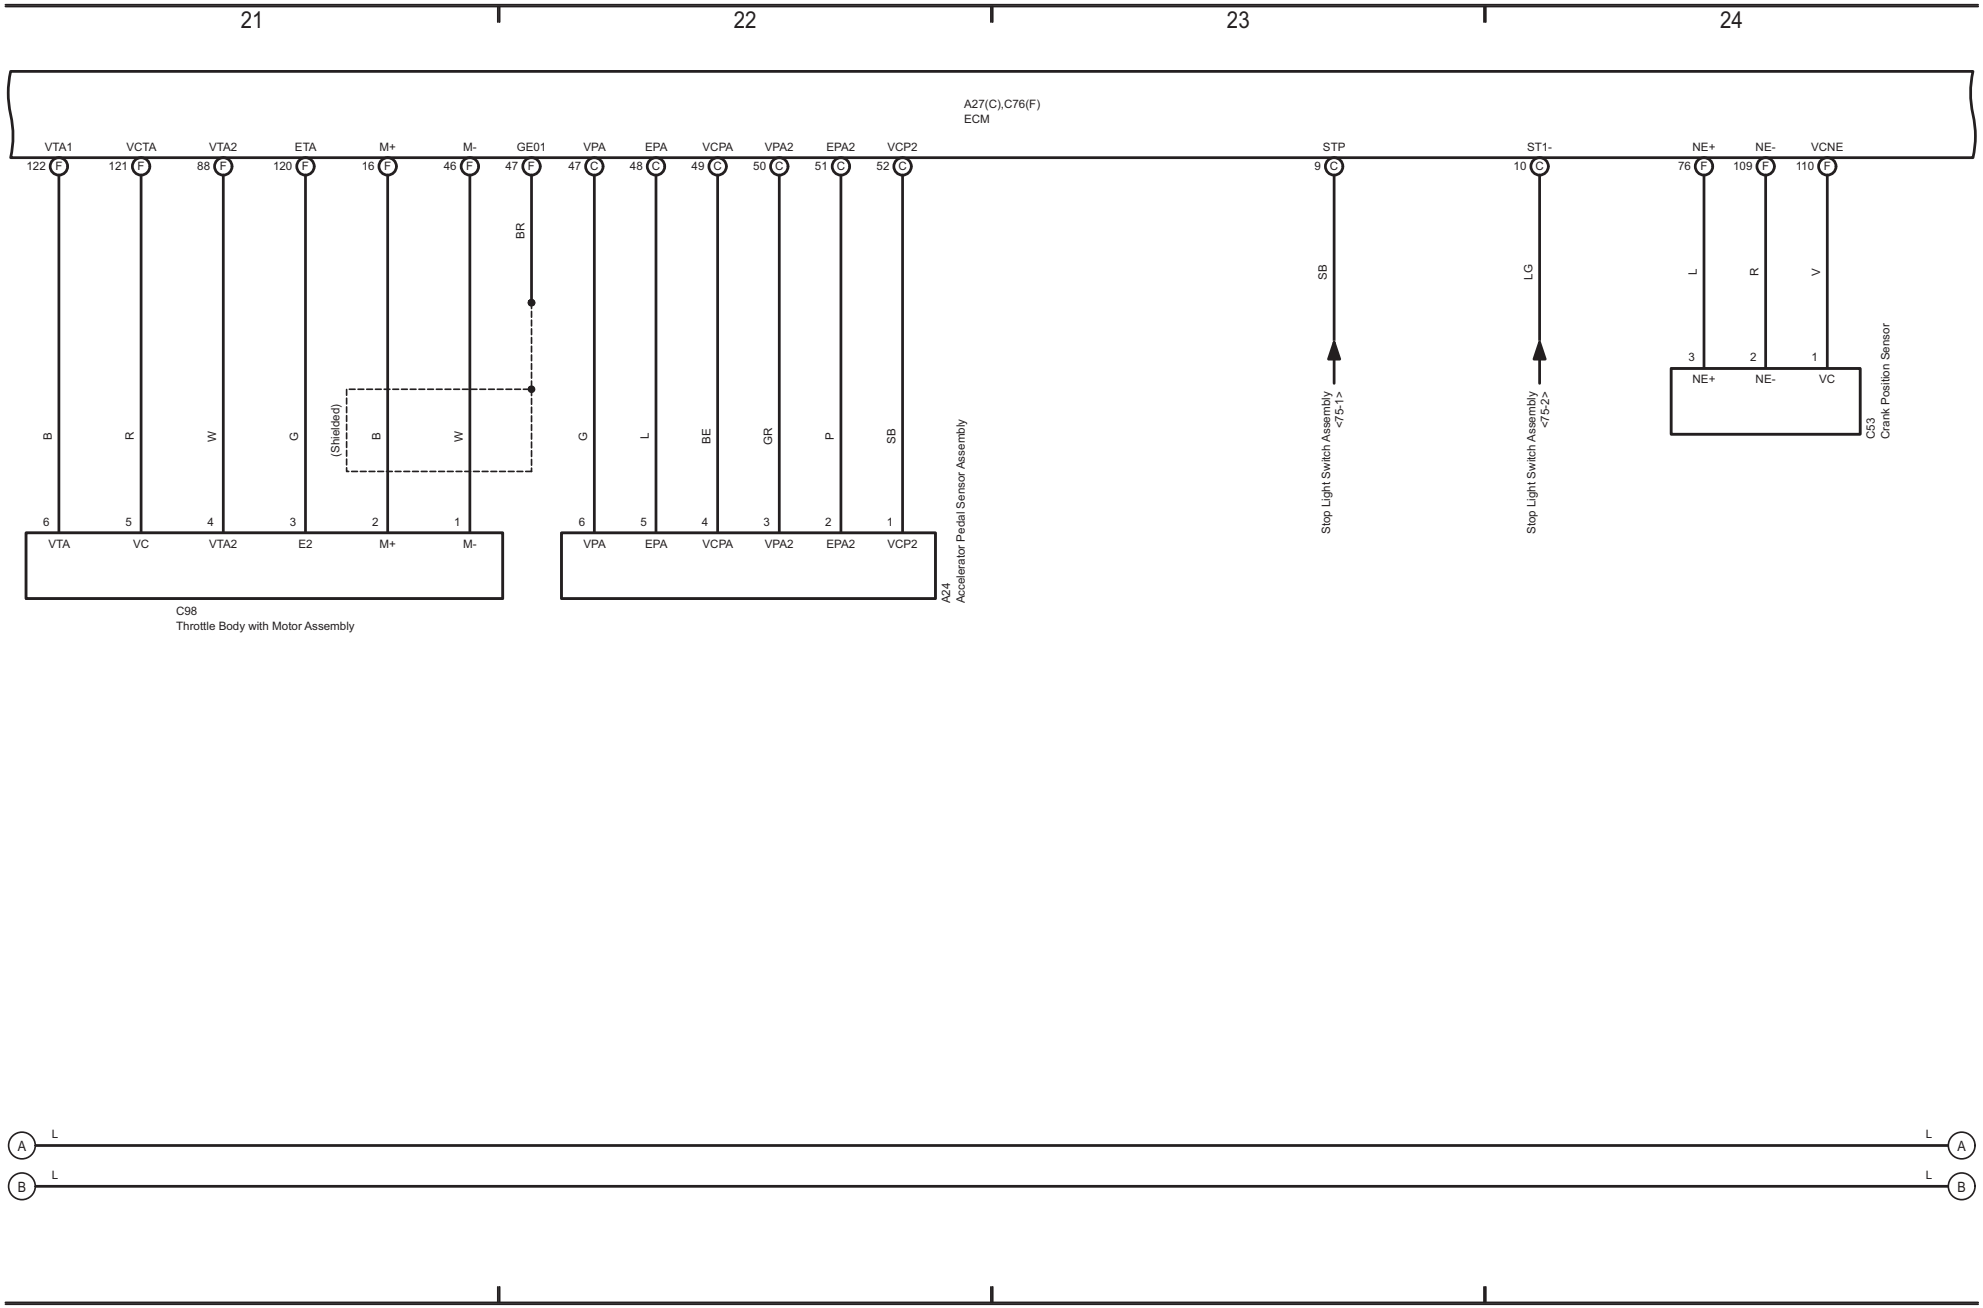

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

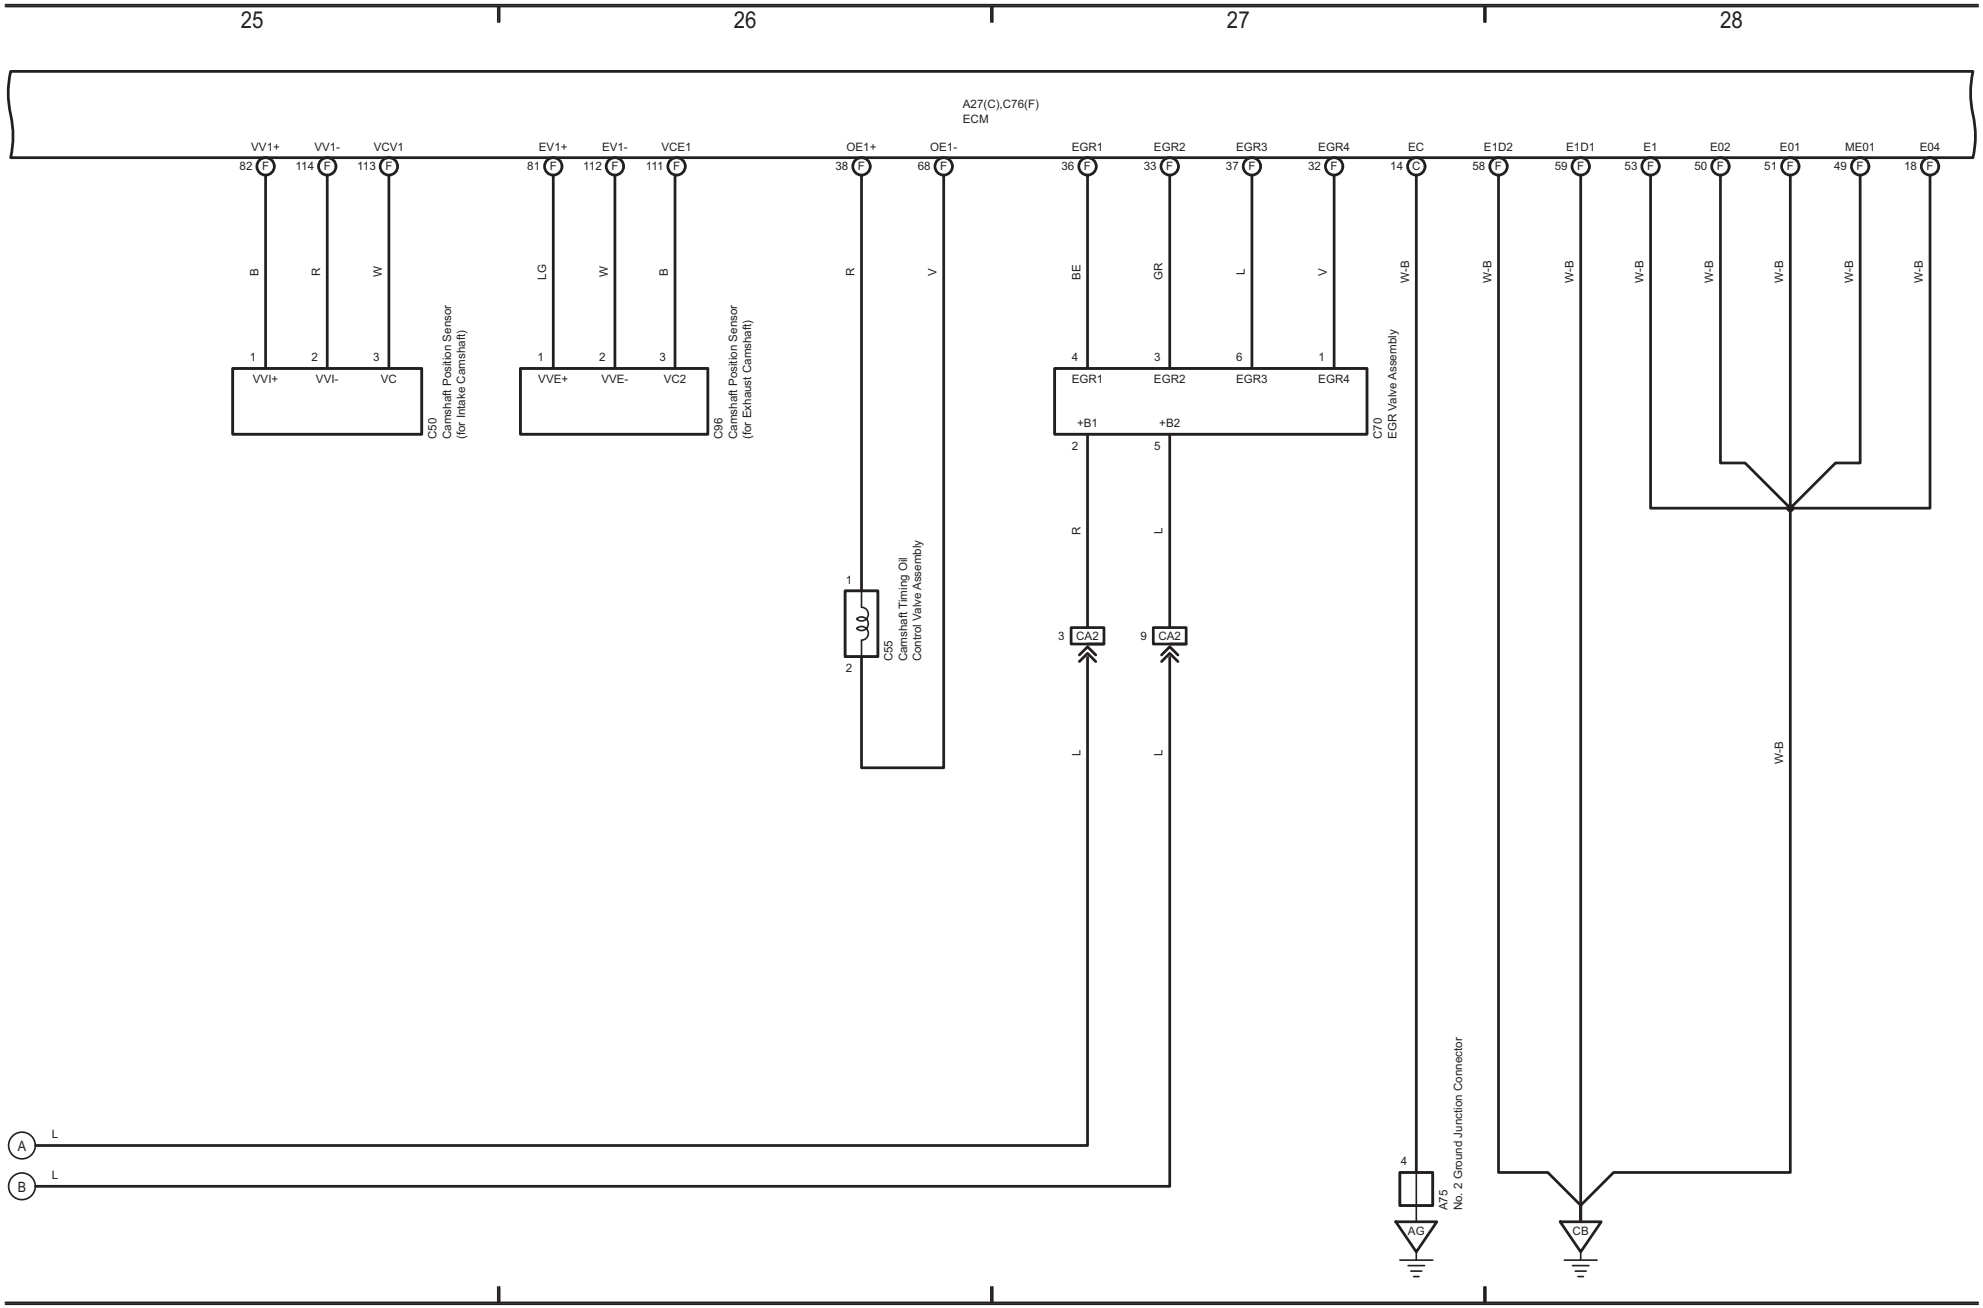

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

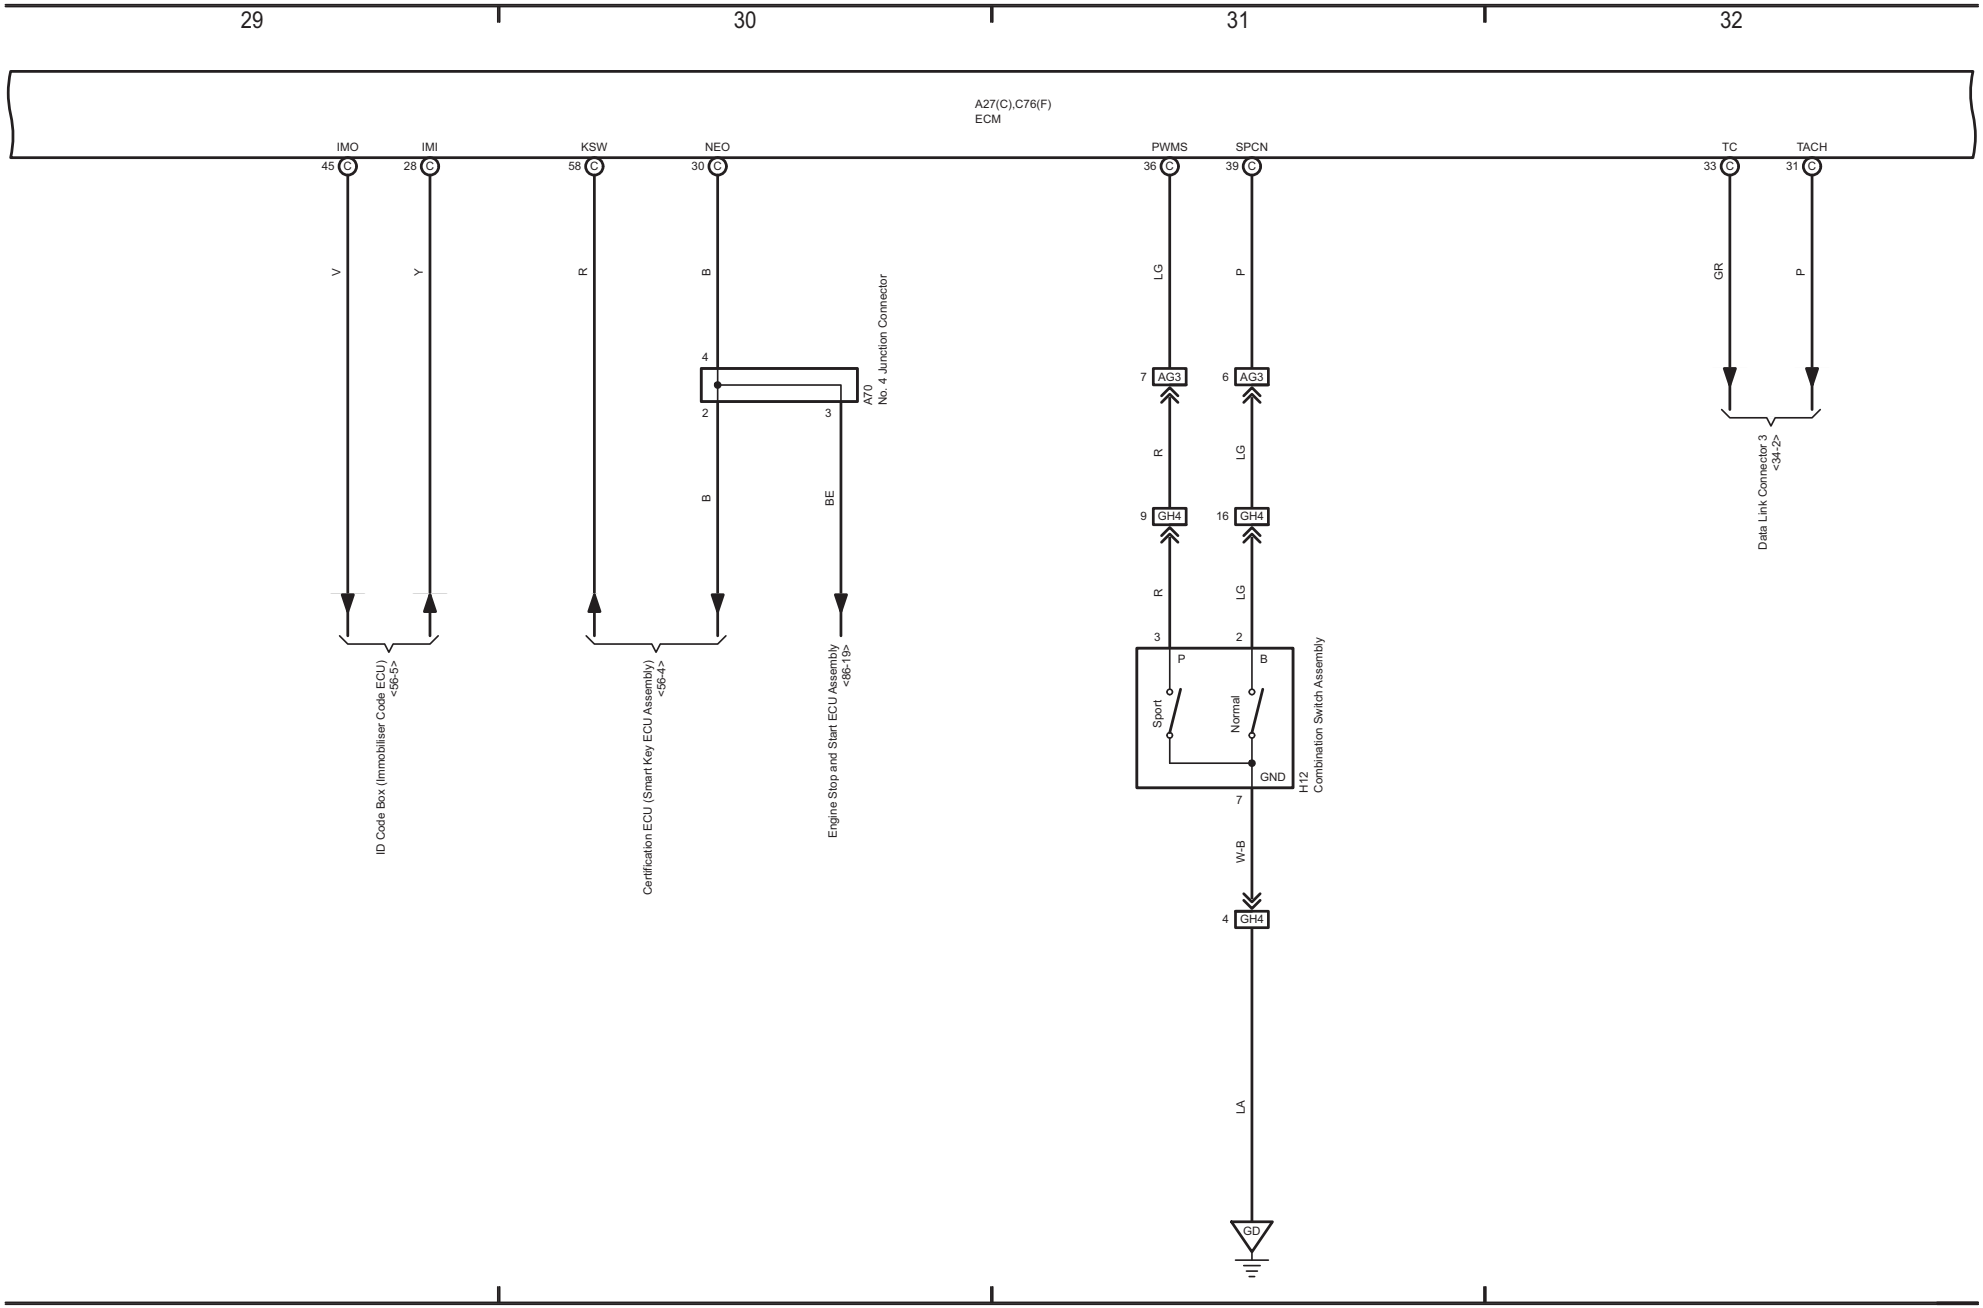

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

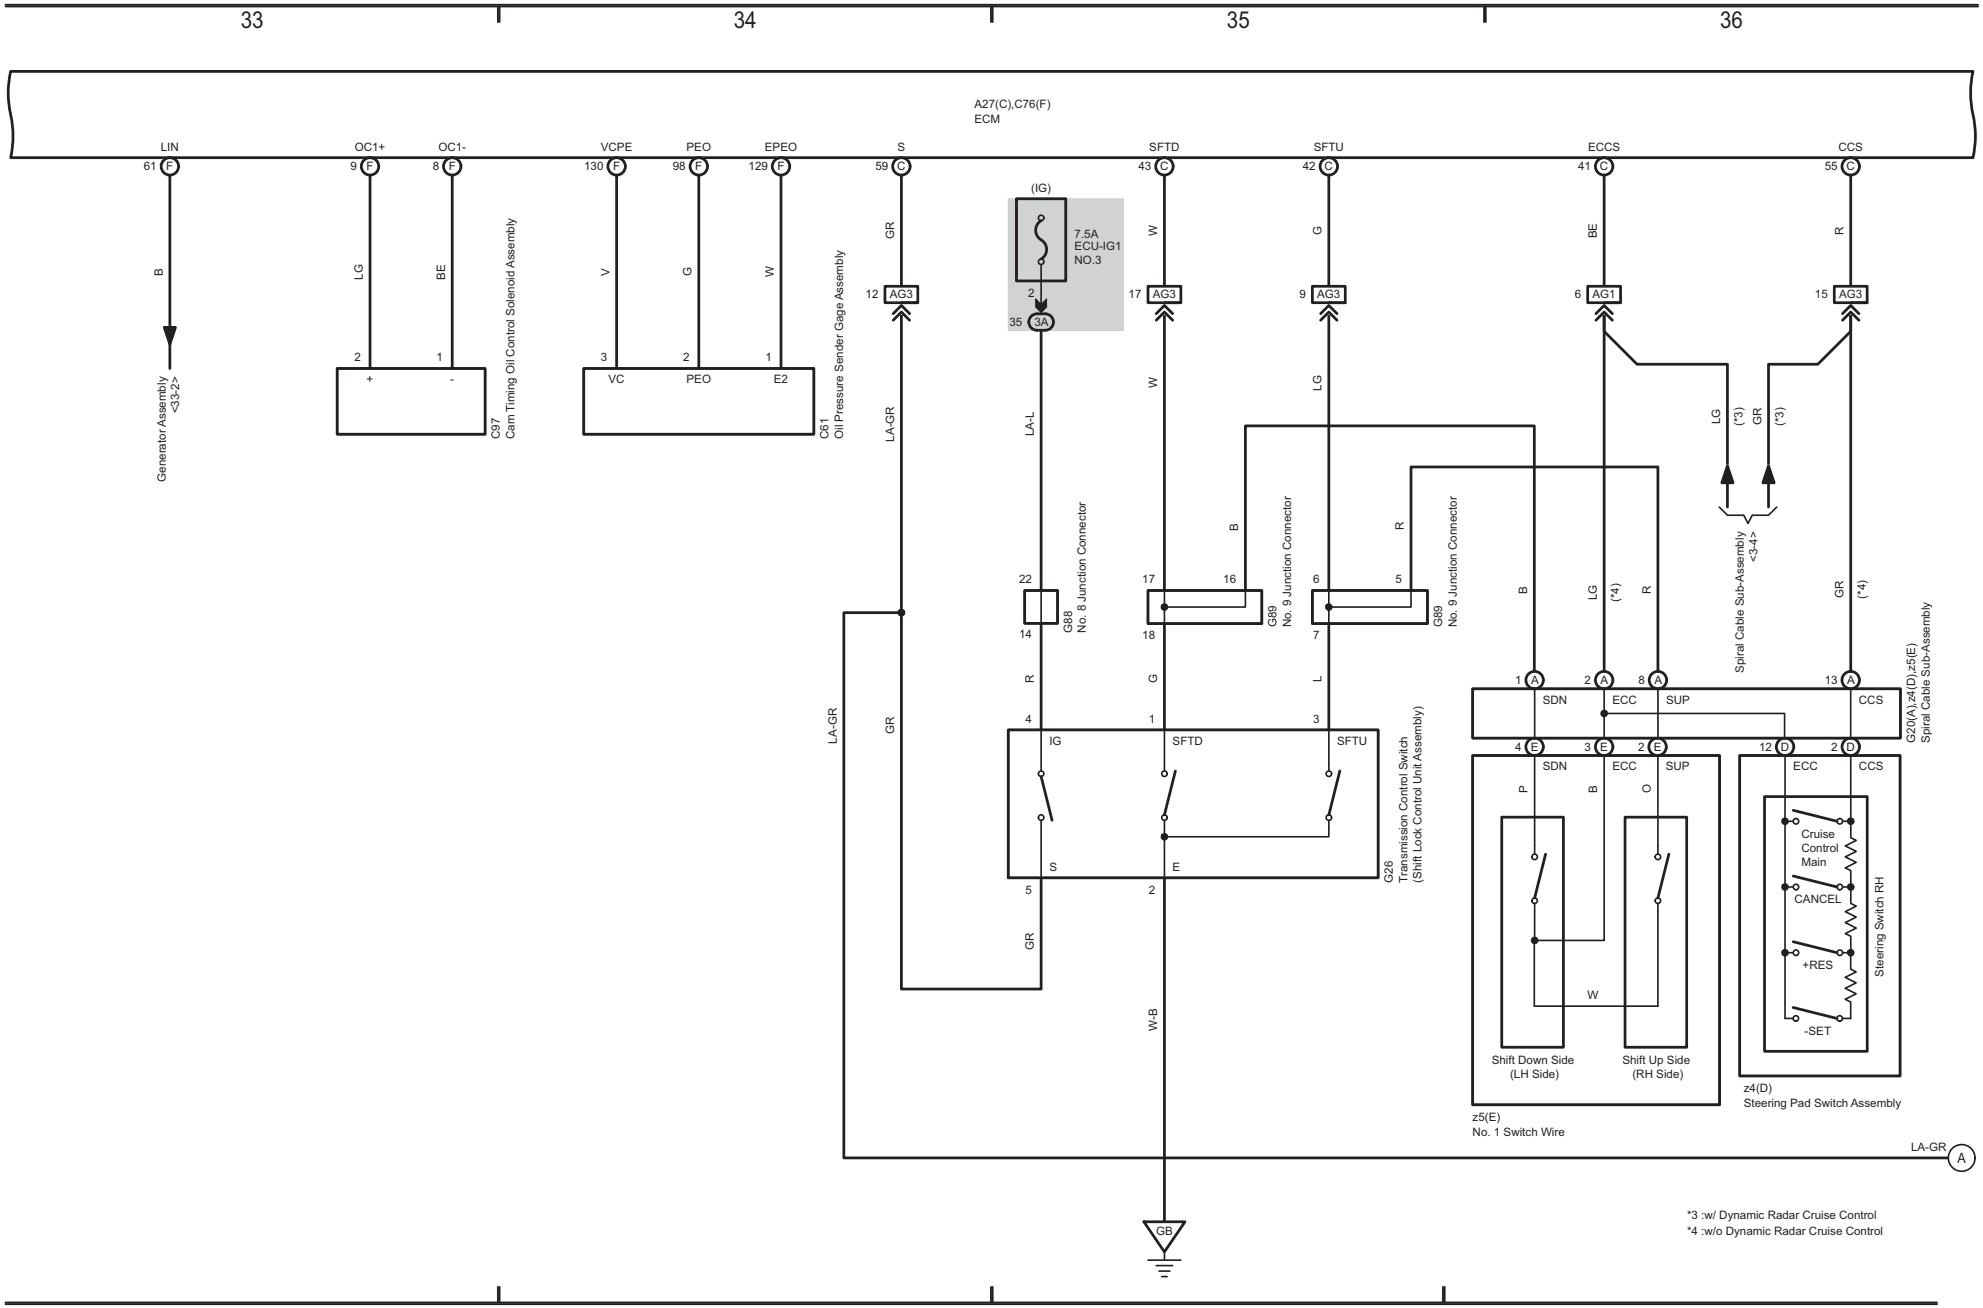

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

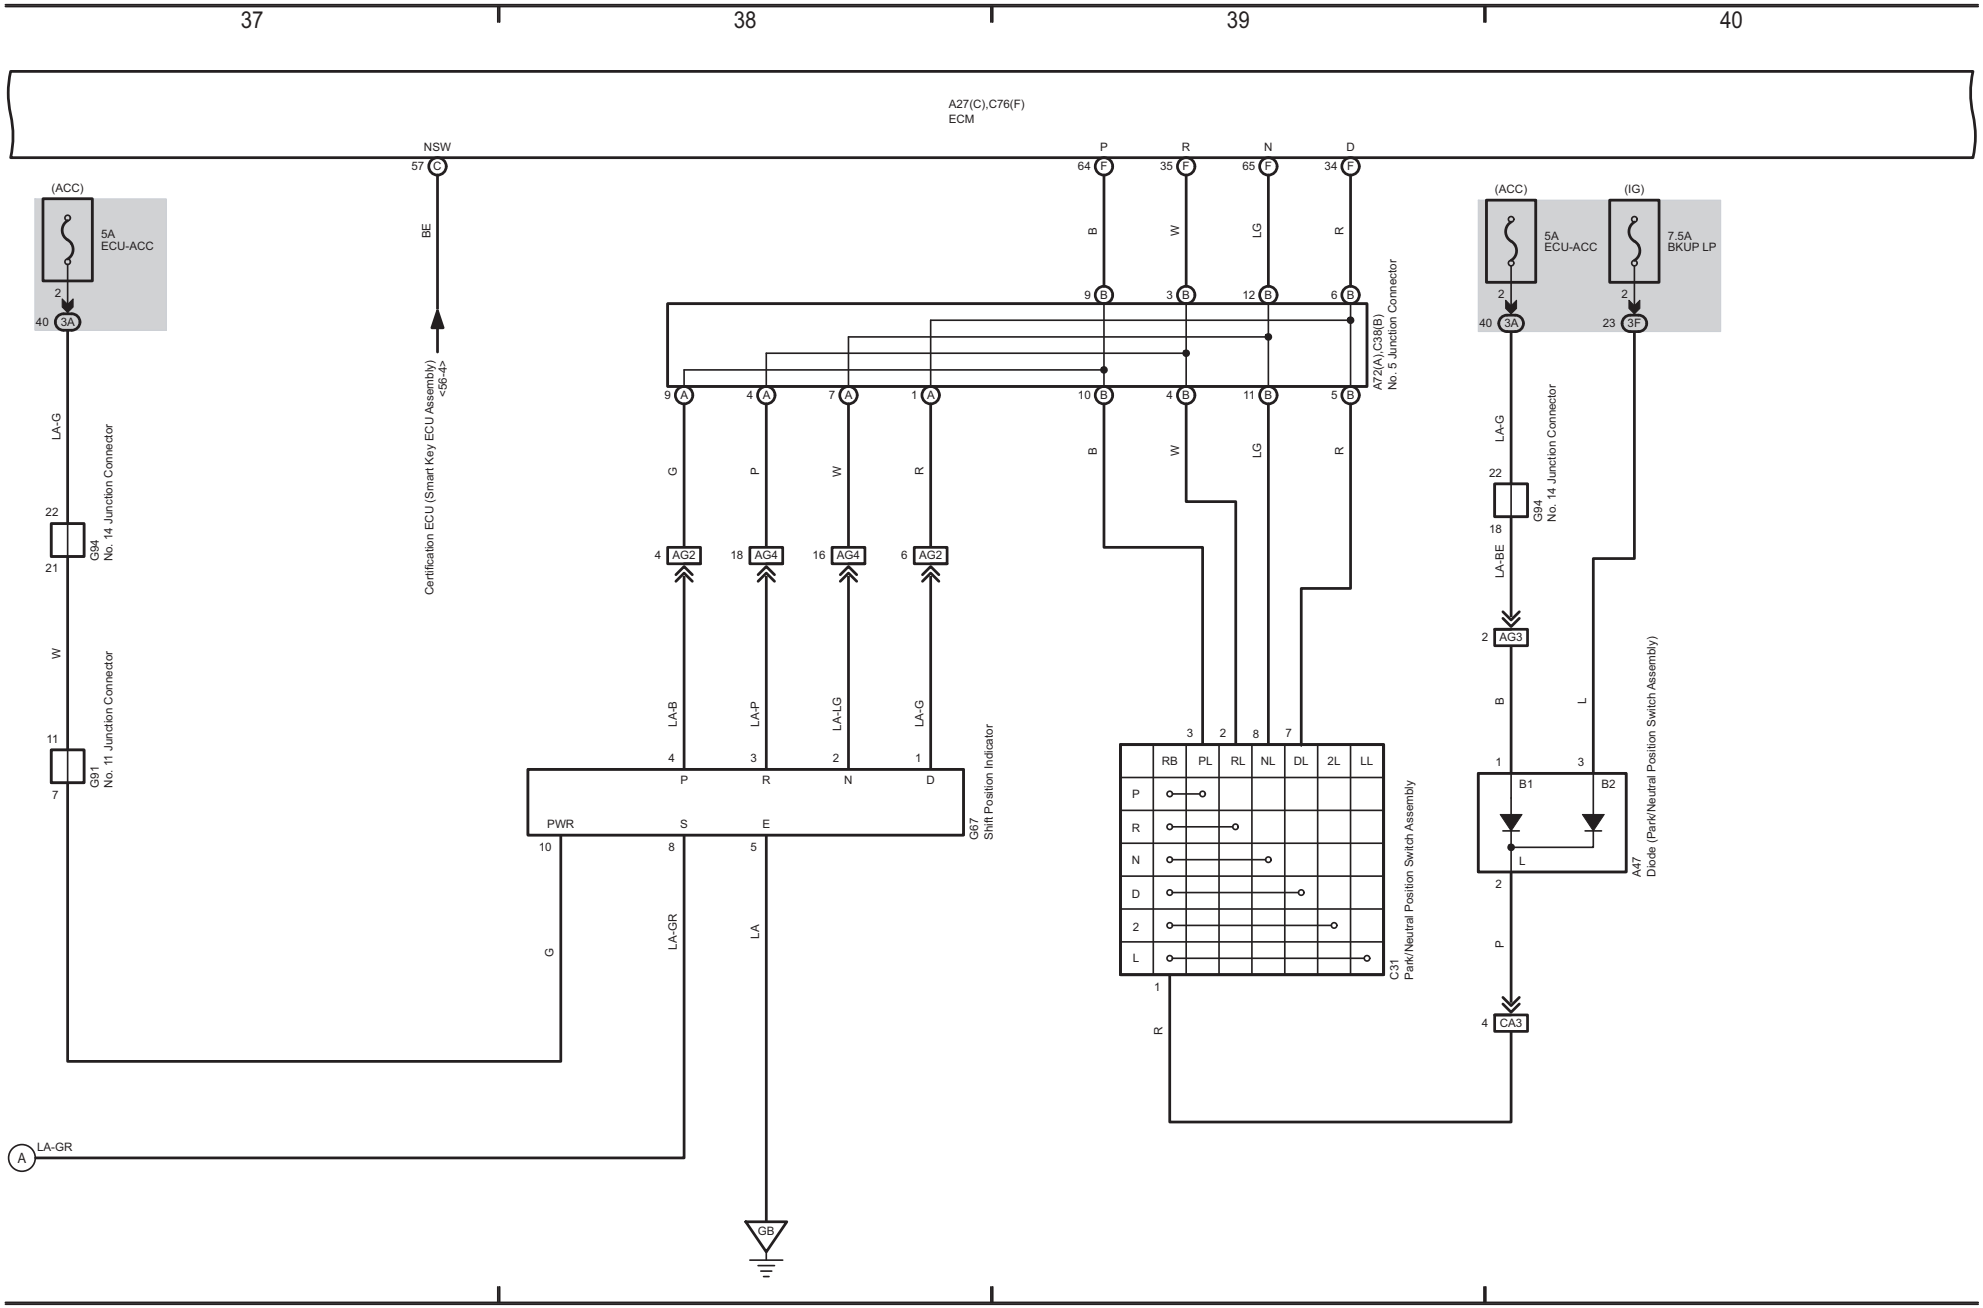

(Cont. next page)

Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)

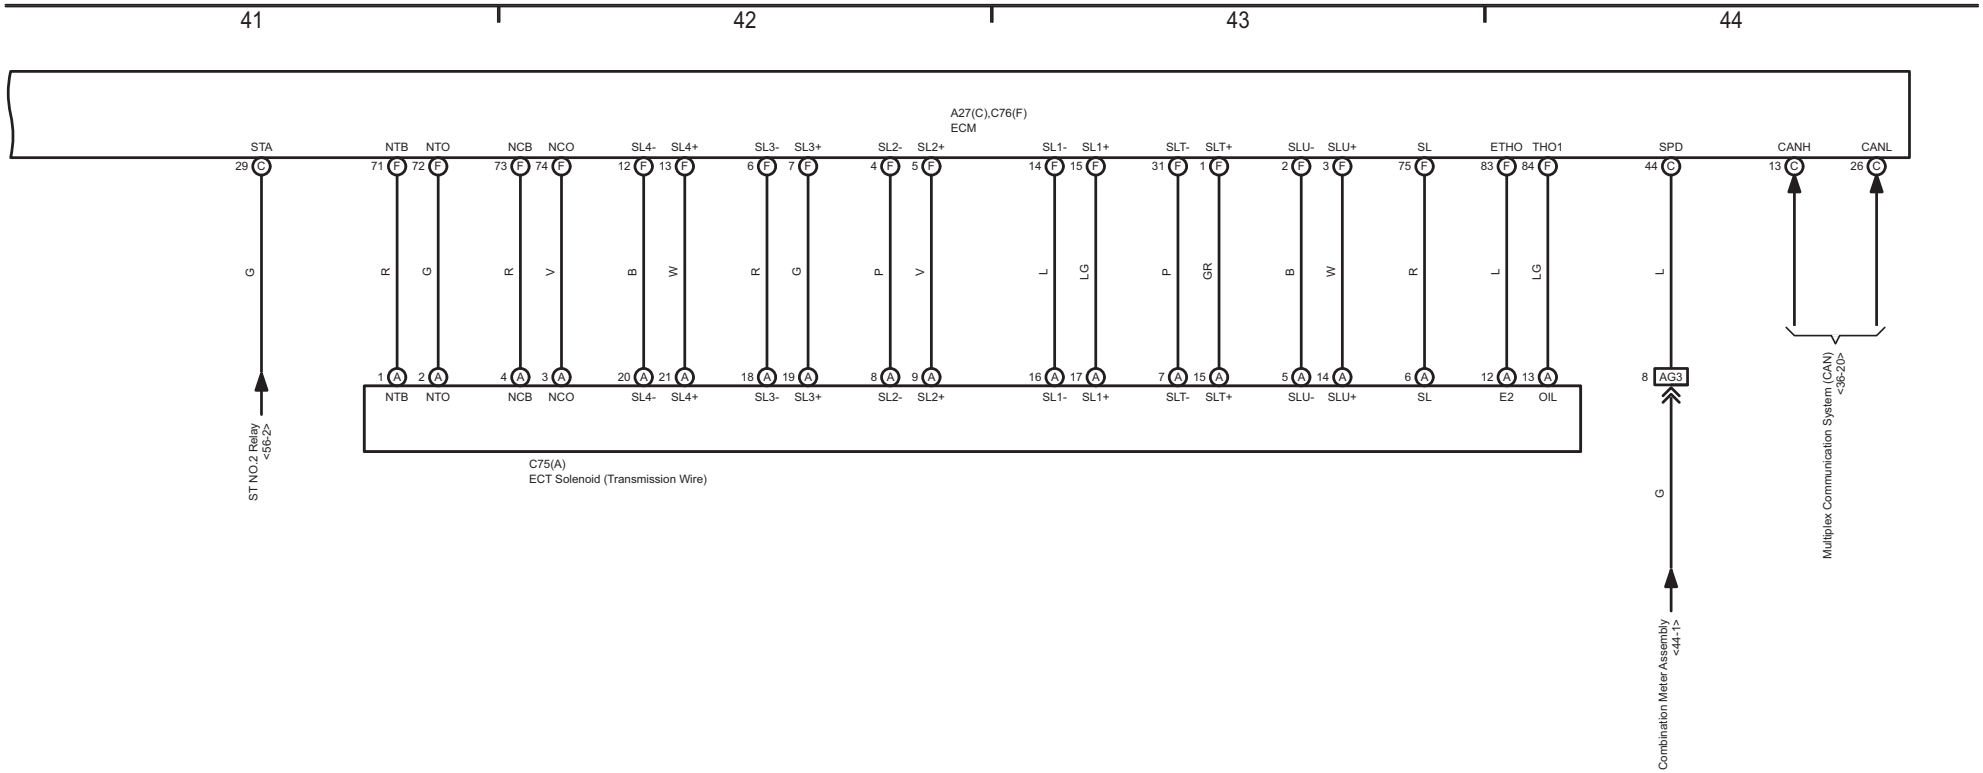
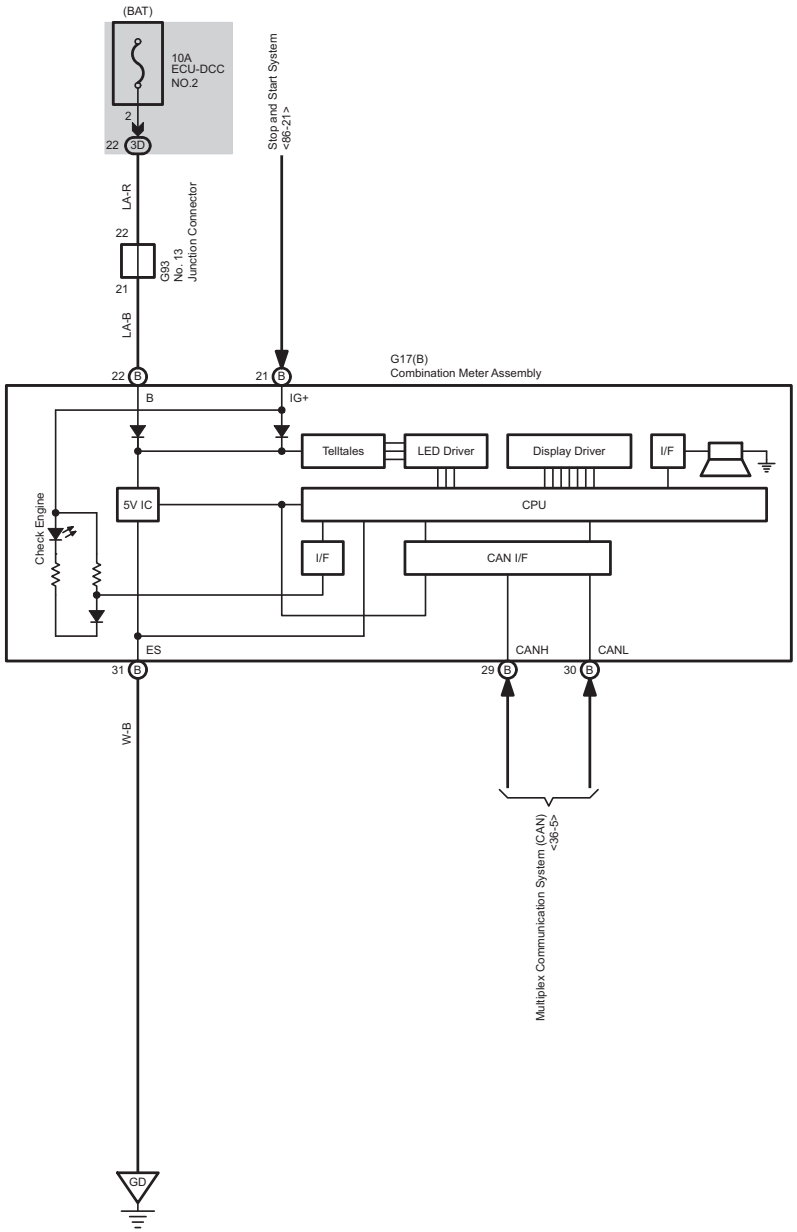
Cruise Control (6AR-FSE), ECT and A/T Indicator (6AR-FSE), Engine Control (6AR-FSE)