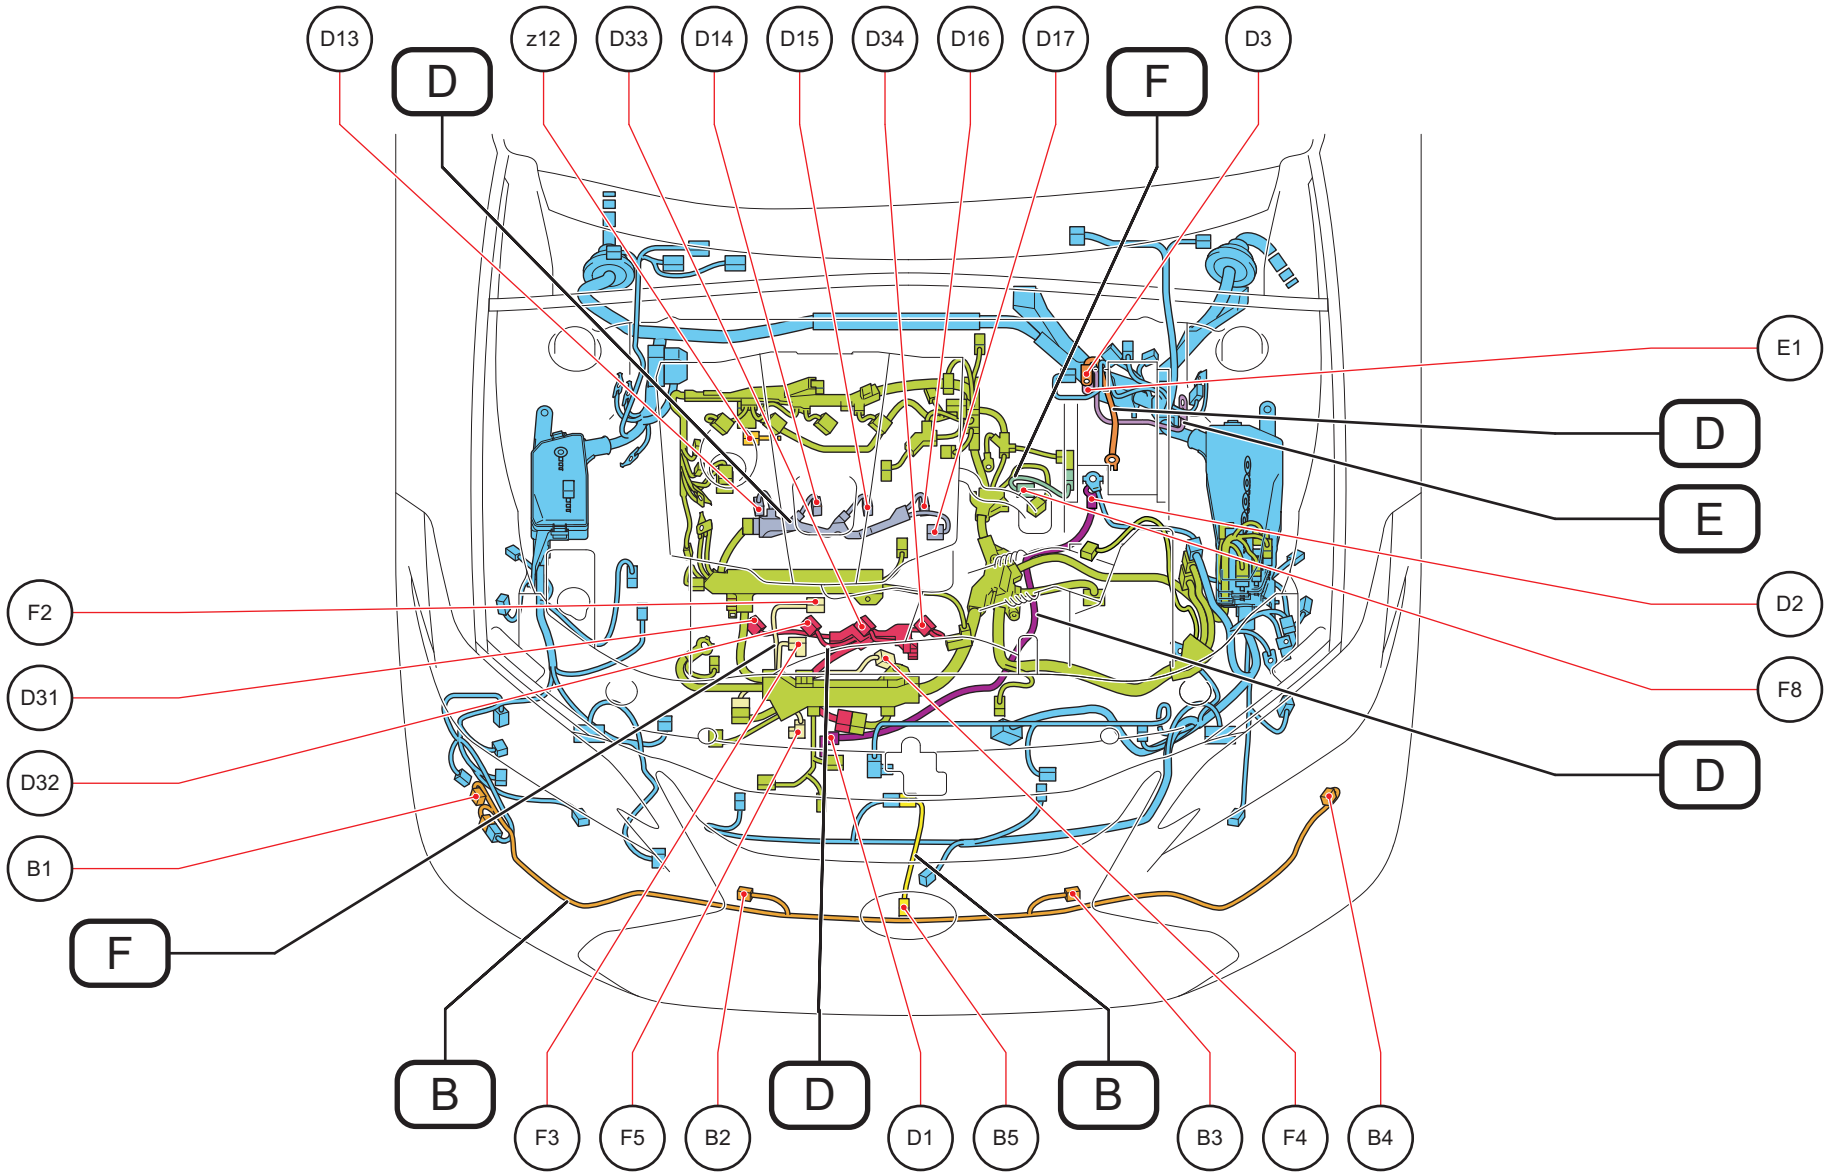
D13
D
z12
D33
D14
D15
D34
D16
D17
F
D3
E1
D
E
D2
F8
D
F2
D31
D32
B1
F
B
F3
F5
B2
D
D1
B5
B
B3
F4
B4

B 1 Front Corner Ultrasonic Sensor RH
B 2 Front Center Ultrasonic Sensor RH
B 3 Front Center Ultrasonic Sensor LH
B 4 Front Corner Ultrasonic Sensor LH
B 5 Front Television Camera Assembly
D 1 Starter Assembly
D 2 Battery
D 3 Battery
D 13 No. 1 Port Fuel Injector Assembly
D 14 No. 2 Port Fuel Injector Assembly
D 15 No. 3 Port Fuel Injector Assembly
D 16 No. 4 Port Fuel Injector Assembly
D 17 No. 2 Fuel Pressure Sensor (for Low Pressure Side)
D 31 No. 1 Direct Fuel Injector Assembly
D 32 No. 2 Direct Fuel Injector Assembly
D 33 No. 3 Direct Fuel Injector Assembly
D 34 No. 4 Direct Fuel Injector Assembly
E 1 Battery
F 2 Fuel Pressure Sensor (for High Pressure Side)
F 3 Knock Control Sensor
F 4 Crank Position Sensor
F 5 Water Inlet with Thermostat Sub-Assembly
F 8 Water Valve (for ATF Control)
z 12 Steering Torque Sensor Board Sub-Assembly (Rack and Pinion Power Steering Gear Assembly), Power Steering ECU with Motor Assembly (Rack and Pinion Power Steering Gear Assembly)

B1
Black

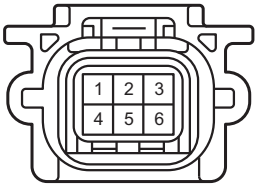

82824-78020

B2
Black

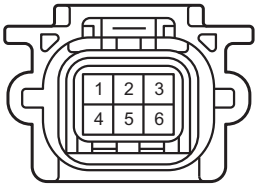

82824-78020

B3
Black

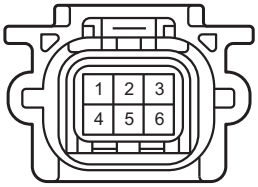

82824-78020

B4
Black

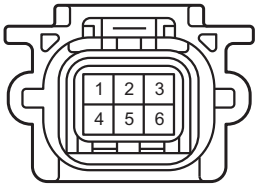

82824-78020

B5
Black

90980-12A59

D1



D2



D3



D13
Black

90980-12D16

D14
Black

90980-12D16

D15
Black

90980-12D16

D16
Black

90980-12D16

D17
Black

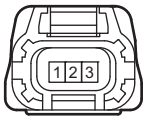

90980-12A19

D31
Black

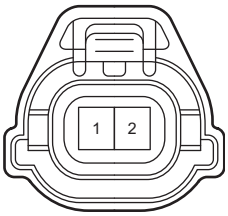

90980-12D14

D32
Black

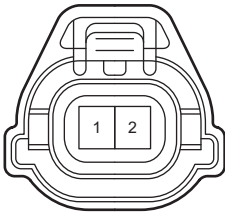

90980-12D14

D33
Black

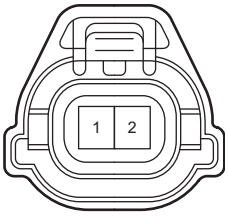

90980-12D14

D34
Black

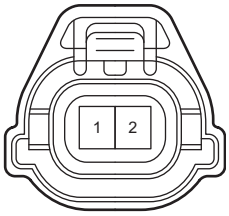

90980-12D14

E1



F2
Black

90980-12A19

F3
Gray



82824-30290

F4
Black

90980-12D13

F5
Black

90980-12D16

F8
Black

90980-12D16

z12
White

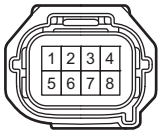

90980-12C58