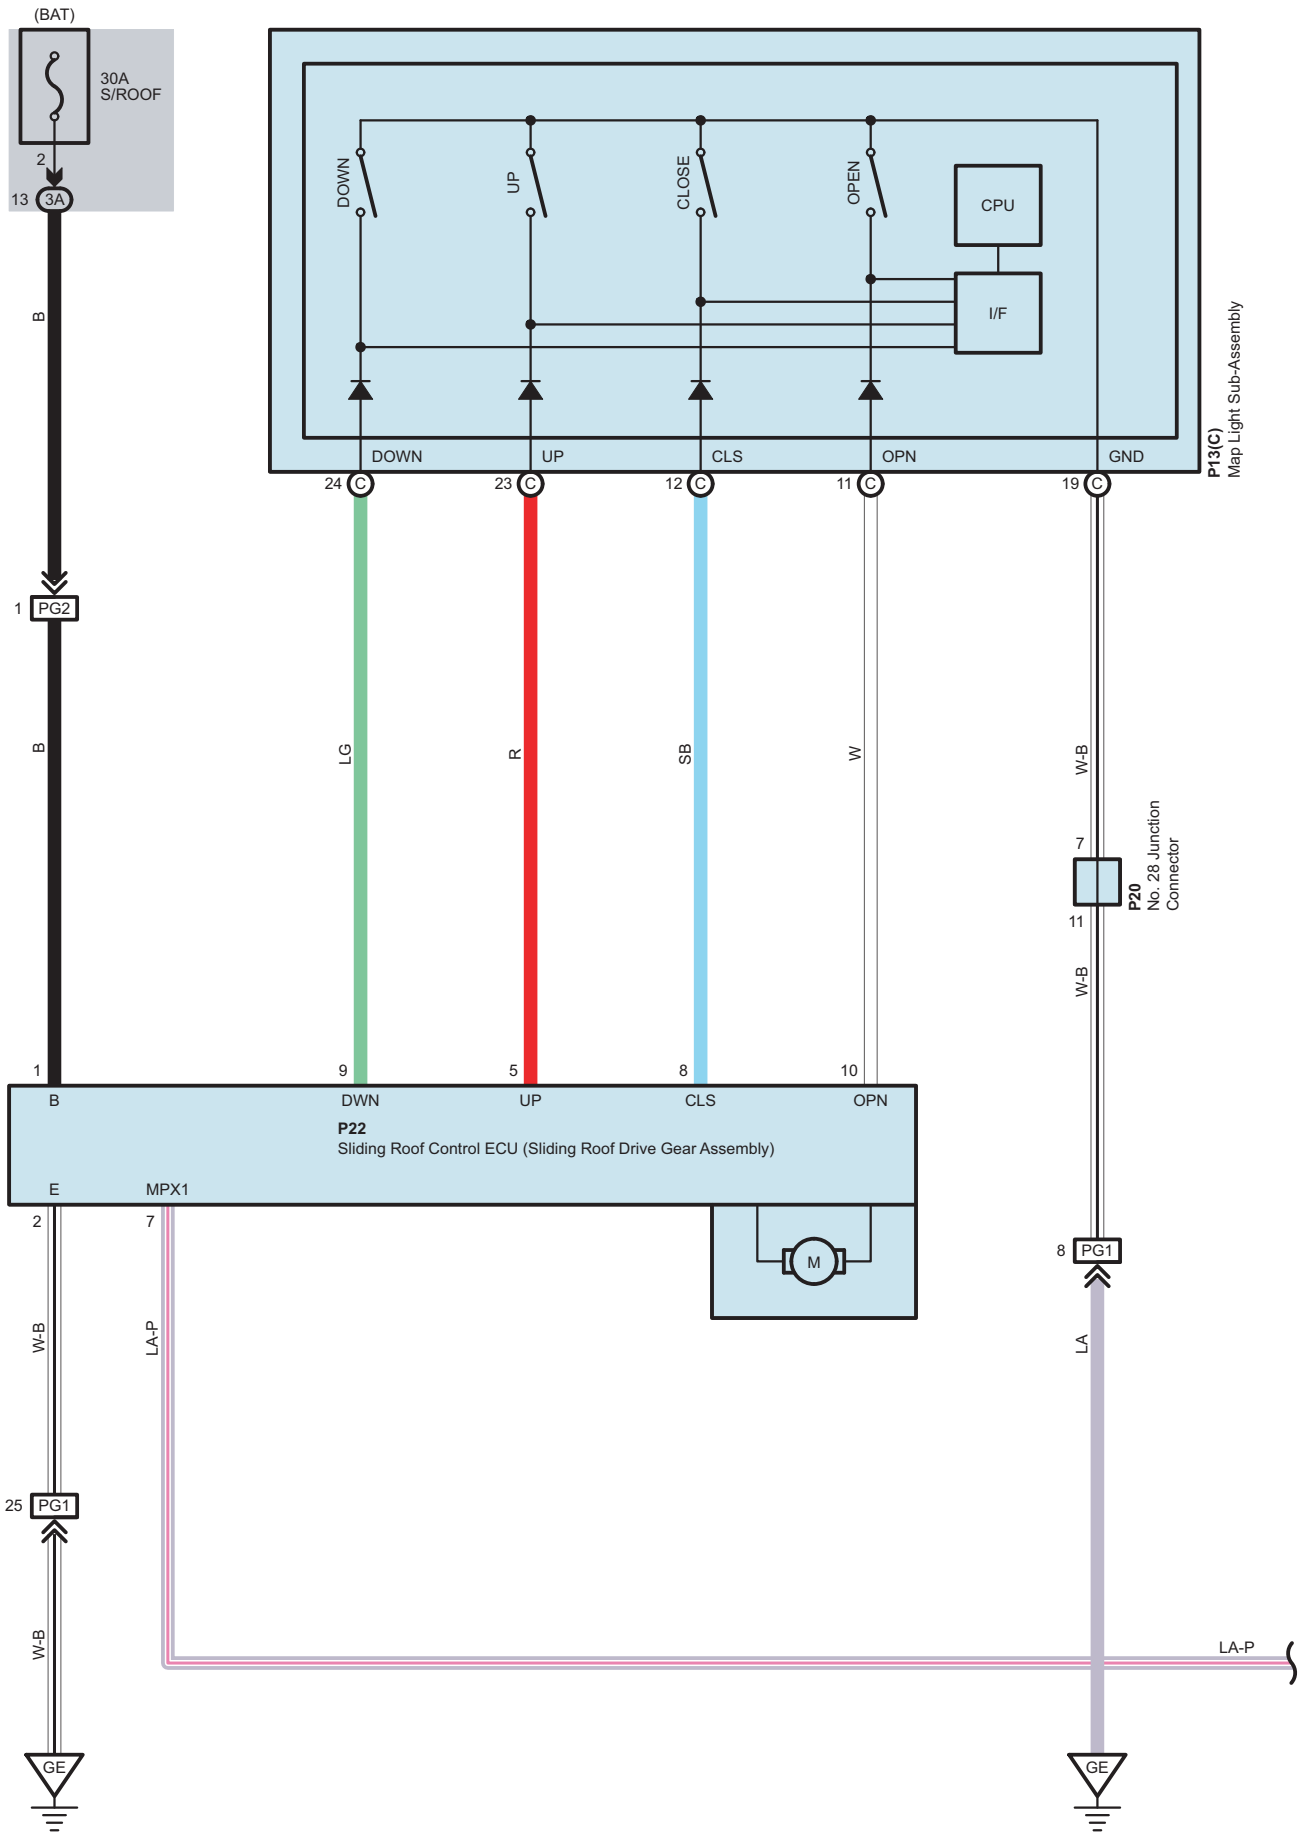
(BAT)
30A
S/ROOF
2
13
3A
B
1
PG2
B
DOWN
UP
CLOSE
OPEN
CPU
I/F
DOWN
UP
CLS
OPN
GND
24
23
12
11
19
P13(C)
Map Light Sub-Assembly
LG
R
SB
W
W-B
7
11
P20
No. 28 Junction
Connector
W-B
1
9
5
8
10
B
DWN
UP
CLS
OPN
P22
Sliding Roof Control ECU (Sliding Roof Drive Gear Assembly)
E
MPX1
2
7
M
8
PG1
W-B
LA-P
LA
25
PG1
W-B
LA-P
GE
GE

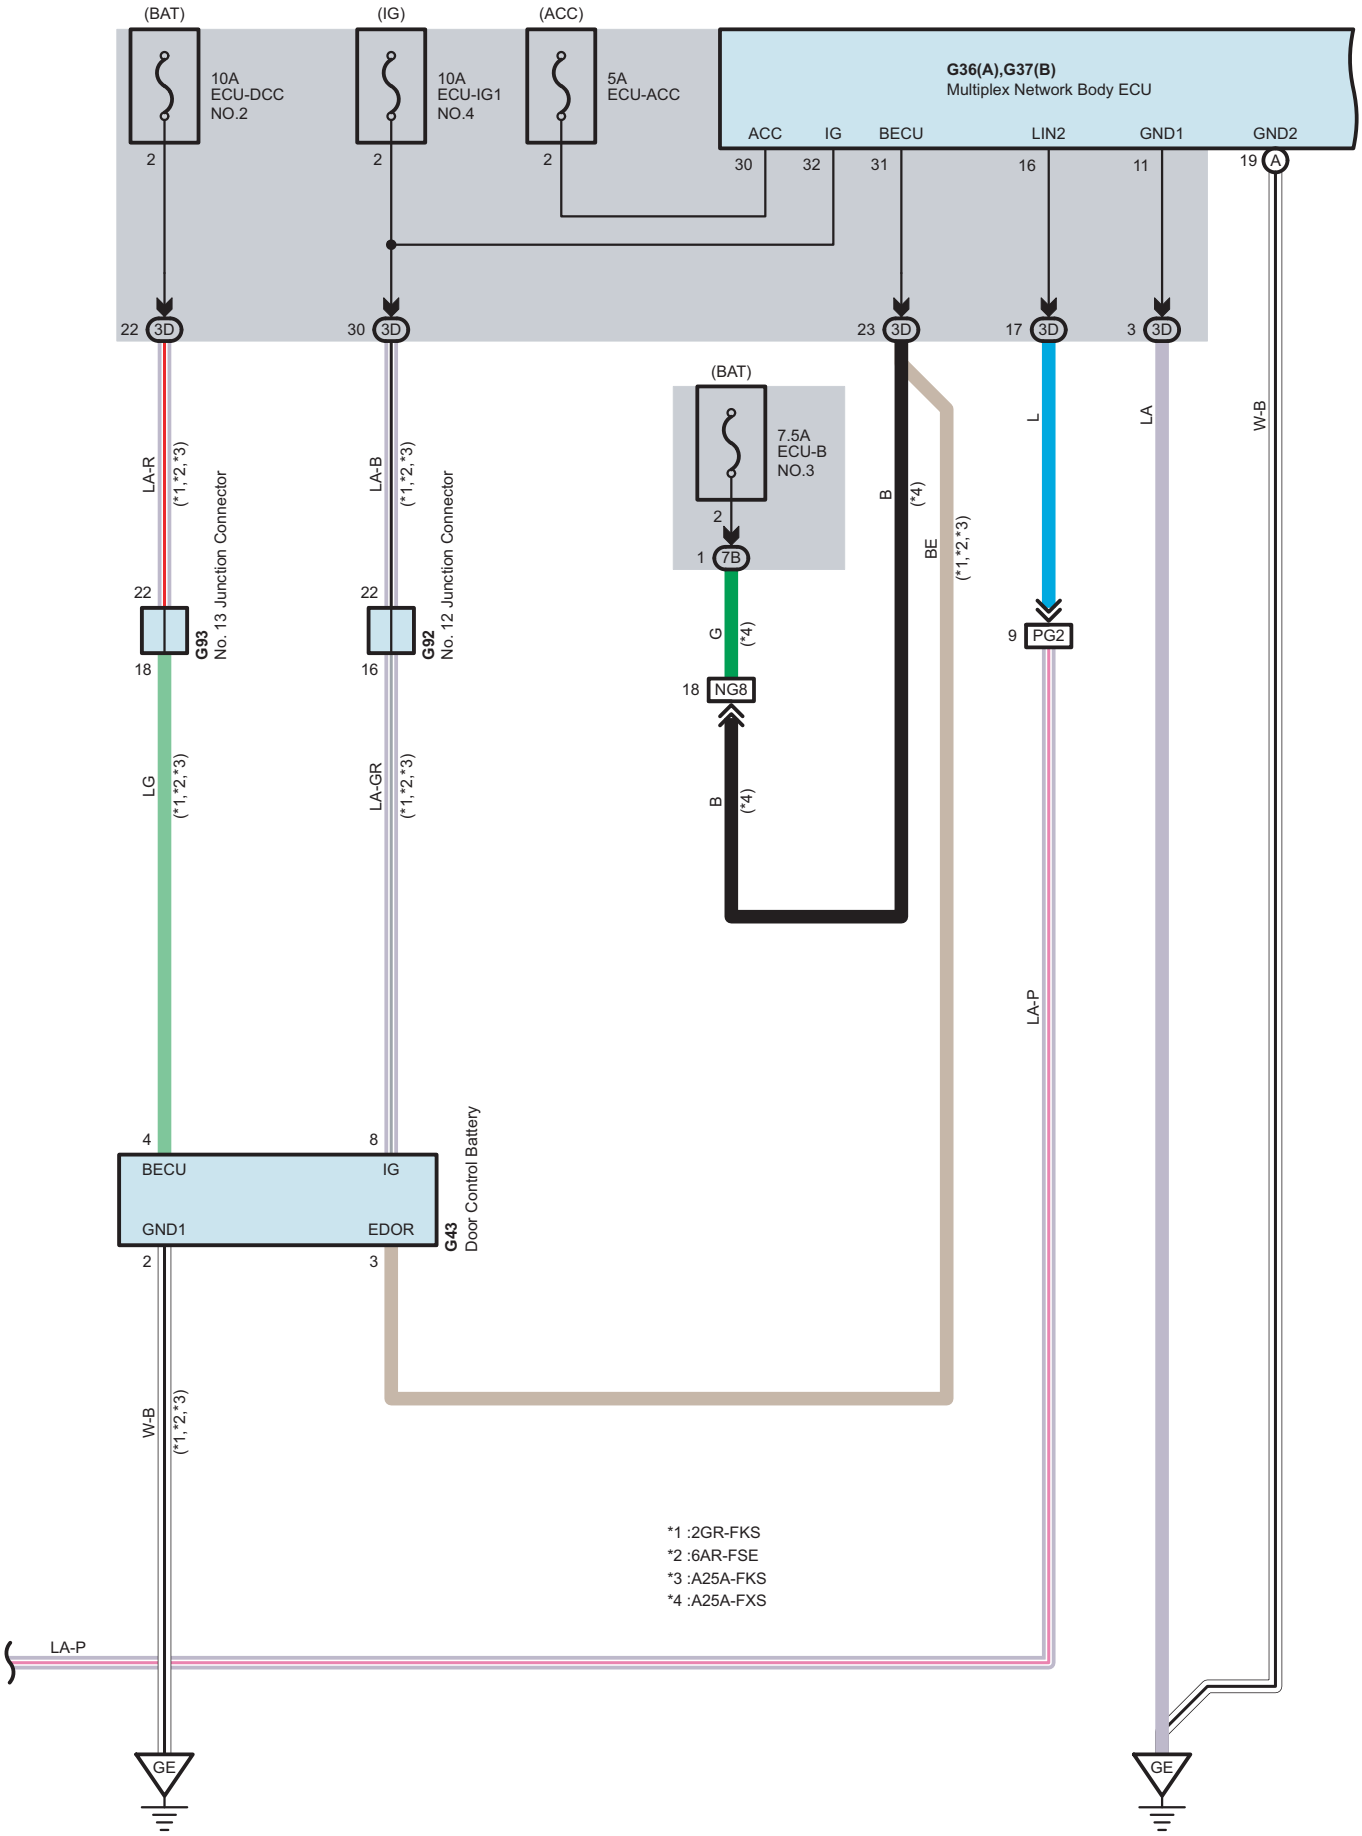
(BAT)
10A
ECU-DCC
NO.2
(IG)
10A
ECU-IG1
NO.4
(ACC)
5A
ECU-ACC
G36(A),G37(B)
Multiplex Network Body ECU
ACC
IG
BECU
LIN2
GND1
GND2
(BAT)
7.5A
ECU-B
NO.3
LA-R
(*1,*2,*3)
LA-B
(*1,*2,*3)
G93
No. 13 Junction Connector
G92
No. 12 Junction Connector
LG
(*1,*2,*3)
LA-GR
(*1,*2,*3)
G
(*4)
NG8
B
(*4)
BE
(*1,*2,*3)
L
LA
W-B
PG2
LA-P
BECU
IG
GND1
EDOR
G43
Door Control Battery
W-B
(*1,*2,*3)
*1 :2GR-FKS
*2 :6AR-FSE
*3 :A25A-FKS
*4 :A25A-FXS
LA-P
GE
GE

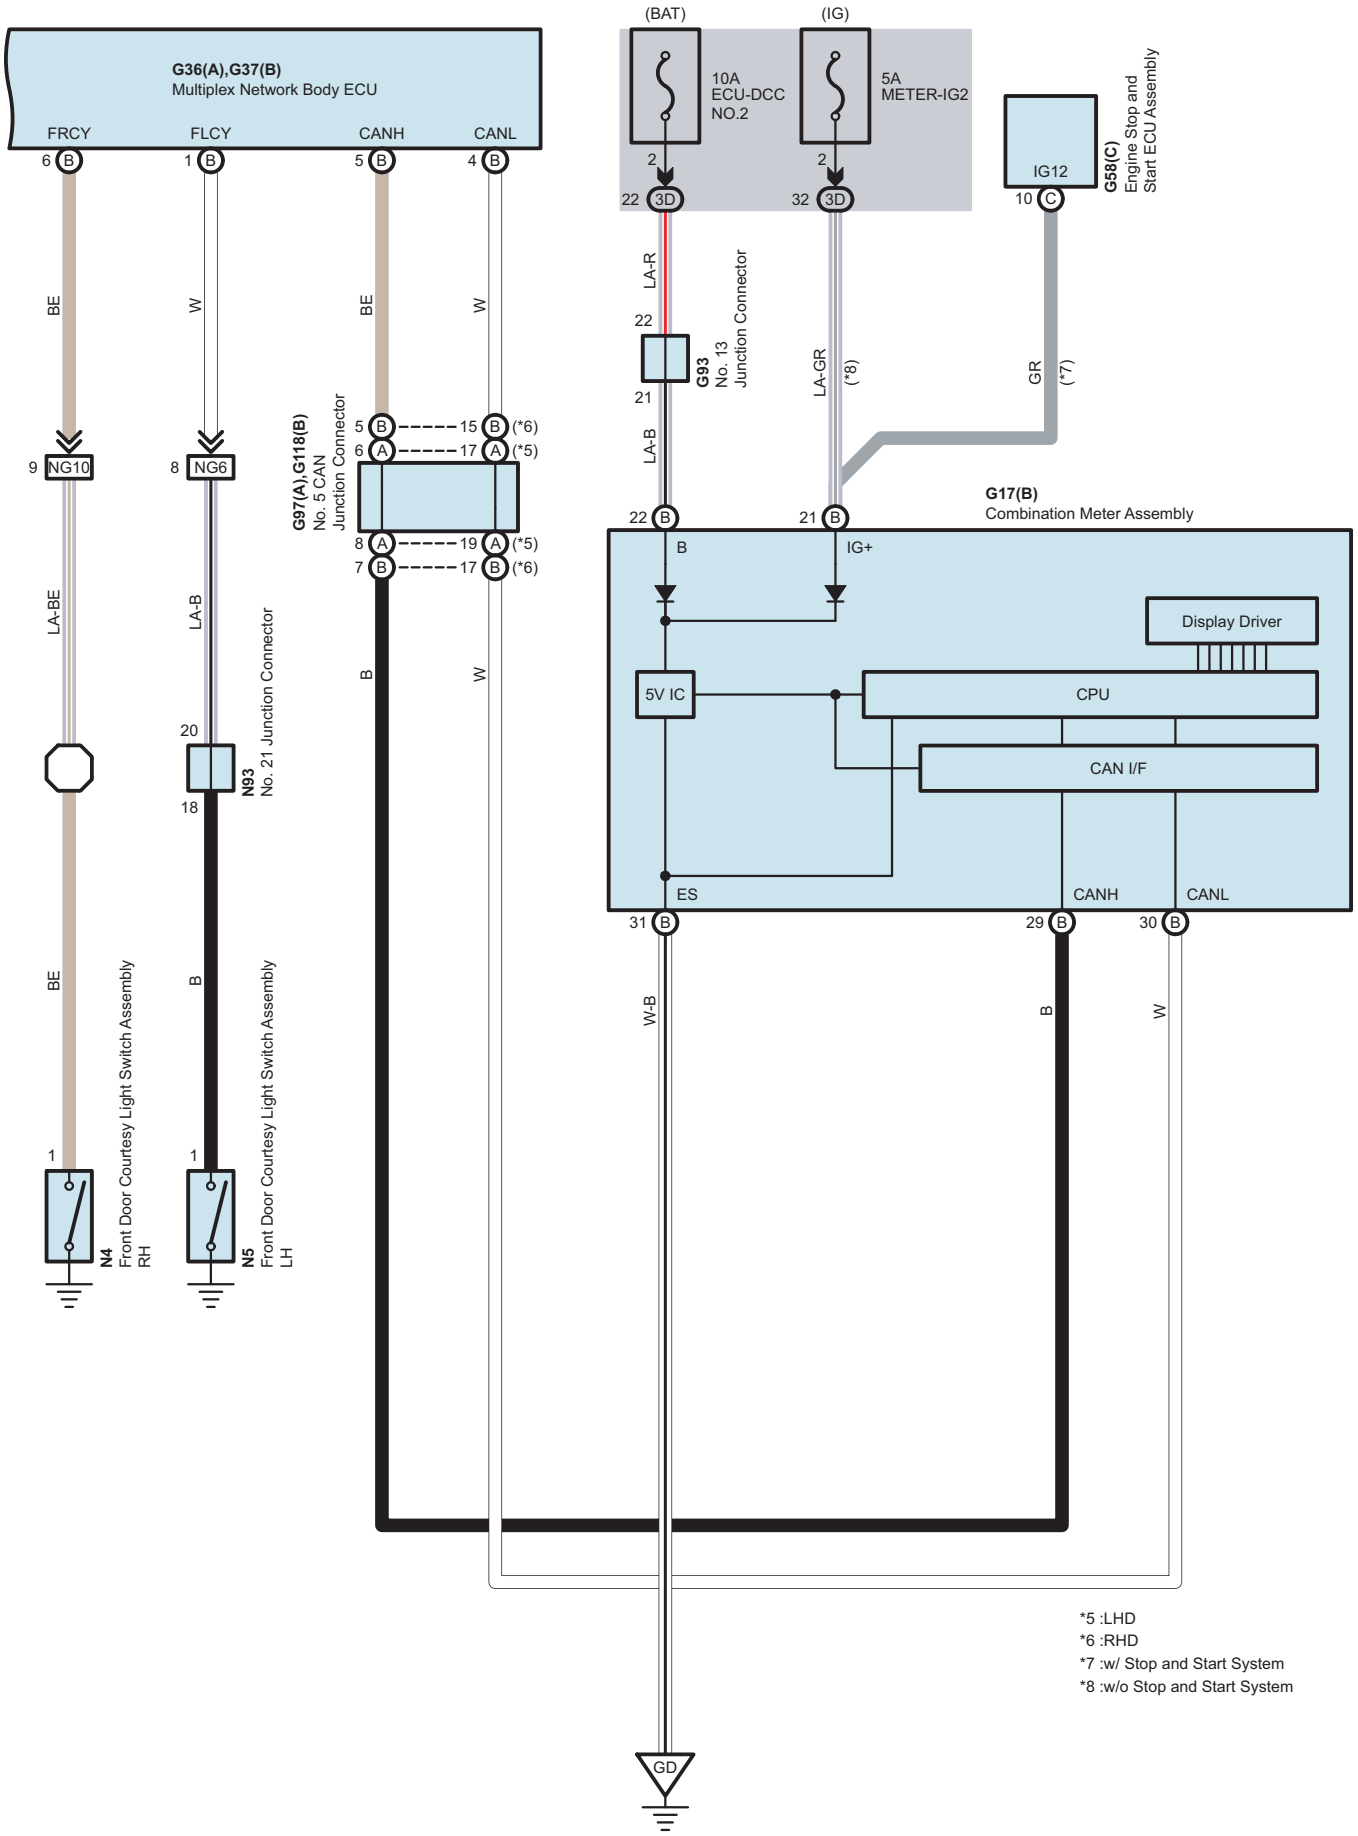
G36(A),G37(B)
Multiplex Network Body ECU
FRCY
FLCY
CANH
CANL
(BAT)
(IG)
10A
ECU-DCC
NO.2
5A
METER-IG2
IG12
G58(C)
Engine Stop and
Start ECU Assembly
G93
No. 13
Junction Connector
G97(A),G118(B)
No. 5 CAN
Junction Connector
NG10
NG6
N93
No. 21 Junction Connector
N4
Front Door Courtesy Light Switch Assembly
RH
N5
Front Door Courtesy Light Switch Assembly
LH
G17(B)
Combination Meter Assembly
Display Driver
5V IC
CPU
CAN I/F
ES
CANH
CANL
IG+
GD
*5 :LHD
*6 :RHD
*7 :w/ Stop and Start System
*8 :w/o Stop and Start System

G17
Black

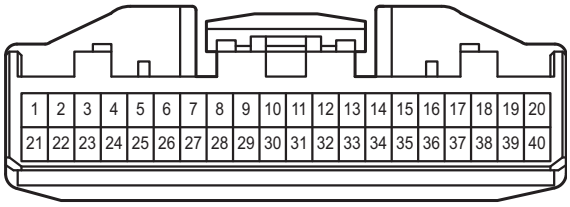


90980-12557

G36
Black

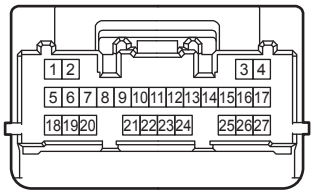


90980-12C63

G37
Black

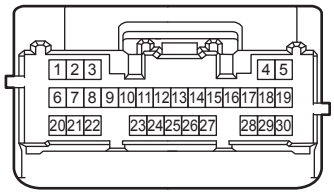


90980-12C62

G43
Gray

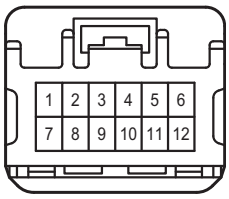


90980-12737

G58
Black

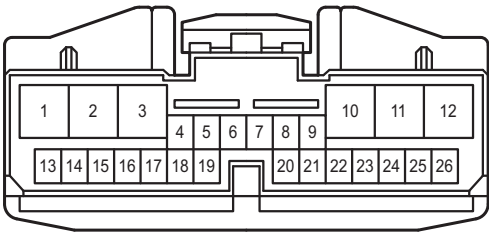


82824-12510

G92
Gray

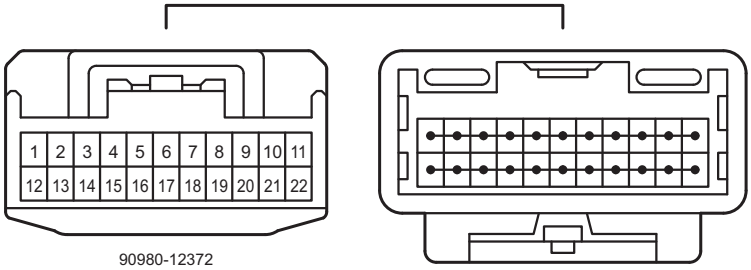


90980-12372

G93
Gray

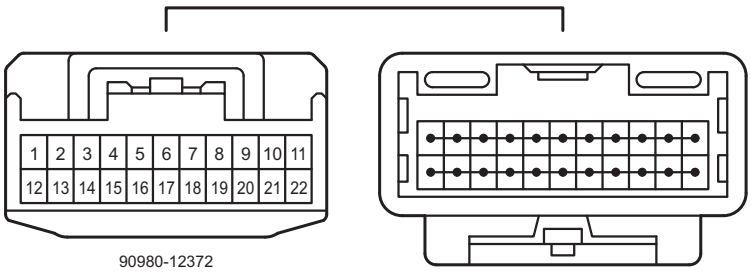


90980-12372

G97
Blue

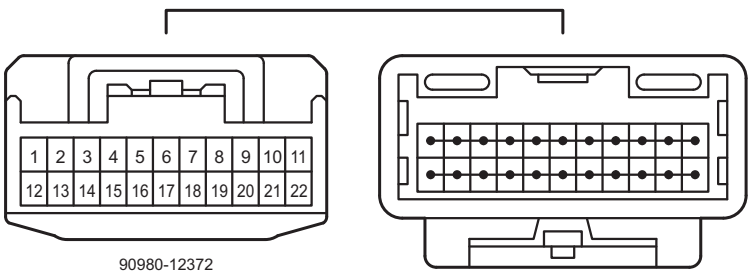


90980-12372

G118
White

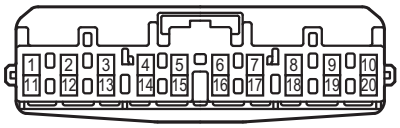


90980-12A58

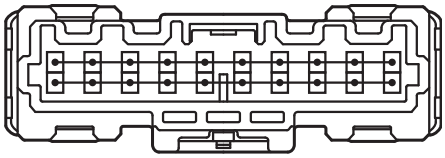

N4
Black

90980-10871

N5
Black

90980-10871

N93
White

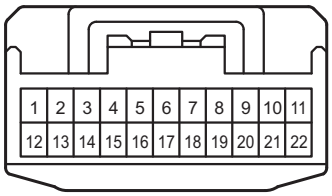


90980-12372

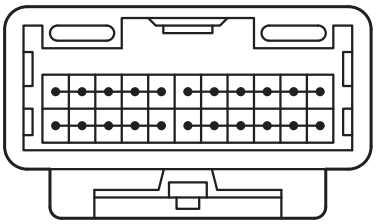

P13
White

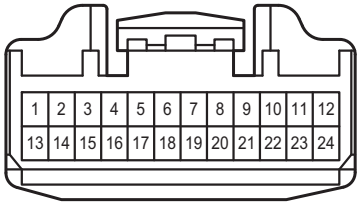


90980-12554

P20
Black

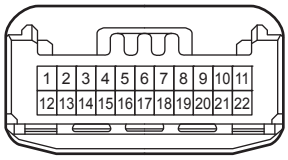


90980-12B54

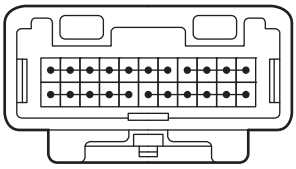

P22
White

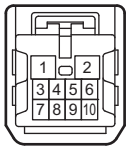


90980-12B81

3A
White

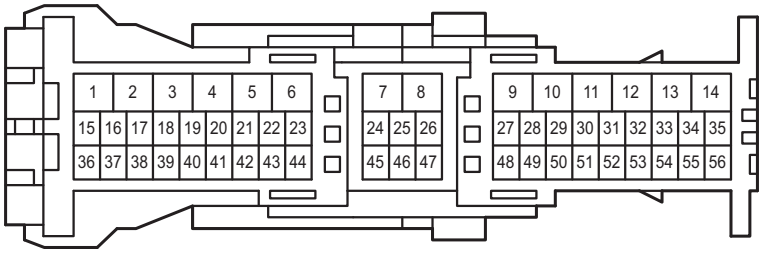


90980-12943

3D
White

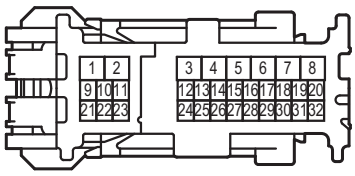


90980-12A48

7B
White

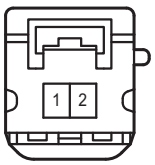


90980-12808

NG6
White

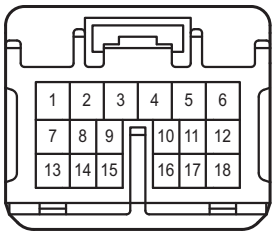


90980-12745

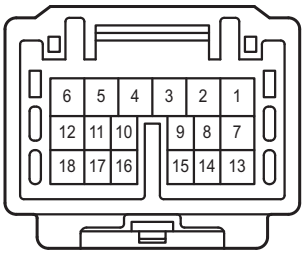


90980-12744

NG8
Blue

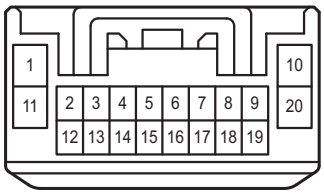


90980-12378

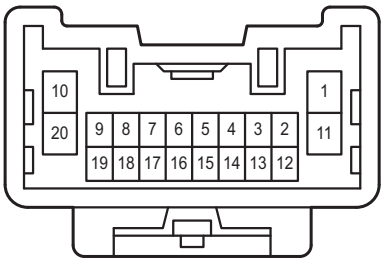


90980-12377

NG10
Gray

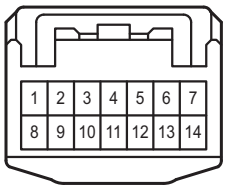


90980-12370

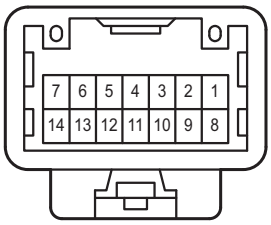


90980-12369

PG1
White

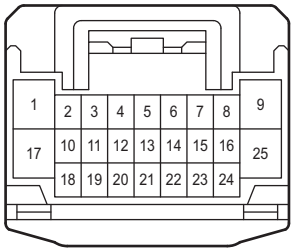


90980-12414

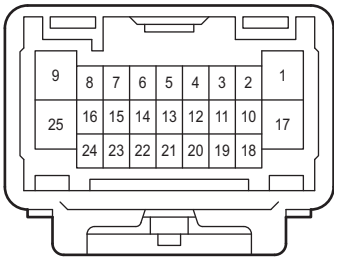


90980-12413

PG2
White

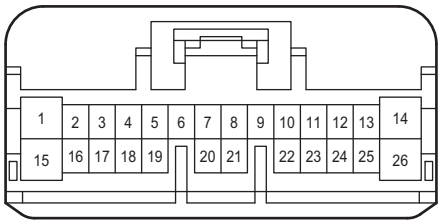


90980-12771

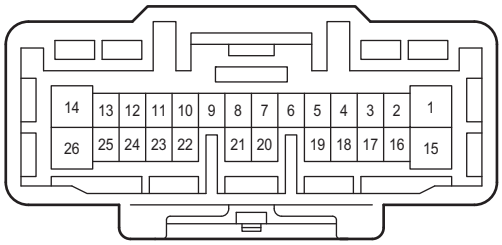


90980-12770