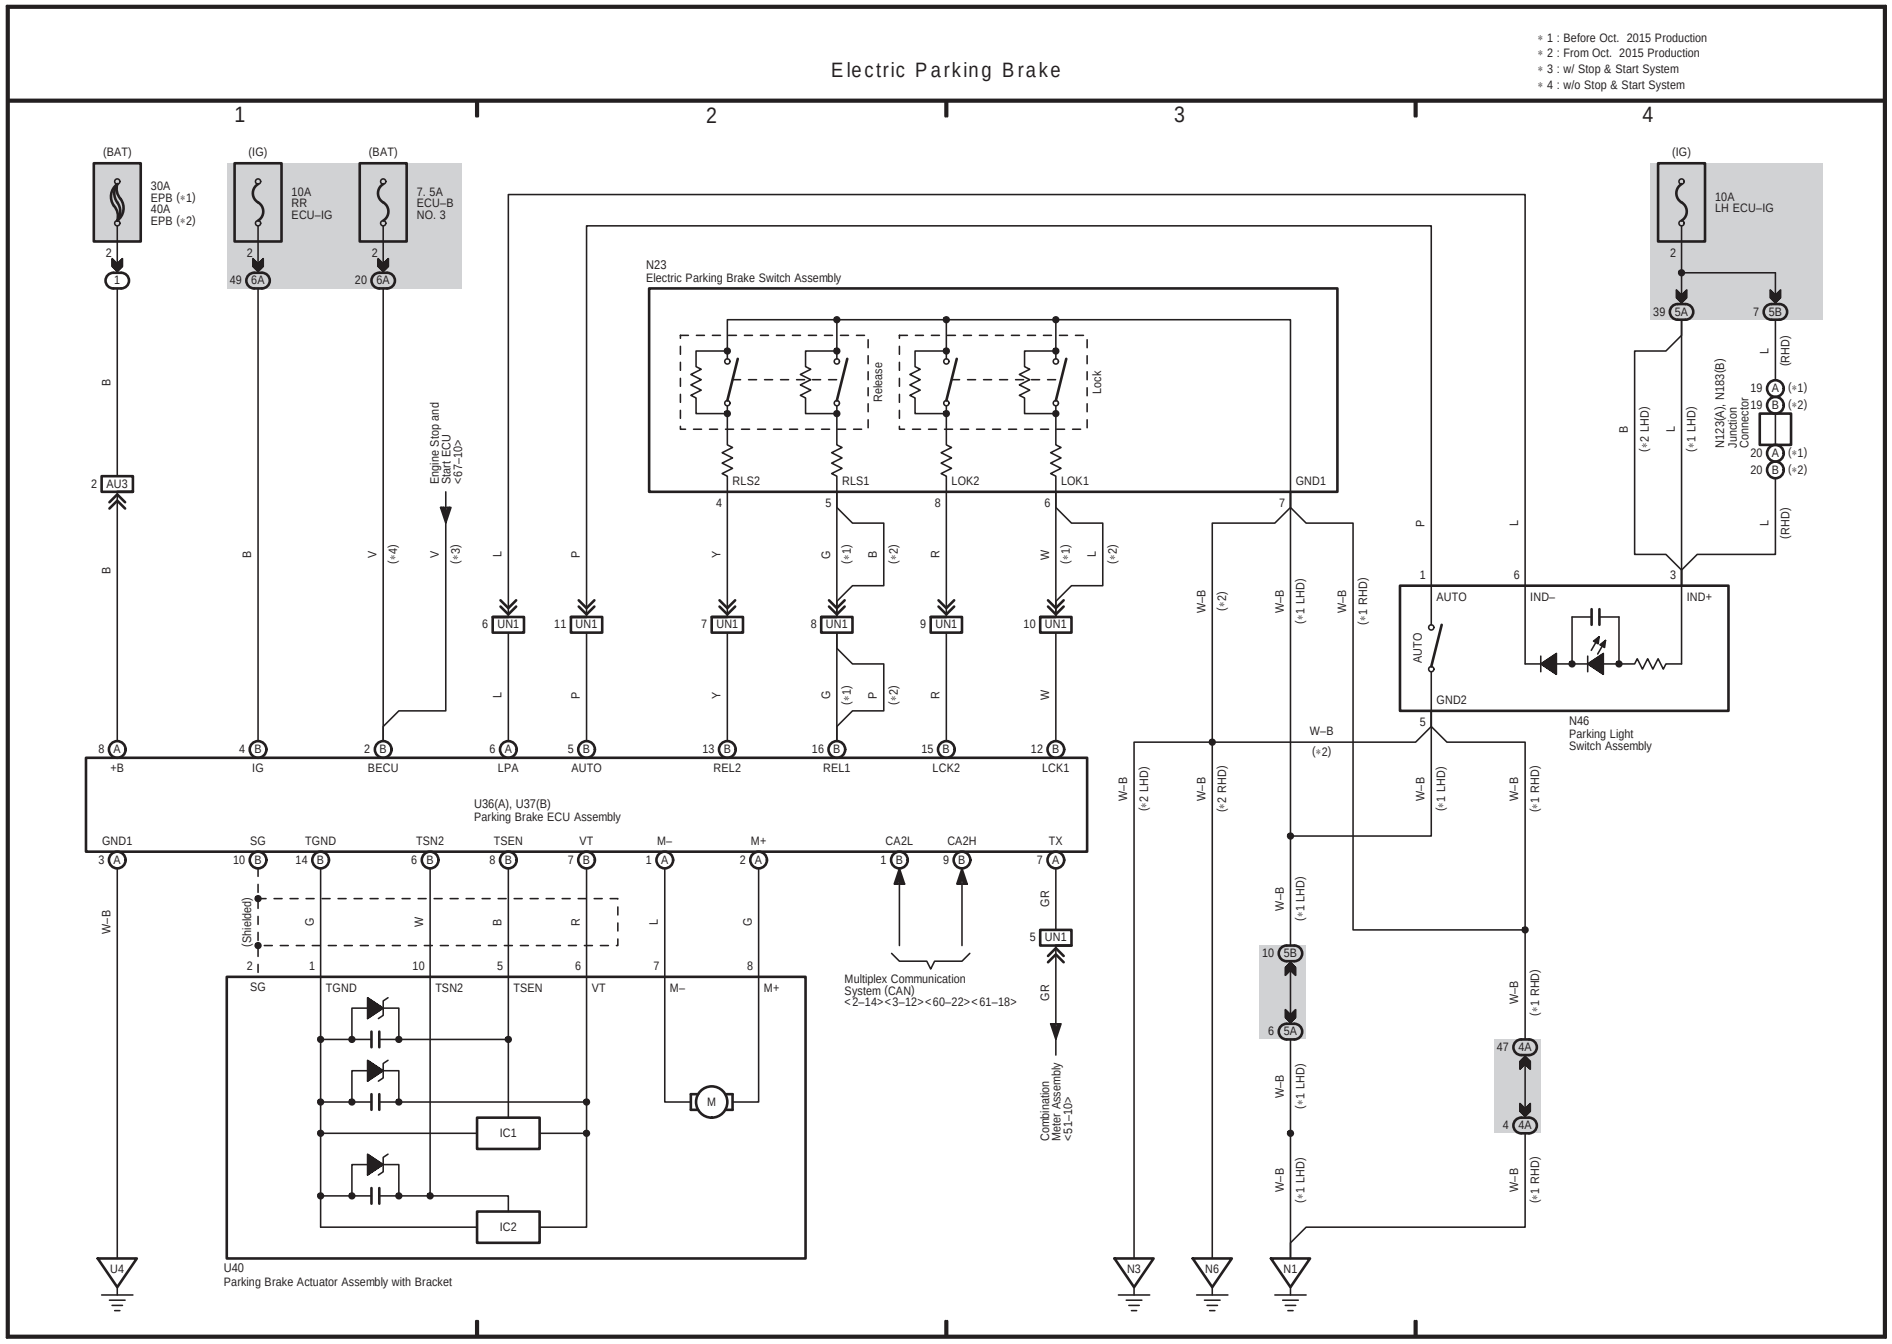
Electric Parking Brake
∗1 : Before Oct. 2015 Production
∗2 : From Oct. 2015 Production
∗3 : w/ Stop & Start System
∗4 : w/o Stop & Start System
(BAT)
30A
EPB (∗1)
40A
EPB (∗2)
(IG)
10A
RR
ECU–IG
(BAT)
7. 5A
ECU–B
NO. 3
(IG)
10A
LH ECU–IG
N23
Electric Parking Brake Switch Assembly
Release
Lock
RLS2
RLS1
LOK2
LOK1
GND1
Engine Stop and Start ECU
<67–10>
AU3
UN1
+B
IG
BECU
LPA
AUTO
REL2
REL1
LCK2
LCK1
U36(A), U37(B)
Parking Brake ECU Assembly
GND1
SG
TGND
TSN2
TSEN
VT
M–
M+
CA2L
CA2H
TX
(Shielded)
Multiplex Communication System (CAN)
<2–14><3–12><60–22><61–18>
Combination Meter Assembly
<51–10>
IC1
IC2
M
U40
Parking Brake Actuator Assembly with Bracket
U4
N3
N6
N1
N46
Parking Light Switch Assembly
AUTO
IND–
IND+
GND2
N1123(A), N183(B)
Junction Connector
(RHD)
(∗1 LHD)
(∗2 LHD)
(∗1 RHD)
(∗2 RHD)