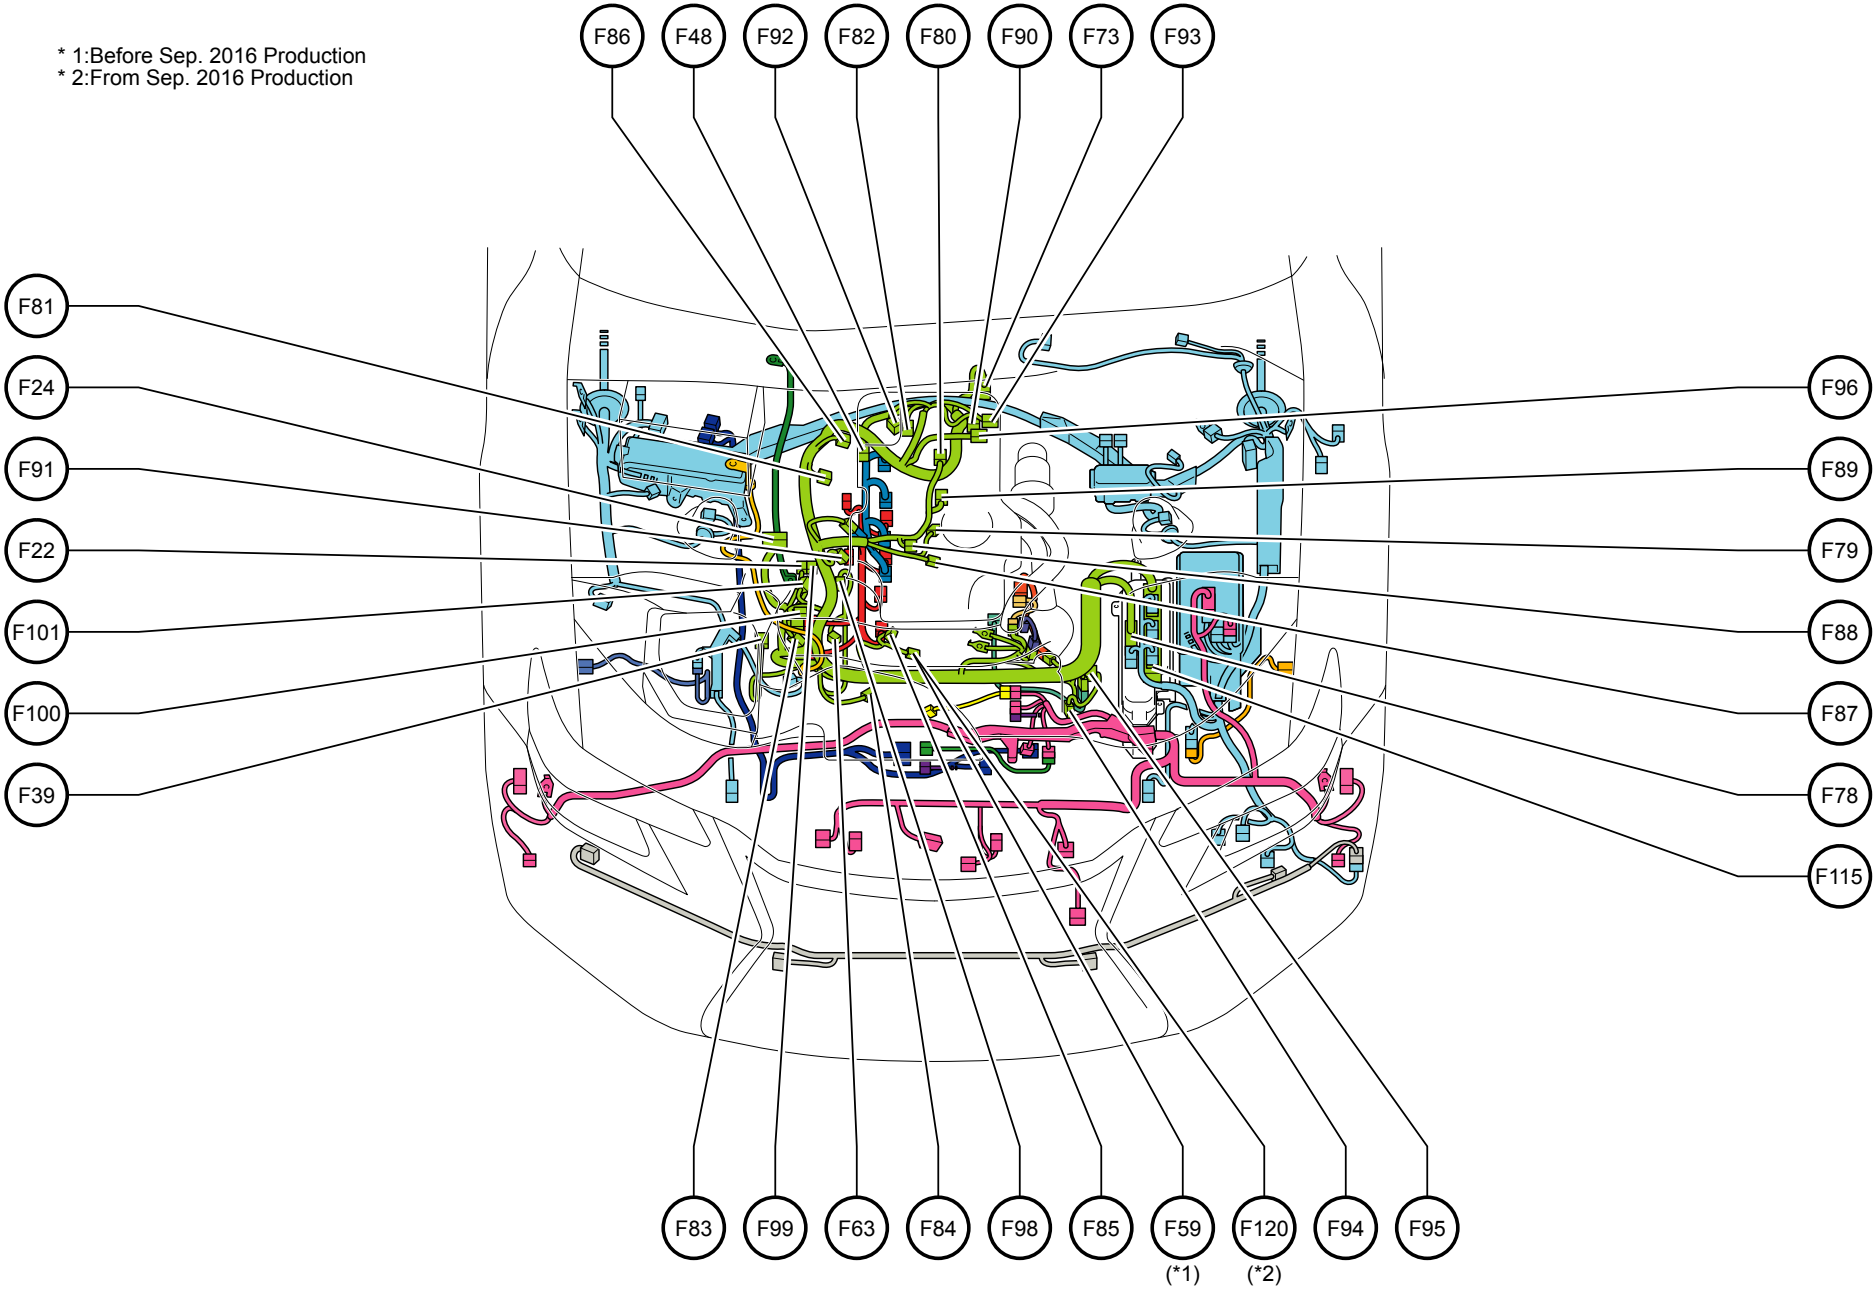
* 1:Before Sep. 2016 Production
* 2:From Sep. 2016 Production
F86
F48
F92
F82
F80
F90
F73
F93
F81
F24
F91
F22
F101
F100
F39
F96
F89
F79
F88
F87
F78
F115
F83
F99
F63
F84
F98
F85
F59
(*1)
F120
(*2)
F94
F95

F 22 Starter Assembly
F 24 Throttle Body Assembly with Motor
F 39 Intake Mass Air Flow Meter Sub-Assembly
F 48 Park/Neutral Position Switch Assembly
F 59 E.F.I. Engine Coolant Temperature Sensor
F 63 Engine Oil Level Sensor
F 73 ECT Solenoid (Transmission Wire)
F 78 ECM
F 79 Ignition Coil Assembly No. 2
F 80 Ignition Coil Assembly No. 4
F 81 No. 2 Turbo Pressure Sensor
F 82 Camshaft Position Sensor (Intake Side)
F 83 Generator Assembly
F 84 Crank Position Sensor
F 85 Camshaft Timing Oil Control Valve Assembly (Intake Side)
F 86 Purge VSV
F 87 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
F 88 Ignition Coil Assembly No. 1
F 89 Ignition Coil Assembly No. 3
F 90 Camshaft Position Sensor (Exhaust Side)
F 91 Fuel Pressure Sensor (Low Pressure Side)
F 92 Fuel Pump Assembly
F 93 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F 94 Cooler Compressor Assembly
F 95 Cooler Compressor Assembly
F 96 Oxygen Sensor (Bank 1 Sensor 2)
F 98 Heater Water Pump Assembly
F 99 Starter Assembly
F 100 Vacuum Regulating Valve Assembly
F 101 No. 1 Turbo Pressure Sensor
F 115 Junction Connector
F 120 E.F.I. Engine Coolant Temperature Sensor

F 22
Black

F 24
Black

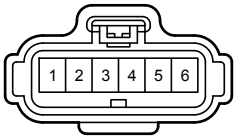

F 39
Black

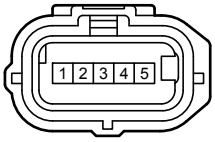

F 48
Black

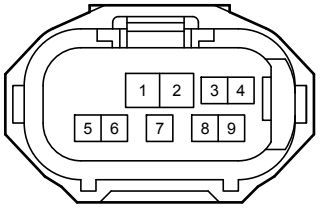

F 59
Gray

F 63
Gray

F 73
Gray

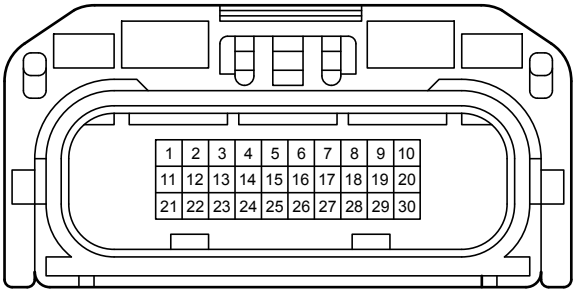

F 78
Black

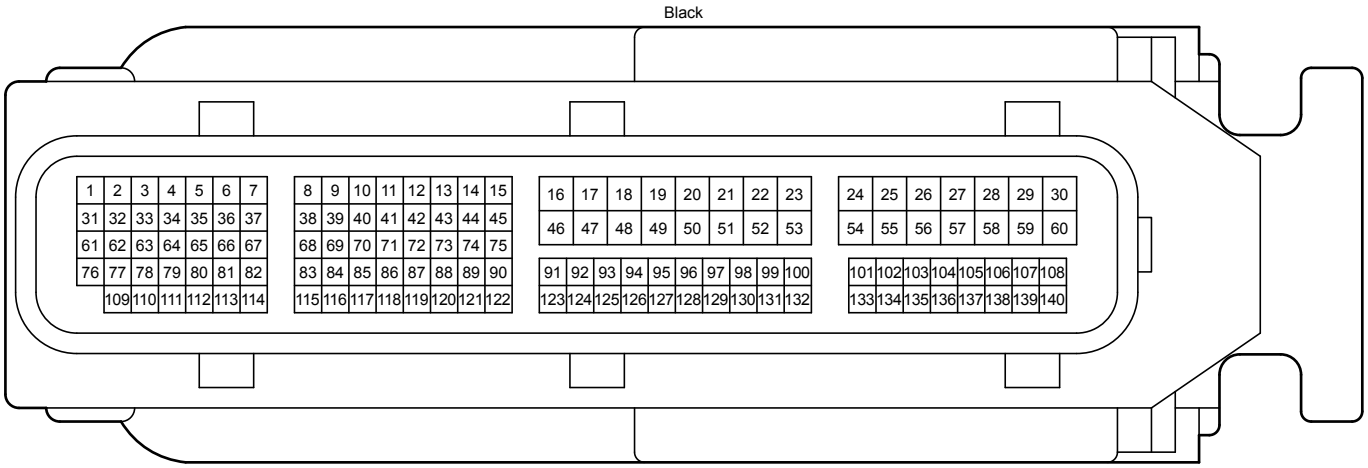

F 79
Gray

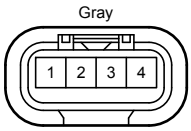

F 80
Gray

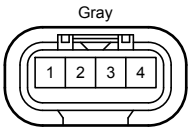

F 81
Black

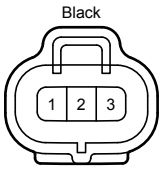

F 82
Black

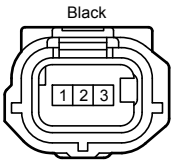

F 83
Black

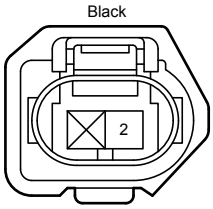

F 84
Black

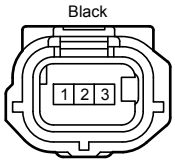

F 85
Black

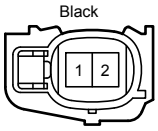

F 86
Black

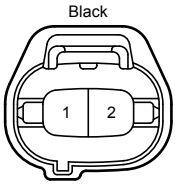

F 87
Black

F 88
Black



(8AR-FTS)

F 88
Gray



(2GR-FKS)

F 89
Black



F 90
Black

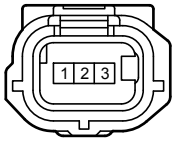

F 91
Black

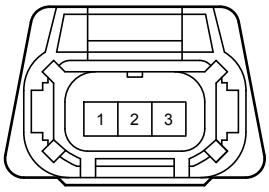

F 92
Black

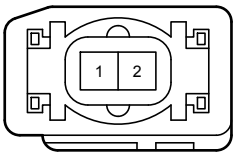

F 93
Dark Gray

F 94
Gray

F 95
Black

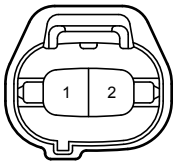

F 96
Gray

F 98
Black

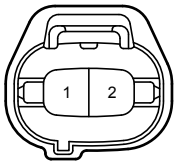

F 99
Black

F100
Black

F101
Black



F115
Blue

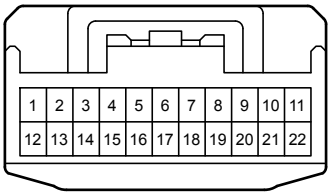

F120
White