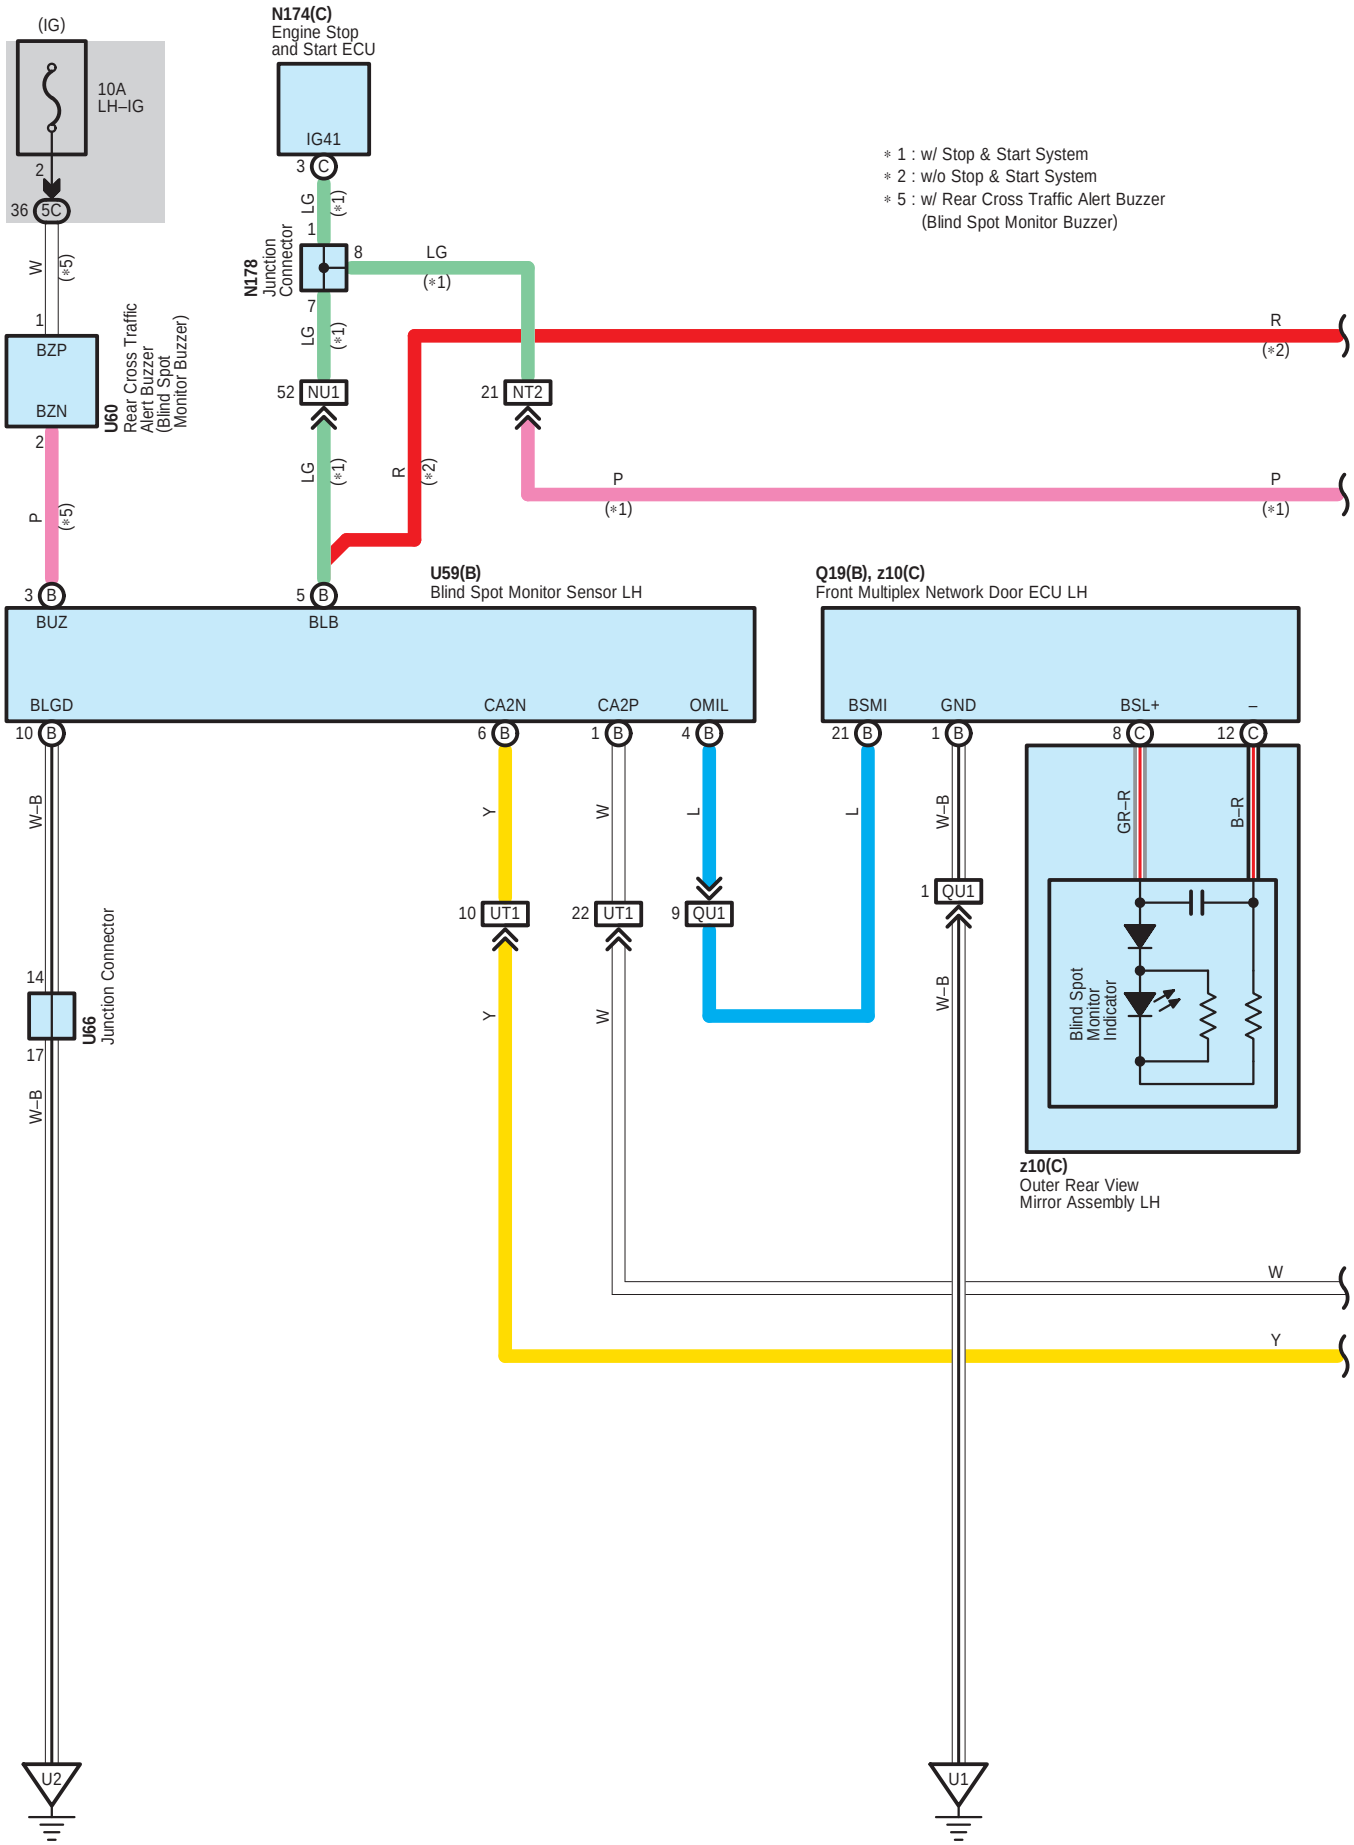
(IG)
10A
LH–IG
2
36 5C
W
(*5)
1
BZP
BZN
U60
Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
2
P
(*5)
3 B
BUZ
N174(C)
Engine Stop and Start ECU
IG41
3 C
LG
(*1)
1
N178
Junction Connector
8
LG
(*1)
7
LG
(*1)
52 NU1
LG
(*1)
R
(*2)
5 B
BLB
21 NT2
R
(*2)
P
(*1)
P
(*1)
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
* 5 : w/ Rear Cross Traffic Alert Buzzer
(Blind Spot Monitor Buzzer)
U59(B)
Blind Spot Monitor Sensor LH
BLGD
CA2N
CA2P
OMIL
10 B
6 B
1 B
4 B
W–B
Y
W
L
10 UT1
22 UT1
9 QU1
Y
W
14
17
U66
Junction Connector
W–B
U2
Q19(B), z10(C)
Front Multiplex Network Door ECU LH
BSMI
GND
BSL+
–
21 B
1 B
8 C
12 C
L
W–B
GR–R
B–R
1 QU1
W–B
Blind Spot Monitor Indicator
z10(C)
Outer Rear View Mirror Assembly LH
W
Y
U1

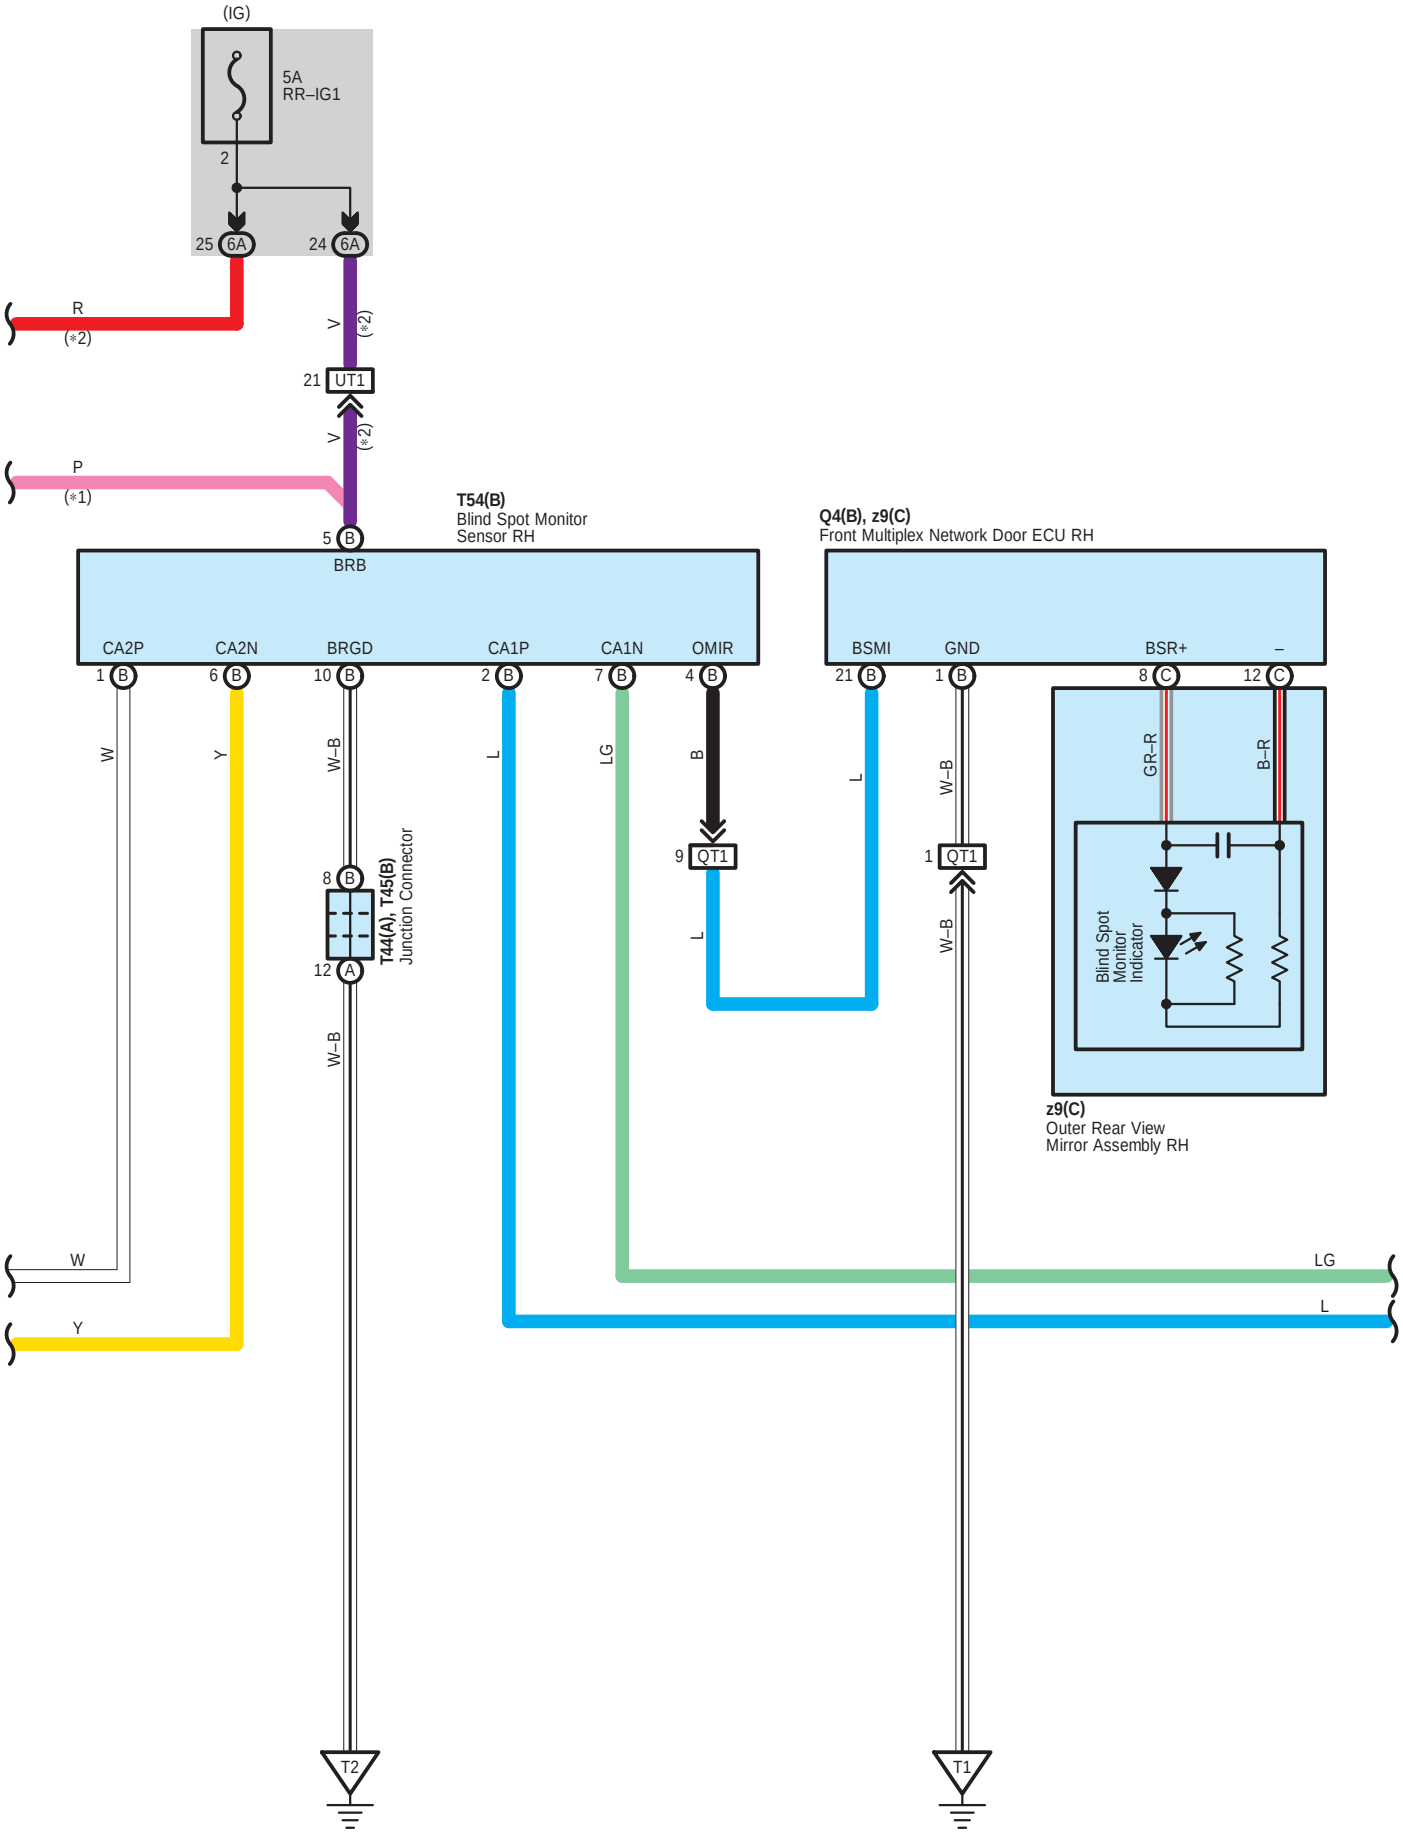
(IG)
5A
RR–IG1
2
25 6A
24 6A
R
(*2)
V
(*2)
21 UT1
V
(*2)
P
(*1)
5 B
BRB
T54(B)
Blind Spot Monitor
Sensor RH
Q4(B), z9(C)
Front Multiplex Network Door ECU RH
CA2P
CA2N
BRGD
CA1P
CA1N
OMIR
BSMI
GND
BSR+
–
1 B
6 B
10 B
2 B
7 B
4 B
21 B
1 B
8 C
12 C
W
Y
W–B
L
LG
B
L
W–B
GR–R
B–R
9 QT1
1 QT1
L
W–B
8 B
12 A
T44(A), T45(B)
Junction Connector
W–B
Blind Spot
Monitor
Indicator
z9(C)
Outer Rear View
Mirror Assembly RH
W
Y
LG
L
T2
T1

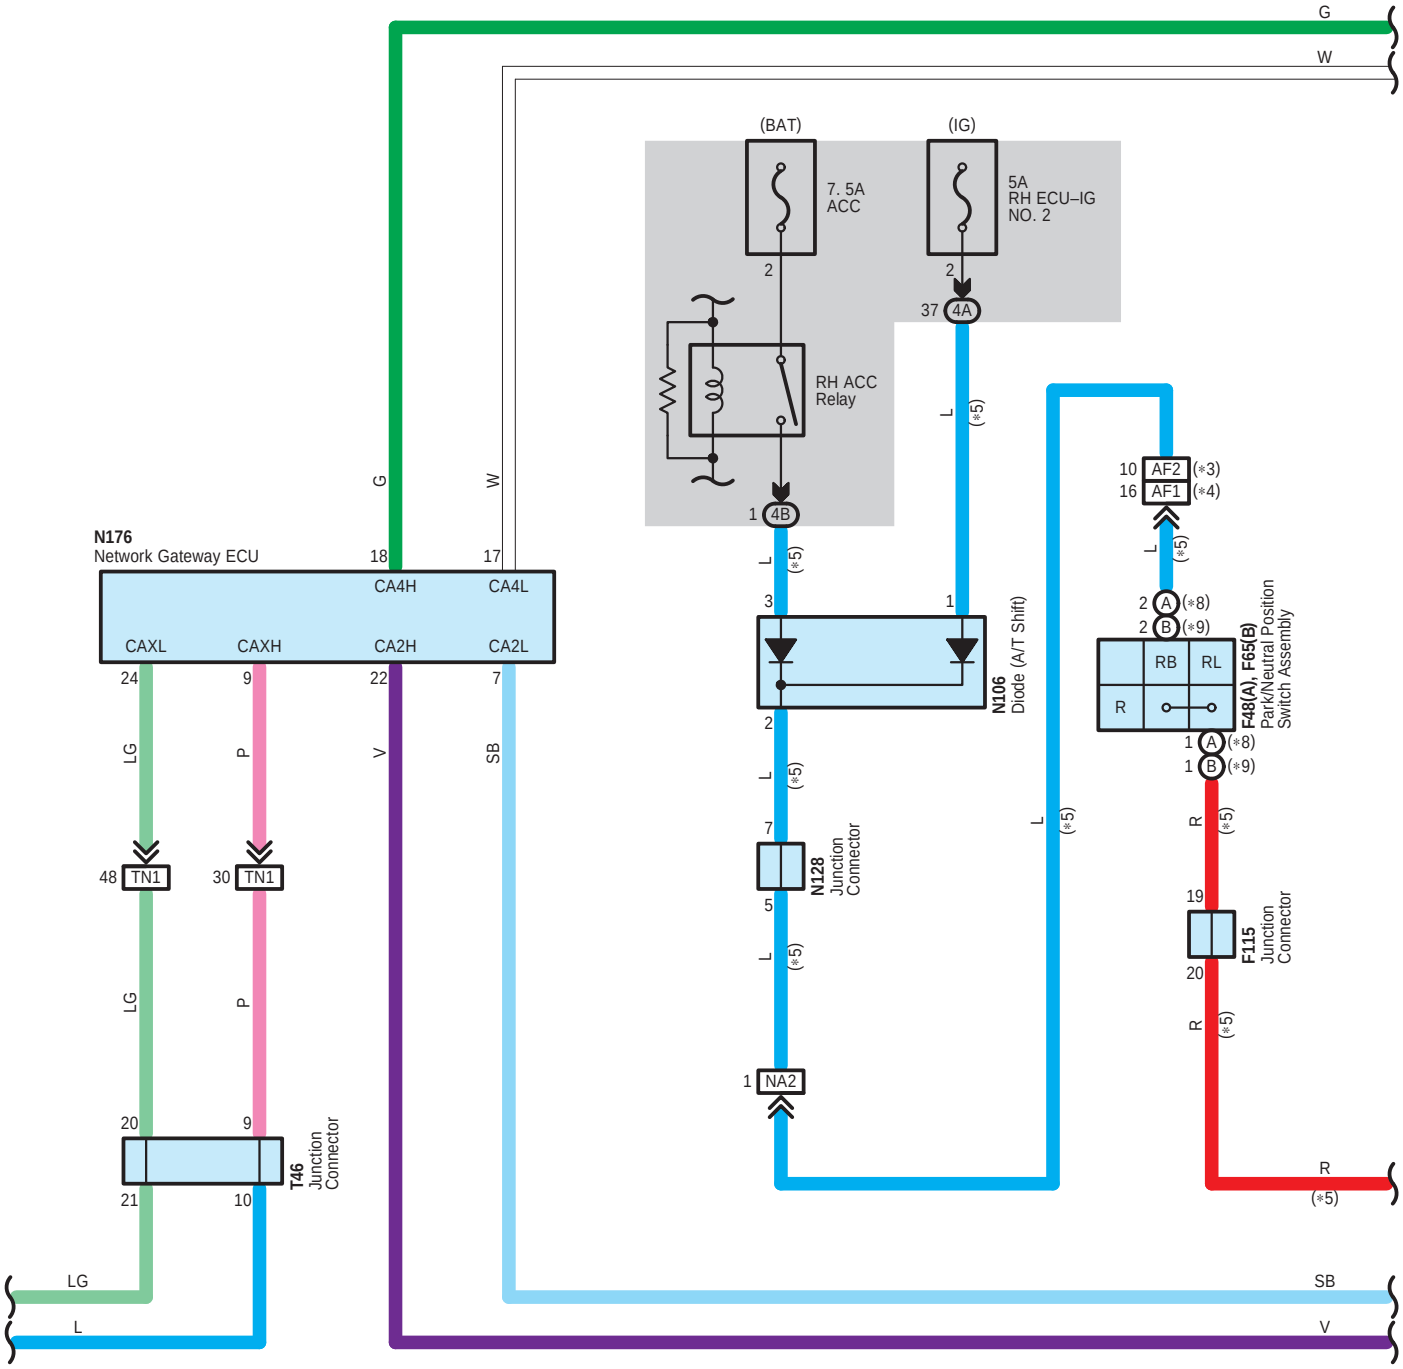
G
W
(BAT)
(IG)
7. 5A
ACC
5A
RH ECU–IG
NO. 2
2
2
37 4A
RH ACC
Relay
1 4B
L
(*5)
10 AF2 (*3)
16 AF1 (*4)
N176
Network Gateway ECU
18
17
CA4H
CA4L
CAXL
CAXH
CA2H
CA2L
24
9
22
7
LG
P
V
SB
48 TN1
30 TN1
3
1
N106
Diode (A/T Shift)
2 A (*8)
2 B (*9)
RB
RL
R
F48(A), F65(B)
Park/Neutral Position
Switch Assembly
1 A (*8)
1 B (*9)
7
N128
Junction
Connector
5
19
F115
Junction
Connector
20
1 NA2
20
9
T46
Junction
Connector
21
10
R

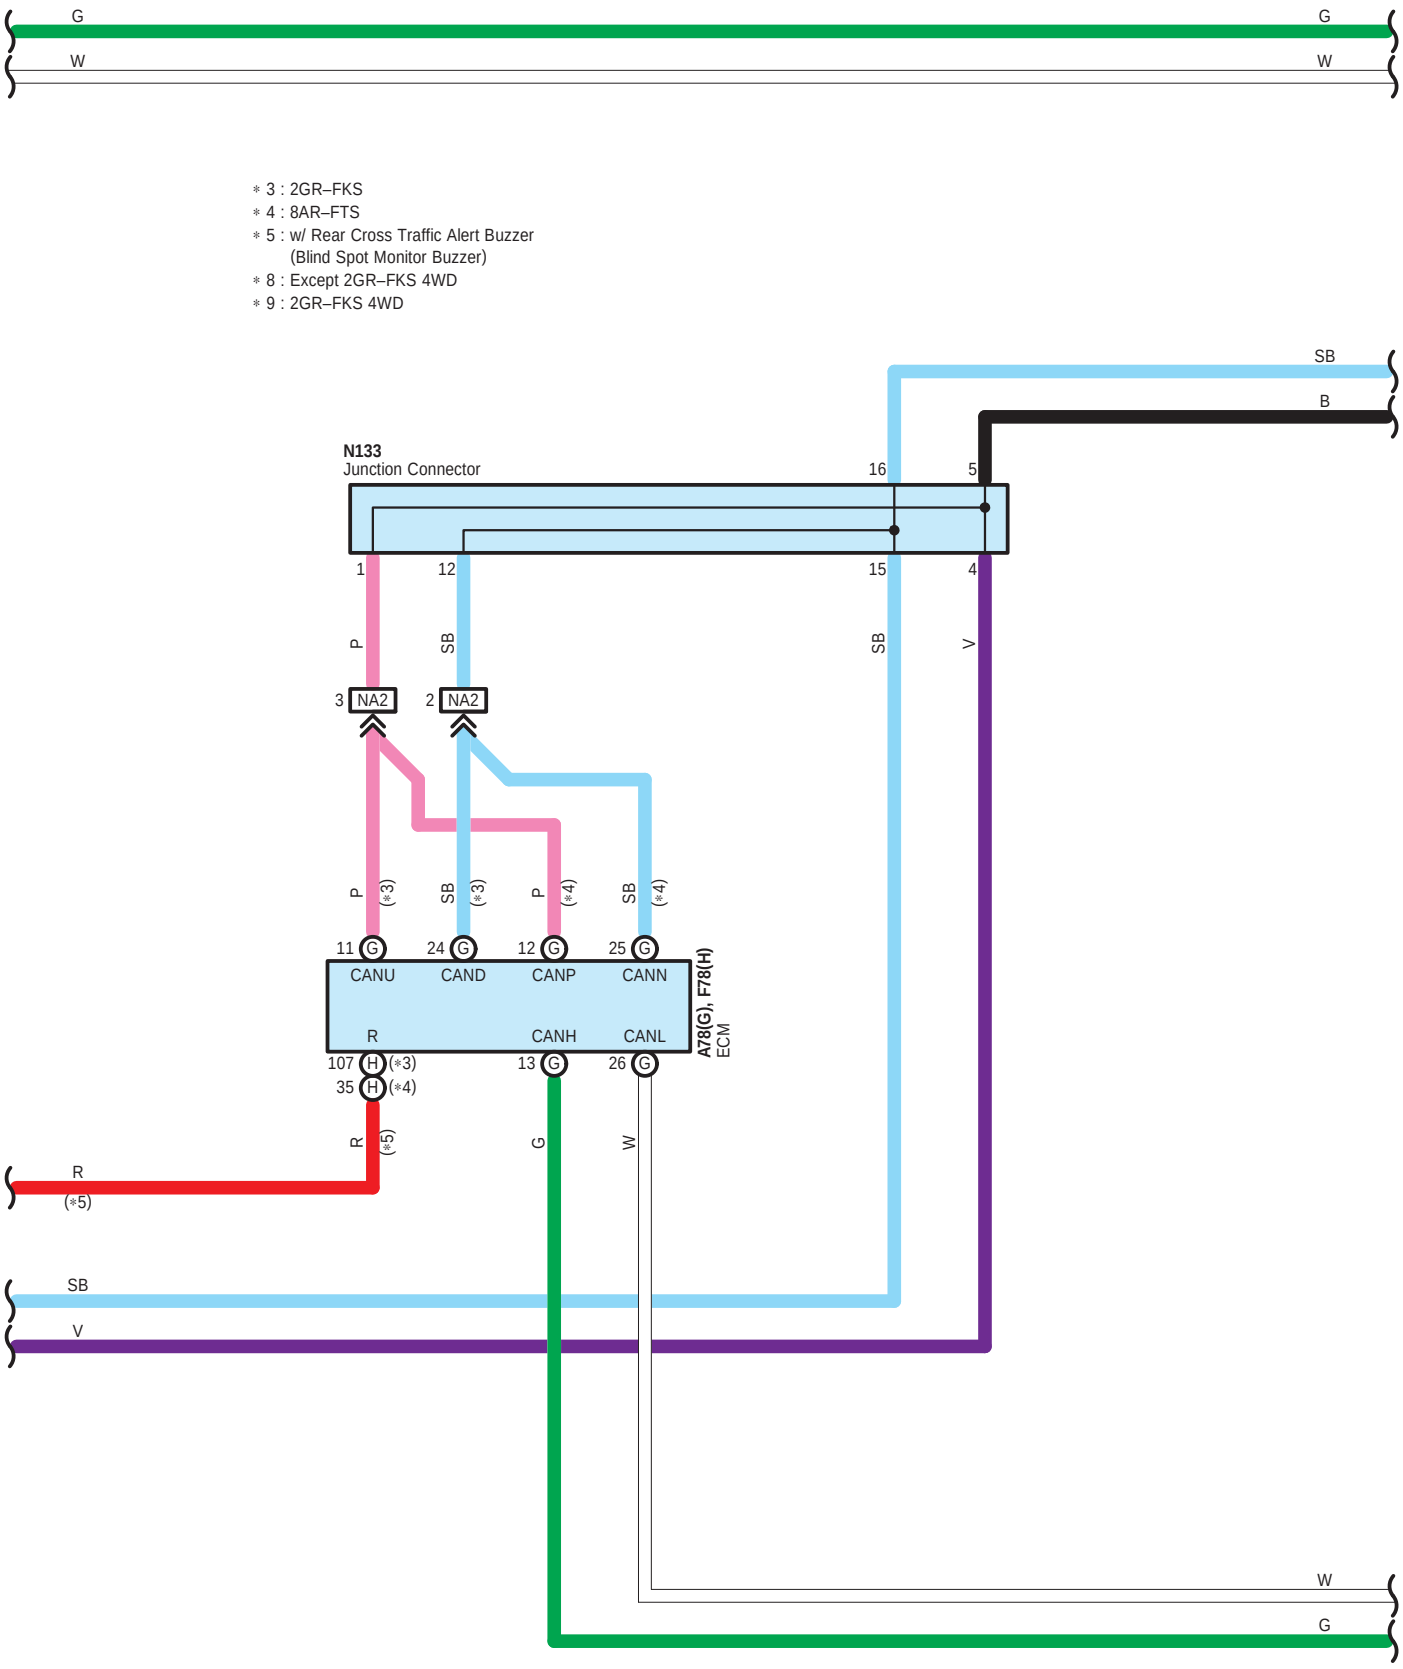
G
W
G
W
∗ 3 : 2GR–FKS
∗ 4 : 8AR–FTS
∗ 5 : w/ Rear Cross Traffic Alert Buzzer
(Blind Spot Monitor Buzzer)
∗ 8 : Except 2GR–FKS 4WD
∗ 9 : 2GR–FKS 4WD
SB
B
N133
Junction Connector
16
5
1
12
15
4
P
SB
SB
V
3 NA2
2 NA2
P (∗3)
SB (∗3)
P (∗4)
SB (∗4)
11 G
24 G
12 G
25 G
CANU
CAND
CANP
CANN
R
CANH
CANL
A78(G), F78(H)
ECM
107 H (∗3)
35 H (∗4)
13 G
26 G
R (∗5)
G
W
R
(∗5)
SB
V
W
G

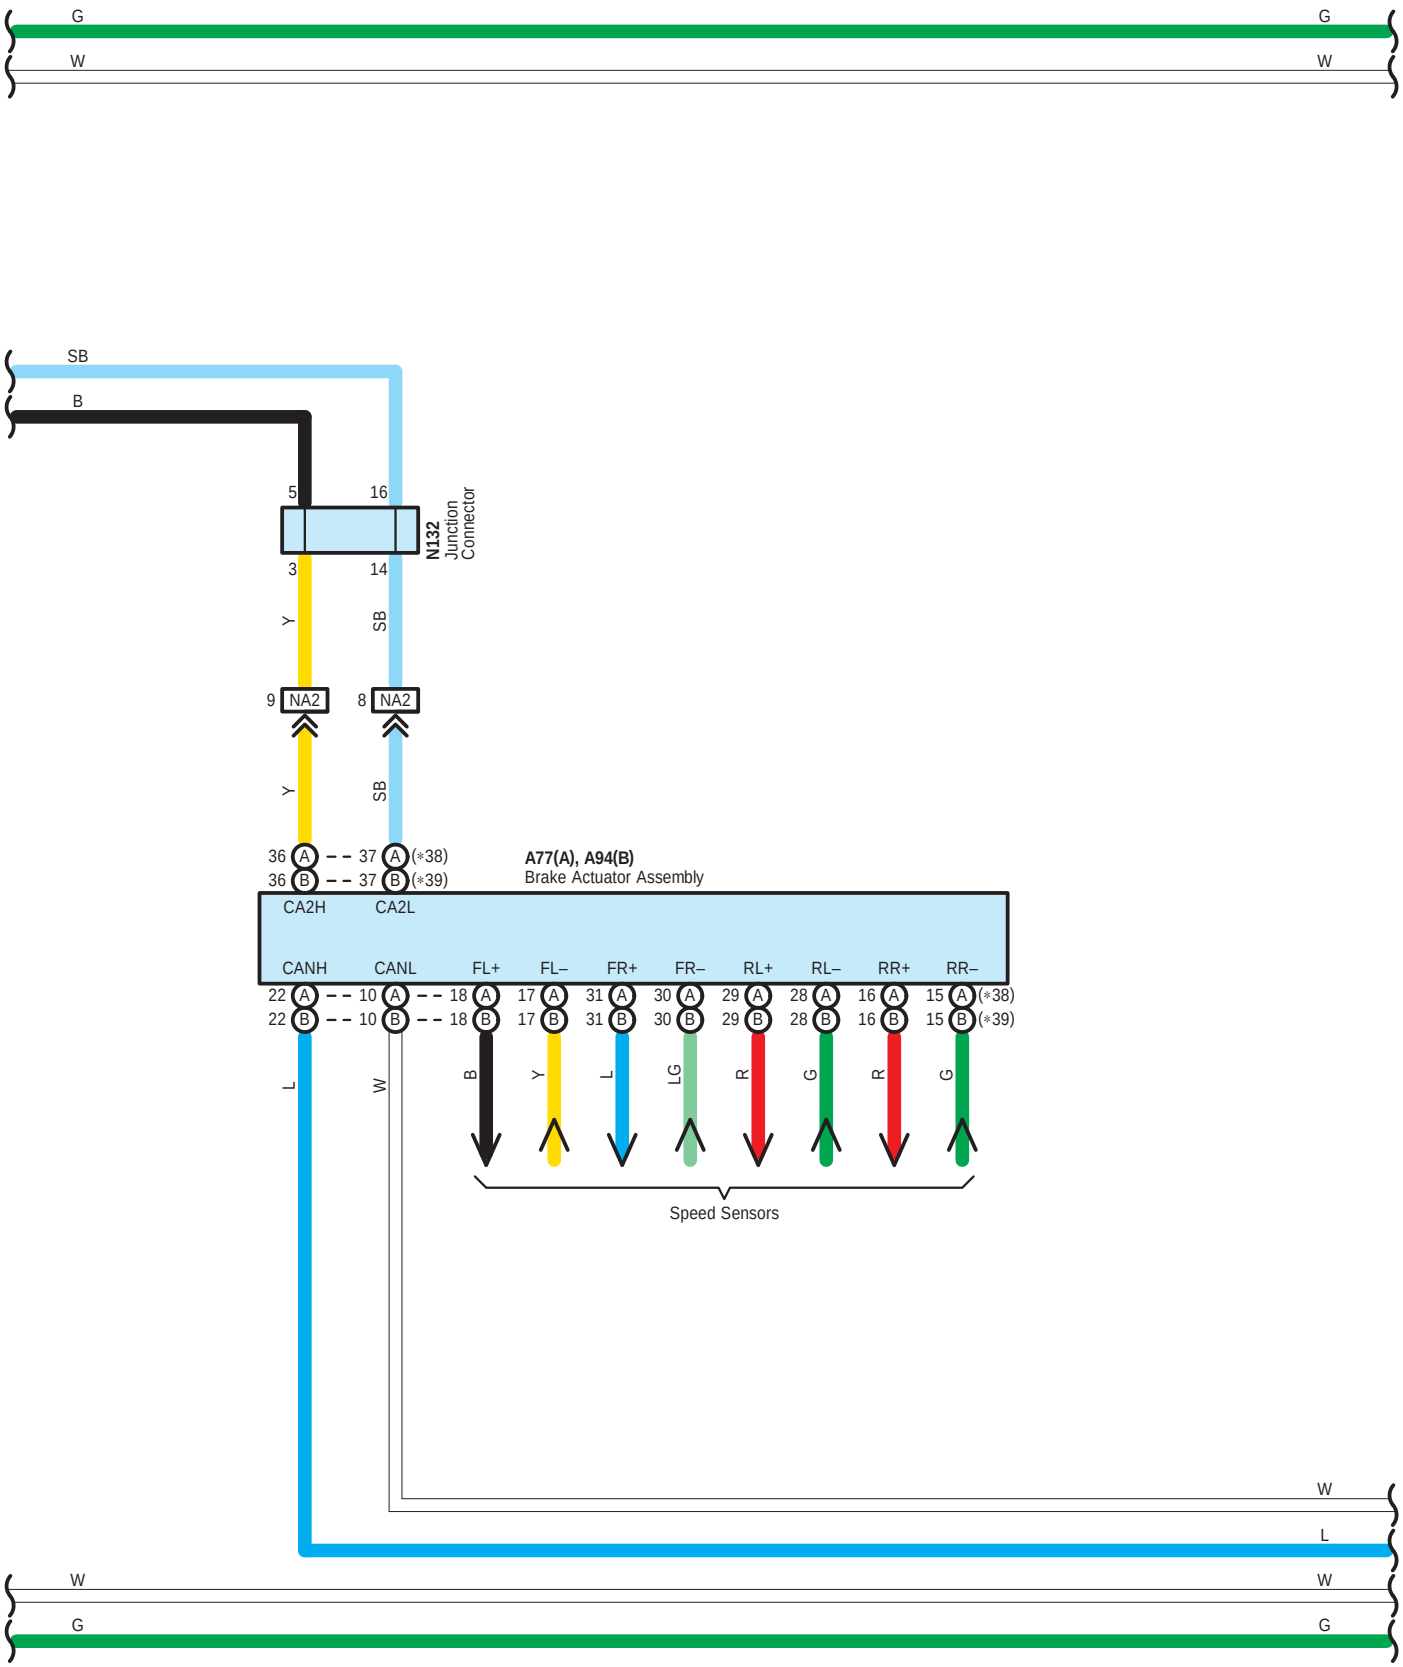
G
W
SB
B
5
16
N132
Junction
Connector
3
14
Y
SB
9 NA2
8 NA2
Y
SB
36 A
36 B
37 A (*38)
37 B (*39)
A77(A), A94(B)
Brake Actuator Assembly
CA2H
CA2L
CANH
CANL
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
22 A
22 B
10 A
10 B
18 A
18 B
17 A
17 B
31 A
31 B
30 A
30 B
29 A
29 B
28 A
28 B
16 A
16 B
15 A (*38)
15 B (*39)
L
W
B
Y
L
LG
R
G
R
G
Speed Sensors

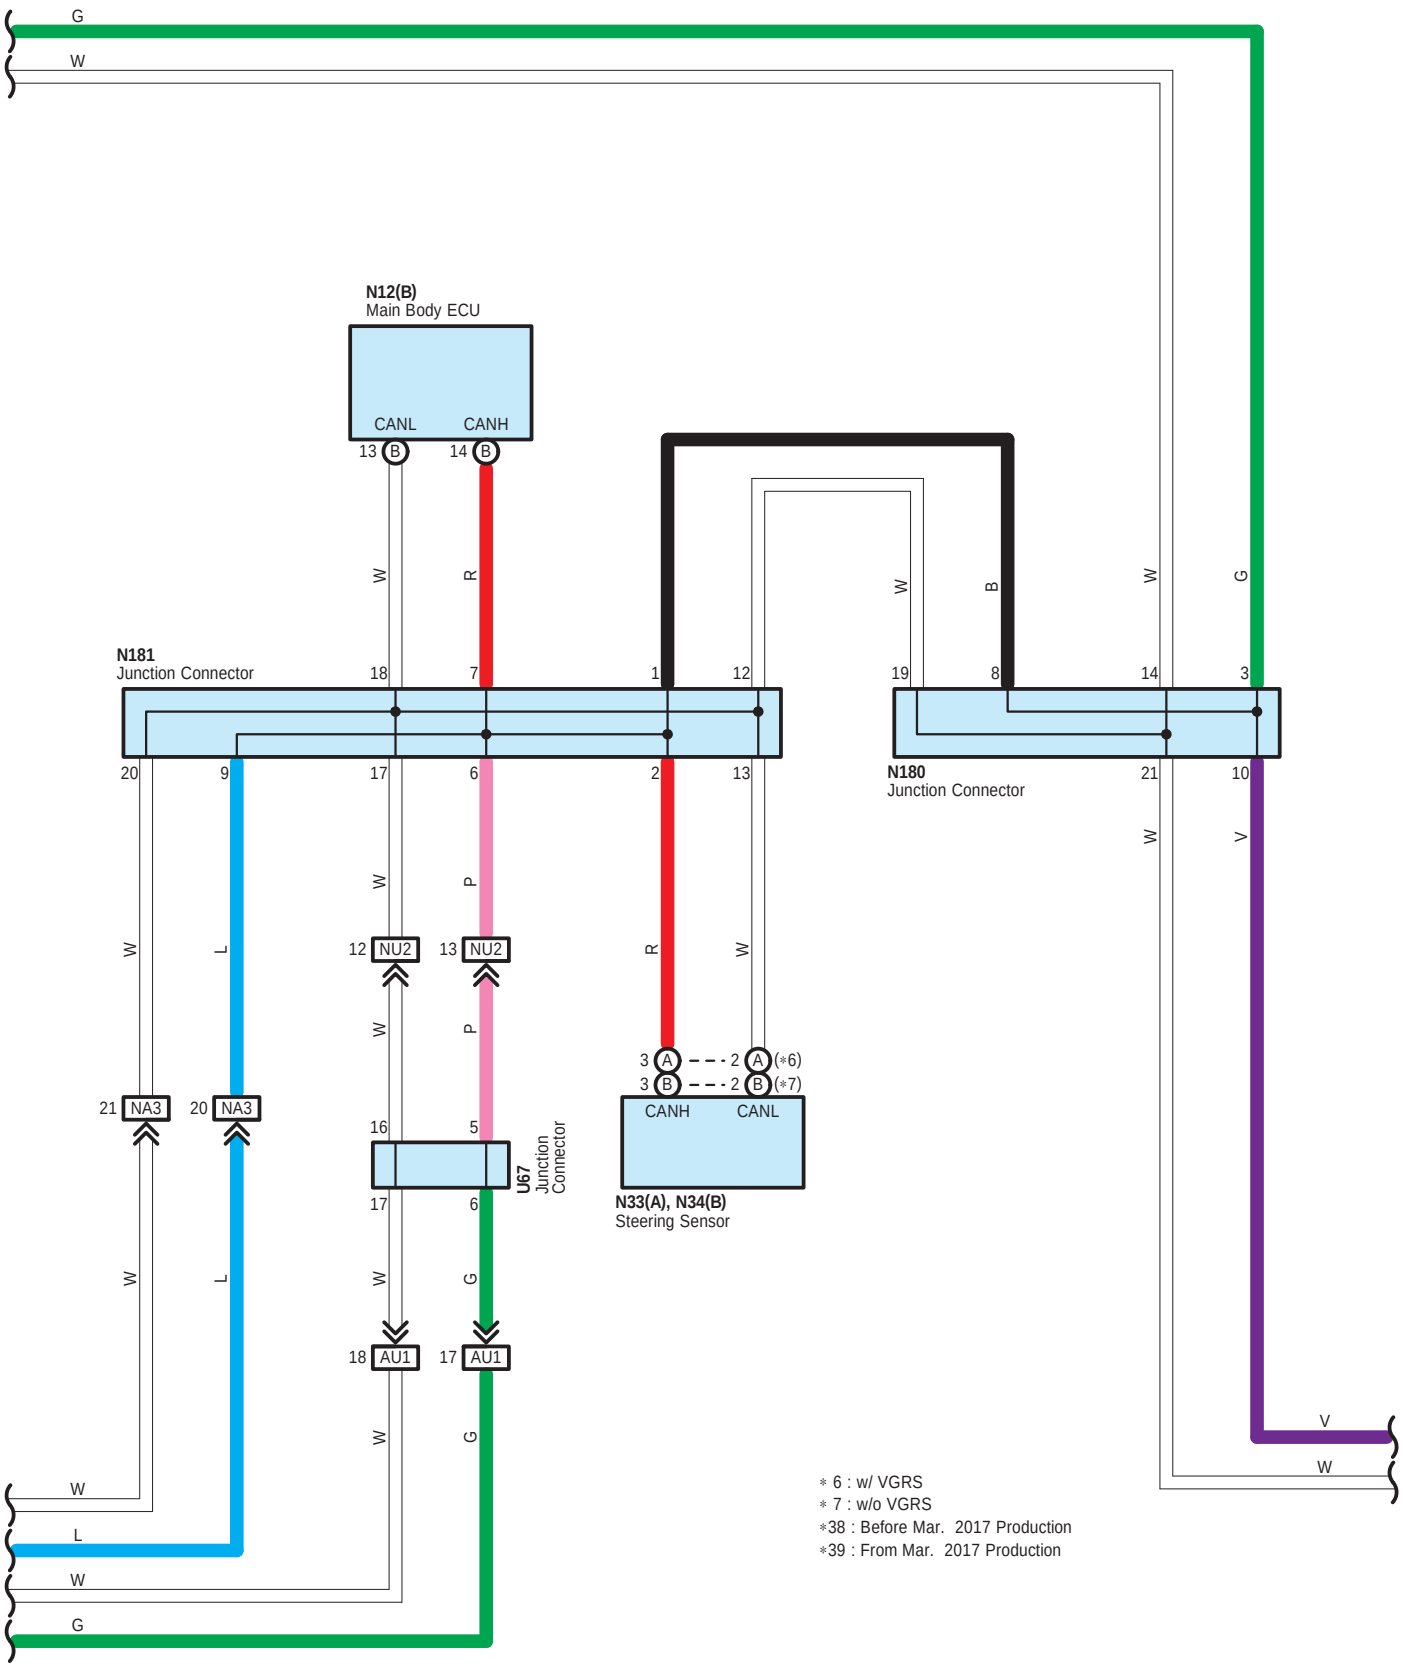

* 6 : w/ VGRS
* 7 : w/o VGRS
*38 : Before Mar. 2017 Production
*39 : From Mar. 2017 Production

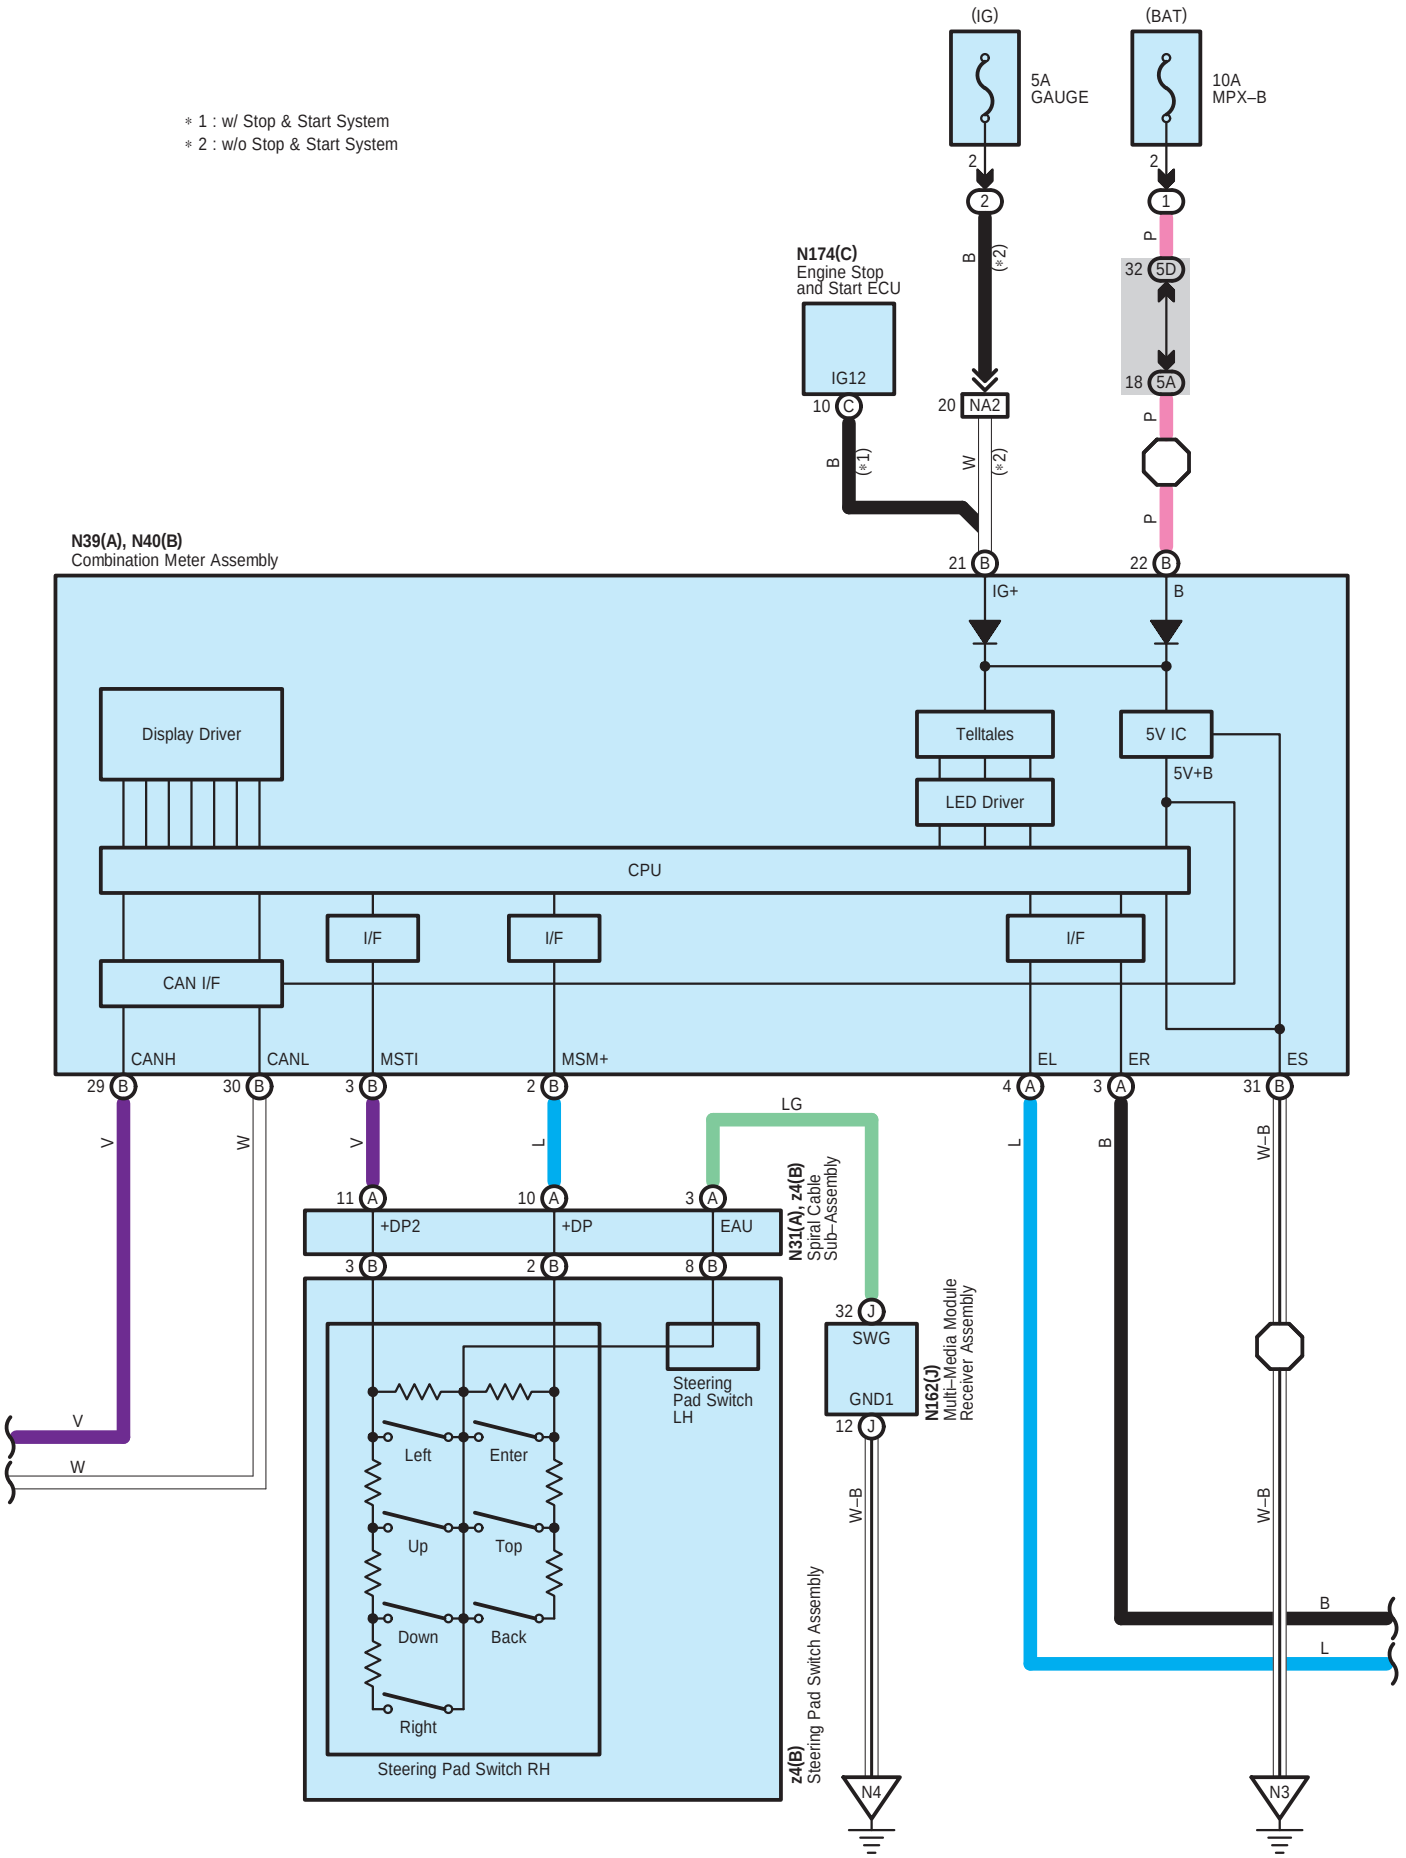
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
(IG)
5A
GAUGE
(BAT)
10A
MPX–B
N174(C)
Engine Stop
and Start ECU
IG12
NA2
N39(A), N40(B)
Combination Meter Assembly
IG+
B
Display Driver
Telltales
5V IC
5V+B
LED Driver
CPU
I/F
CAN I/F
CANH
CANL
MSTI
MSM+
EL
ER
ES
LG
+DP2
+DP
EAU
N31(A), z4(B)
Spiral Cable
Sub–Assembly
SWG
GND1
N162(J)
Multi–Media Module
Receiver Assembly
Steering
Pad Switch
LH
Left
Enter
Up
Top
Down
Back
Right
Steering Pad Switch RH
z4(B)
Steering Pad Switch Assembly
W–B
N4
N3

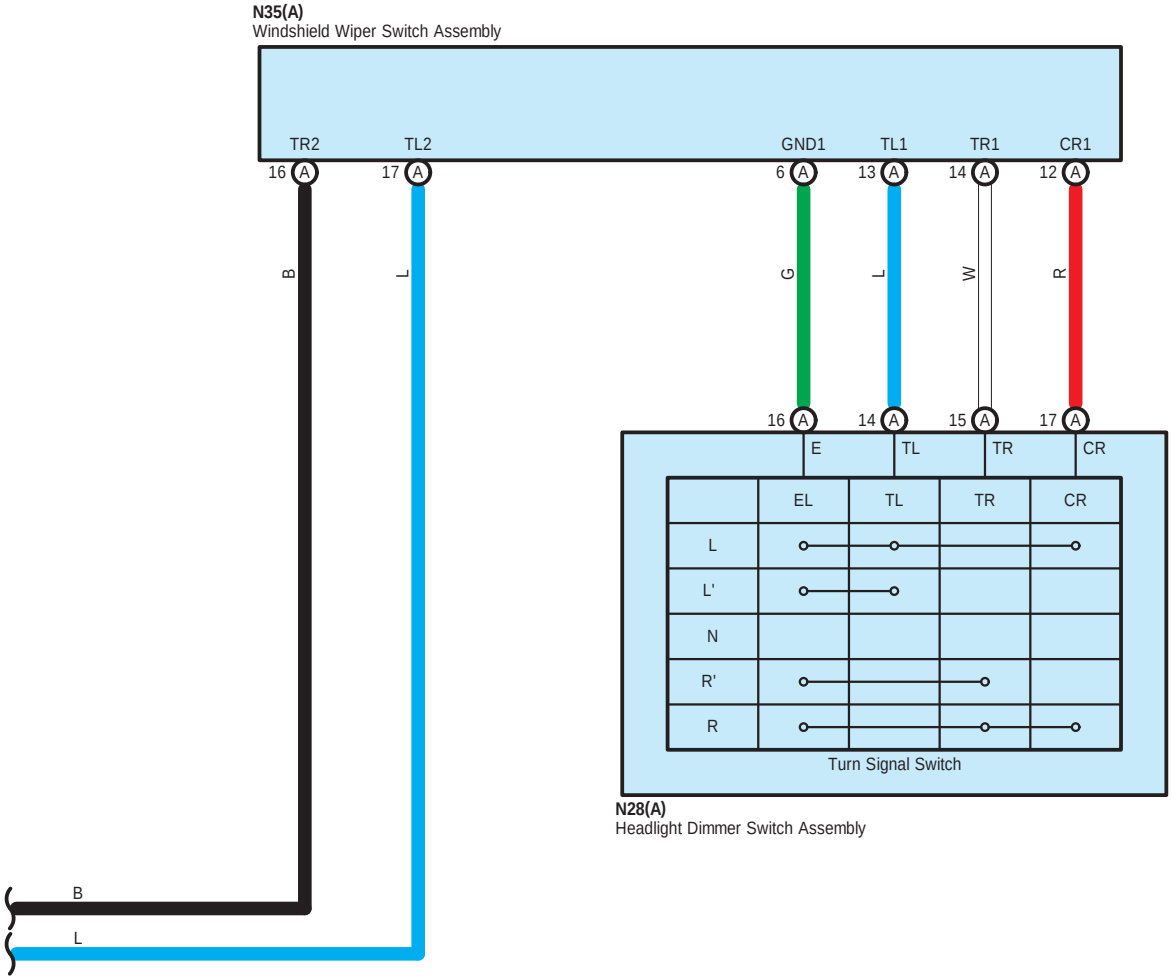
N35(A)
Windshield Wiper Switch Assembly
TR2
TL2
GND1
TL1
TR1
CR1
16 A
17 A
6 A
13 A
14 A
12 A
B
L
G
L
W
R
16 A
14 A
15 A
17 A
E
TL
TR
CR
EL
TL
TR
CR
L
L'
N
R'
R
Turn Signal Switch
N28(A)
Headlight Dimmer Switch Assembly
B
L

A 77

Black

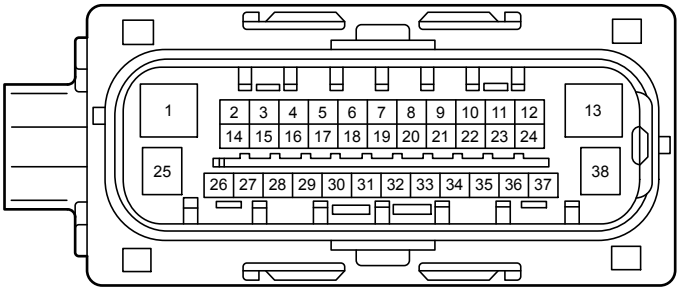

A 78

Black

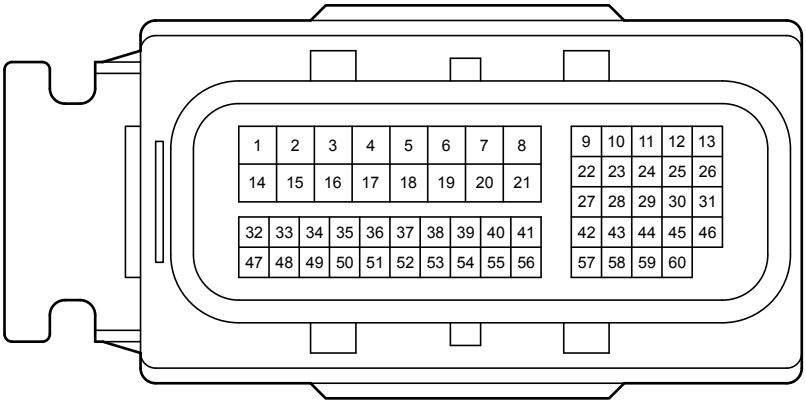

A 94

Black

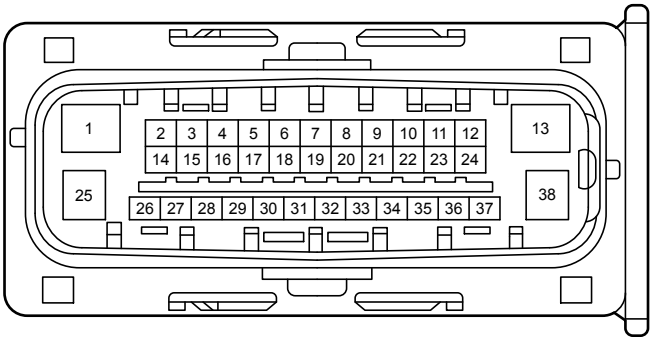

F 48

Black

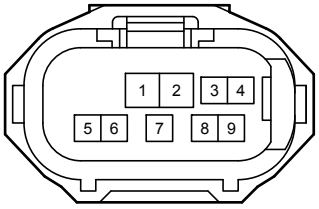

F 65

Gray

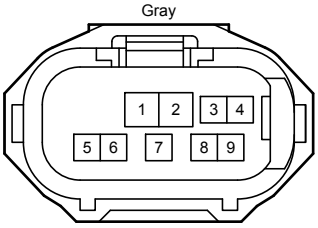

F 78
Black

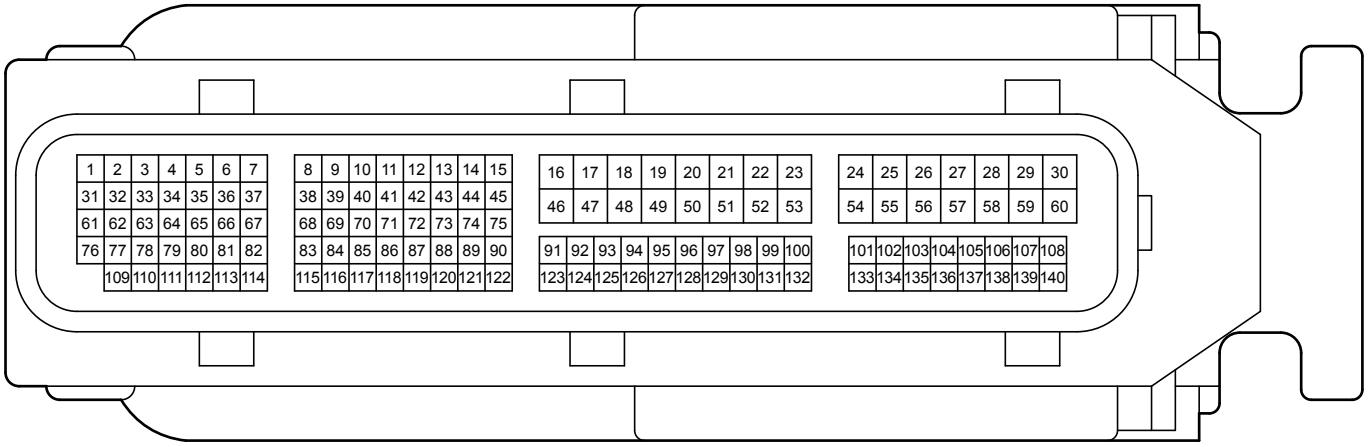

F115
Blue

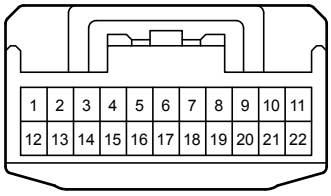

N 12
White

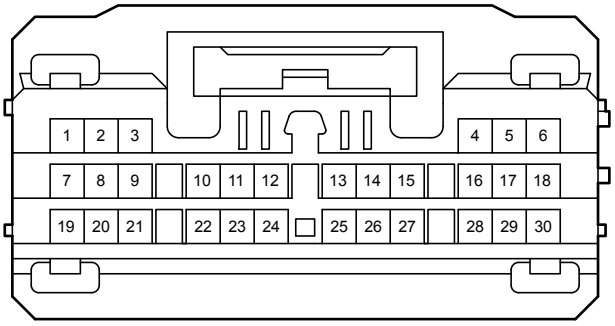

N 28
Black

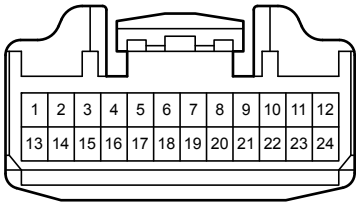

N 31
Black

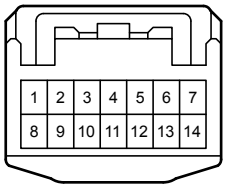

N 33
White

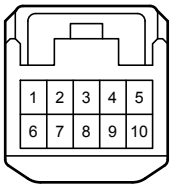

N 34
Black

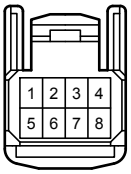

N 35
White

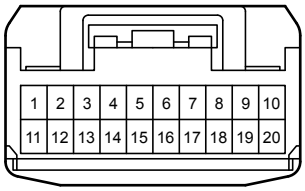

N 39
Black

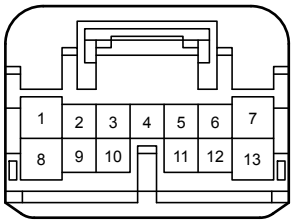

N 40
Black

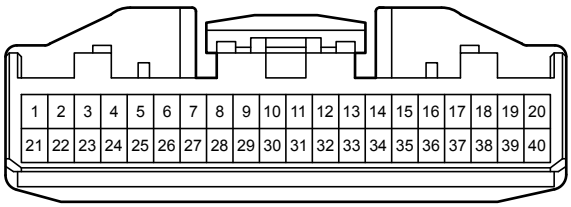

N106
Gray

N128
Blue

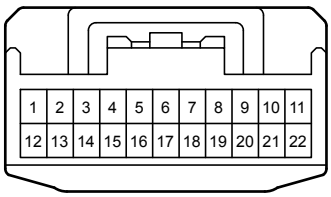

N132
Black

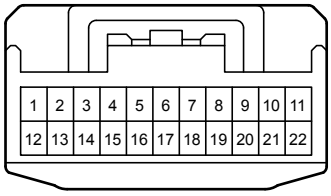

N133
Black

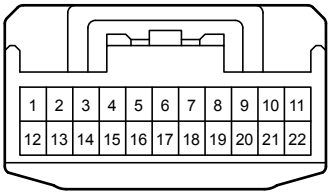

N162
White

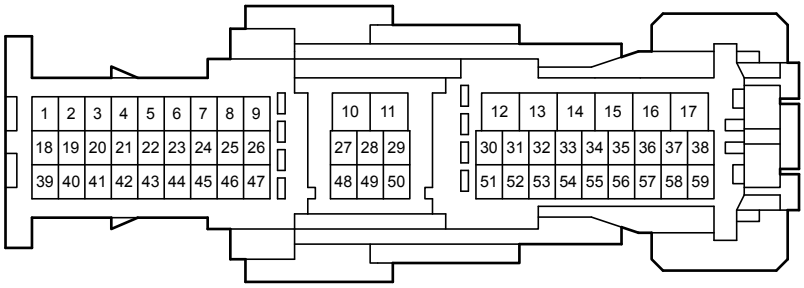

N174
Black

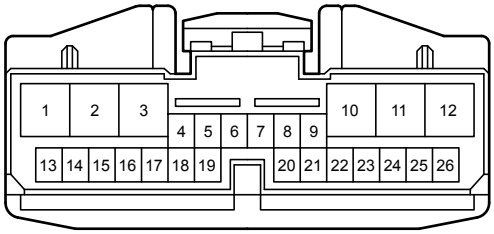

N176
Black

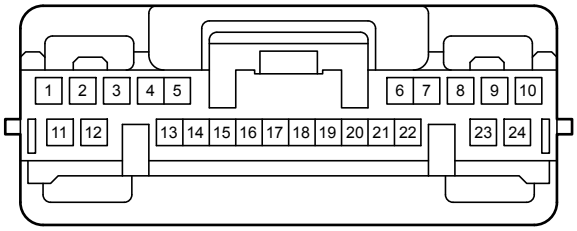

N178
Gray

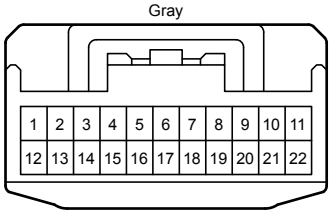

N180
Gray

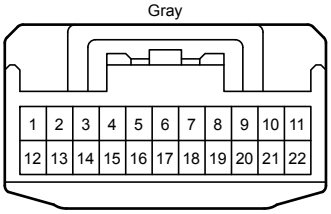

N181
Gray

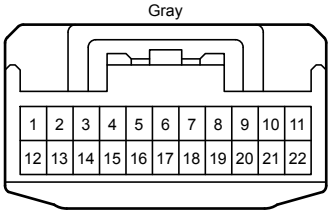

Q 4
White

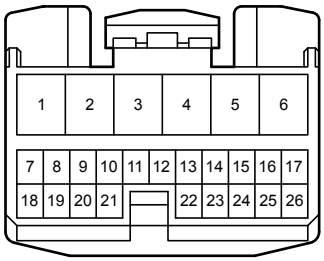

Q 19
White

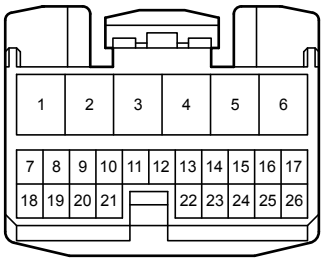

T 44
Blue

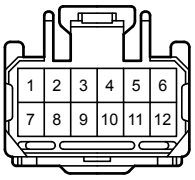

T 45
Blue

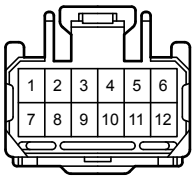

T 46
Black

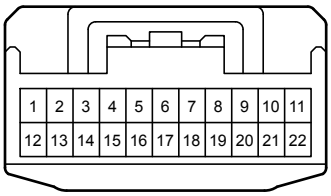

T 54
Black

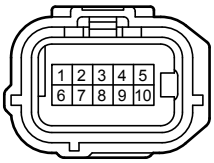

U 59
Black

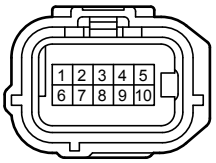

U 60
Black



U 66
Gray

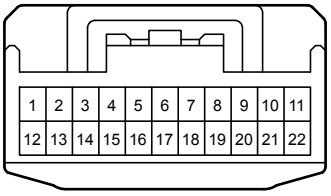

U 67
Gray

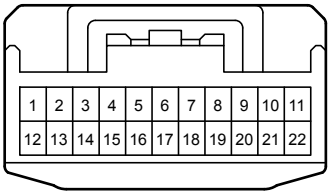

z 4
Black

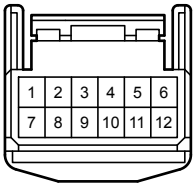

z 9
White

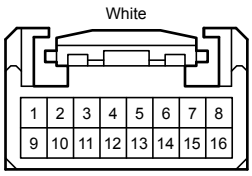

z 10
White

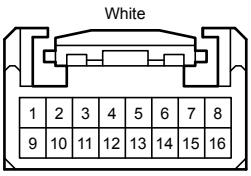

4A
White

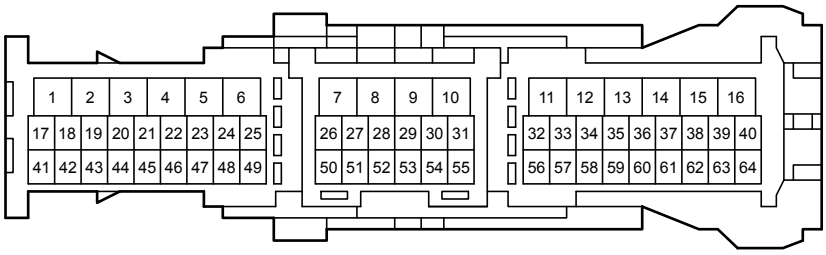

4B
White

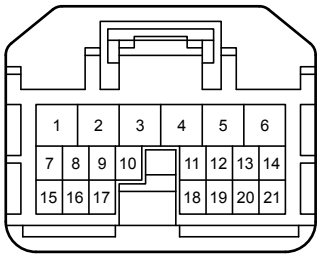

5A
White

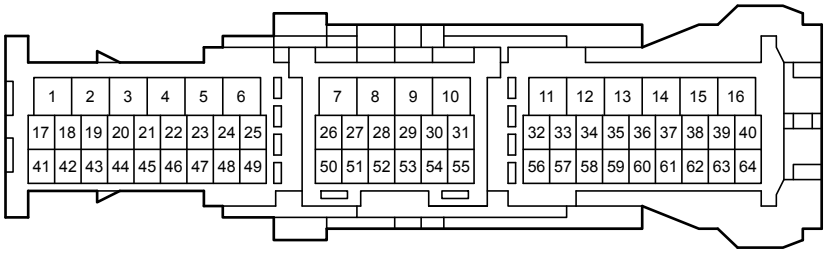

5C
White

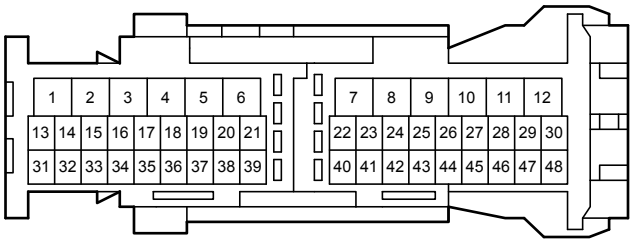

5D
White

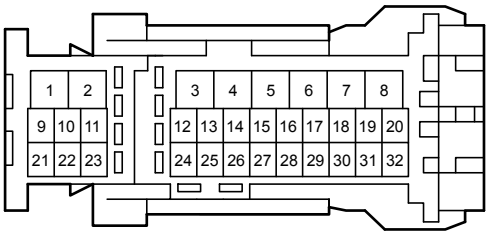

6A
White

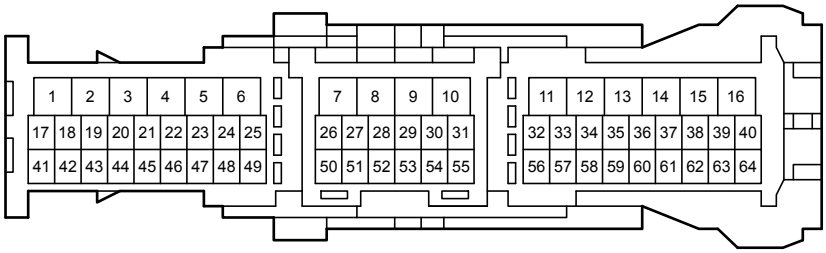

AF1
Gray

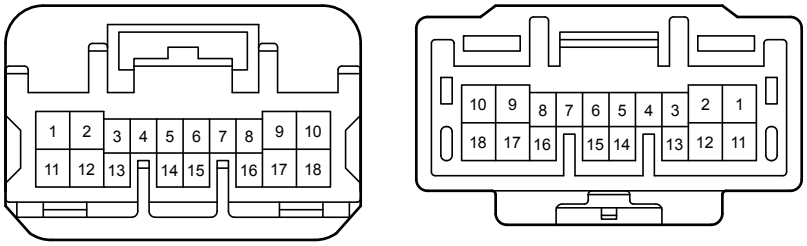

AF2
White

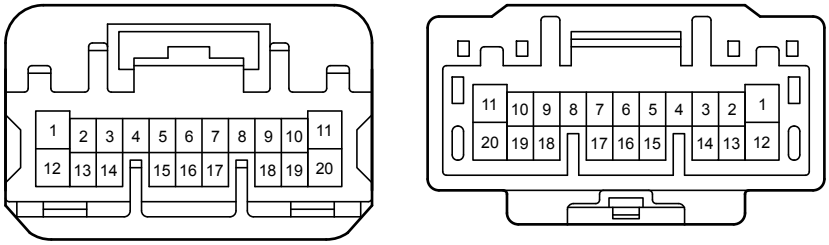

AU1
White

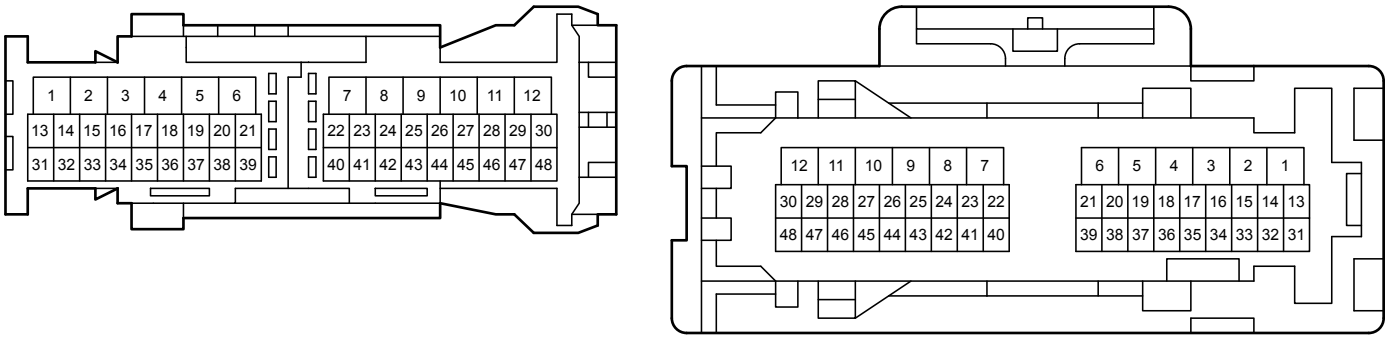

NA2
White

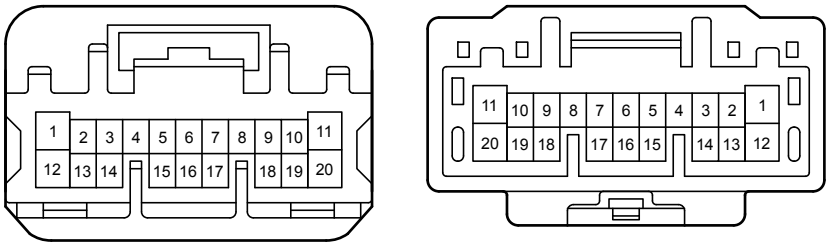

NA3
White

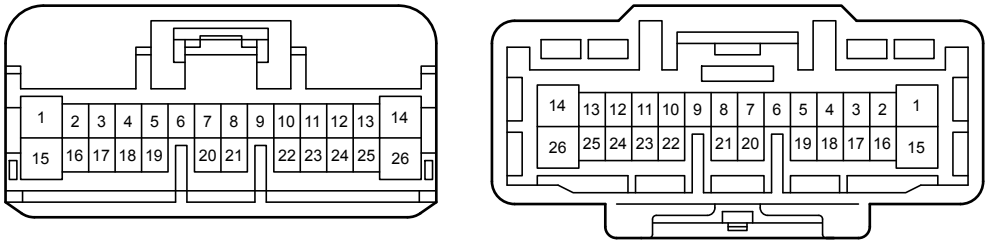

NT2
White

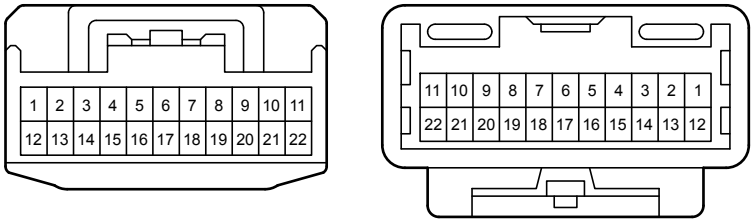

NU1
White

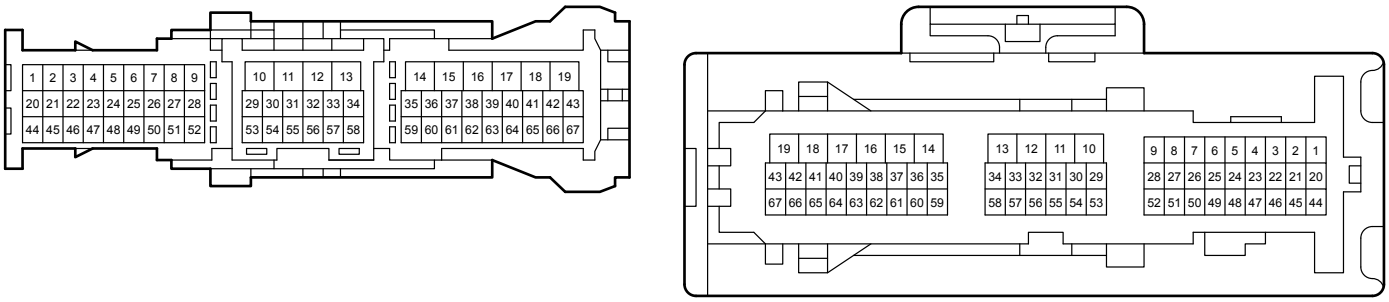

NU2
White

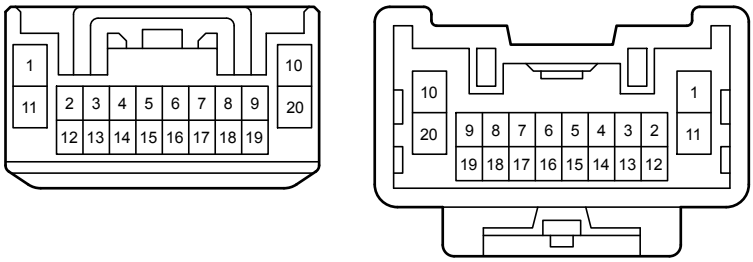

QT1
White

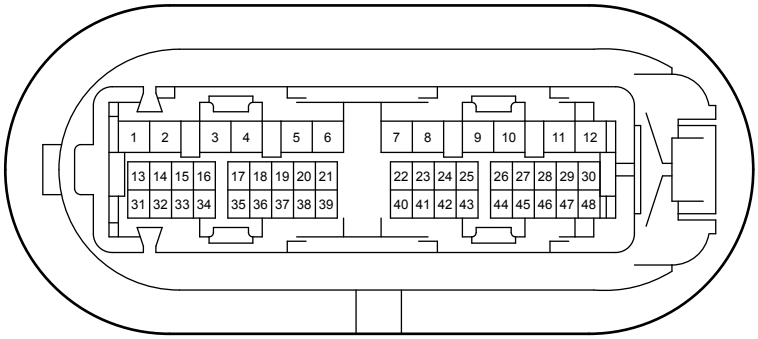

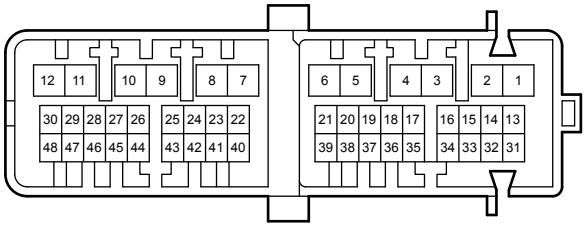

QU1
White

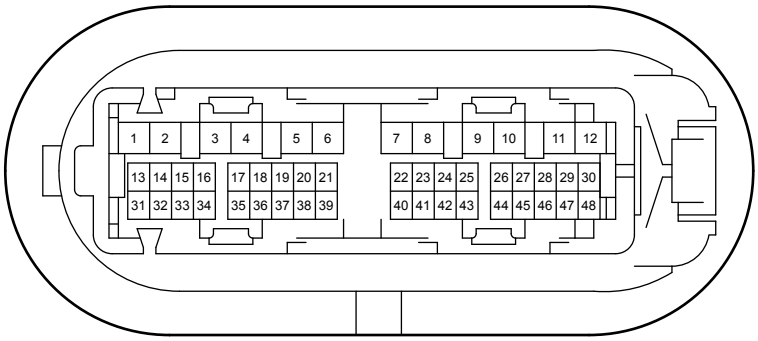

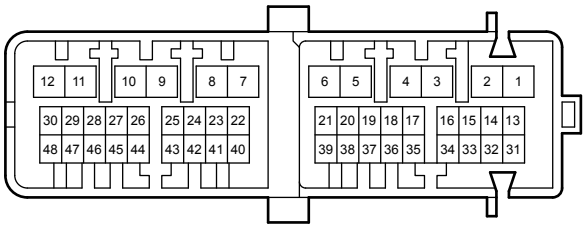

TN1
White

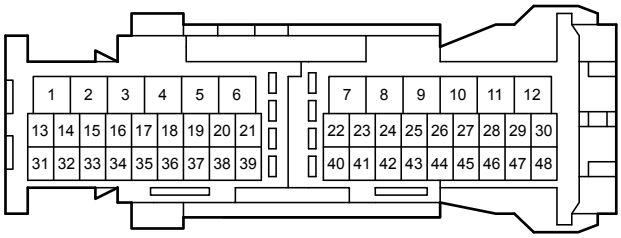

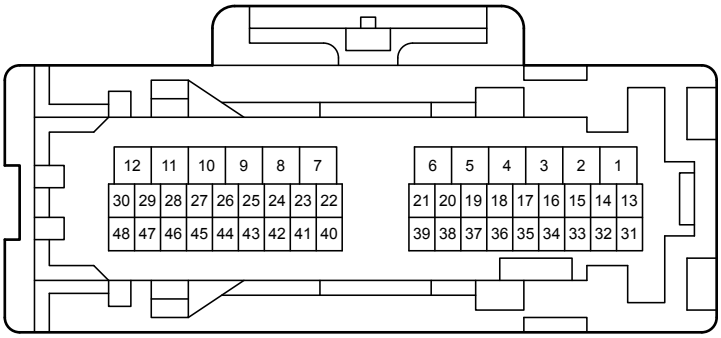
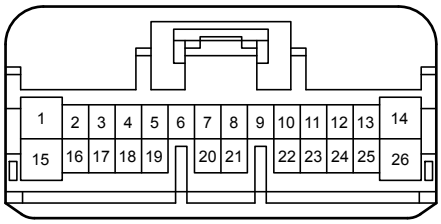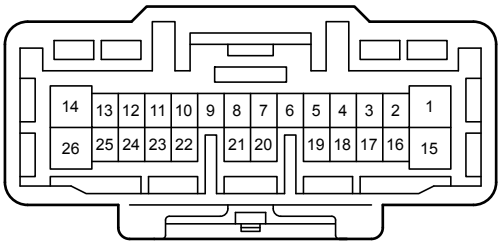
UT1
White