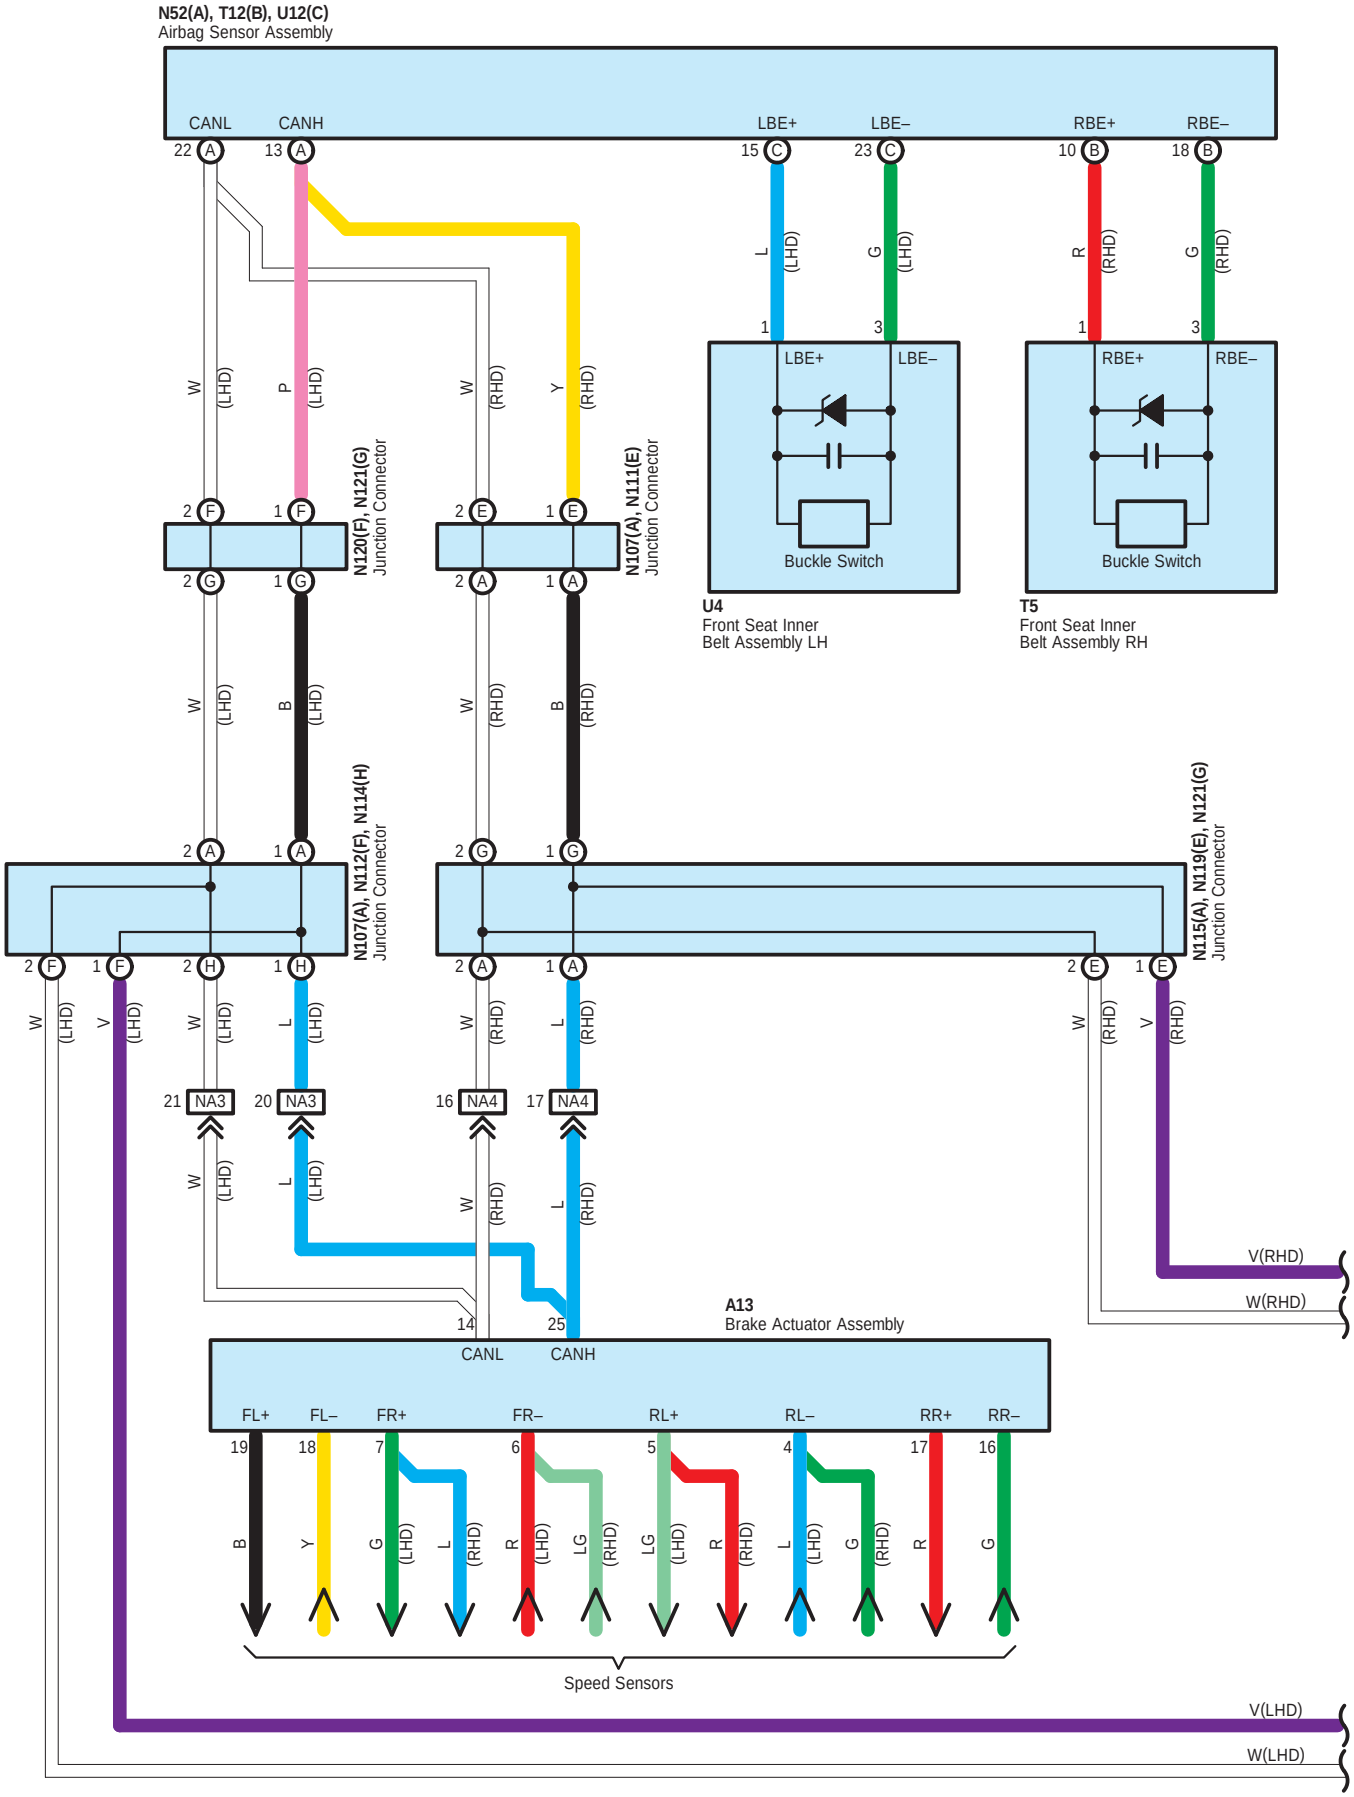
N52(A), T12(B), U12(C)
Airbag Sensor Assembly
CANL
CANH
LBE+
LBE–
RBE+
RBE–
N120(F), N121(G)
Junction Connector
N107(A), N111(E)
Junction Connector
U4
Front Seat Inner
Belt Assembly LH
T5
Front Seat Inner
Belt Assembly RH
Buckle Switch
N107(A), N112(F), N114(H)
Junction Connector
N115(A), N119(E), N121(G)
Junction Connector
NA3
NA4
V(RHD)
W(RHD)
A13
Brake Actuator Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Speed Sensors
V(LHD)
W(LHD)

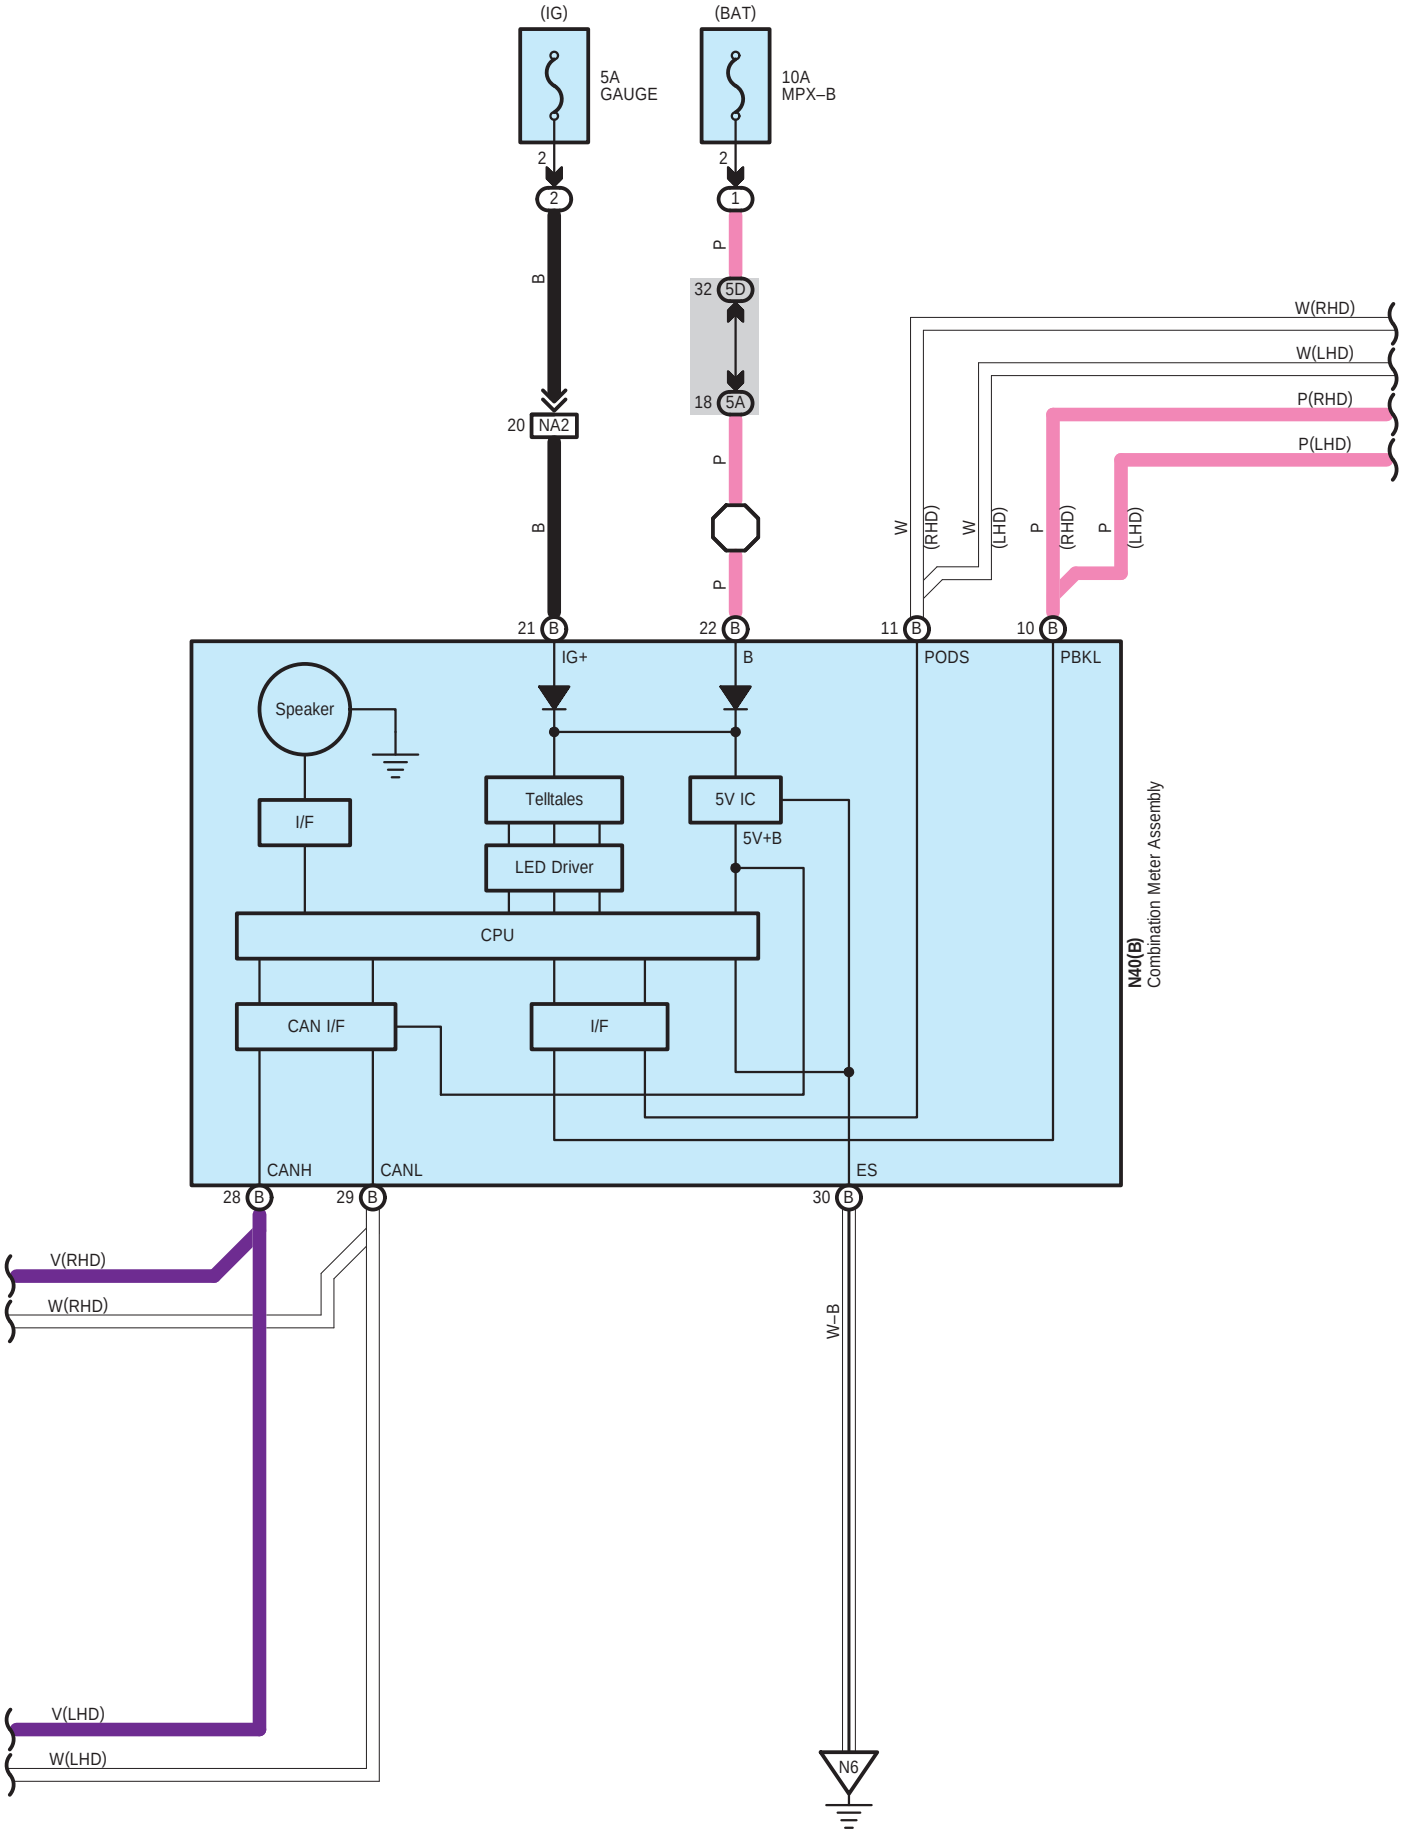
(IG)
5A
GAUGE
(BAT)
10A
MPX–B
2
2
2
1
B
P
32 5D
18 5A
20 NA2
P
B
P
W(RHD)
W(LHD)
P(RHD)
P(LHD)
W
(RHD)
W
(LHD)
P
(RHD)
P
(LHD)
21 B
22 B
11 B
10 B
IG+
B
PODS
PBKL
Speaker
I/F
Telltales
5V IC
5V+B
LED Driver
CPU
CAN I/F
I/F
N40(B)
Combination Meter Assembly
CANH
CANL
ES
28 B
29 B
30 B
V(RHD)
W(RHD)
W–B
V(LHD)
W(LHD)
N6

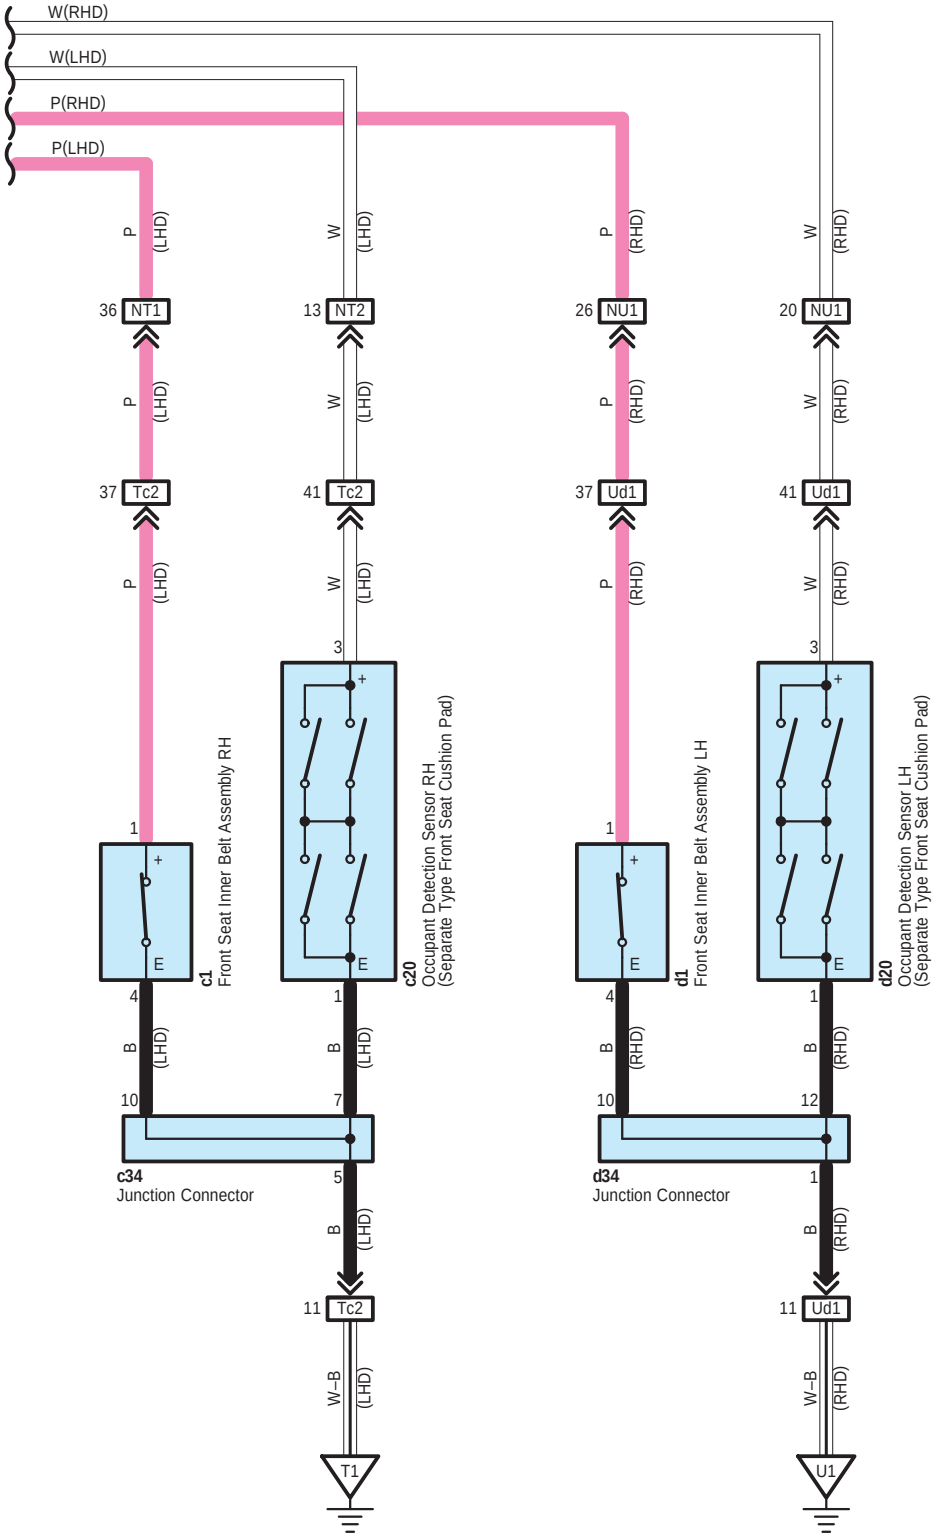
W(RHD)
W(LHD)
P(RHD)
P(LHD)
P (LHD)
W (LHD)
P (RHD)
W (RHD)
36 NT1
13 NT2
26 NU1
20 NU1
P (LHD)
W (LHD)
P (RHD)
W (RHD)
37 Tc2
41 Tc2
37 Ud1
41 Ud1
P (LHD)
W (LHD)
P (RHD)
W (RHD)
3
1
+
E
c1
Front Seat Inner Belt Assembly RH
c20
Occupant Detection Sensor RH
(Separate Type Front Seat Cushion Pad)
d1
Front Seat Inner Belt Assembly LH
d20
Occupant Detection Sensor LH
(Separate Type Front Seat Cushion Pad)
4
1
B (LHD)
B (LHD)
B (RHD)
B (RHD)
10
7
12
c34
Junction Connector
d34
Junction Connector
5
1
B (LHD)
B (RHD)
11 Tc2
11 Ud1
W–B (LHD)
W–B (RHD)
T1
U1

A 13
Black

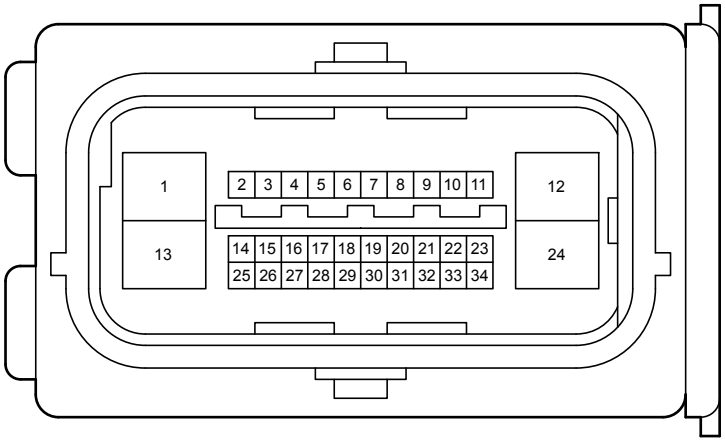

N 40
Black

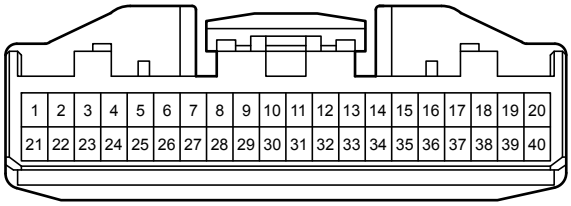

N 52
Yellow

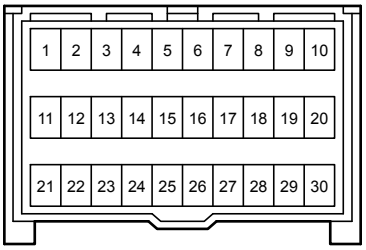

N107
White



N111
White



N112
White



N114
White



N115
White



N119
White



N120
White



N121
White



T 5
White

T 12
Yellow

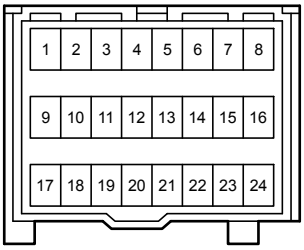

U 4
White

U 12
Yellow

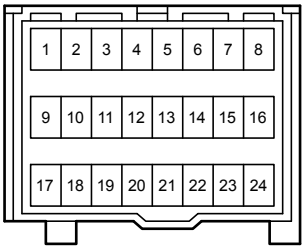

c 1
White

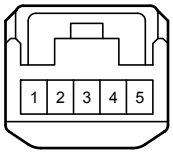

c 20
White

c 34
Black

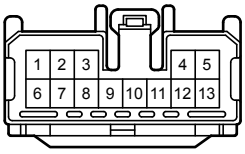

d 1
White

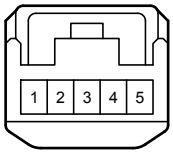

d 20
White

d 34
Black

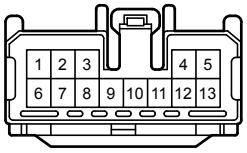

5A
White

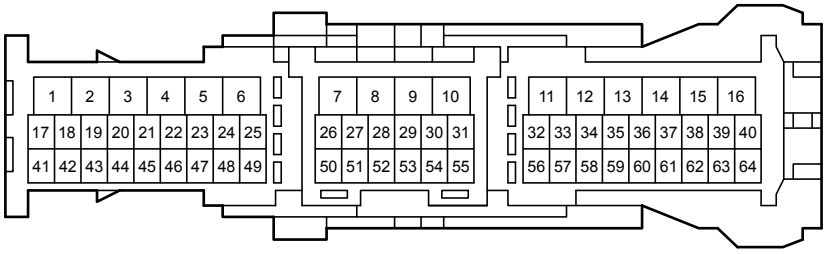

5D
White

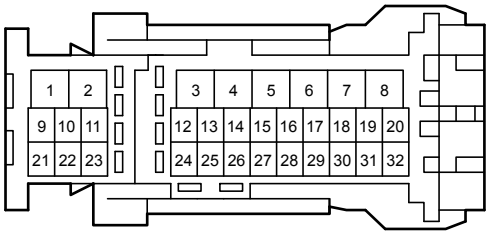

NA2
White

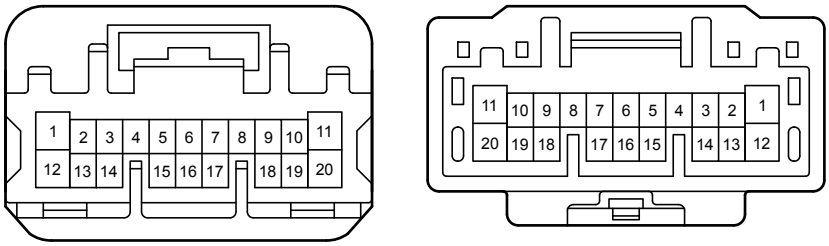

NA3
White

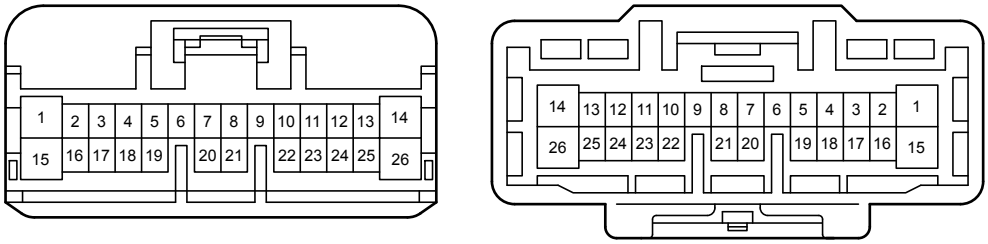

NA4
Gray

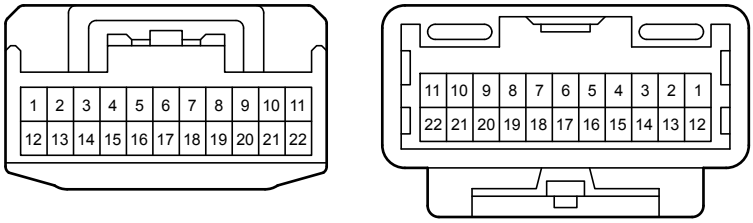

NT1
White

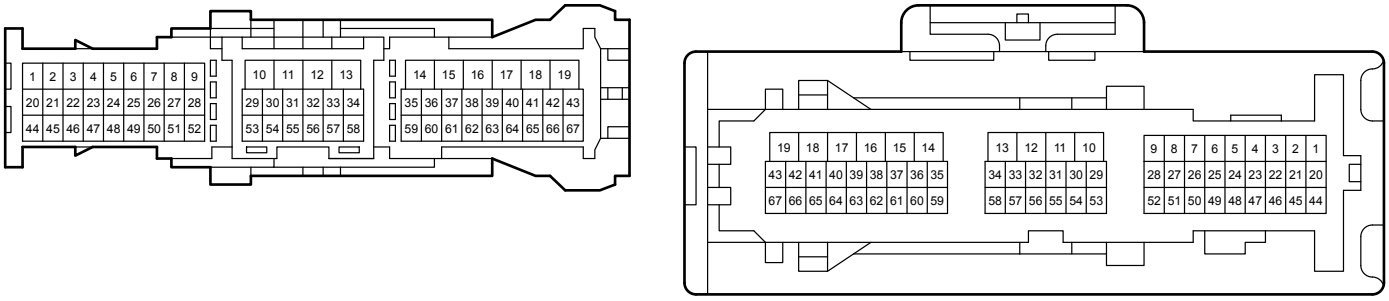

NT2
White

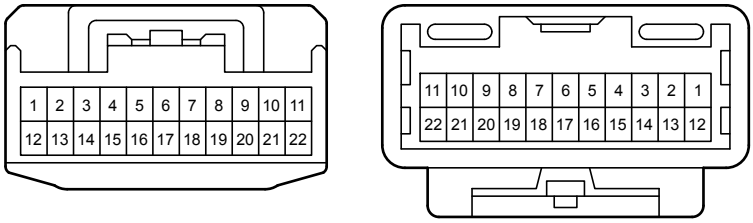

NU1
White

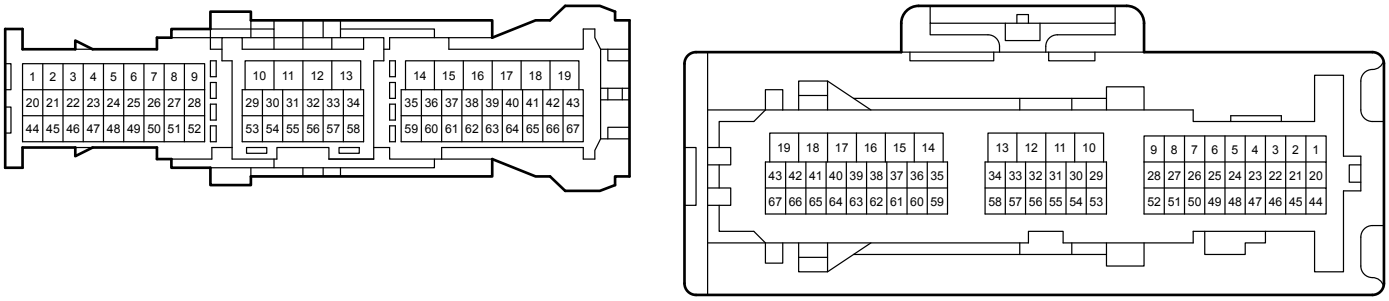

Tc2
White

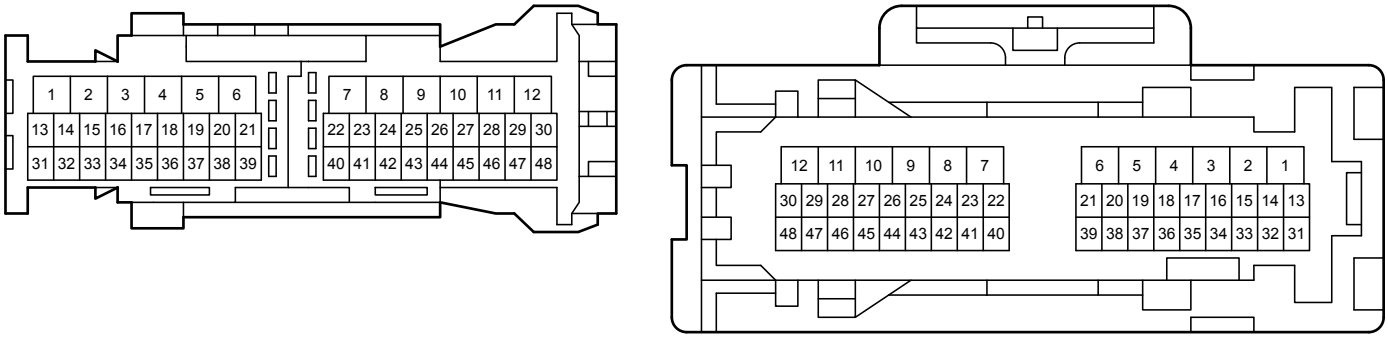

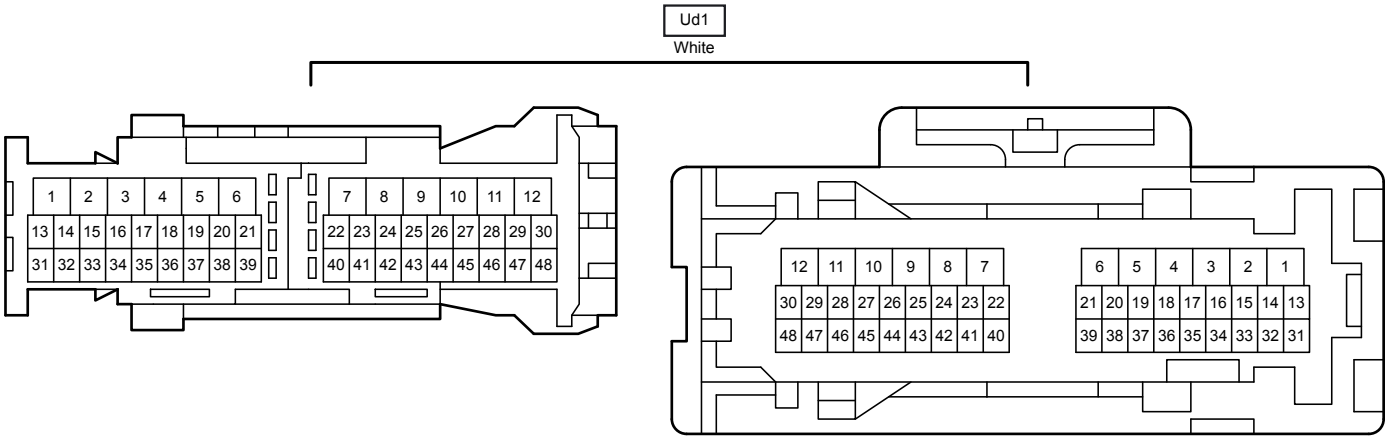
Ud1
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
12 11 10 9 8 7 6 5 4 3 2 1
30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31