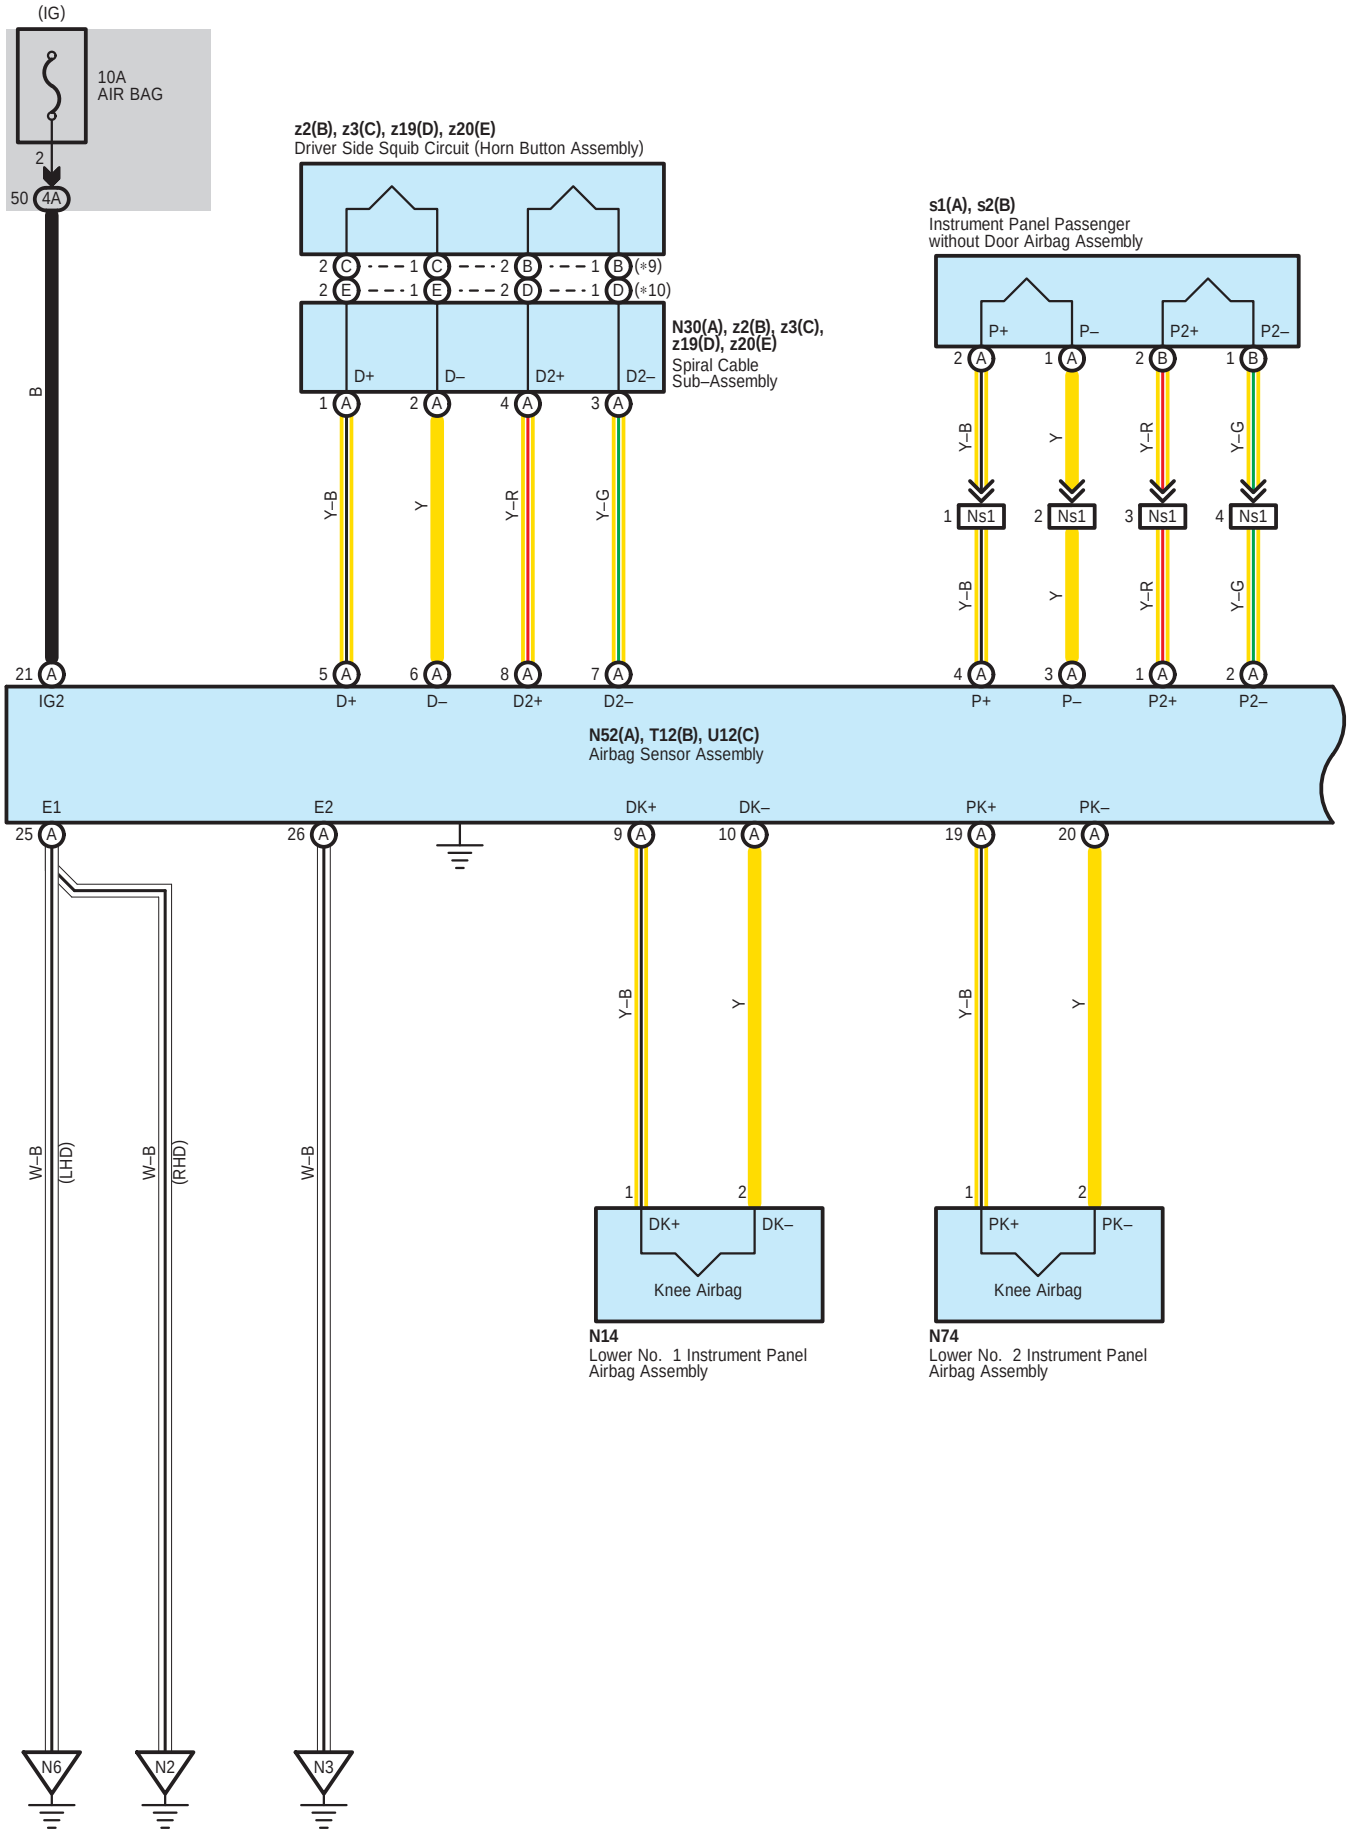
(IG)
10A
AIR BAG
2
50 4A
B
z2(B), z3(C), z19(D), z20(E)
Driver Side Squib Circuit (Horn Button Assembly)
2 C 1 C 2 B 1 B (*9)
2 E 1 E 2 D 1 D (*10)
N30(A), z2(B), z3(C), z19(D), z20(E)
Spiral Cable Sub–Assembly
D+ D– D2+ D2–
1 A 2 A 4 A 3 A
Y–B Y Y–R Y–G
s1(A), s2(B)
Instrument Panel Passenger without Door Airbag Assembly
P+ P– P2+ P2–
2 A 1 A 2 B 1 B
Y–B Y Y–R Y–G
1 Ns1 2 Ns1 3 Ns1 4 Ns1
Y–B Y Y–R Y–G
21 A 5 A 6 A 8 A 7 A
IG2 D+ D– D2+ D2–
4 A 3 A 1 A 2 A
P+ P– P2+ P2–
N52(A), T12(B), U12(C)
Airbag Sensor Assembly
E1 E2 DK+ DK– PK+ PK–
25 A 26 A 9 A 10 A 19 A 20 A
W–B (LHD)
W–B (RHD)
W–B
Y–B Y Y–B Y
1 2 1 2
DK+ DK–
Knee Airbag
N14
Lower No. 1 Instrument Panel Airbag Assembly
PK+ PK–
Knee Airbag
N74
Lower No. 2 Instrument Panel Airbag Assembly
N6 N2 N3

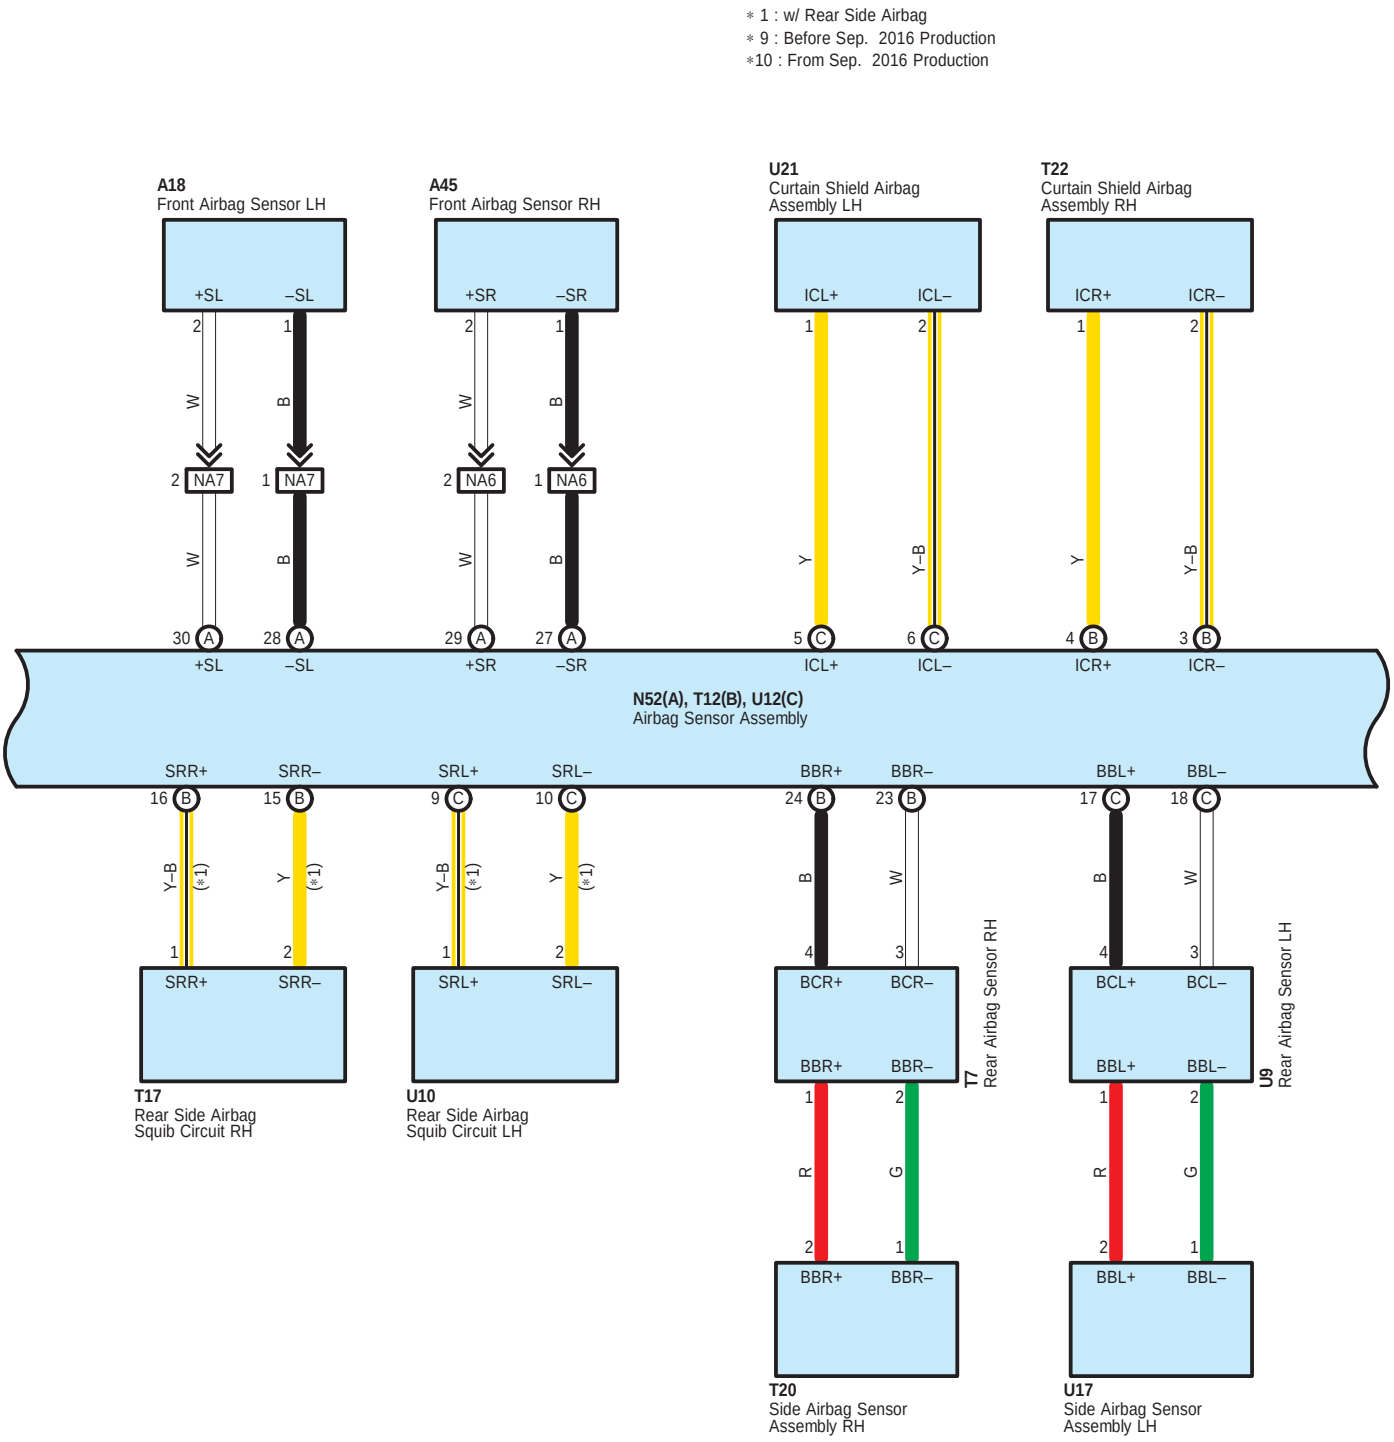
∗ 1 : w/ Rear Side Airbag
∗ 9 : Before Sep. 2016 Production
∗10 : From Sep. 2016 Production
A18
Front Airbag Sensor LH
+SL
–SL
A45
Front Airbag Sensor RH
+SR
–SR
U21
Curtain Shield Airbag Assembly LH
ICL+
ICL–
T22
Curtain Shield Airbag Assembly RH
ICR+
ICR–
NA7
NA6
N52(A), T12(B), U12(C)
Airbag Sensor Assembly
SRR+
SRR–
SRL+
SRL–
BBR+
BBR–
BBL+
BBL–
(∗1)
T17
Rear Side Airbag Squib Circuit RH
U10
Rear Side Airbag Squib Circuit LH
BCR+
BCR–
T7
Rear Airbag Sensor RH
BCL+
BCL–
U9
Rear Airbag Sensor LH
T20
Side Airbag Sensor Assembly RH
U17
Side Airbag Sensor Assembly LH

∗ 2 : w/ PASSENGER AIRBAG ON/OFF Indicator
∗ 3 : w/ Telematics Transceiver
∗ 4 : w/ Airbag Cut Off Switch

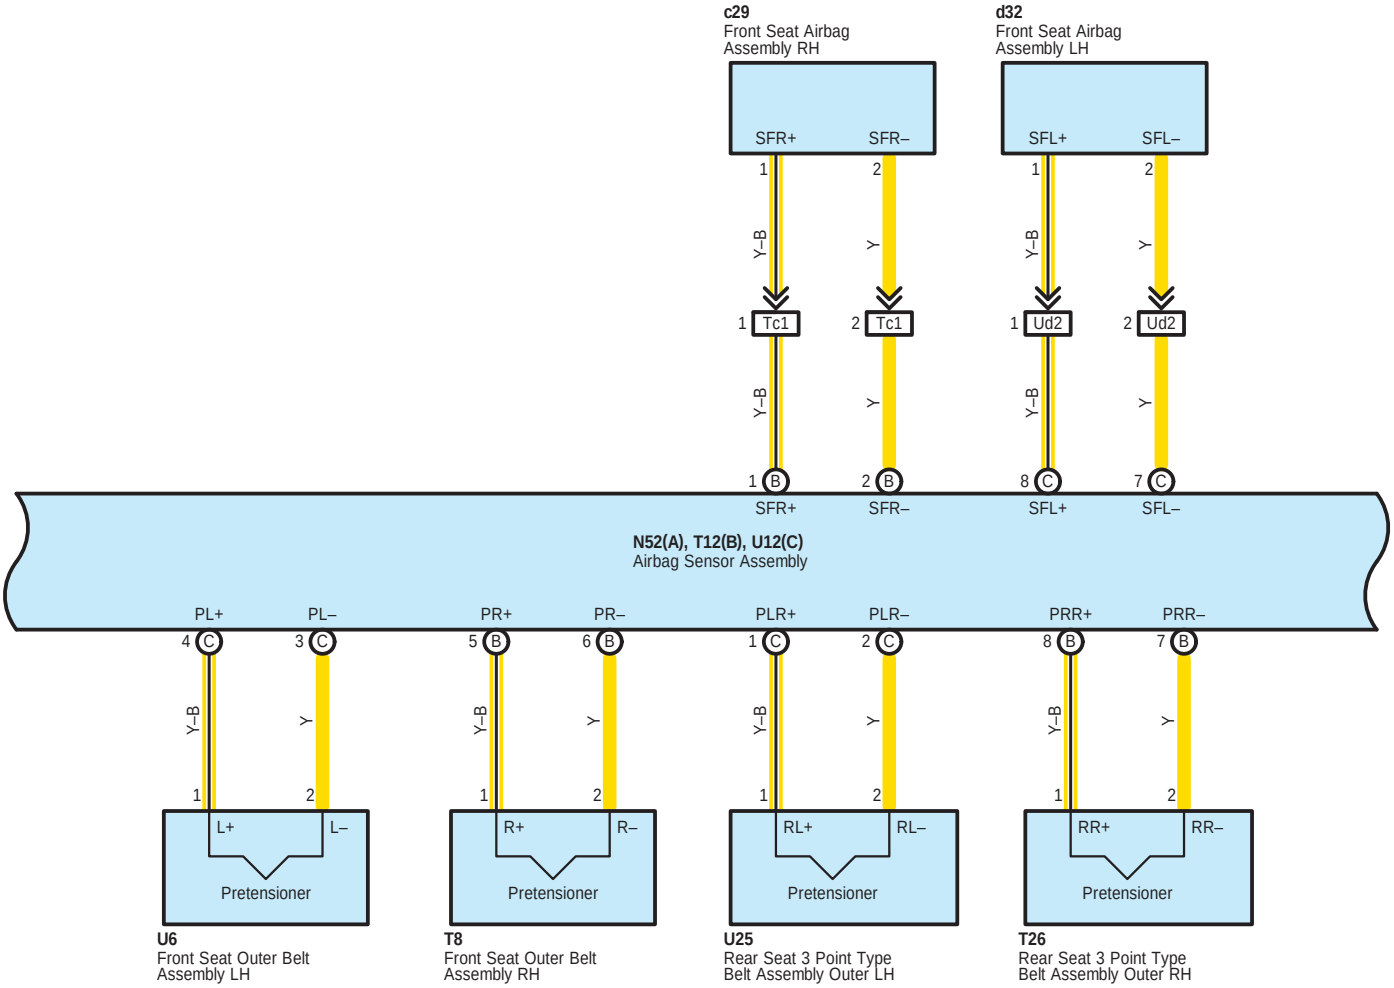

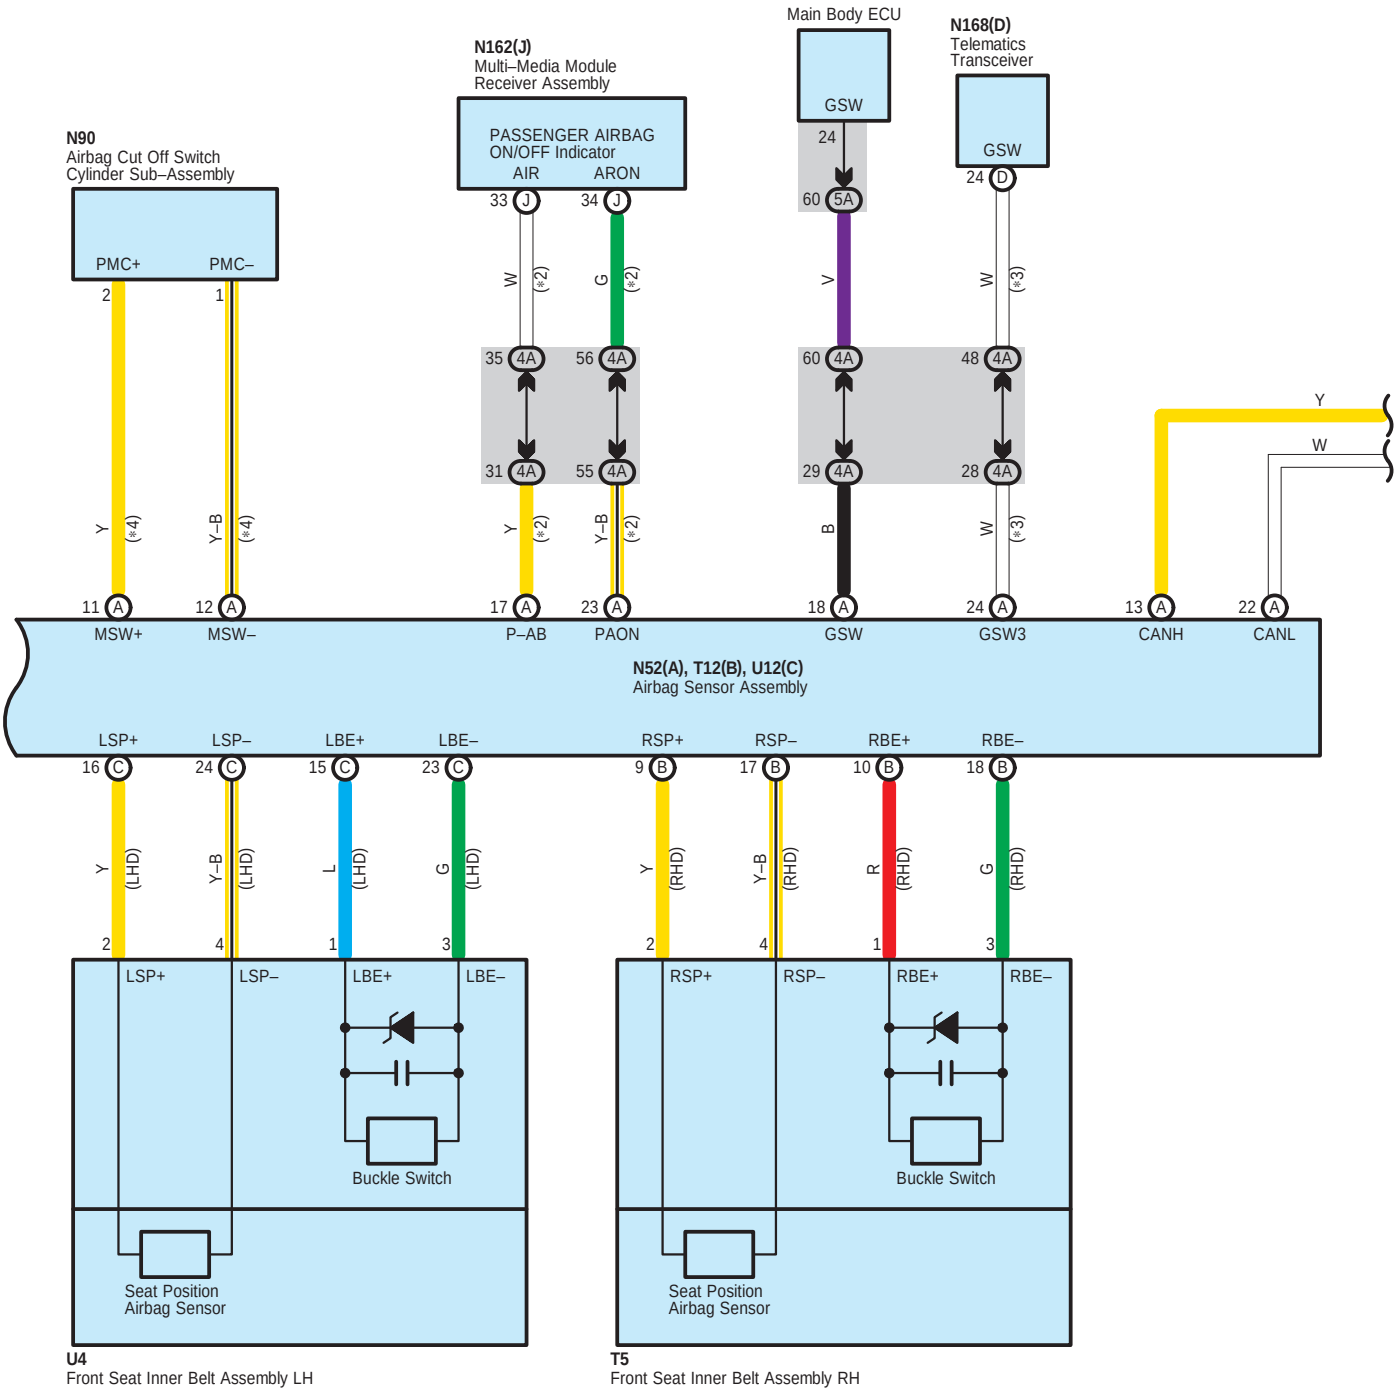
N90
Airbag Cut Off Switch
Cylinder Sub–Assembly
PMC+
PMC–
N162(J)
Multi–Media Module
Receiver Assembly
PASSENGER AIRBAG
ON/OFF Indicator
AIR
ARON
Main Body ECU
GSW
N168(D)
Telematics
Transceiver
GSW
MSW+
MSW–
P–AB
PAON
GSW
GSW3
CANH
CANL
N52(A), T12(B), U12(C)
Airbag Sensor Assembly
LSP+
LSP–
LBE+
LBE–
RSP+
RSP–
RBE+
RBE–
Buckle Switch
Seat Position
Airbag Sensor
U4
Front Seat Inner Belt Assembly LH
T5
Front Seat Inner Belt Assembly RH

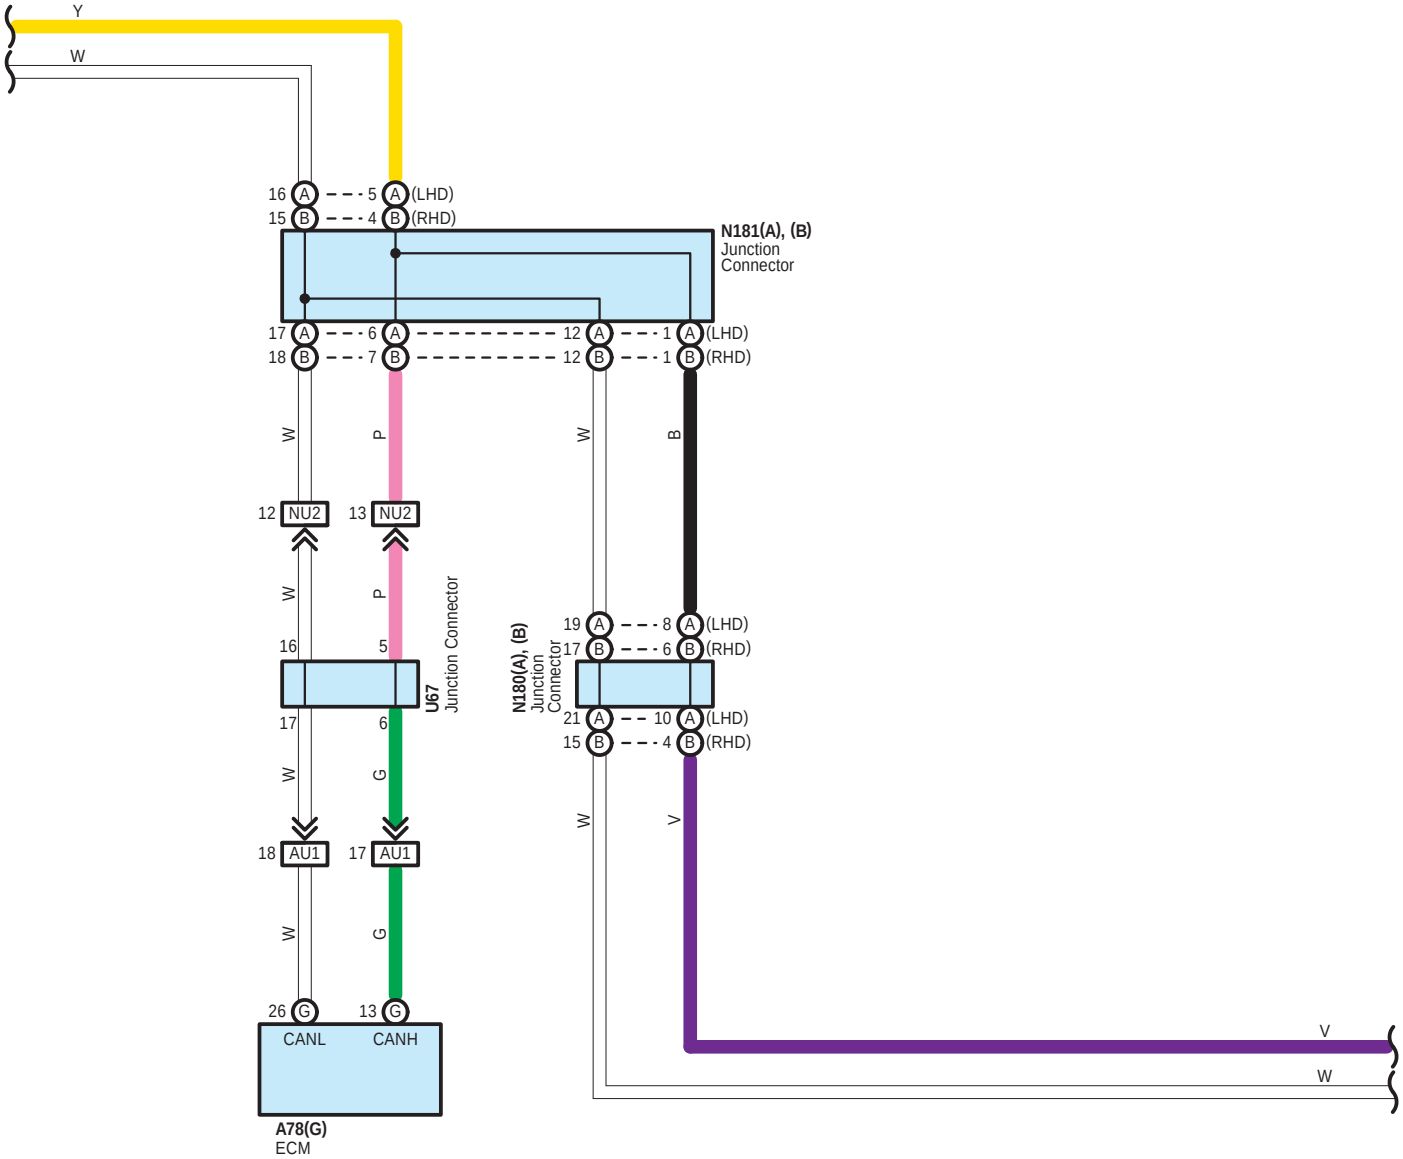
Y
W
16 A
15 B
5 A (LHD)
4 B (RHD)
N181(A), (B)
Junction
Connector
17 A
18 B
6 A
7 B
12 A
12 B
1 A (LHD)
1 B (RHD)
W
P
W
B
12 NU2
13 NU2
W
P
16
5
U67
Junction Connector
17
6
W
G
18 AU1
17 AU1
W
G
26 G
13 G
CANL
CANH
A78(G)
ECM
N180(A), (B)
Junction
Connector
19 A
17 B
8 A (LHD)
6 B (RHD)
21 A
15 B
10 A (LHD)
4 B (RHD)
W
V
V
W

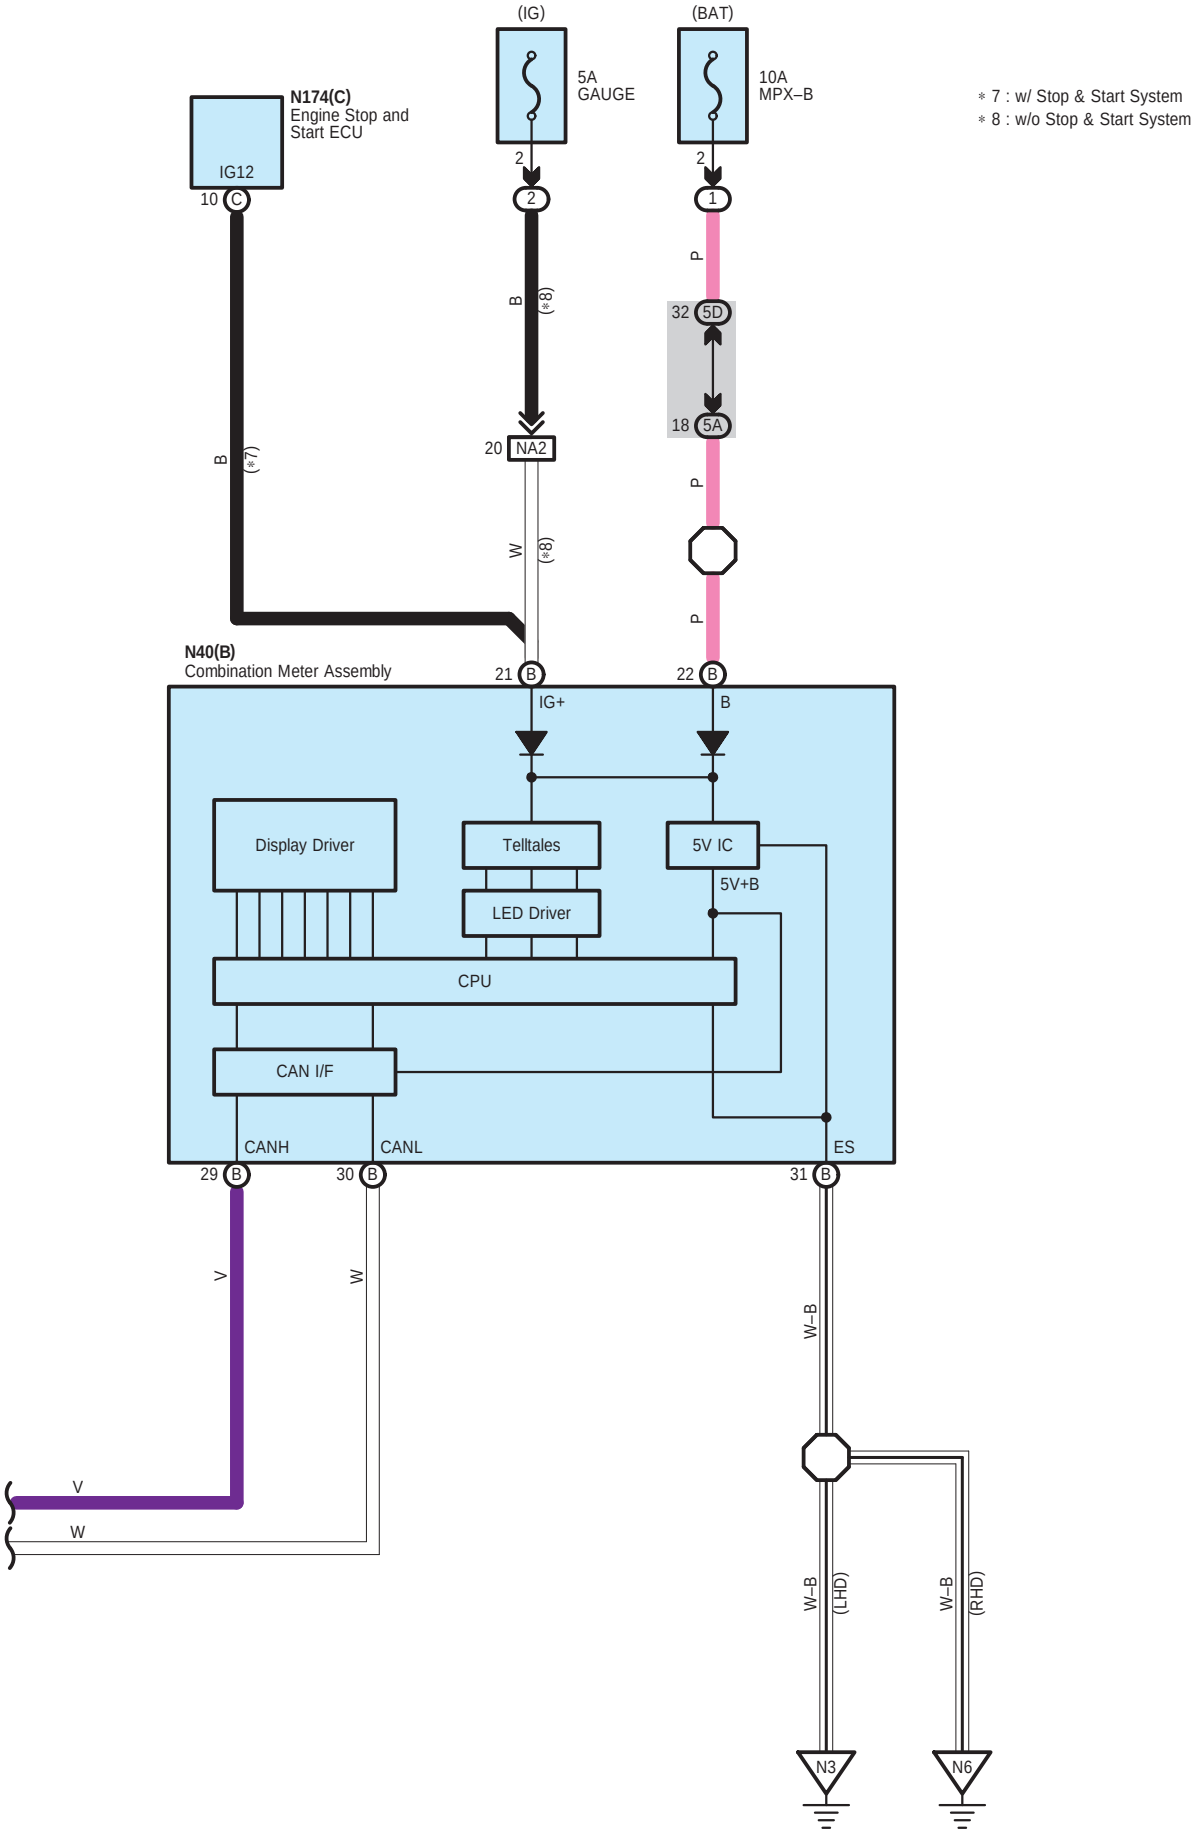
(IG)
(BAT)
5A
GAUGE
10A
MPX–B
∗ 7 : w/ Stop & Start System
∗ 8 : w/o Stop & Start System
N174(C)
Engine Stop and
Start ECU
IG12
10 C
2
2
2
1
B
(∗8)
P
32 5D
18 5A
20 NA2
B
(∗7)
W
(∗8)
P
P
N40(B)
Combination Meter Assembly
21 B
22 B
IG+
B
Display Driver
Telltales
5V IC
5V+B
LED Driver
CPU
CAN I/F
CANH
CANL
ES
29 B
30 B
31 B
V
W
W–B
V
W
W–B
(LHD)
W–B
(RHD)
N3
N6

A 18
Yellow

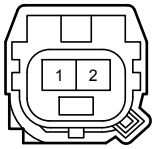

A 45
Yellow

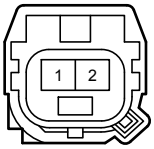

A 78
Black

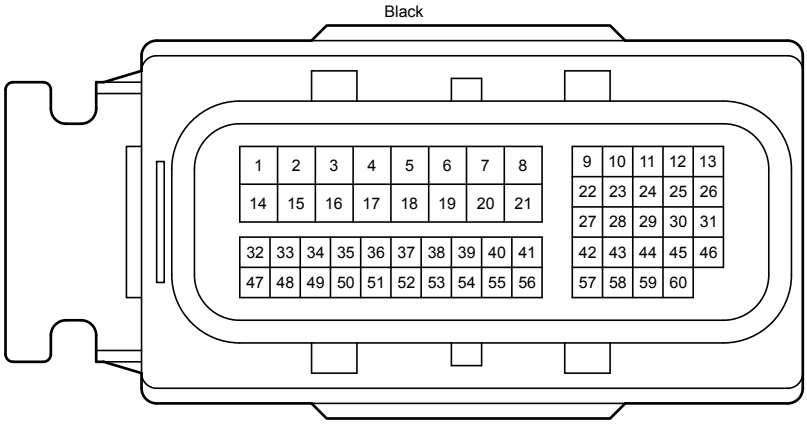

N 14
Black



N 30
Yellow

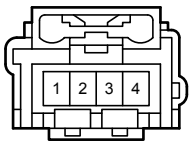

N 40
Black

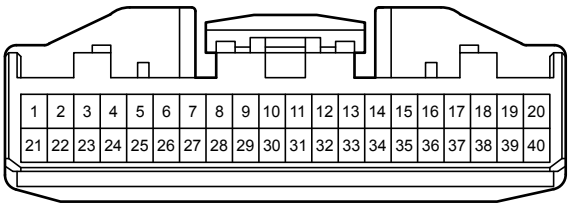

N 52
Yellow

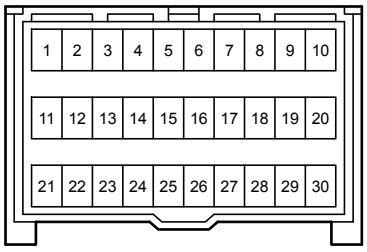

N 74
Yellow

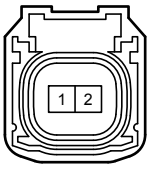

N 90
Black



N162
White

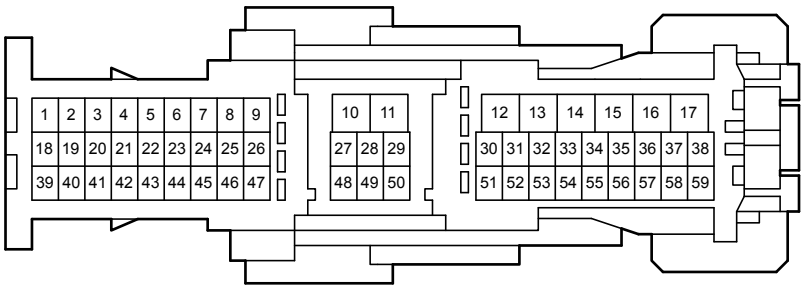

N168
White

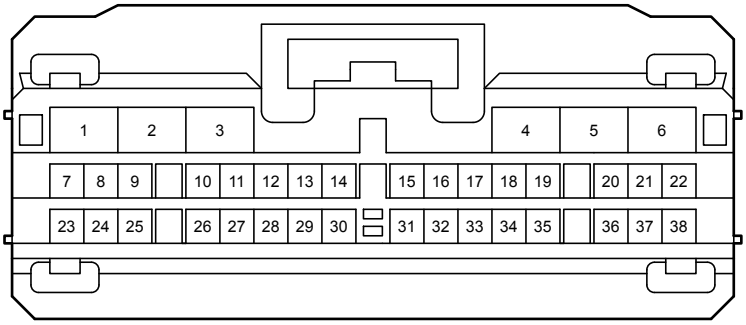

N174
Black

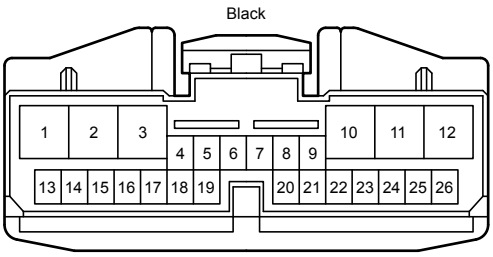

N180
Gray

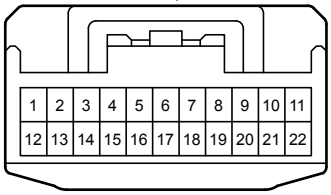

N181
Gray

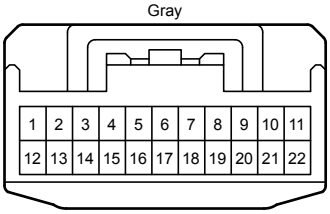

T 5
White

T 7
Yellow

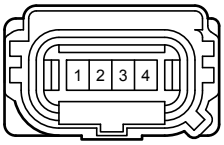

T 8
Black



T 12
Yellow

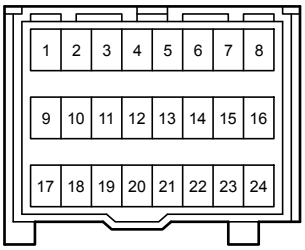

T 17
Yellow

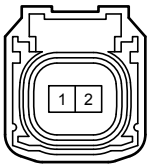

T 20
Yellow

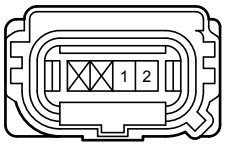

T 22
Black

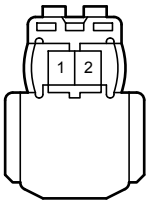

T 26
Black



U 4
White

U 6
Black



U 9
Yellow

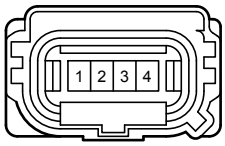

U 10
Yellow

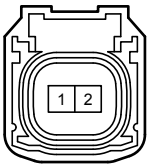

U 12
Yellow

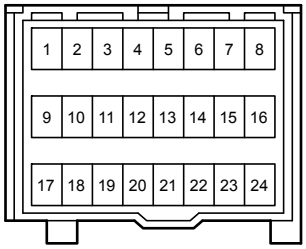

U 17
Yellow

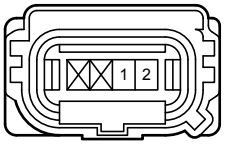

U 21
Black

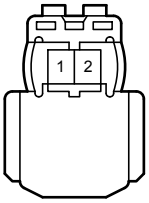

U 25
Black



U 67
Gray

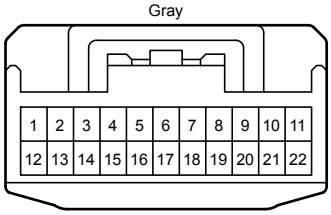

c 29
Yellow

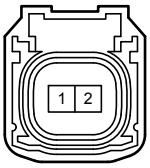

d 32
Yellow

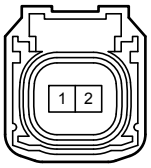

s 1
Orange



s 2
Black



z 2
Black



z 3
Orange



z 19
Light Green

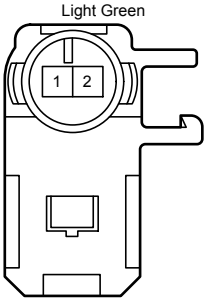

z 20
Black

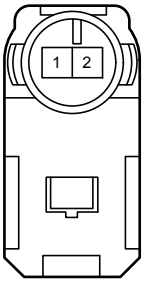

4A
White

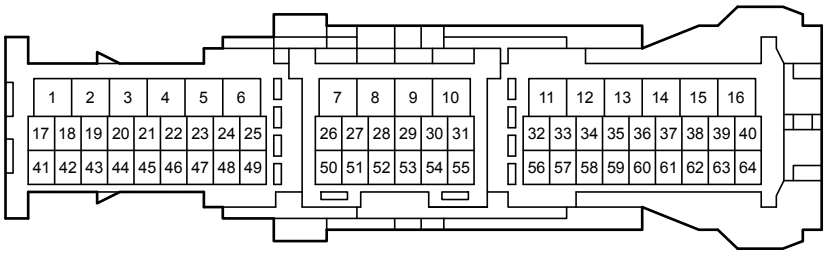

5A
White

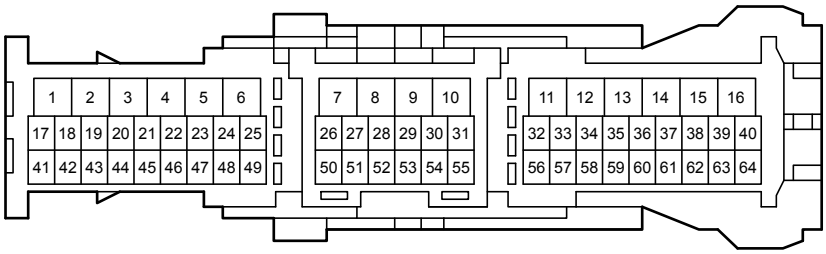

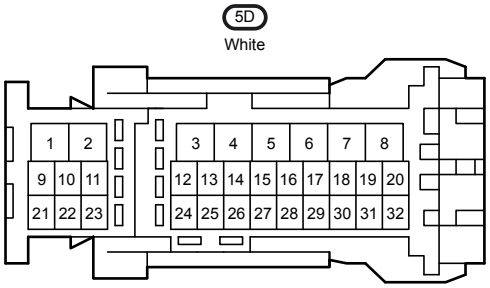
5D
White
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28 29 30 31 32

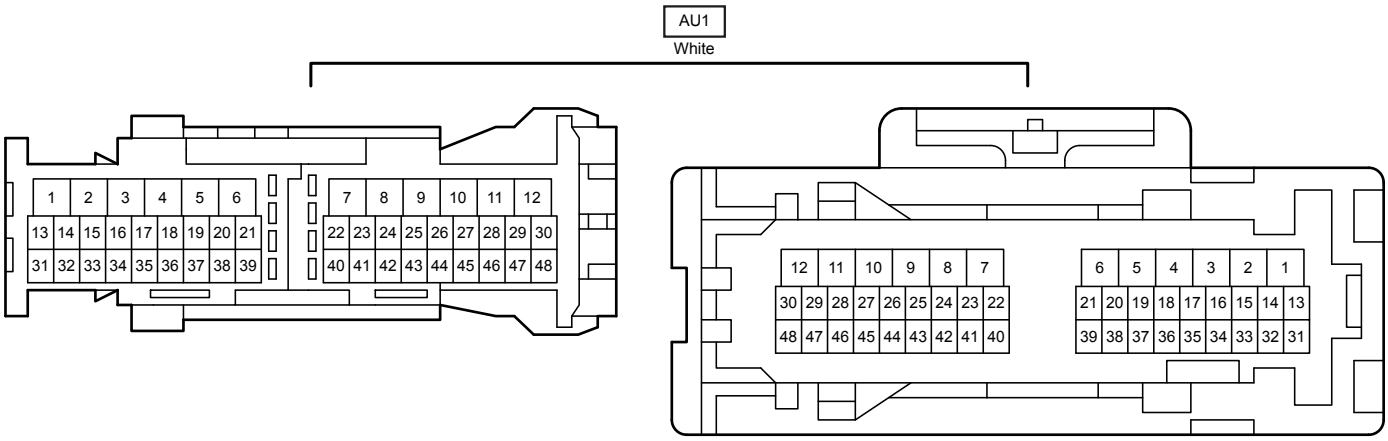
AU1
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
12 11 10 9 8 7 6 5 4 3 2 1
30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31

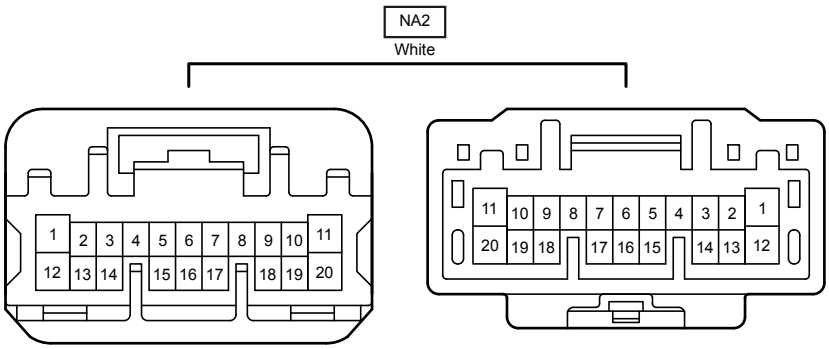
NA2
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

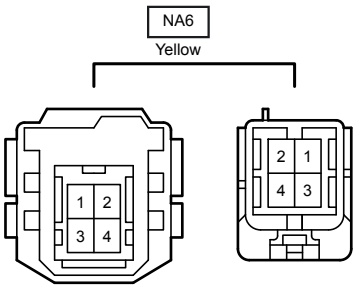
NA6
Yellow
1 2
3 4
2 1
4 3

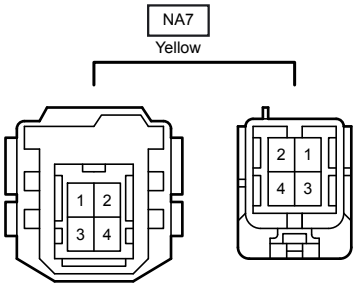
NA7
Yellow
1 2
3 4
2 1
4 3

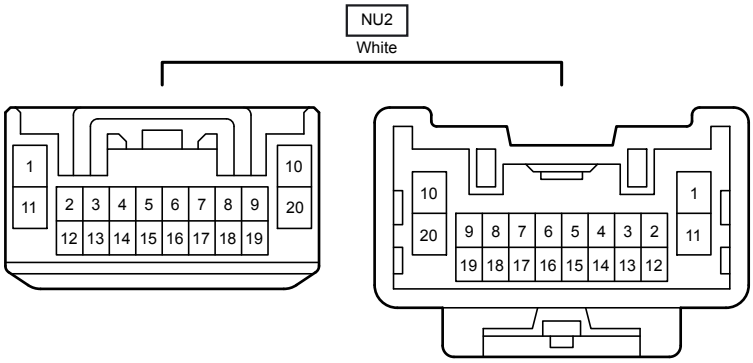
NU2
White
1 11 2 3 4 5 6 7 8 9 10 20
12 13 14 15 16 17 18 19
10 20 9 8 7 6 5 4 3 2 1 11
19 18 17 16 15 14 13 12

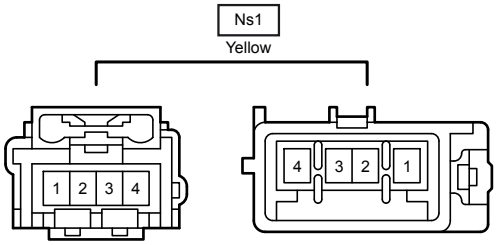
Ns1
Yellow
1 2 3 4
4 3 2 1

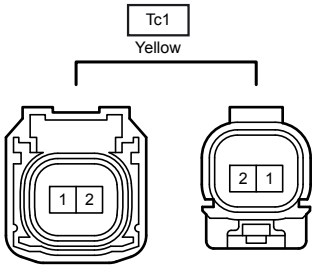
Tc1
Yellow
1 2
2 1

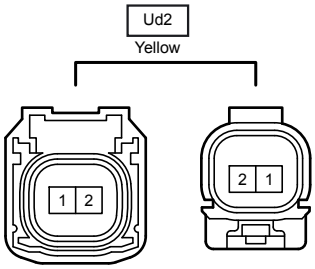
Ud2
Yellow
1
2
2
1