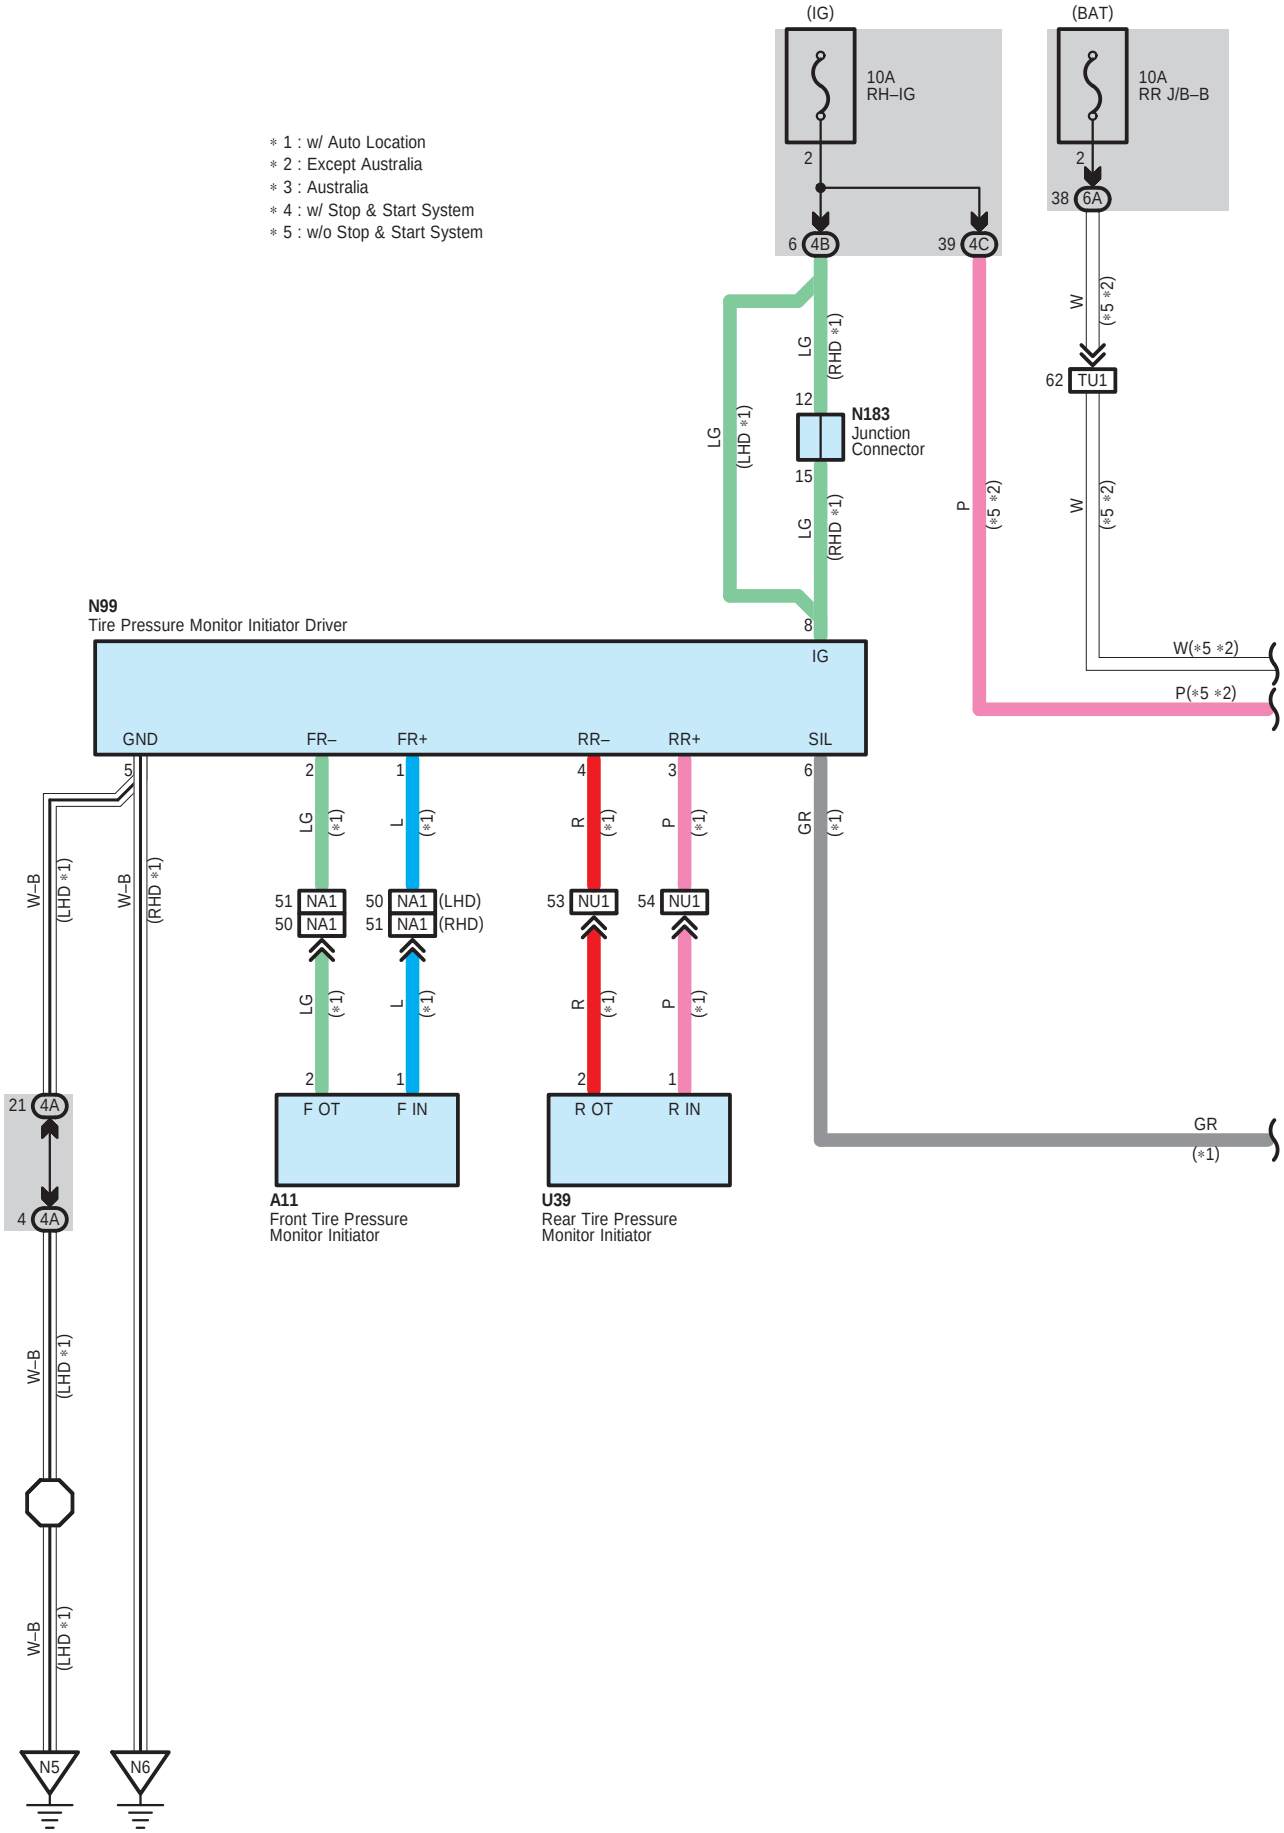
(IG)
10A
RH–IG
(BAT)
10A
RR J/B–B
∗ 1 : w/ Auto Location
∗ 2 : Except Australia
∗ 3 : Australia
∗ 4 : w/ Stop & Start System
∗ 5 : w/o Stop & Start System
6 4B
39 4C
38 6A
62 TU1
N183
Junction
Connector
N99
Tire Pressure Monitor Initiator Driver
IG
GND
FR–
FR+
RR–
RR+
SIL
51 NA1
50 NA1
50 NA1 (LHD)
51 NA1 (RHD)
53 NU1
54 NU1
F OT
F IN
R OT
R IN
A11
Front Tire Pressure
Monitor Initiator
U39
Rear Tire Pressure
Monitor Initiator
21 4A
4 4A
N5
N6
W(∗5 ∗2)
P(∗5 ∗2)
GR
(∗1)

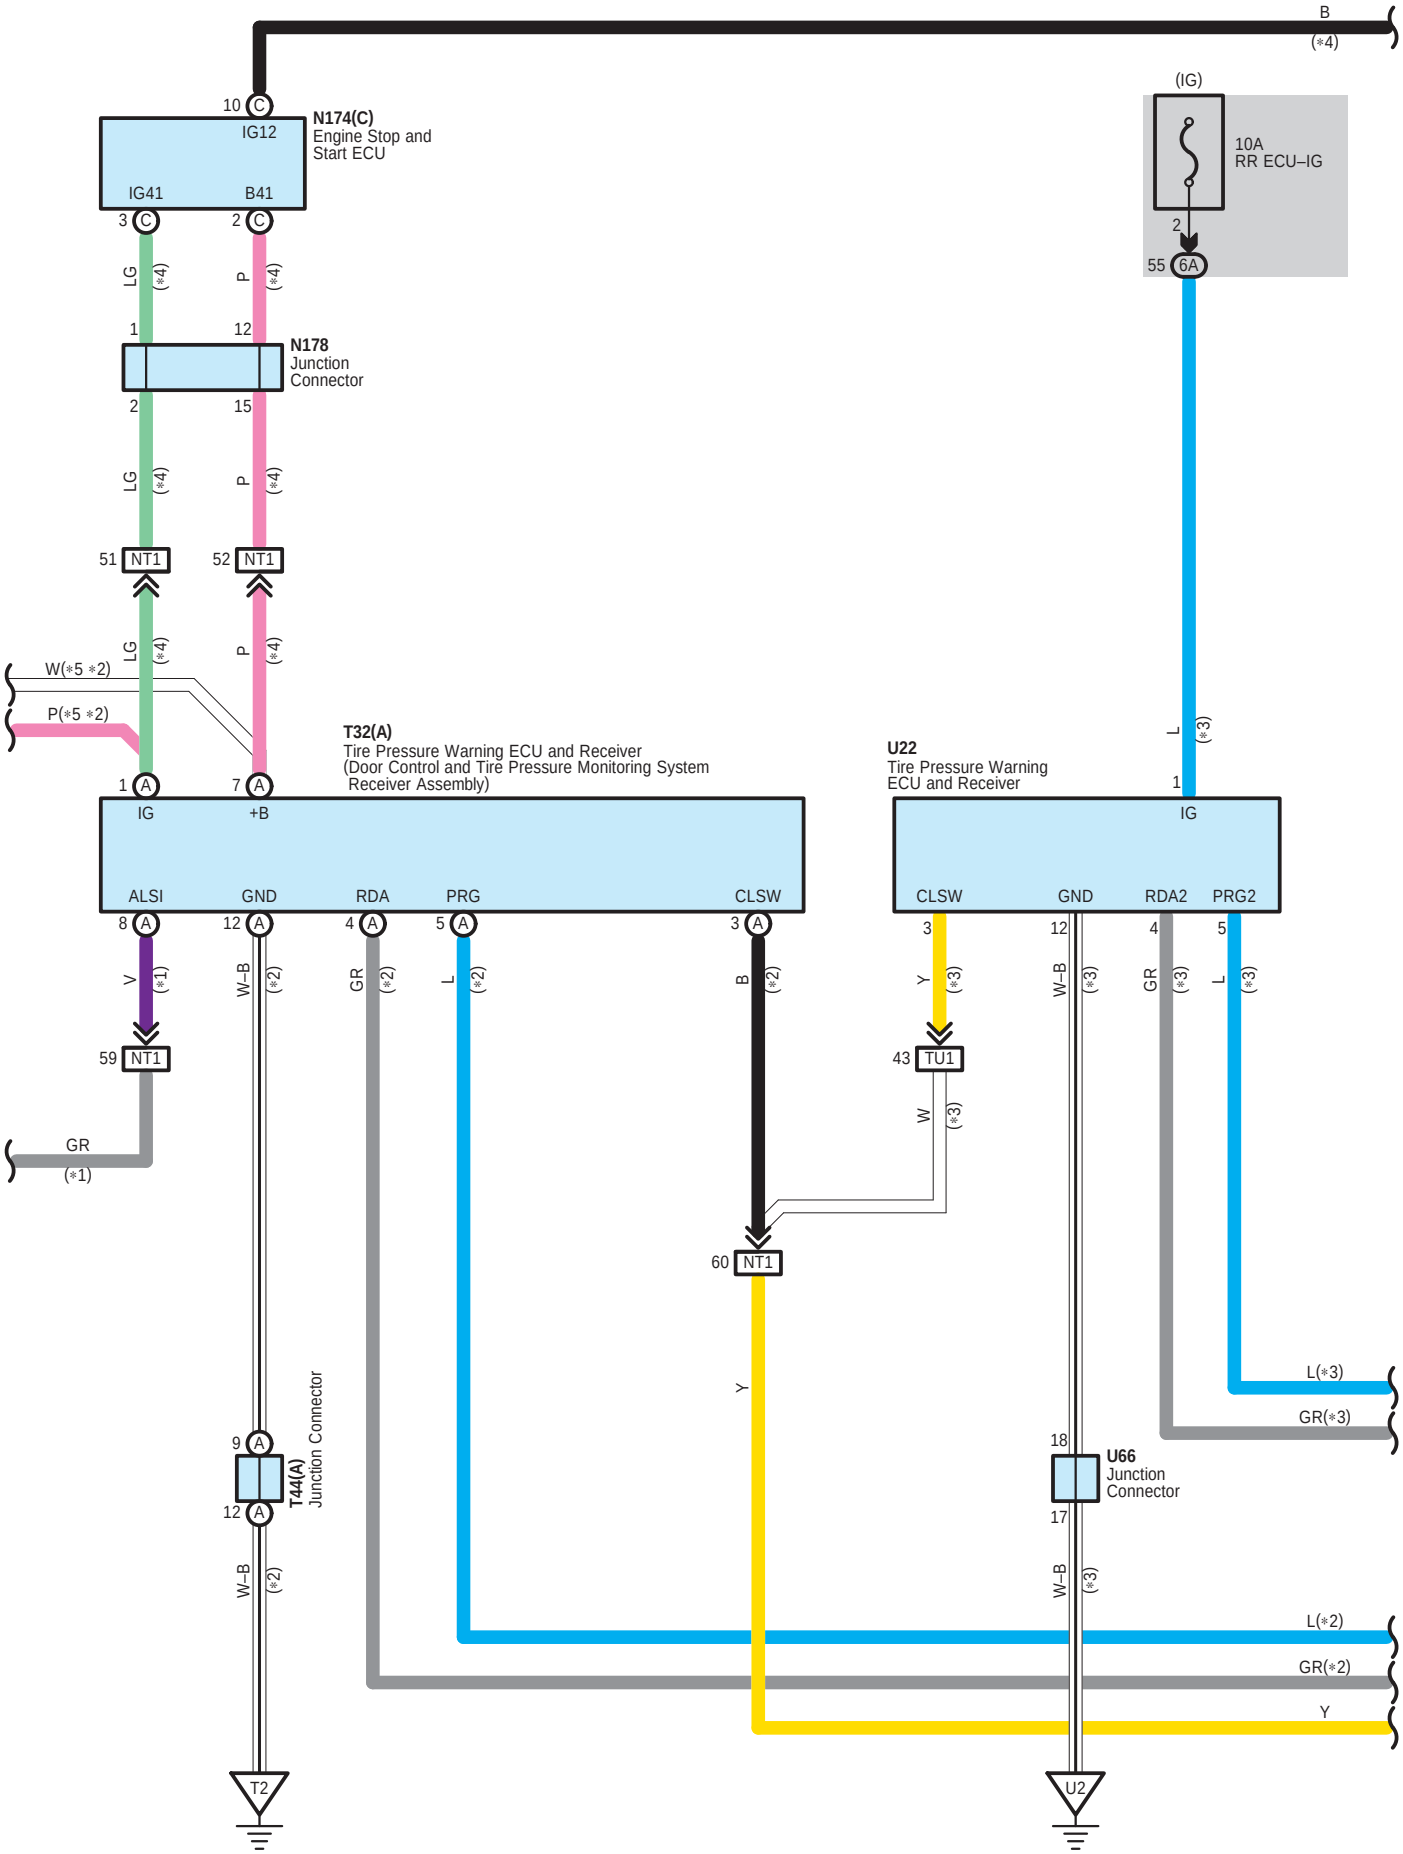
B
(*4)
10 C
IG12
N174(C)
Engine Stop and
Start ECU
IG41
B41
3 C
2 C
LG
(*4)
P
(*4)
1
12
N178
Junction
Connector
2
15
LG
(*4)
P
(*4)
51 NT1
52 NT1
LG
(*4)
P
(*4)
W(*5 *2)
P(*5 *2)
(IG)
10A
RR ECU–IG
2
55 6A
L
(*3)
T32(A)
Tire Pressure Warning ECU and Receiver
(Door Control and Tire Pressure Monitoring System
Receiver Assembly)
1 A
7 A
IG
+B
U22
Tire Pressure Warning
ECU and Receiver
1
IG
ALSI
GND
RDA
PRG
CLSW
CLSW
GND
RDA2
PRG2
8 A
12 A
4 A
5 A
3 A
3
12
4
5
V
(*1)
W–B
(*2)
GR
(*2)
L
(*2)
B
(*2)
Y
(*3)
W–B
(*3)
GR
(*3)
L
(*3)
59 NT1
43 TU1
W
(*3)
GR
(*1)
60 NT1
Y
L(*3)
GR(*3)
9 A
12 A
T44(A)
Junction Connector
18
17
U66
Junction
Connector
W–B
(*2)
W–B
(*3)
L(*2)
GR(*2)
Y
T2
U2

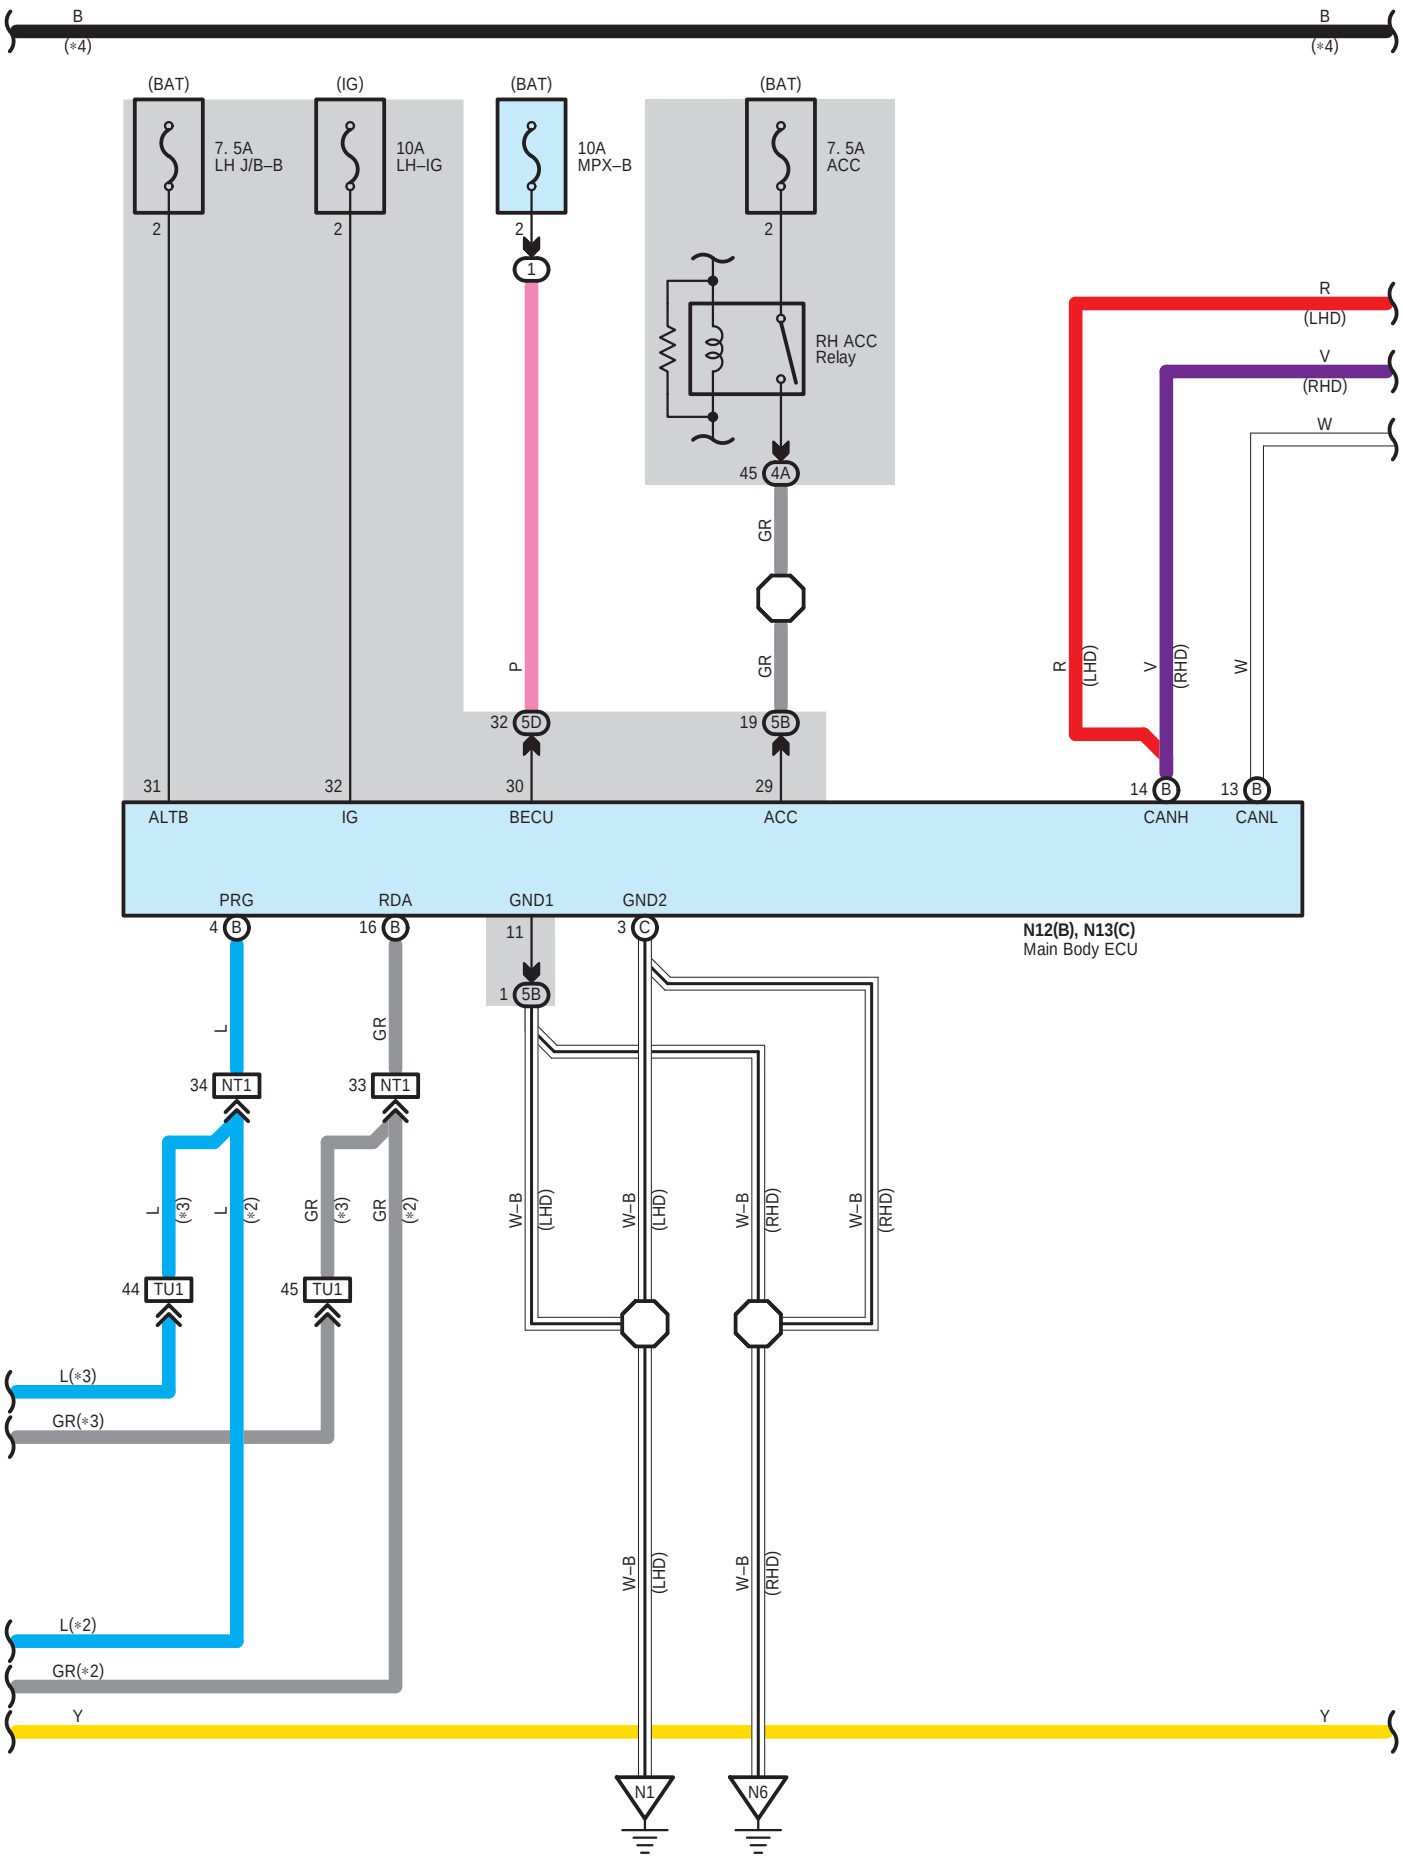
B
(*4)
B
(*4)
(BAT)
7. 5A
LH J/B–B
(IG)
10A
LH–IG
(BAT)
10A
MPX–B
(BAT)
7. 5A
ACC
RH ACC
Relay
R
(LHD)
V
(RHD)
W
45 4A
GR
P
GR
R (LHD)
V (RHD)
W
32 5D
19 5B
31
32
30
29
14 B
13 B
ALTB
IG
BECU
ACC
CANH
CANL
PRG
RDA
GND1
GND2
4 B
16 B
11
3 C
1 5B
N12(B), N13(C)
Main Body ECU
L
GR
34 NT1
33 NT1
L (*3)
L (*2)
GR (*3)
GR (*2)
W–B (LHD)
W–B (LHD)
W–B (RHD)
W–B (RHD)
44 TU1
45 TU1
L(*3)
GR(*3)
L(*2)
GR(*2)
W–B (LHD)
W–B (RHD)
Y
Y
N1
N6

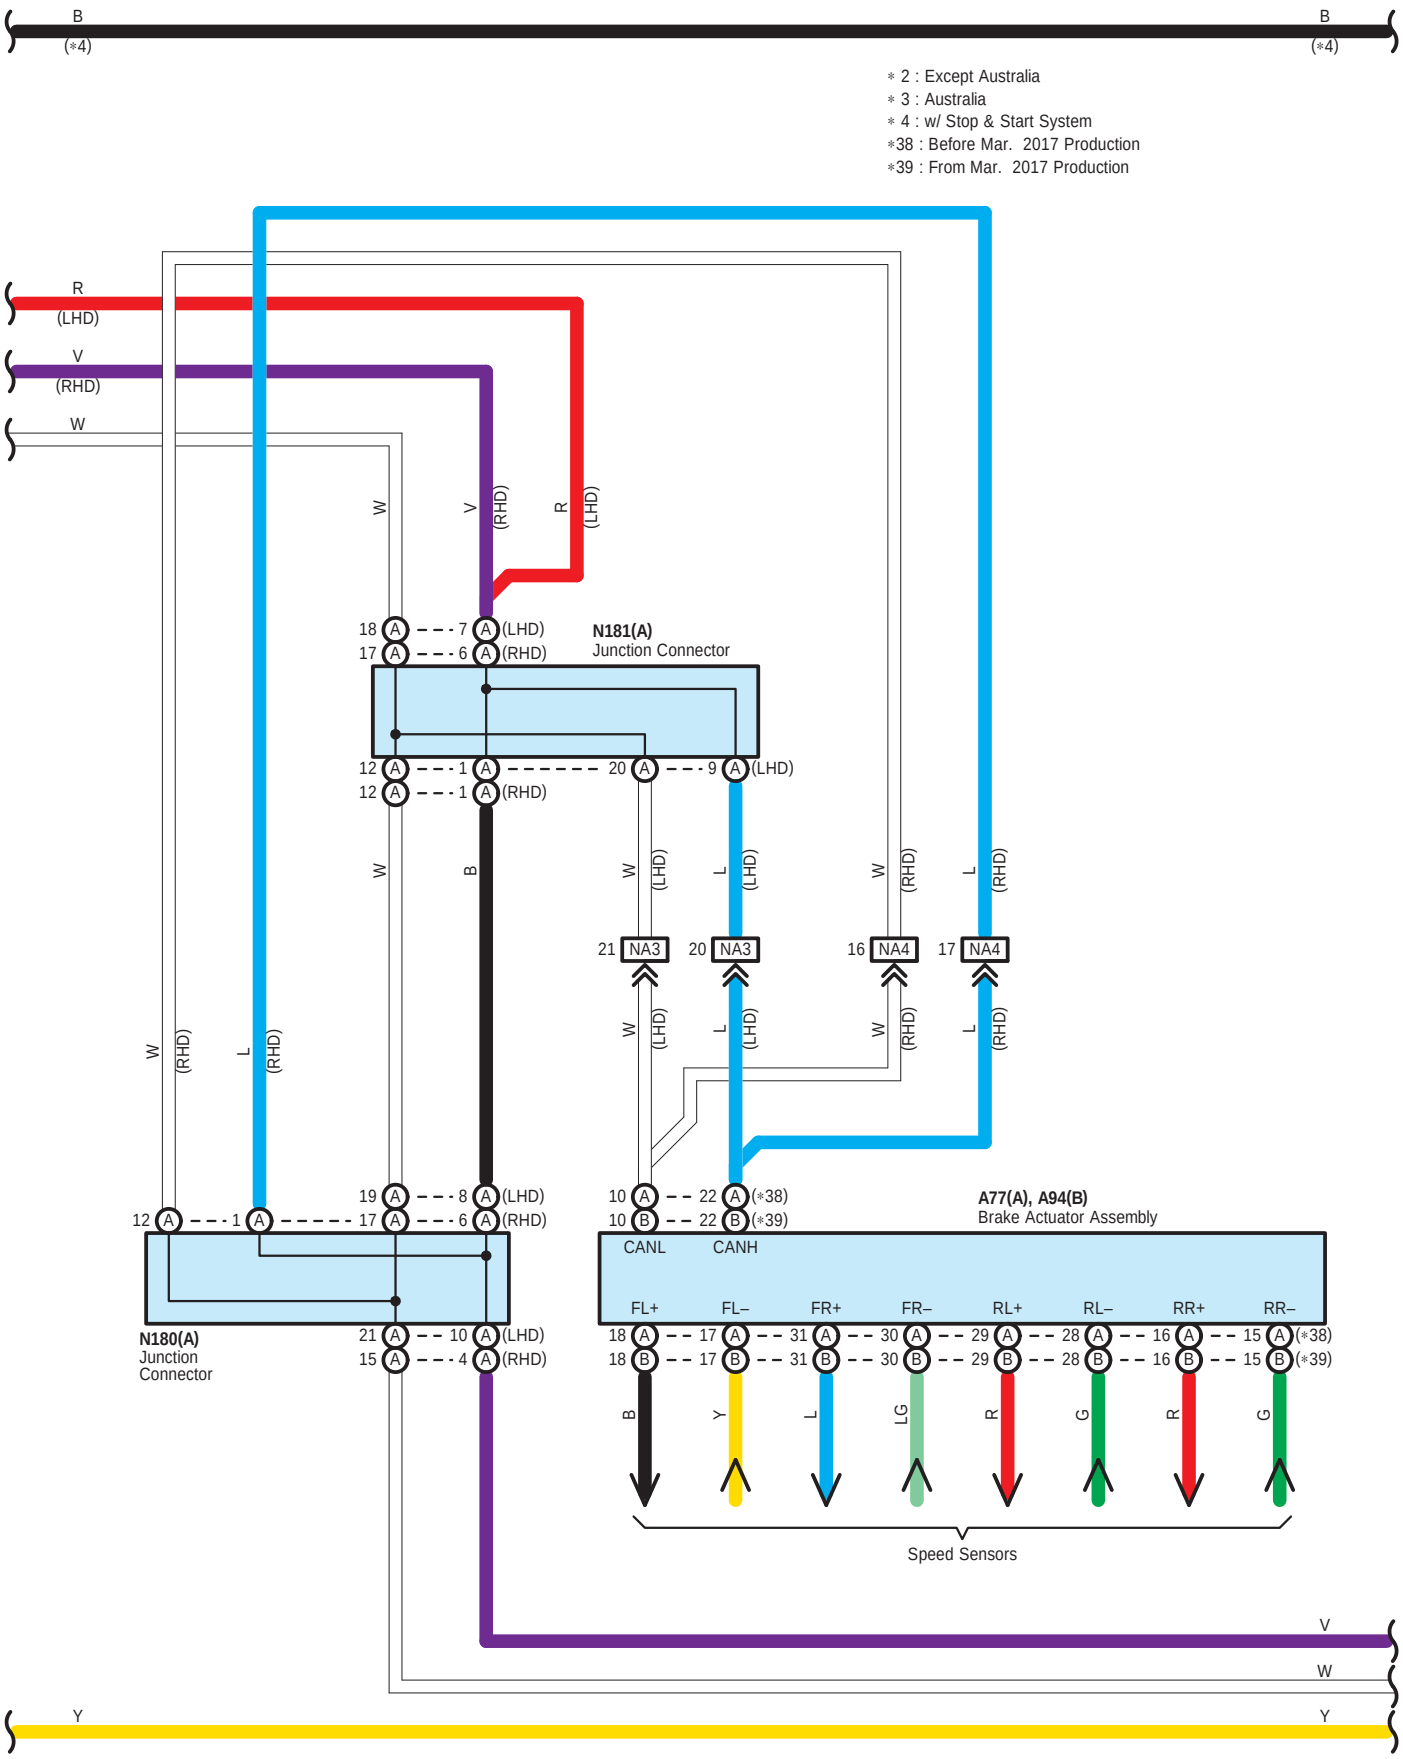
B
(*4)
B
(*4)
* 2 : Except Australia
* 3 : Australia
* 4 : w/ Stop & Start System
*38 : Before Mar. 2017 Production
*39 : From Mar. 2017 Production
R
(LHD)
V
(RHD)
W
N181(A)
Junction Connector
NA3
NA4
A77(A), A94(B)
Brake Actuator Assembly
CANL
CANH
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
N180(A)
Junction
Connector
Speed Sensors
Y

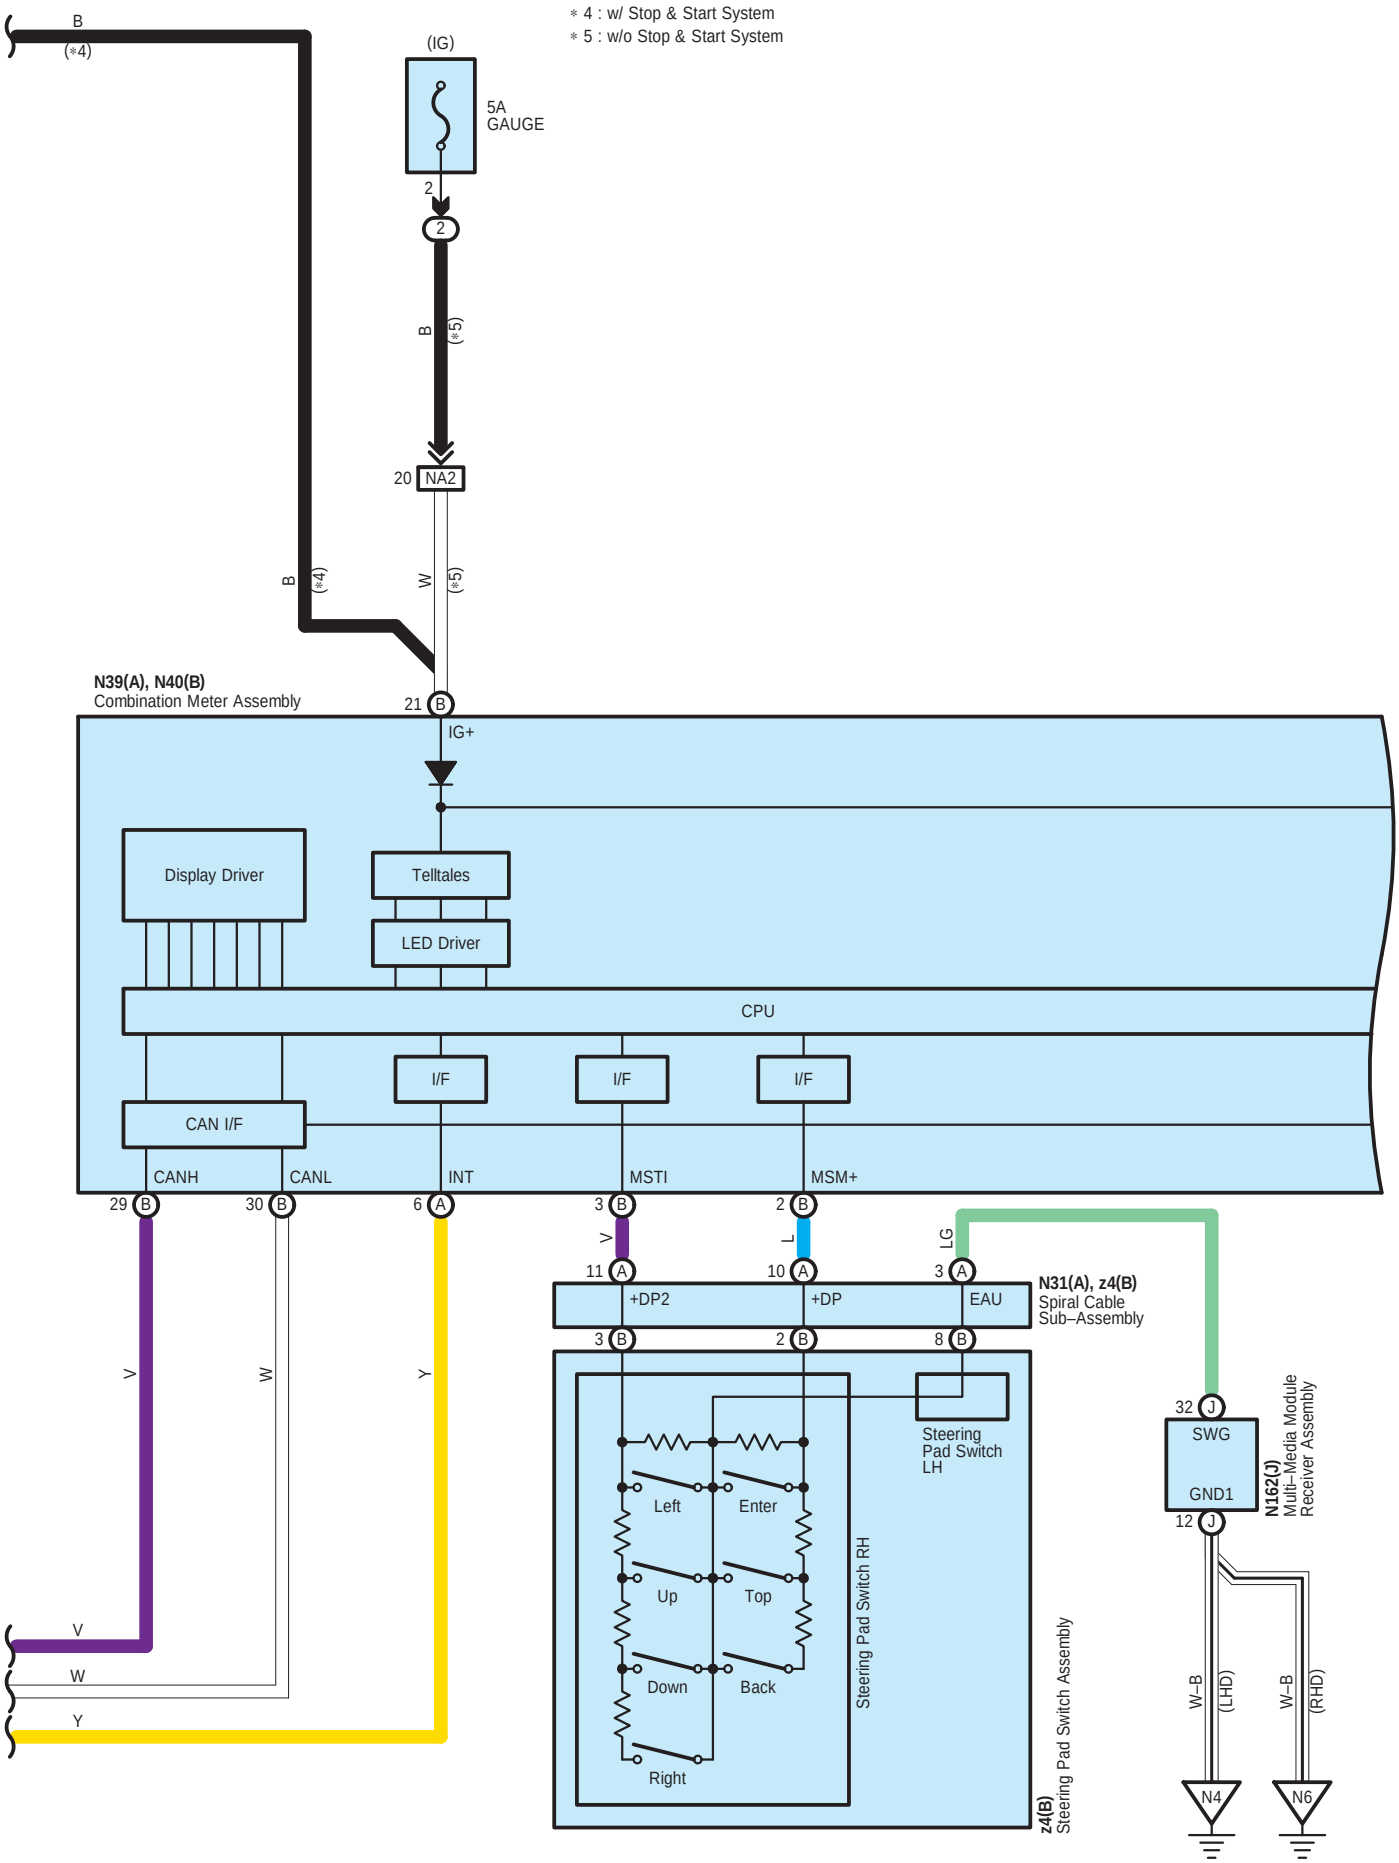
∗4 : w/ Stop & Start System
∗5 : w/o Stop & Start System
B
(∗4)
(IG)
5A
GAUGE
2
B
(∗5)
20
NA2
W
N39(A), N40(B)
Combination Meter Assembly
21
IG+
Display Driver
Telltales
LED Driver
CPU
I/F
CAN I/F
CANH
CANL
INT
MSTI
MSM+
29
30
6
3
2
V
L
LG
11
10
+DP2
+DP
EAU
N31(A), z4(B)
Spiral Cable
Sub–Assembly
8
Steering
Pad Switch
LH
Left
Enter
Up
Top
Down
Back
Right
Steering Pad Switch RH
z4(B)
Steering Pad Switch Assembly
32
SWG
GND1
12
N162(J)
Multi–Media Module
Receiver Assembly
W–B
(LHD)
(RHD)
N4
N6
Y

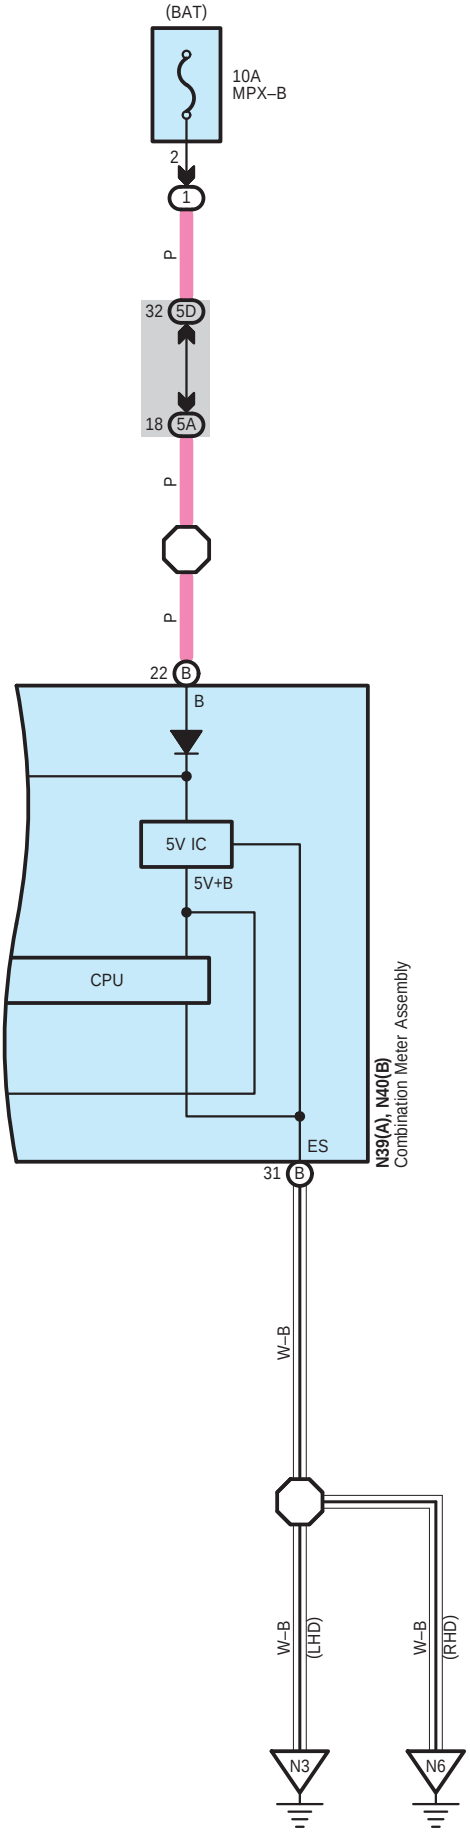
(BAT)
10A
MPX–B
2
1
P
32
5D
18
5A
P
P
22
B
B
5V IC
5V+B
CPU
ES
31
B
N39(A), N40(B)
Combination Meter Assembly
W–B
W–B
(LHD)
W–B
(RHD)
N3
N6

A 11
Black

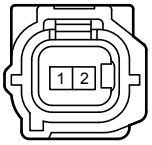

A 77
Black

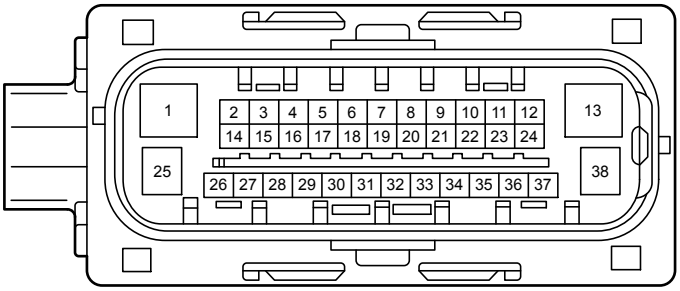

A 94
Black

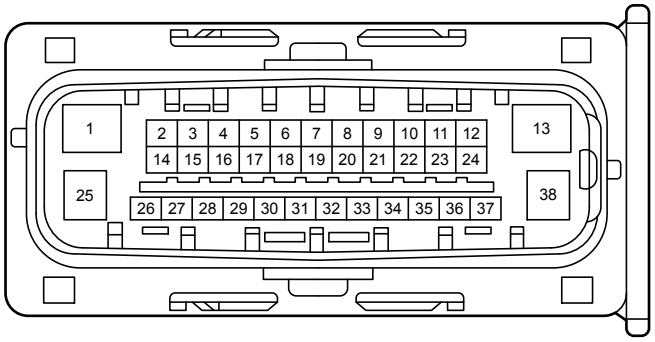

N 12
White

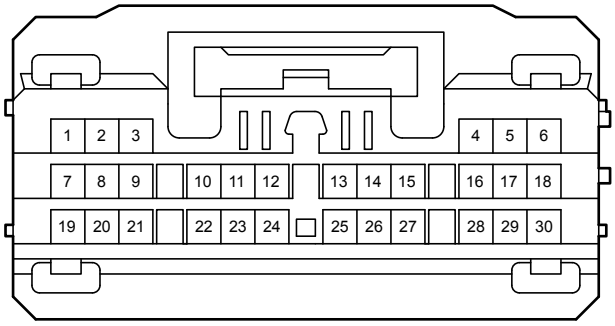

N 13
White

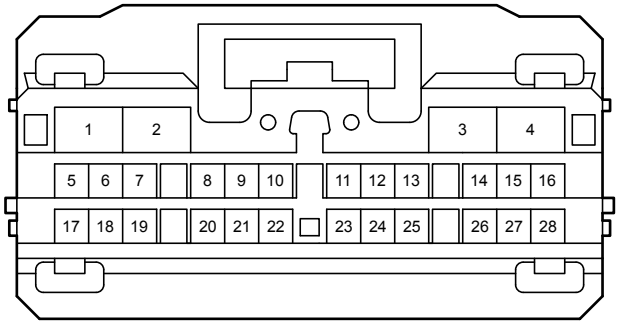

N 31
Black

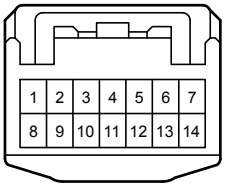

N 39
Black

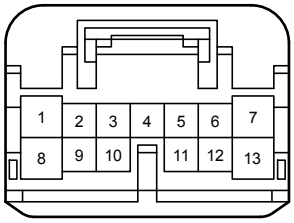

N 40
Black

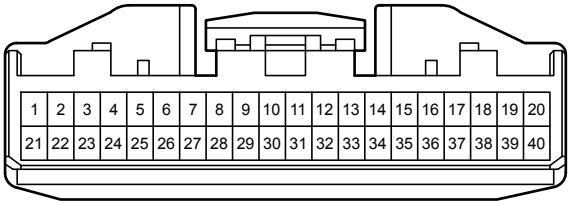

N 99
White

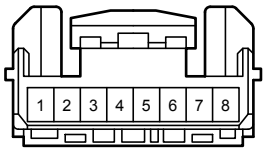

N162
White

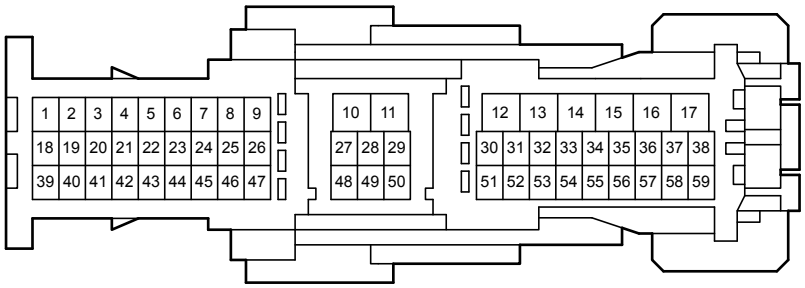

N174
Black

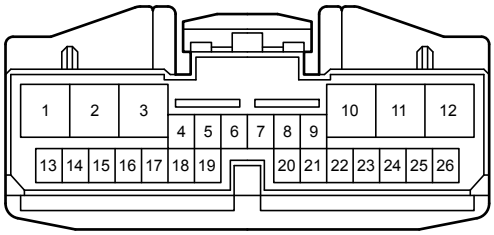

N178
Gray

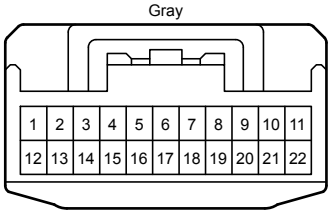

N180
Gray

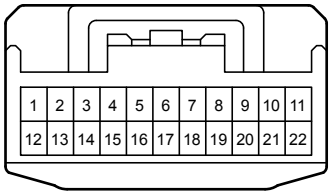

N181
Gray

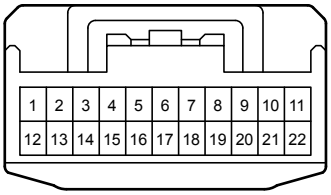

N183
Black

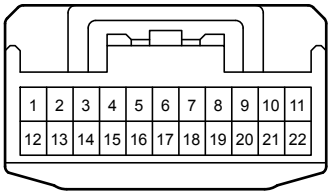

T 32
White

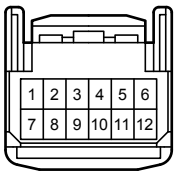

T 44
Blue

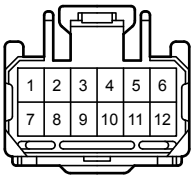

U 22
White

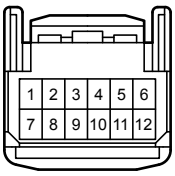

U 39
White

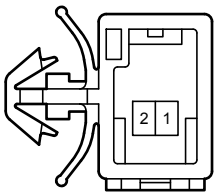

U 66
Gray

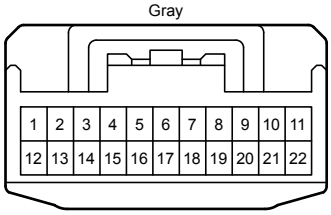

z 4
Black

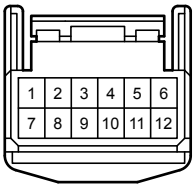

4A
White

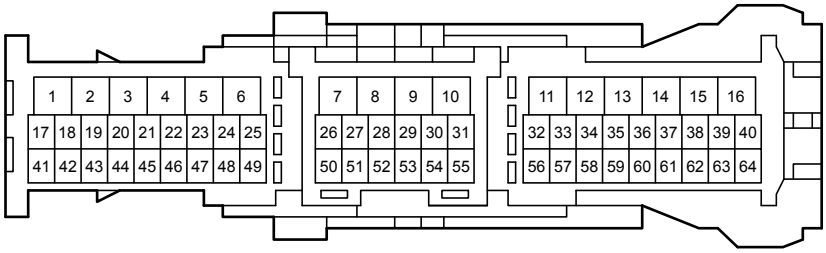

4B
White

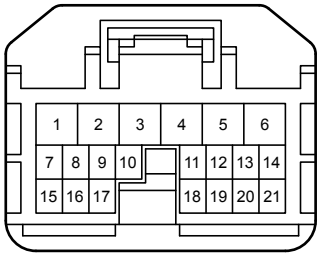

4C
White

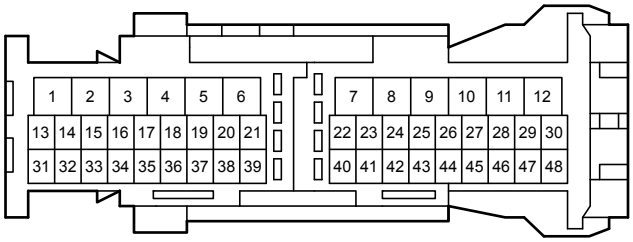

5A
White

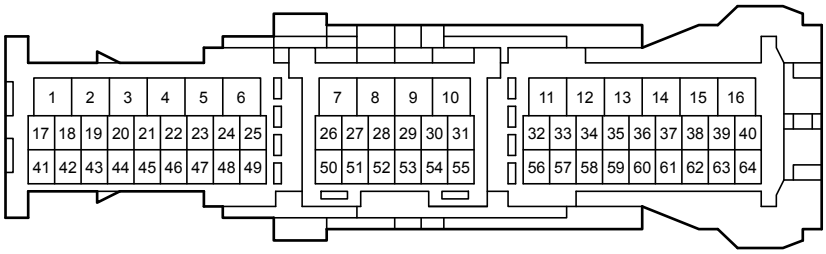

5B
White

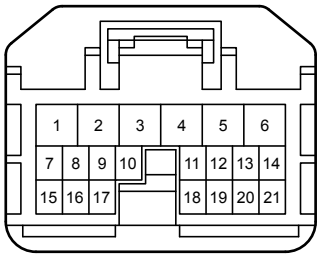

5D
White

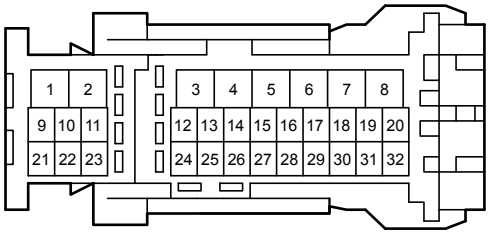

6A
White

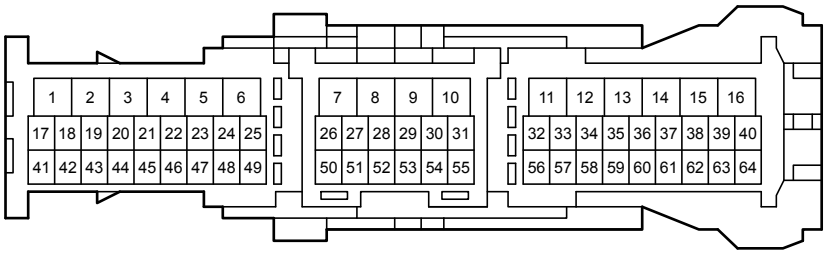

NA1
White

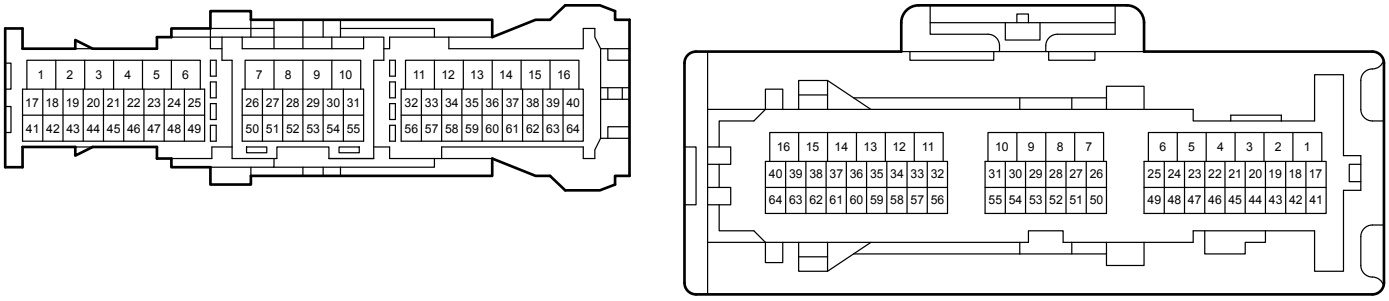

NA2
White

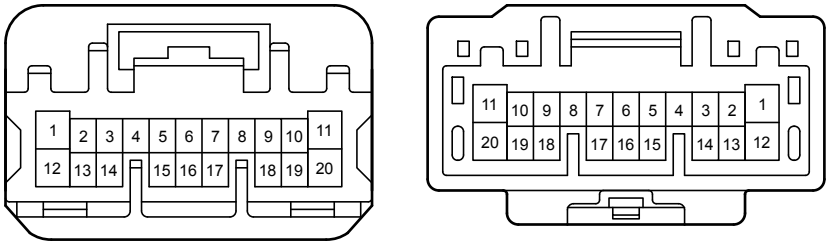

NA3
White

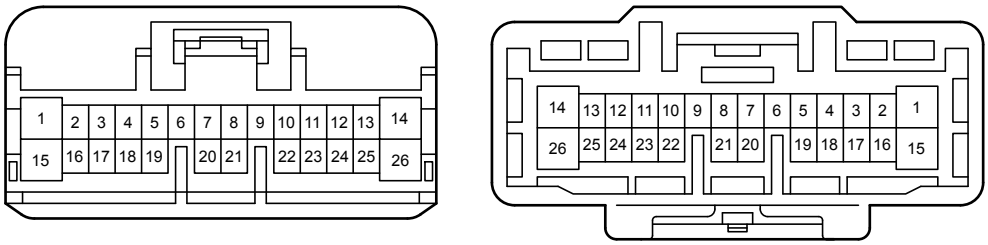

NA4
Gray

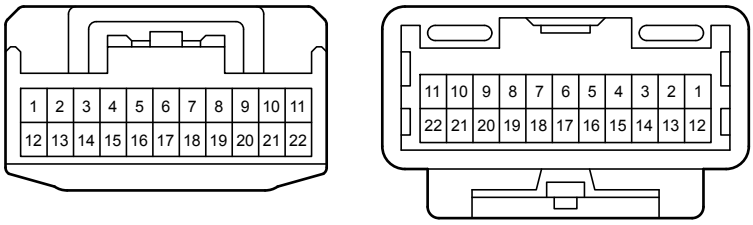

NT1
White

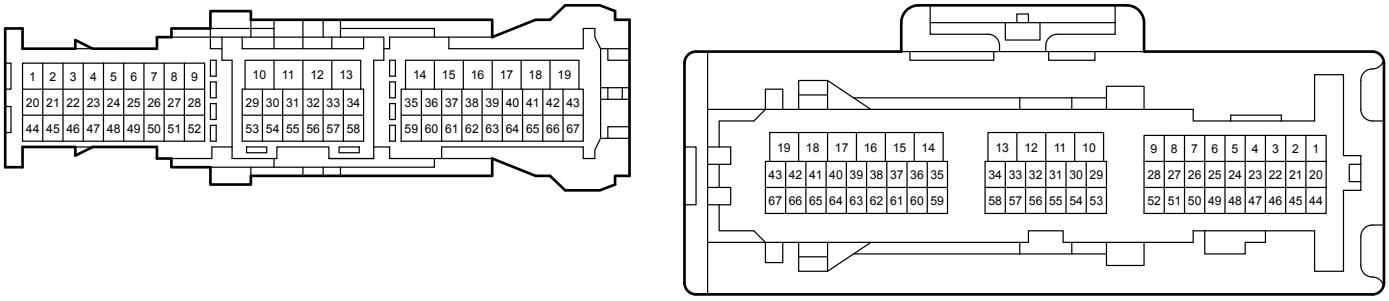

NU1
White

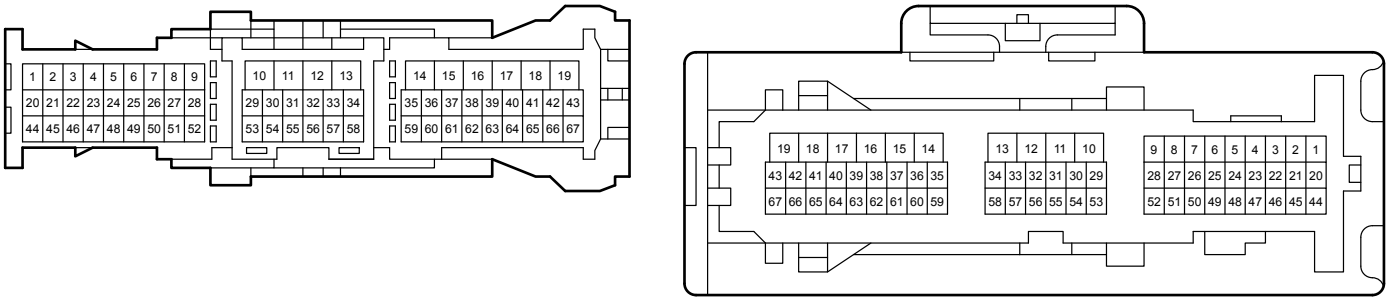
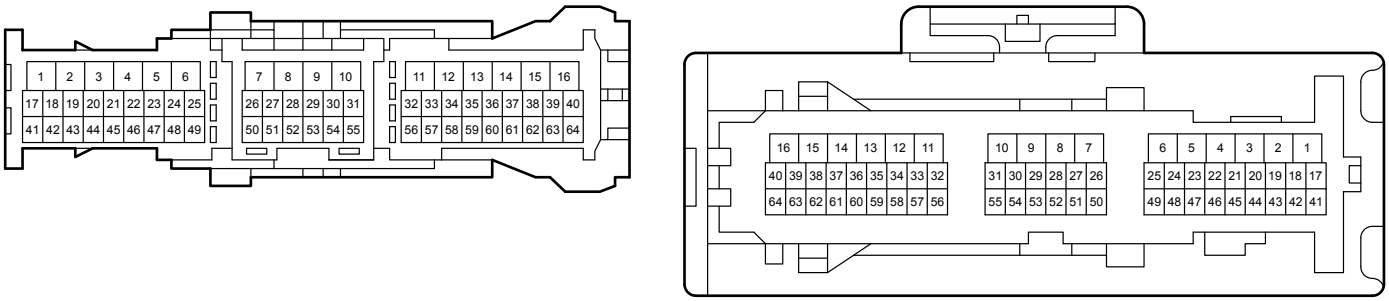
TU1
White