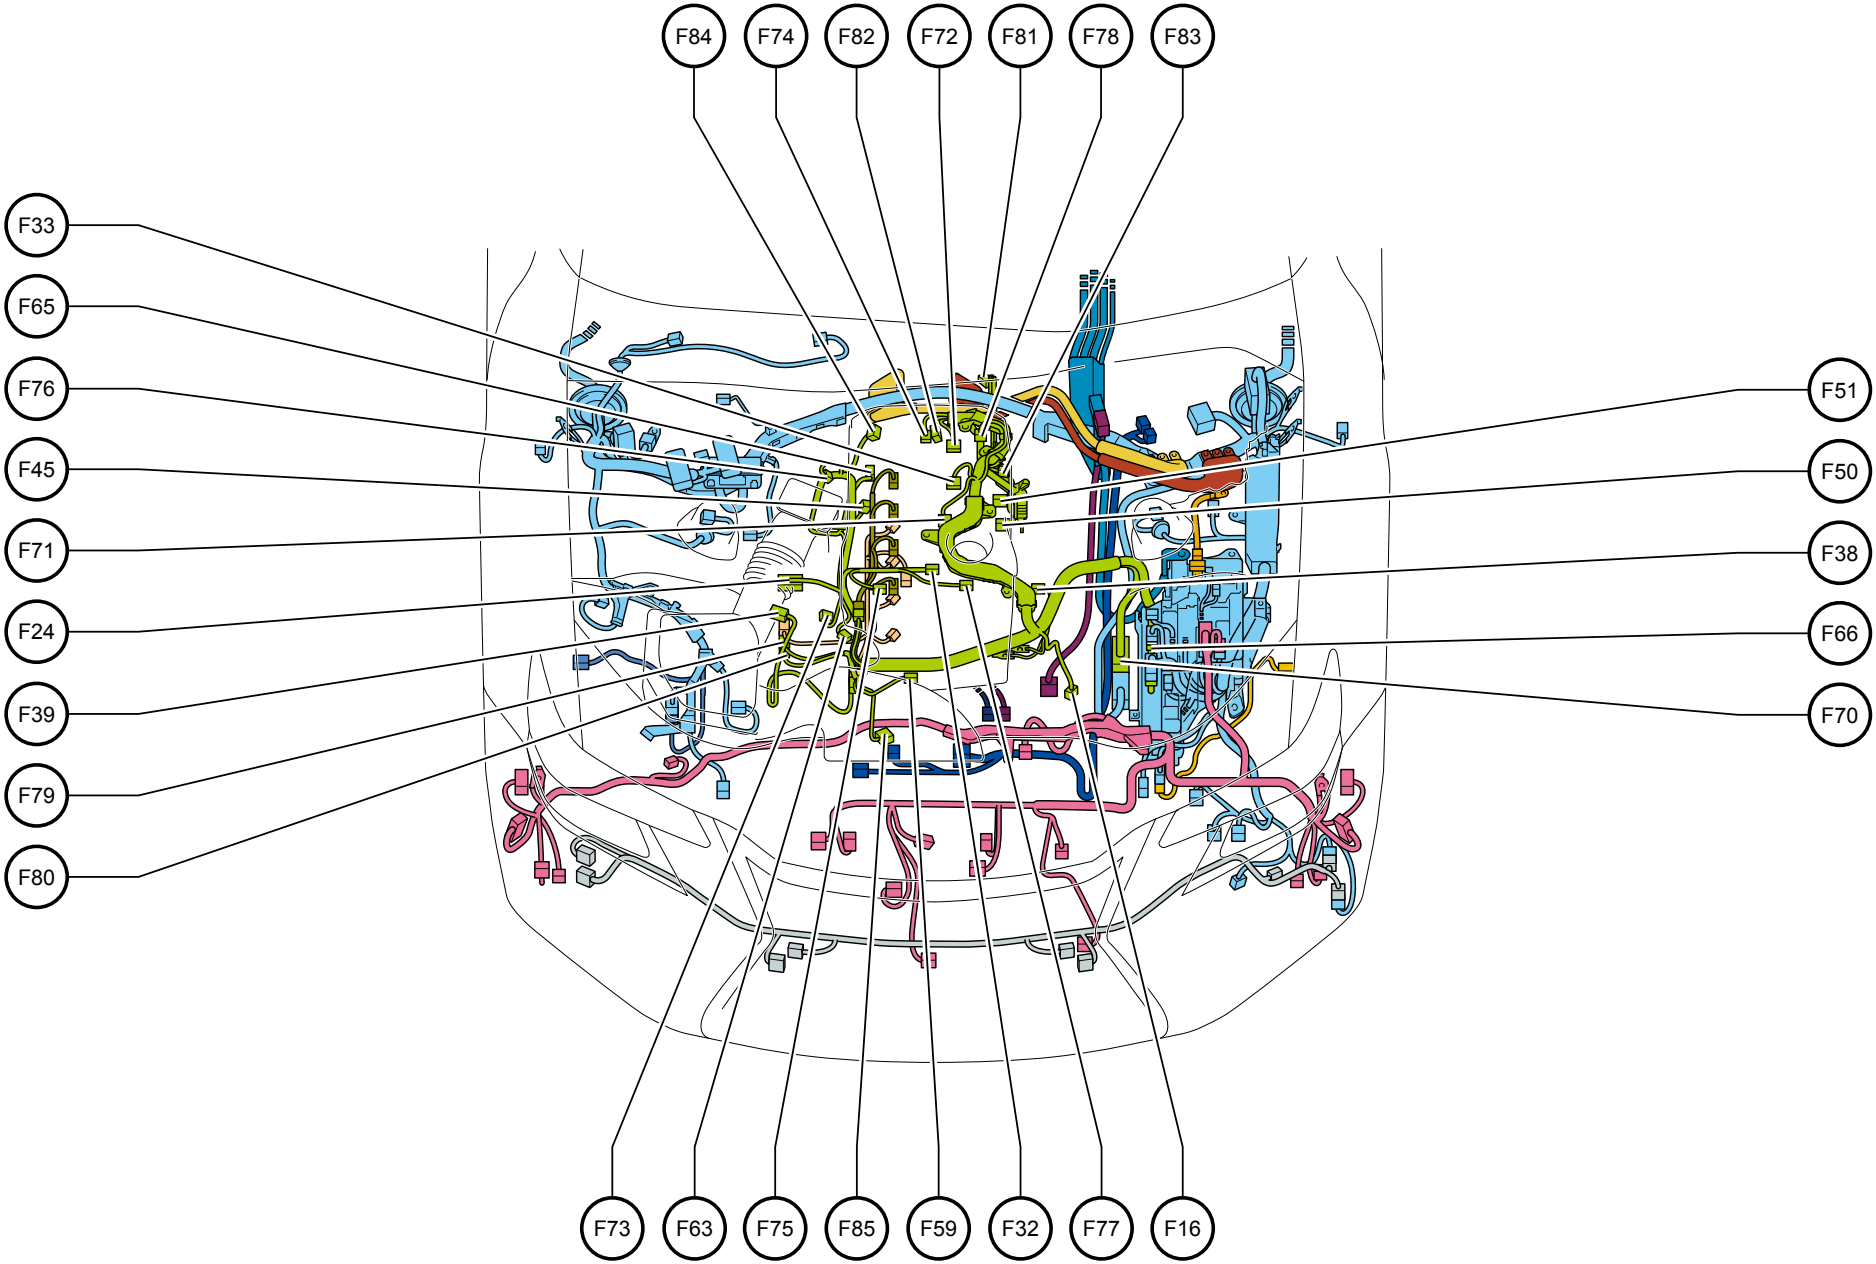
F84
F74
F82
F72
F81
F78
F83
F33
F65
F76
F45
F71
F24
F39
F79
F80
F51
F50
F38
F66
F70
F73
F63
F75
F85
F59
F32
F77
F16

F 16 Compressor with Motor Assembly
F 24 Throttle Body with Motor Assembly
F 32 Ignition Coil Assembly No. 1
F 33 Ignition Coil Assembly No. 3
F 38 Engine Oil Pressure Switch Assembly
F 39 Intake Mass Air Flow Meter Sub-Assembly
F 45 Fuel Pressure Sensor
F 50 Hybrid Vehicle Transmission Assembly
F 51 Hybrid Vehicle Transmission Assembly
F 59 E.F.I. Engine Coolant Temperature Sensor
F 63 Engine Oil Level Sensor
F 65 Shift Lever Position Sensor
F 66 Junction Connector
F 70 ECM
F 71 Ignition Coil Assembly No. 2
F 72 Ignition Coil Assembly No. 4
F 73 E.F.I. Vacuum Sensor Assembly
F 74 VVT Sensor (Bank 1 Intake Side)
F 75 Cam Timing Oil Control Valve Assembly (Bank 1 Intake Side)
F 76 Purge VSV
F 77 Cam Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
F 78 VVT Sensor (Bank 1 Exhaust Side)
F 79 Injector Driver
F 80 Injector Driver
F 81 Oxygen Sensor (Bank 1 Sensor 2)
F 82 Fuel Pump Assembly
F 83 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F 84 EGR Valve Assembly
F 85 Crank Position Sensor

F 16
Black

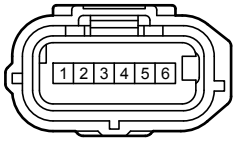

F 24
Black

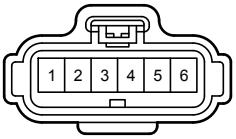

F 32
Gray



F 33
Black



F 38
Gray

F 39
Black

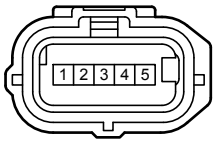

F 45
Black

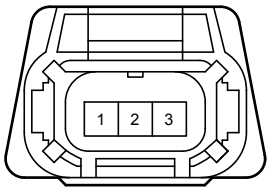

F 50
Gray

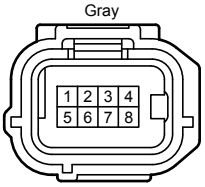

F 51
Gray

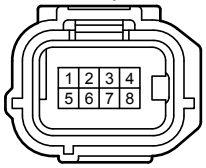

F 59
Gray

F 63
Gray

F 65
Gray

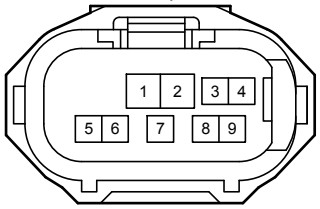

F 66
Gray

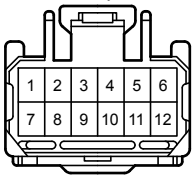

F 70
Black

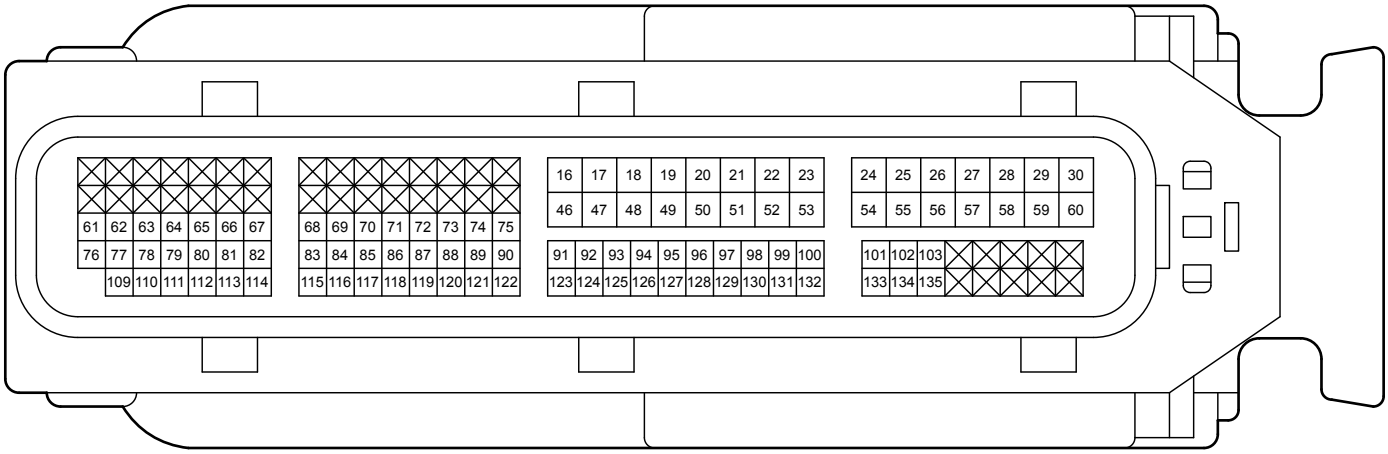

F 71
Gray

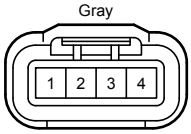

F 72
Gray

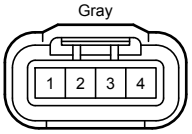

F 73
Black



F 74
Black

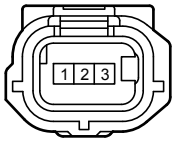

F 75
Gray

F 76
Black

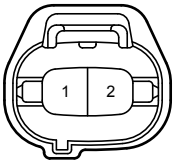

F 77
Black

F 78
Black

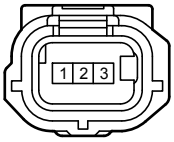

F 79
Black

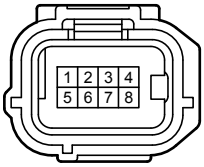

F 80
Black

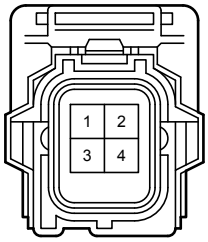

F 81
White

F 82
Black

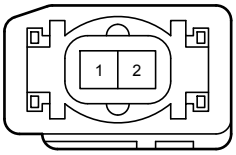

F 83
White

F 84
Black
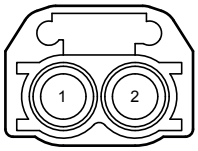
F 85
Black