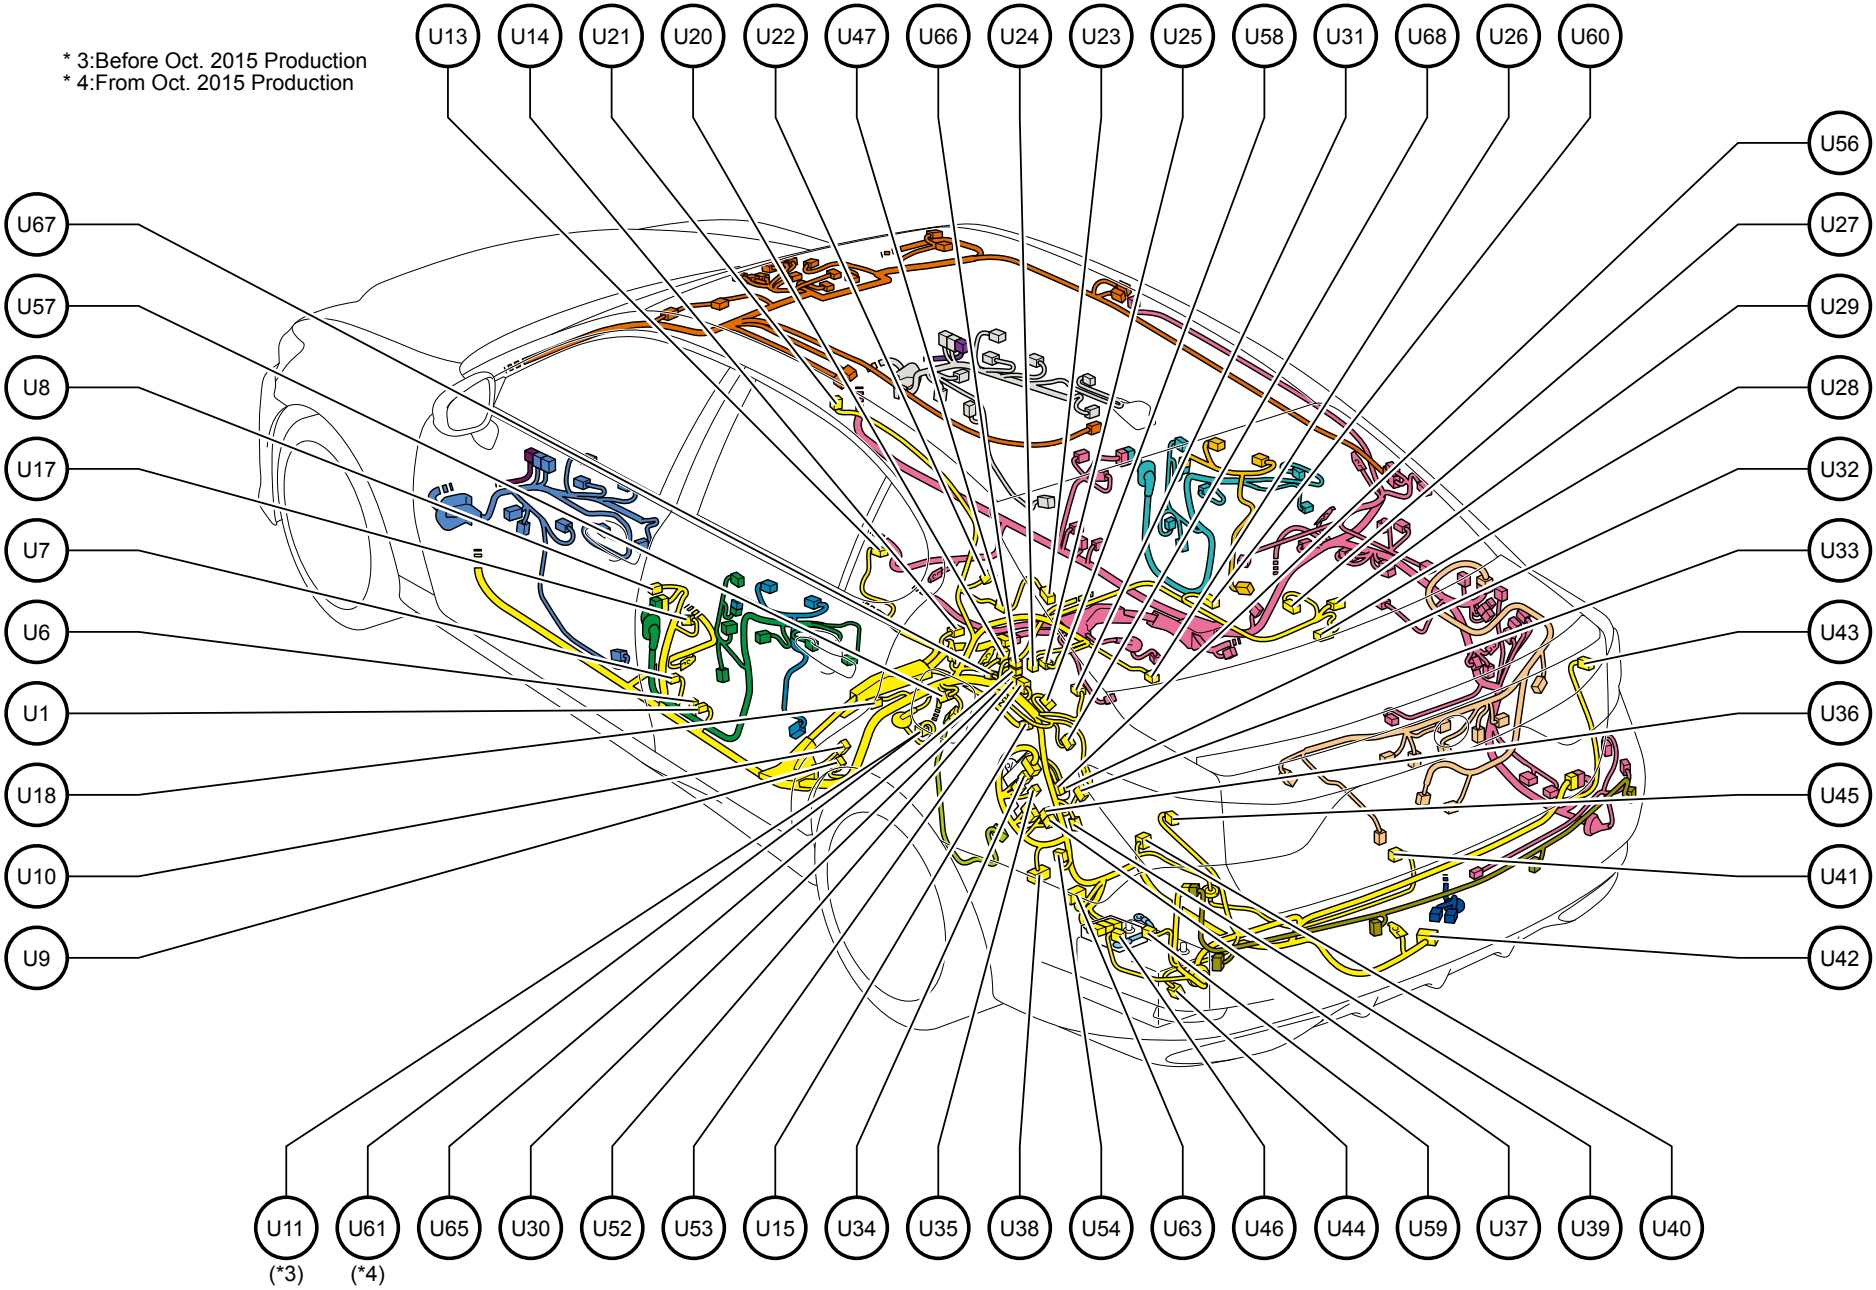
* 3:Before Oct. 2015 Production
* 4:From Oct. 2015 Production
U13
U14
U21
U20
U22
U47
U66
U24
U23
U25
U58
U31
U68
U26
U60
U56
U27
U29
U28
U32
U33
U43
U36
U45
U41
U42
U67
U57
U8
U17
U7
U6
U1
U18
U10
U9
U11
(*3)
U61
(*4)
U65
U30
U52
U53
U15
U34
U35
U38
U54
U63
U46
U44
U59
U37
U39
U40

U 1 Front Seat Outer Belt Assembly LH
U 6 Front Seat Outer Belt Assembly LH
U 7 Front Seat Outer Belt Assembly LH
U 8 Front Door Courtesy Light Switch Assembly LH
U 9 Rear Airbag Sensor LH
U 10 Rear Side Airbag Squib Circuit LH
U 11 Fuel Sender Gage Assembly
U 13 Rear No. 2 Power Outlet Socket Assembly
U 14 No. 2 Indoor Electrical Key Antenna Assembly
U 15 Rear Seat Inner Belt with Center Assembly LH
U 17 Side Airbag Sensor Assembly LH
U 18 Rear Door Courtesy Light Switch Assembly LH
U 20 Noise Filter (Center Stop Light and Luggage Compartment Light)
U 21 Curtain Shield Airbag Assembly LH
U 22 Tire Pressure Warning ECU and Receiver
U 23 Rear Window Defogger (Back Window Glass)
U 24 Rear Seat 3 Point Type Belt Assembly Outer LH
U 25 Rear Seat 3 Point Type Belt Assembly Outer LH
U 26 Rear Header Speaker Assembly LH
U 27 Center Stop Light Assembly
U 28 No. 1 Luggage Compartment Light Assembly
U 29 Rear Sunshade Relay (Rear Window Shade Assembly)
U 30 Fuel Lid Lock with Motor Assembly
U 31 Rear Absorber Control Actuator LH
U 32 Rear Speed Sensor LH
U 33 Luggage Closer Motor Assembly
U 34 Seat Belt Control ECU
U 35 Seat Belt Control ECU
U 36 Parking Brake ECU Assembly
U 37 Parking Brake ECU Assembly
U 38 Fuel Pump Control ECU
U 39 Rear Tire Pressure Monitor Initiator
U 40 Parking Brake Actuator with Bracket Assembly
U 41 Canister Pump Module
U 42 Rear Steering Control ECU
U 43 Rear Combination Light Assembly RH
U 44 Battery Thermometer Sensor (Thermistor Assembly)
U 45 Rear Combination Light Assembly LH
U 46 Blind Spot Monitor Sensor LH
U 47 Noise Filter (Rear Window Defogger)
U 52 Junction Connector
U 53 Junction Connector
U 54 Junction Connector
U 56 Junction Terminal
U 57 Junction Connector
U 58 Junction Connector
U 59 Blind Spot Monitor Sensor LH
U 60 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
U 61 Fuel Sender Gage Assembly
U 63 Fuel Pump Control ECU
U 65 Junction Connector
U 66 Junction Connector
U 67 Junction Connector
U 68 Multiplex Network Door ECU

U 1
White



U 6
Black



U 7
White

U 8
Black

U 9
Yellow

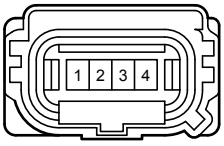

U 10
Yellow

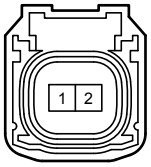

U 11
White

U 13
Black



U 14
White

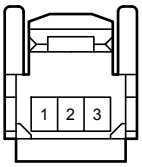

U 15
White

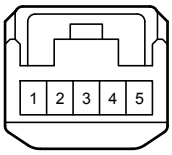

U 17
Yellow

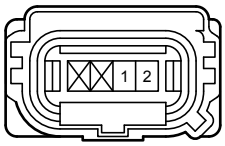

U 18
Black

U 20
Black



U 21
Black

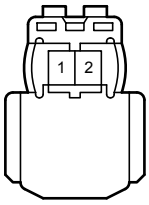

U 22
White

U 23
White

U 24
White



U 25
Black



U 26
Black

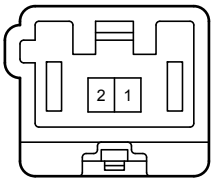

U 27
White



U 28
White

U 29
White

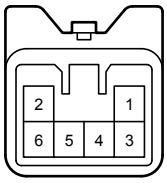

U 30
Black



U 31
Black

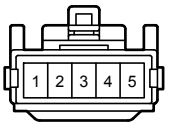

U 32
White

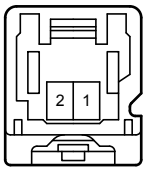

U 33
White

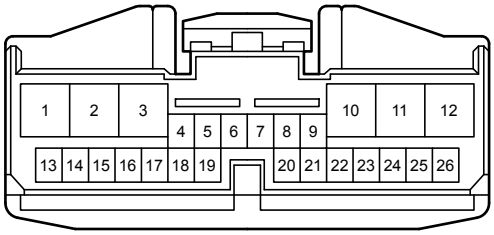

U 34
White

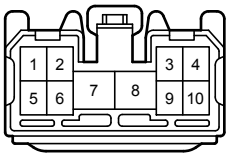

U 35
White

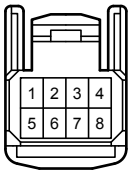

U 36
White

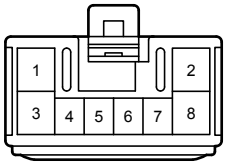

U 37
White

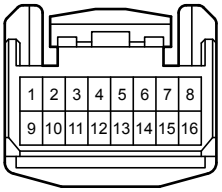

U 38
Black

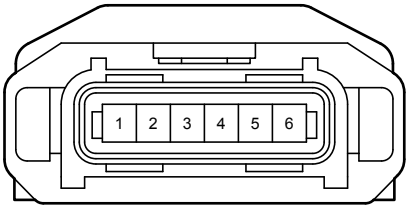

U 39
White

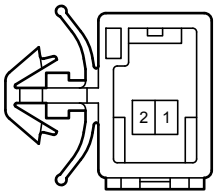

U 40
White

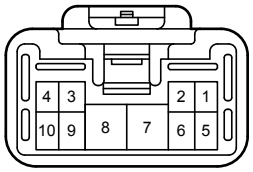

U 41
Black

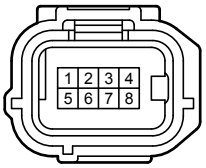

U 42
Black

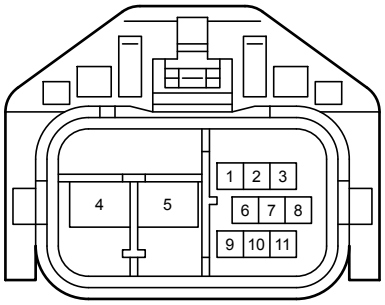

U 43
White



U 44
Black

U 45
White



U 46
Black

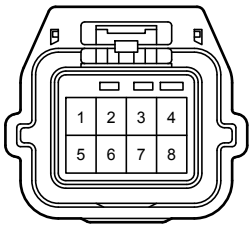

U 47
Black



U 52
Blue

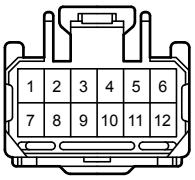

U 53
Blue

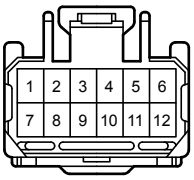

U 54
Blue

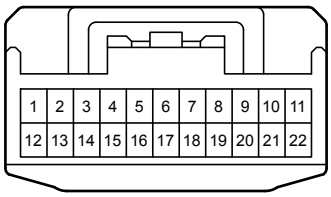

U 56
White

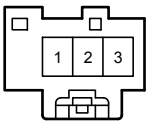

U 57
Black



U 58
Black



U 59
Black

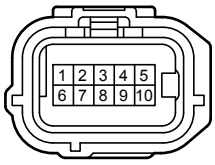

U 60
Black

U 61
White

U 63
Black



U 65
White

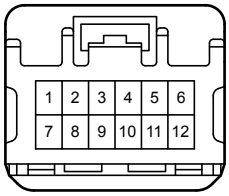

U 66
Gray

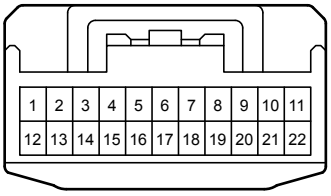

U 67
Gray

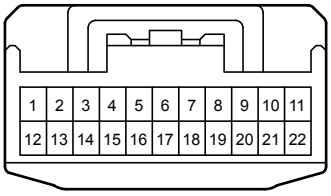
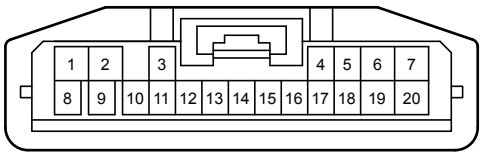
U 68
Black