Position of Parts in Seat <LHD Front Seat>

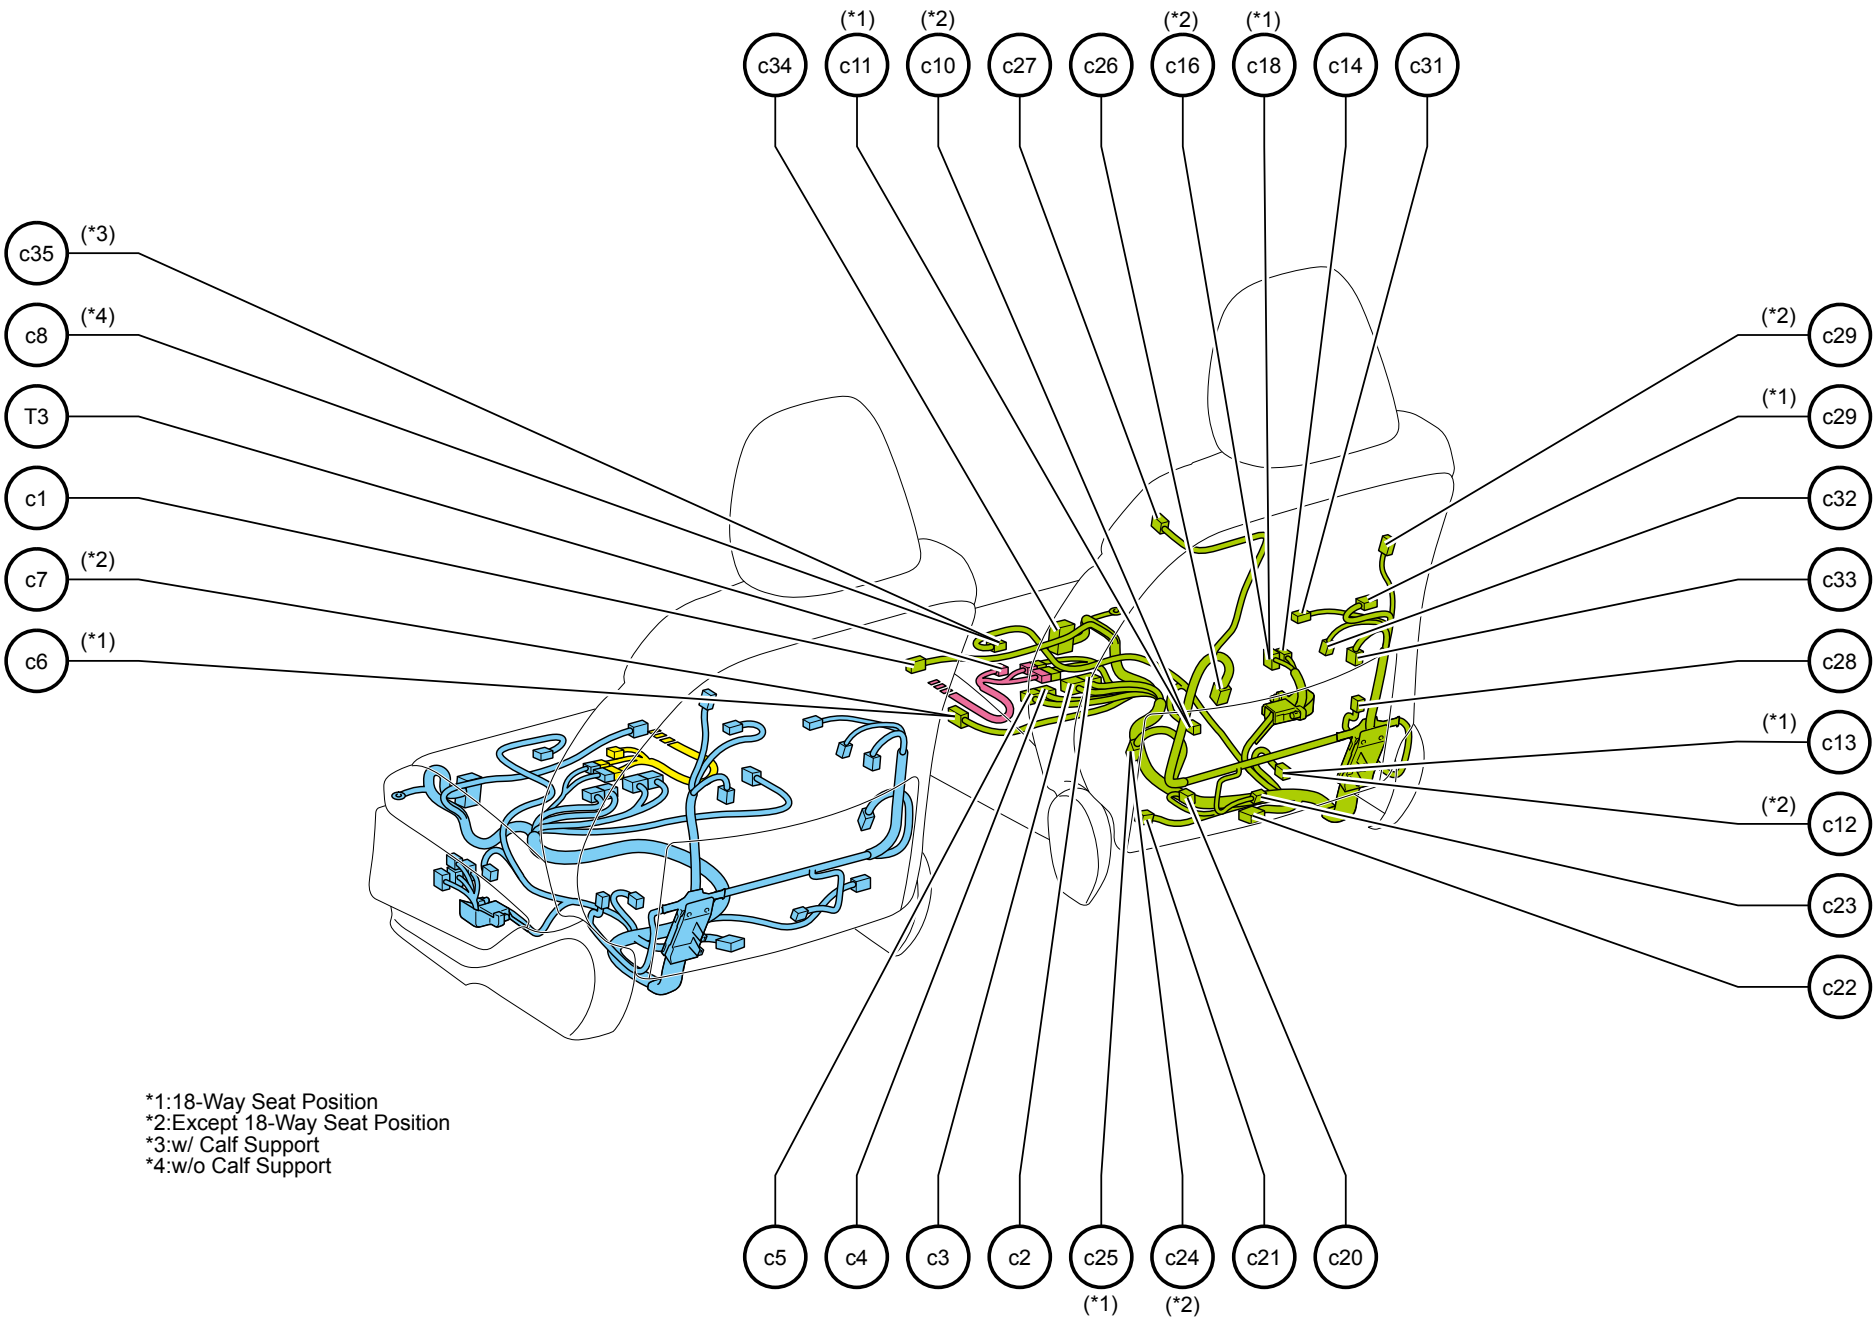

*1:18-Way Seat Position
*2:Except 18-Way Seat Position
*3:w/ Calf Support
*4:w/o Calf Support

T 3 Front Seat Inner Belt Assembly RH

c 1 Front Seat Inner Belt Assembly RH
c 2 Position Control ECU Assembly RH
c 3 Position Control ECU Assembly RH
c 4 Position Control ECU Assembly RH
c 5 Position Control ECU Assembly RH
c 6 Power Seat Slide Motor RH
c 7 Power Seat Slide Motor RH
c 8 Power Seat Cushion Motor RH
c 10 Power Seat Tilt Motor RH
c 11 Power Seat Tilt Motor RH
c 12 Power Seat Lift Motor RH
c 13 Power Seat Lift Motor RH
c 14 Front Lumbar Power Seat Switch RH
c 16 Front Power Seat Switch Assembly RH
c 18 Front Power Seat Switch Assembly RH
c 20 Occupant Detection Sensor RH (Separate Type Front Seat Cushion Pad)
c 21 Seat Climate Control Blower RH
c 22 Front Seat Heater Assembly RH
c 23 Rear Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
c 24 Power Seat Reclining Motor RH
c 25 Power Seat Reclining Motor RH
c 26 Lumbar Support Motor RH
c 27 Slide and Reclining Switch RH (Power Seat Switch Assembly)
c 28 Power Seat Side Support Motor RH
c 29 Front Seat Airbag Assembly RH
c 31 Power Seat Shoulder Support Motor RH
c 32 Seat Back Climate Control Blower RH
c 33 Power Seat Pelvic Support Motor RH
c 34 Junction Connector
c 35 Power Seat Calf Support Motor RH

T 3
Gray

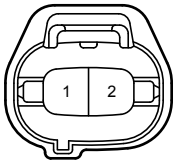

c 1
White

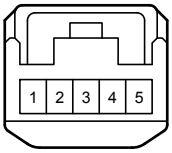

c 2
White

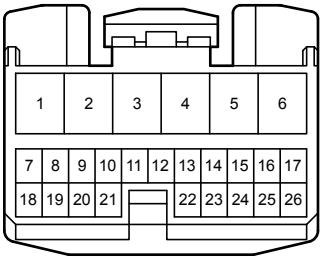

c 3
White

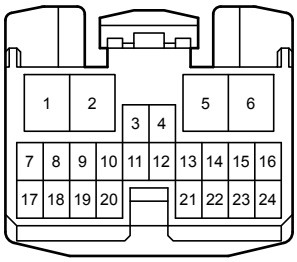

c 4
White

c 5
White

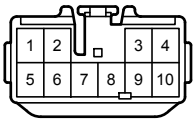

c 6
Black

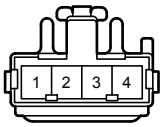

c 7
Black



c 8
Black

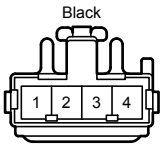

c 10
Black



c 11
Black

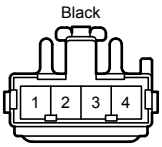

c 12
White



c 13
White

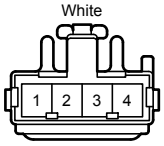

c 14
Black

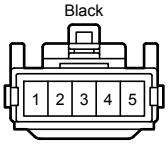

c 16
White



c 18
Black

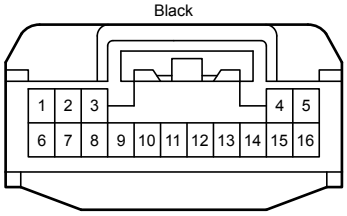

c 20
White

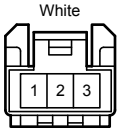

c 21
White

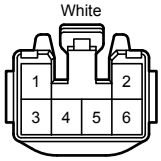

c 22
White

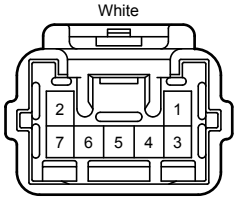

c 23
Black



c 24
Green



c 25
Green

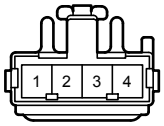

c 26
Gray

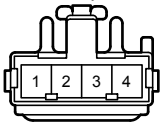

c 27
White

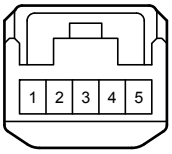

c 28
Blue

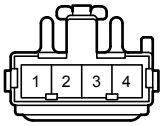

c 29
Yellow

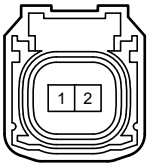

c 31
White

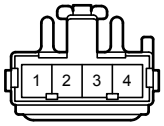

c 32
White

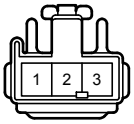

c 33
Black

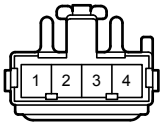

c 34
Black

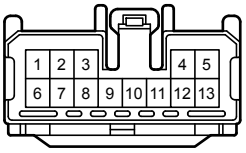
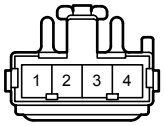
c 35
Black