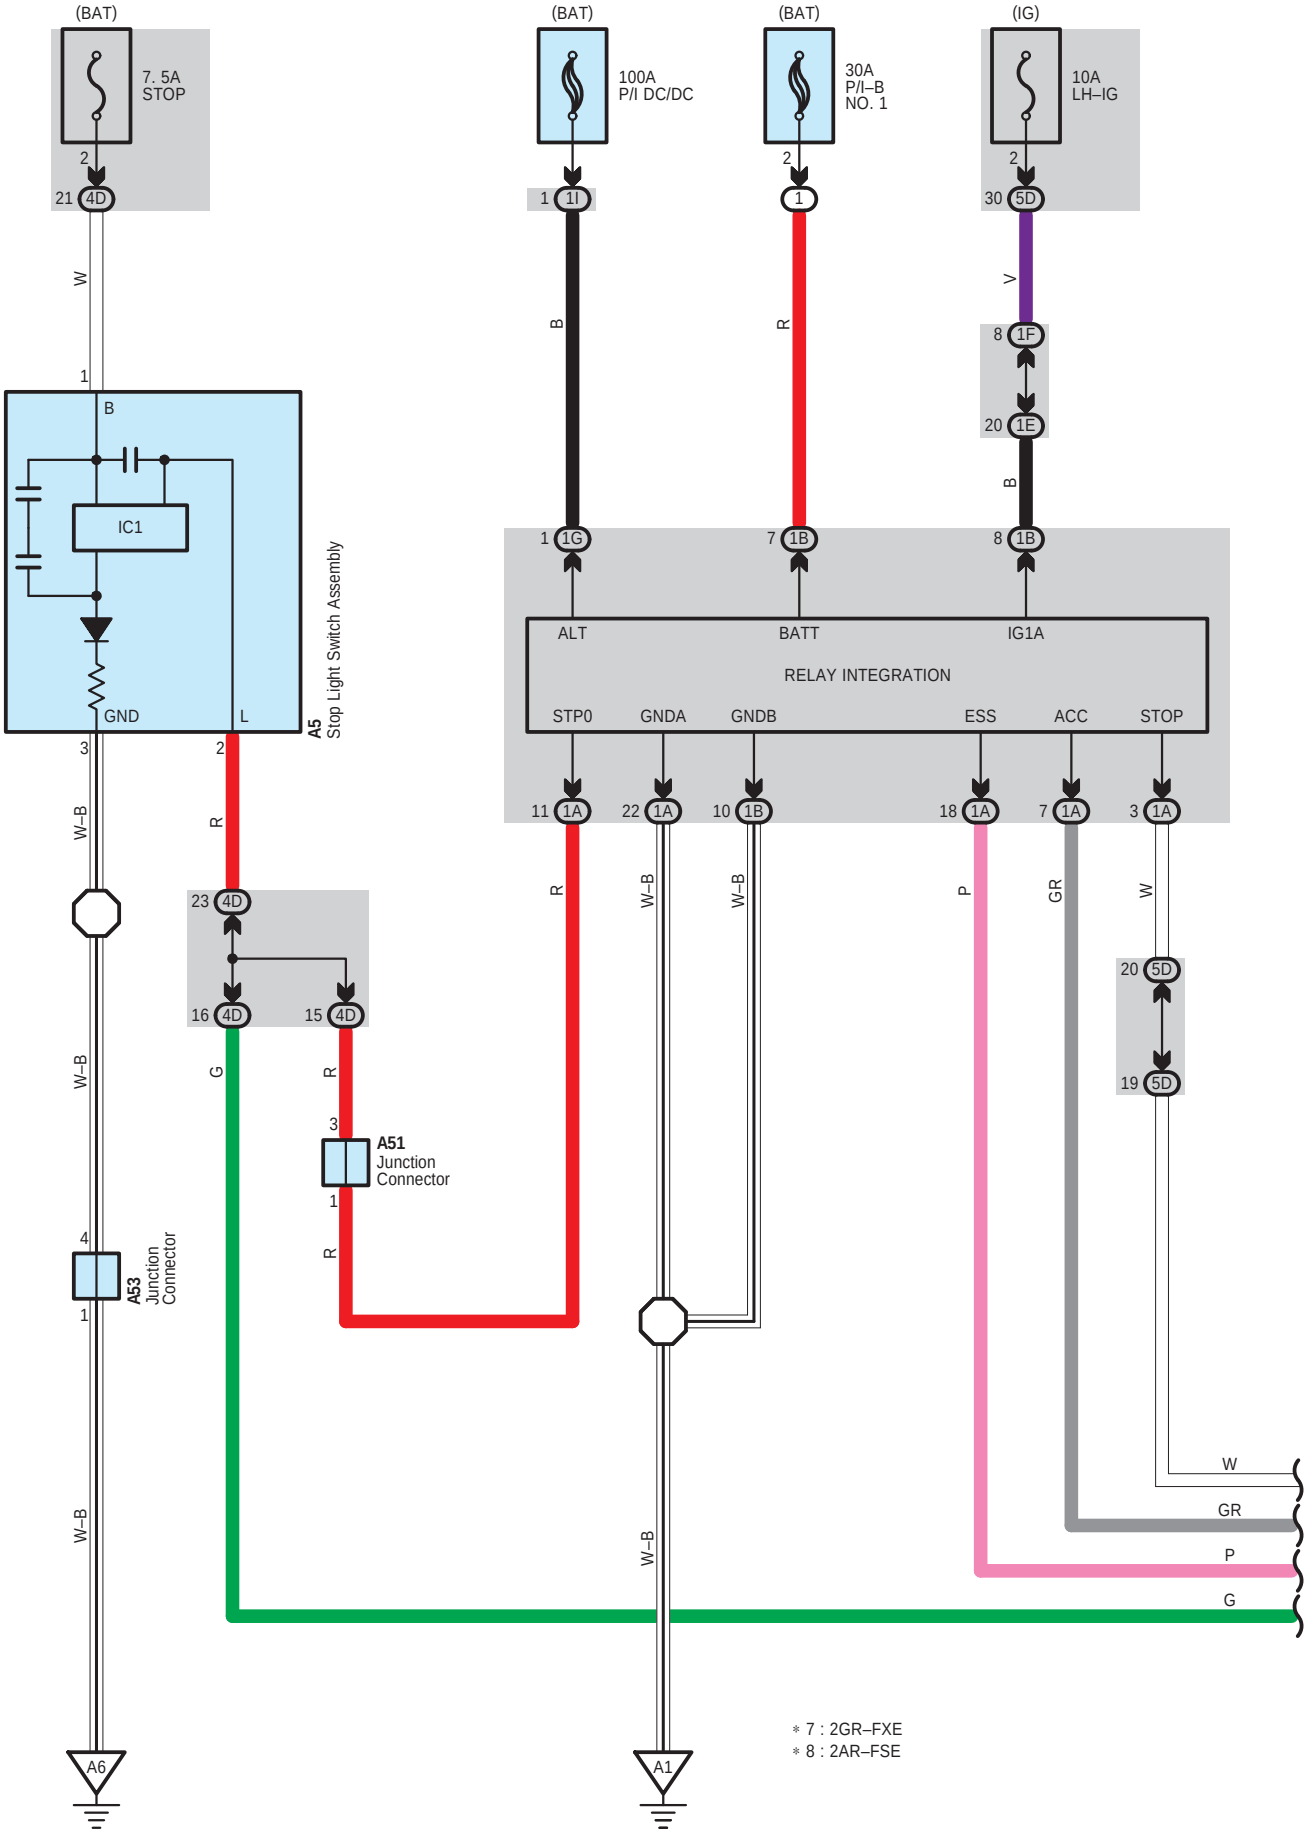
(BAT)
7. 5A
STOP
2
21 4D
W
1
B
IC1
GND
L
3
2
A5
Stop Light Switch Assembly
W–B
R
23 4D
16 4D
15 4D
G
R
3
A51
Junction
Connector
1
R
4
A53
Junction
Connector
1
W–B
W–B
A6
(BAT)
100A
P/I DC/DC
1 1I
B
1 1G
(BAT)
30A
P/I–B
NO. 1
2
1
R
7 1B
(IG)
10A
LH–IG
2
30 5D
V
8 1F
20 1E
B
8 1B
ALT
BATT
IG1A
RELAY INTEGRATION
STP0
GNDA
GNDB
ESS
ACC
STOP
11 1A
22 1A
10 1B
18 1A
7 1A
3 1A
R
W–B
W–B
P
GR
W
20 5D
19 5D
W–B
A1
W
GR
P
G
∗ 7 : 2GR–FXE
∗ 8 : 2AR–FSE

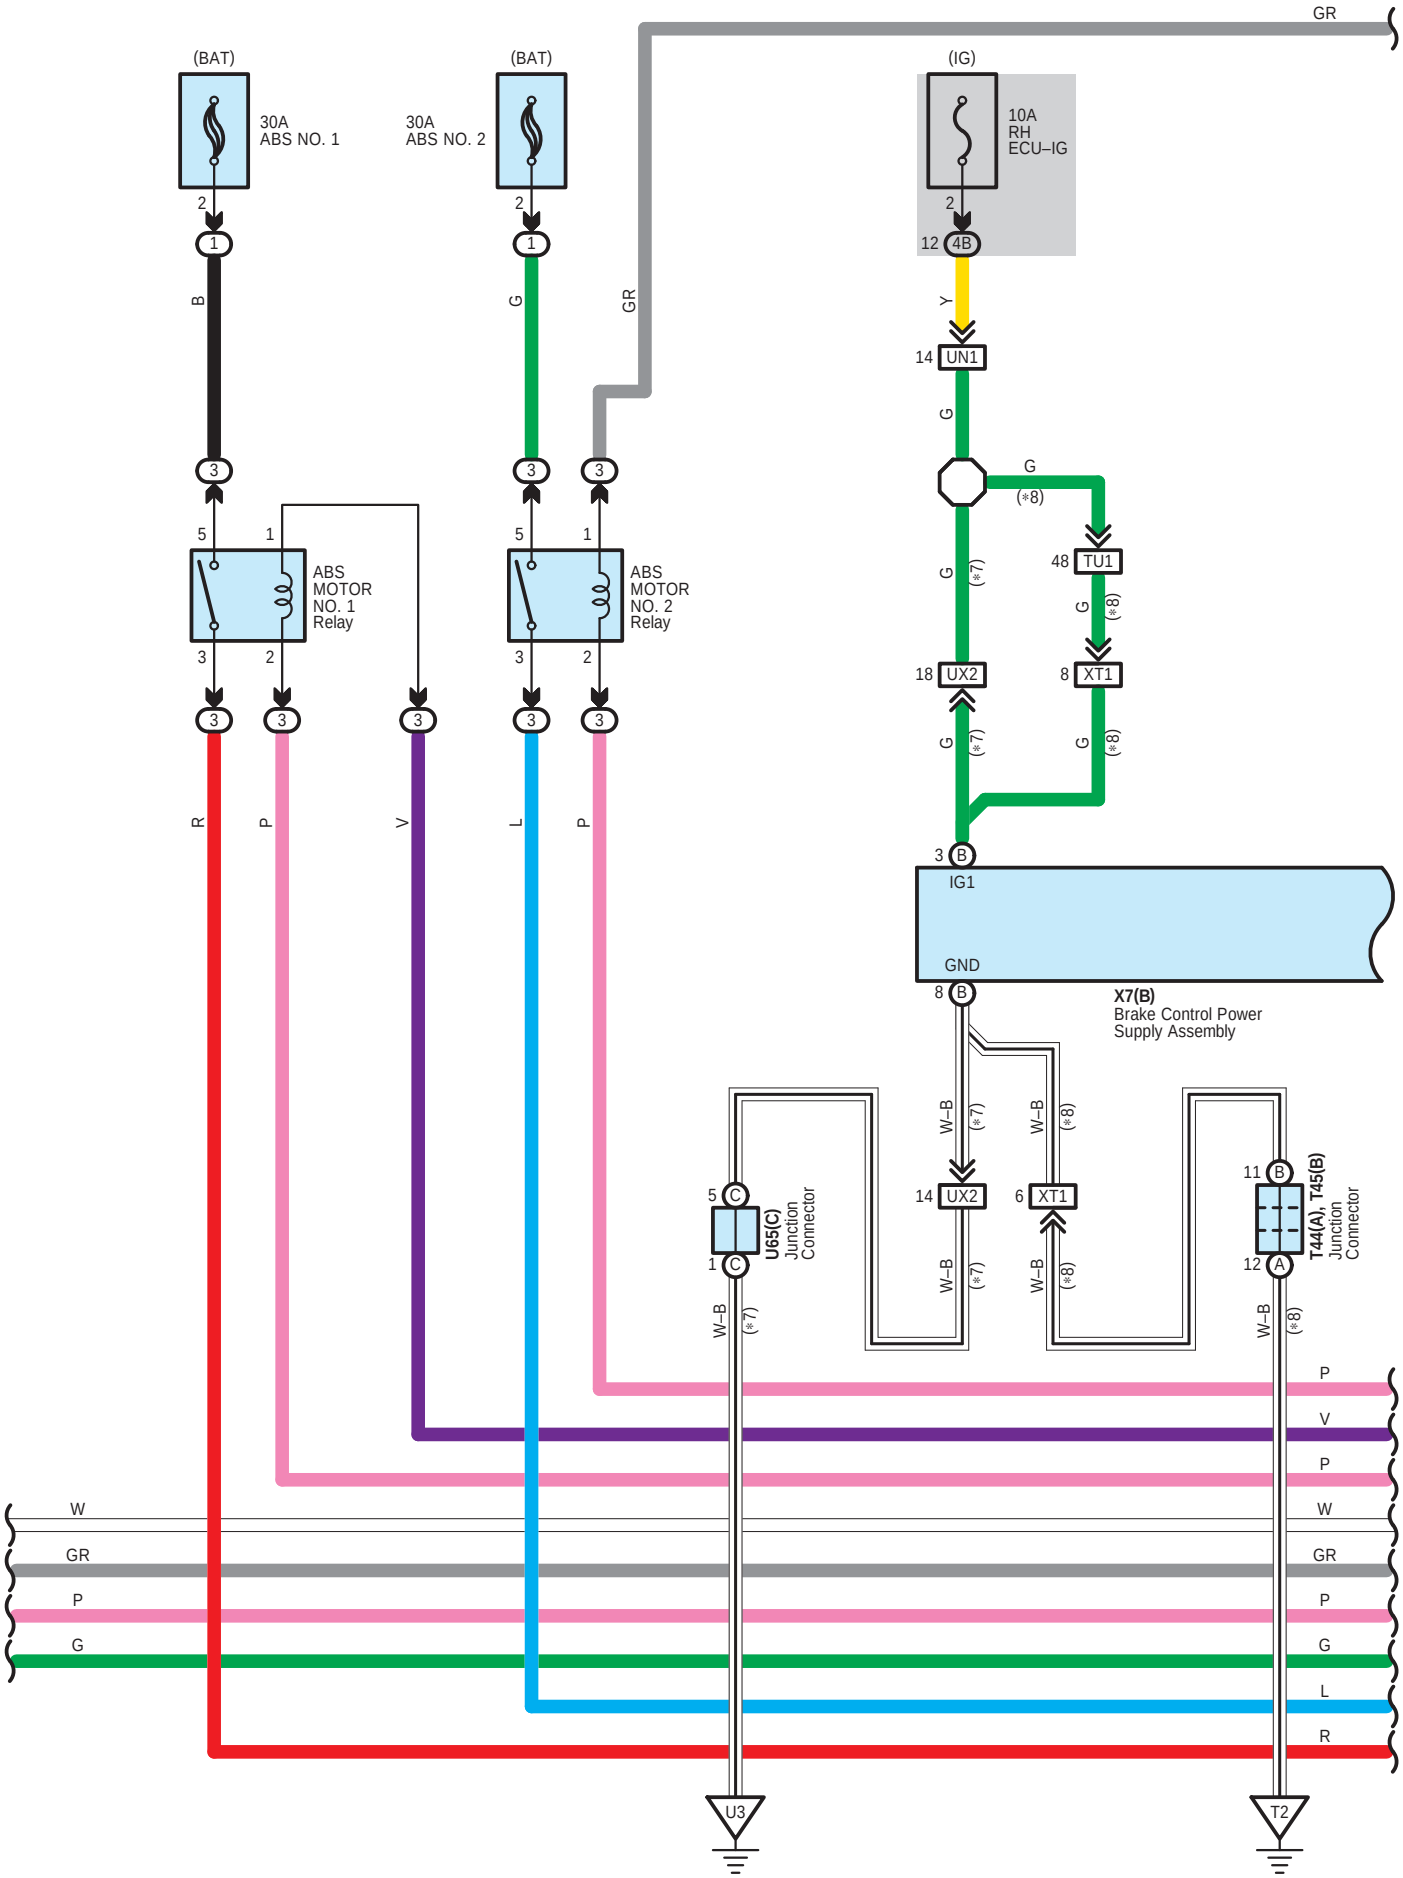
(BAT)
30A
ABS NO. 1
(BAT)
30A
ABS NO. 2
(IG)
10A
RH
ECU–IG
GR
ABS
MOTOR
NO. 1
Relay
ABS
MOTOR
NO. 2
Relay
UN1
TU1
UX2
XT1
IG1
GND
X7(B)
Brake Control Power
Supply Assembly
U65(C)
Junction
Connector
T44(A), T45(B)
Junction
Connector
U3
T2

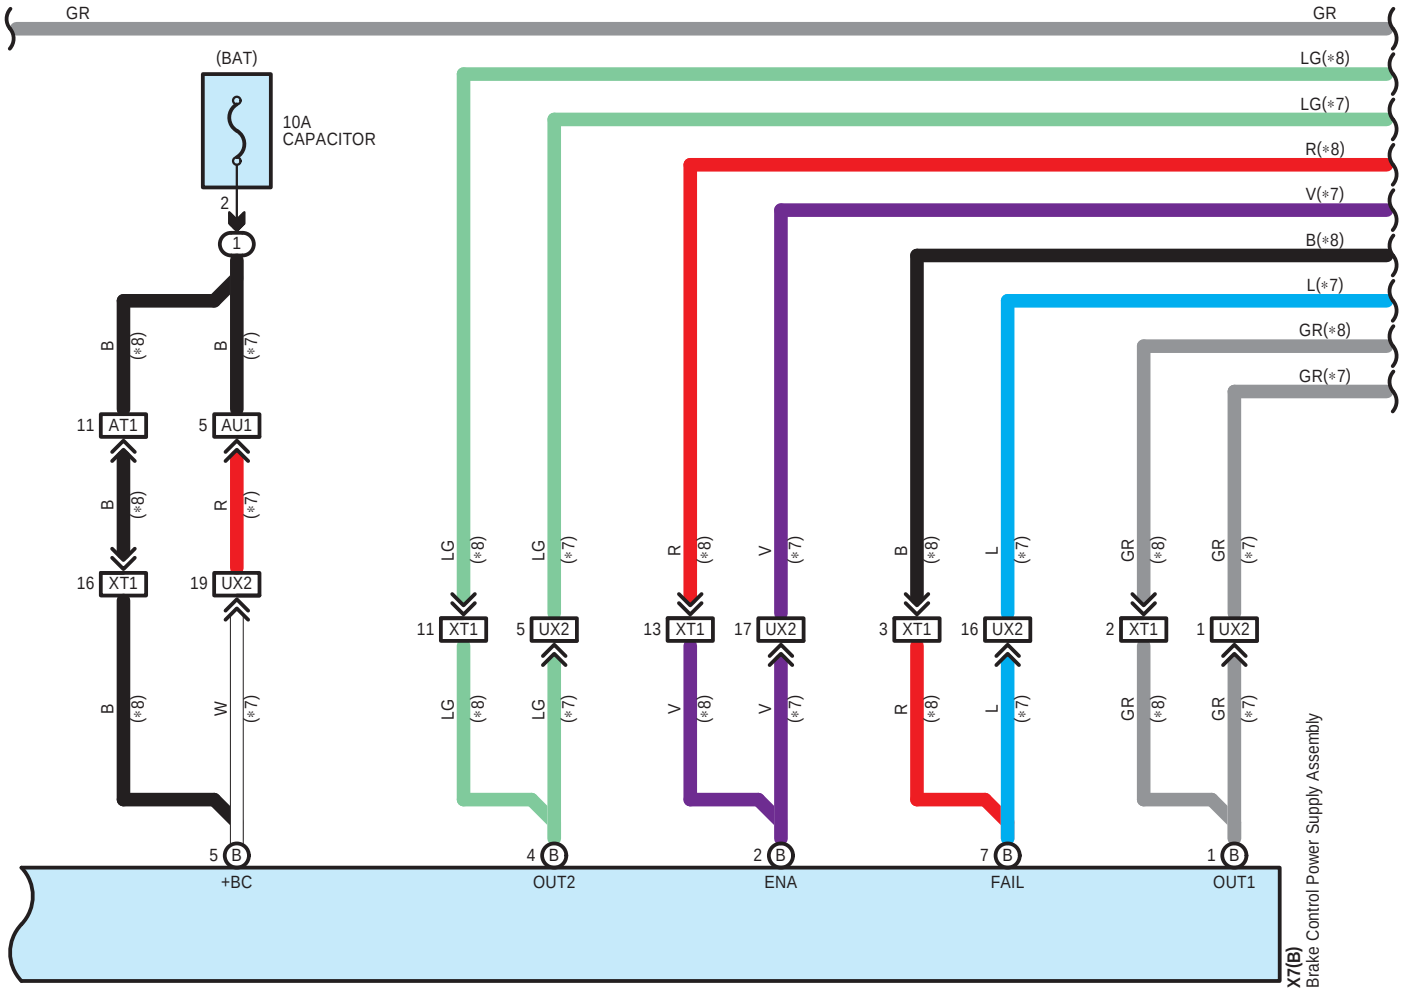

∗ 7 : 2GR–FXE
∗ 8 : 2AR–FSE

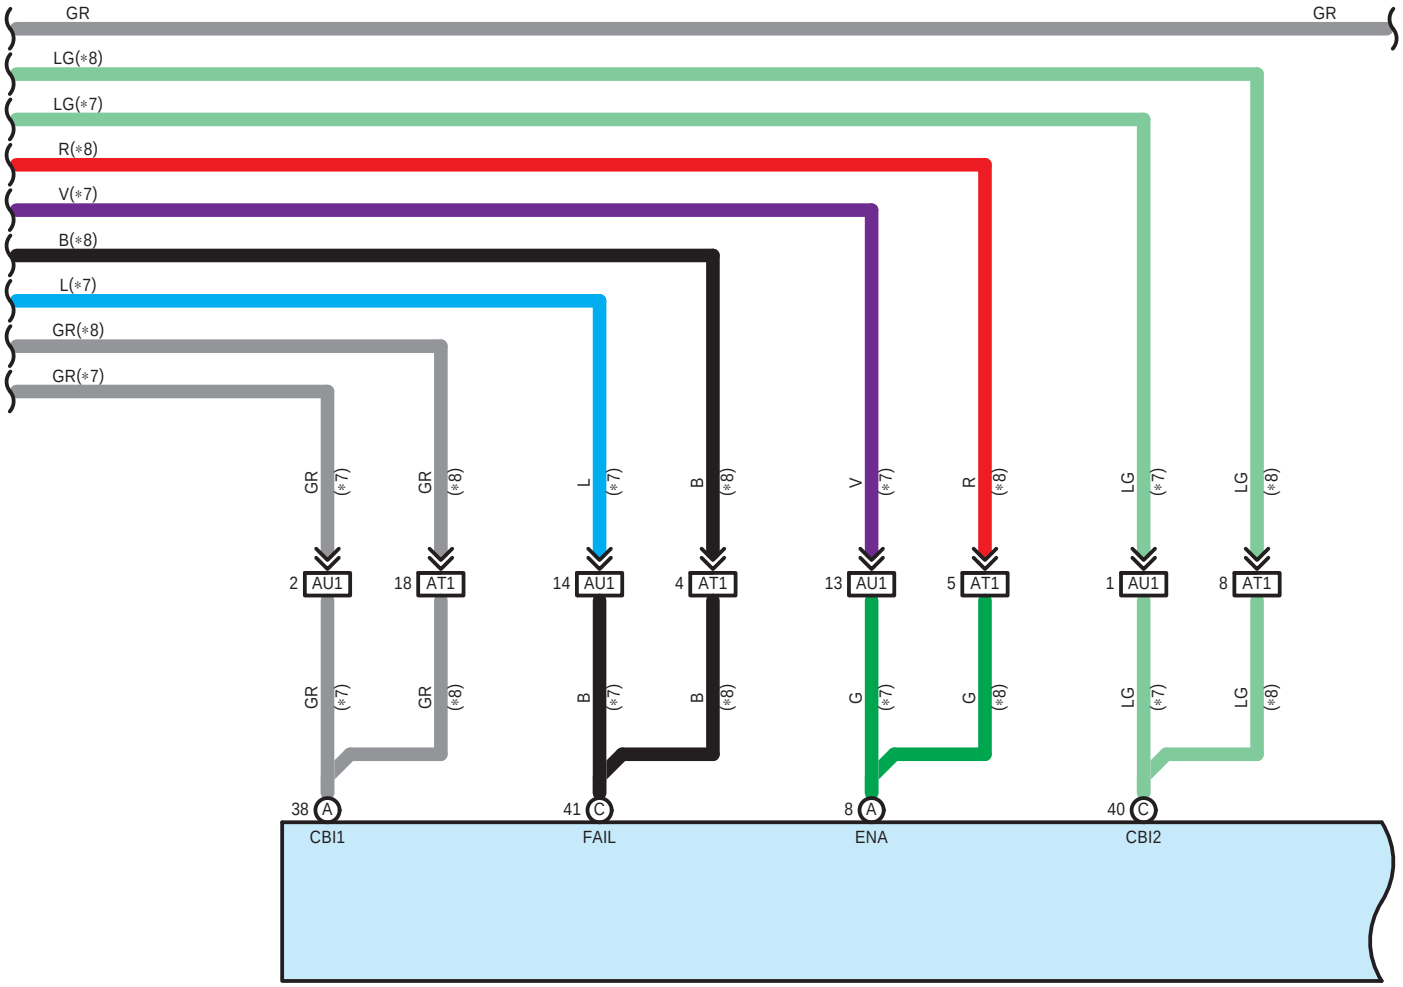

A14(A), A15(B), A16(C)
Skid Control ECU Assembly

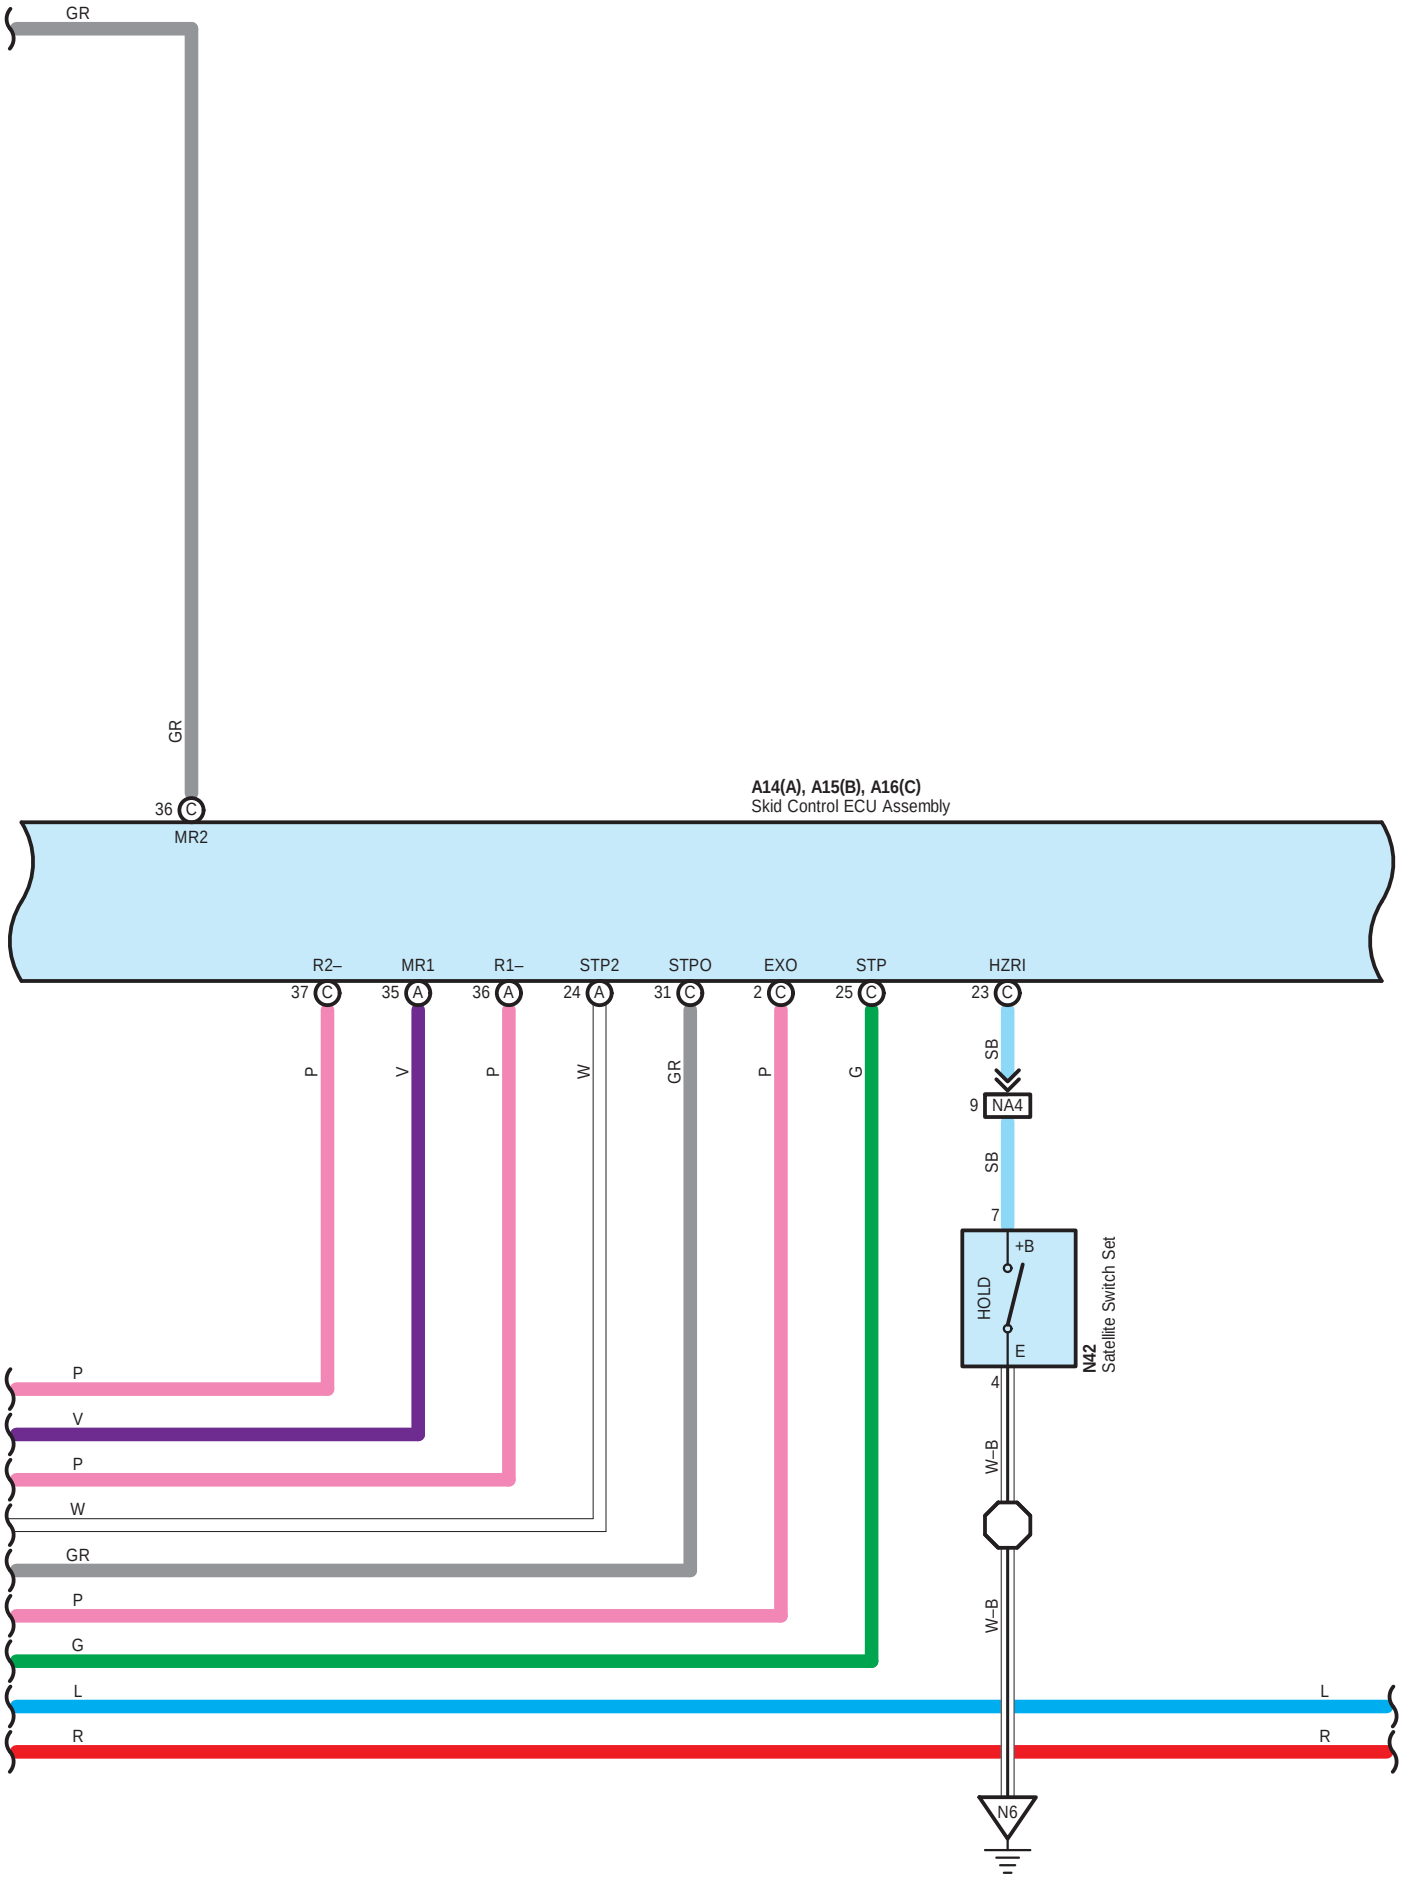
GR
GR
36 C
MR2
A14(A), A15(B), A16(C)
Skid Control ECU Assembly
R2–
MR1
R1–
STP2
STPO
EXO
STP
HZRI
37 C
35 A
36 A
24 A
31 C
2 C
25 C
23 C
P
V
P
W
GR
P
G
SB
9 NA4
SB
7
+B
HOLD
E
N42
Satellite Switch Set
4
W–B
W–B
P
V
P
W
GR
P
G
L
R
L
R
N6

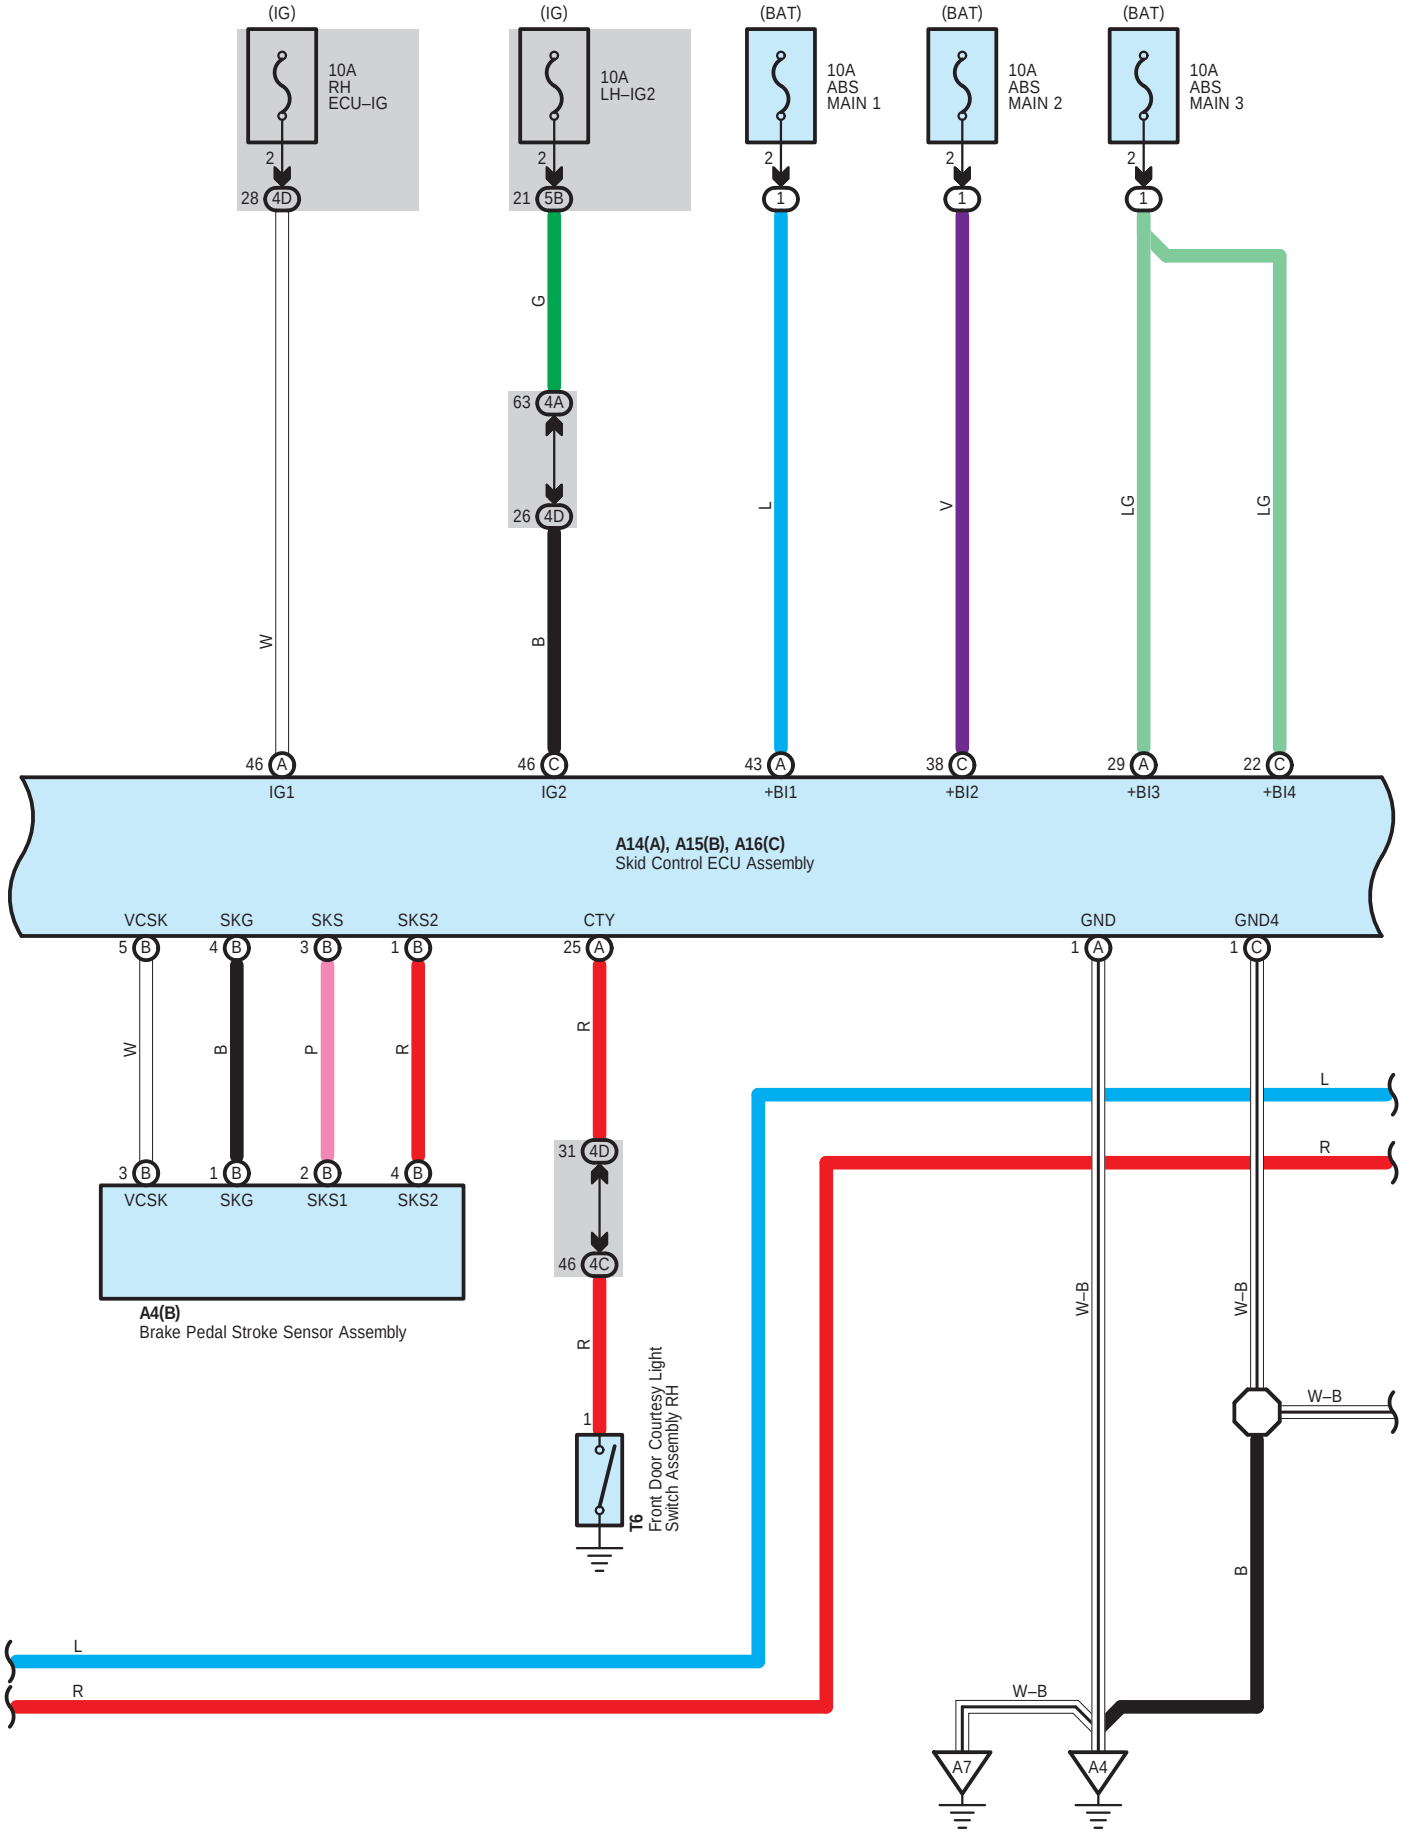
(IG)
10A
RH
ECU–IG
(IG)
10A
LH–IG2
(BAT)
10A
ABS
MAIN 1
(BAT)
10A
ABS
MAIN 2
(BAT)
10A
ABS
MAIN 3
28 4D
21 5B
63 4A
26 4D
W
G
B
L
V
LG
LG
46 A
IG1
46 C
IG2
43 A
+BI1
38 C
+BI2
29 A
+BI3
22 C
+BI4
A14(A), A15(B), A16(C)
Skid Control ECU Assembly
VCSK
SKG
SKS
SKS2
CTY
GND
GND4
5 B
4 B
3 B
1 B
25 A
1 A
1 C
W
B
P
R
R
L
R
3 B
1 B
2 B
4 B
VCSK
SKG
SKS1
SKS2
A4(B)
Brake Pedal Stroke Sensor Assembly
31 4D
46 4C
R
1
T6
Front Door Courtesy Light
Switch Assembly RH
W–B
W–B
W–B
B
L
R
W–B
A7
A4

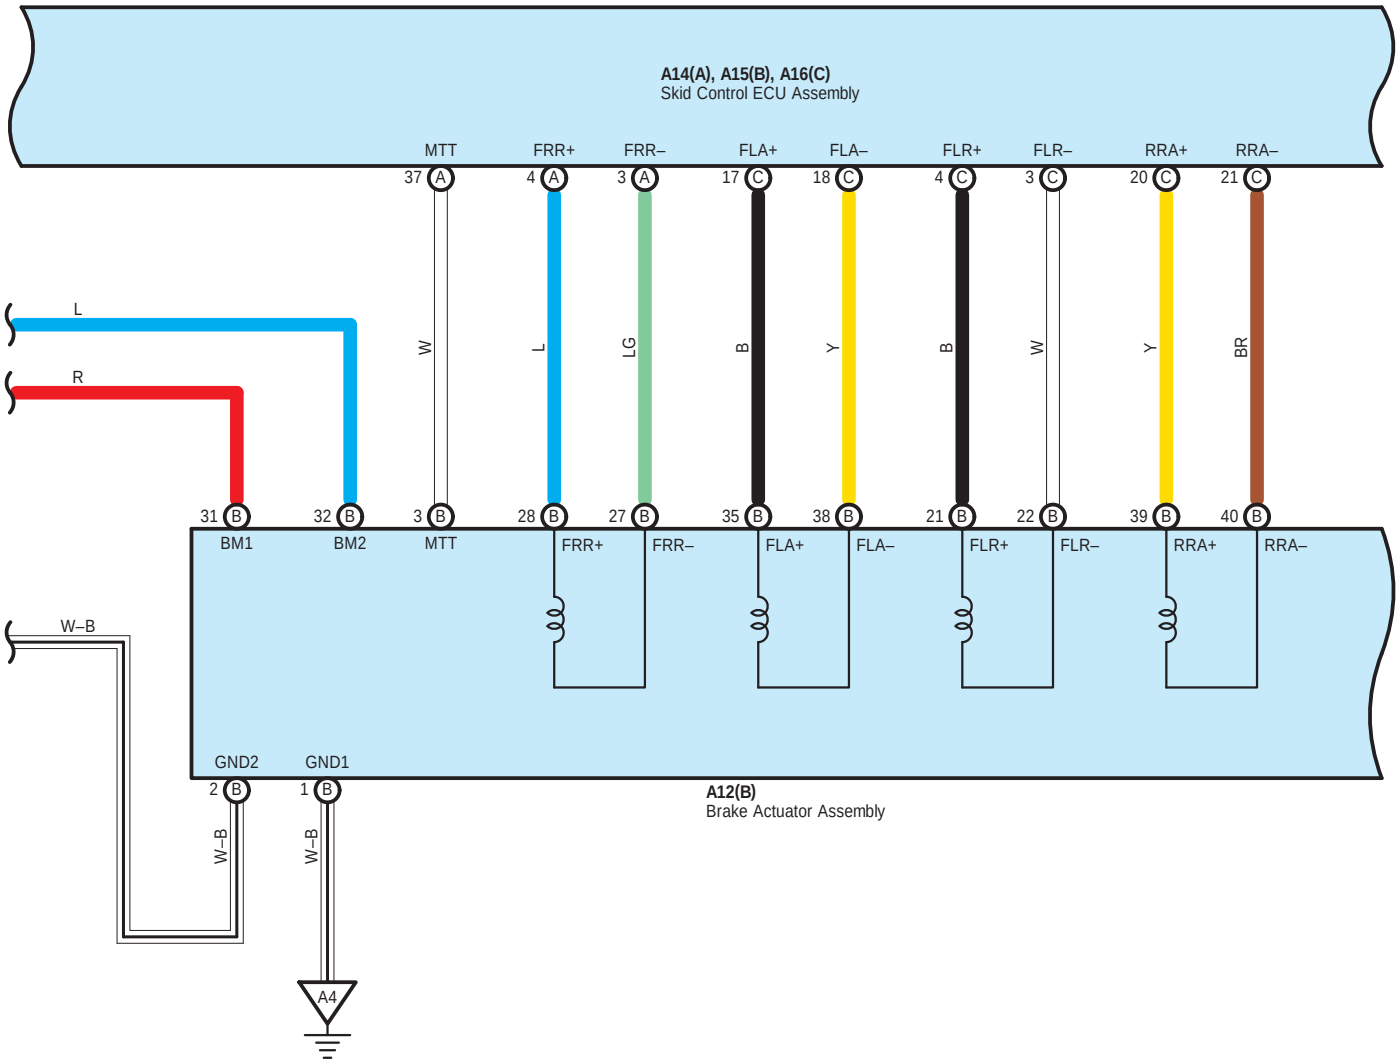
A14(A), A15(B), A16(C)
Skid Control ECU Assembly
MTT
FRR+
FRR–
FLA+
FLA–
FLR+
FLR–
RRA+
RRA–
37 A
4 A
3 A
17 C
18 C
4 C
3 C
20 C
21 C
W
L
LG
B
Y
B
W
Y
BR
L
R
31 B
32 B
3 B
28 B
27 B
35 B
38 B
21 B
22 B
39 B
40 B
BM1
BM2
MTT
FRR+
FRR–
FLA+
FLA–
FLR+
FLR–
RRA+
RRA–
W–B
GND2
GND1
2 B
1 B
W–B
W–B
A12(B)
Brake Actuator Assembly
A4

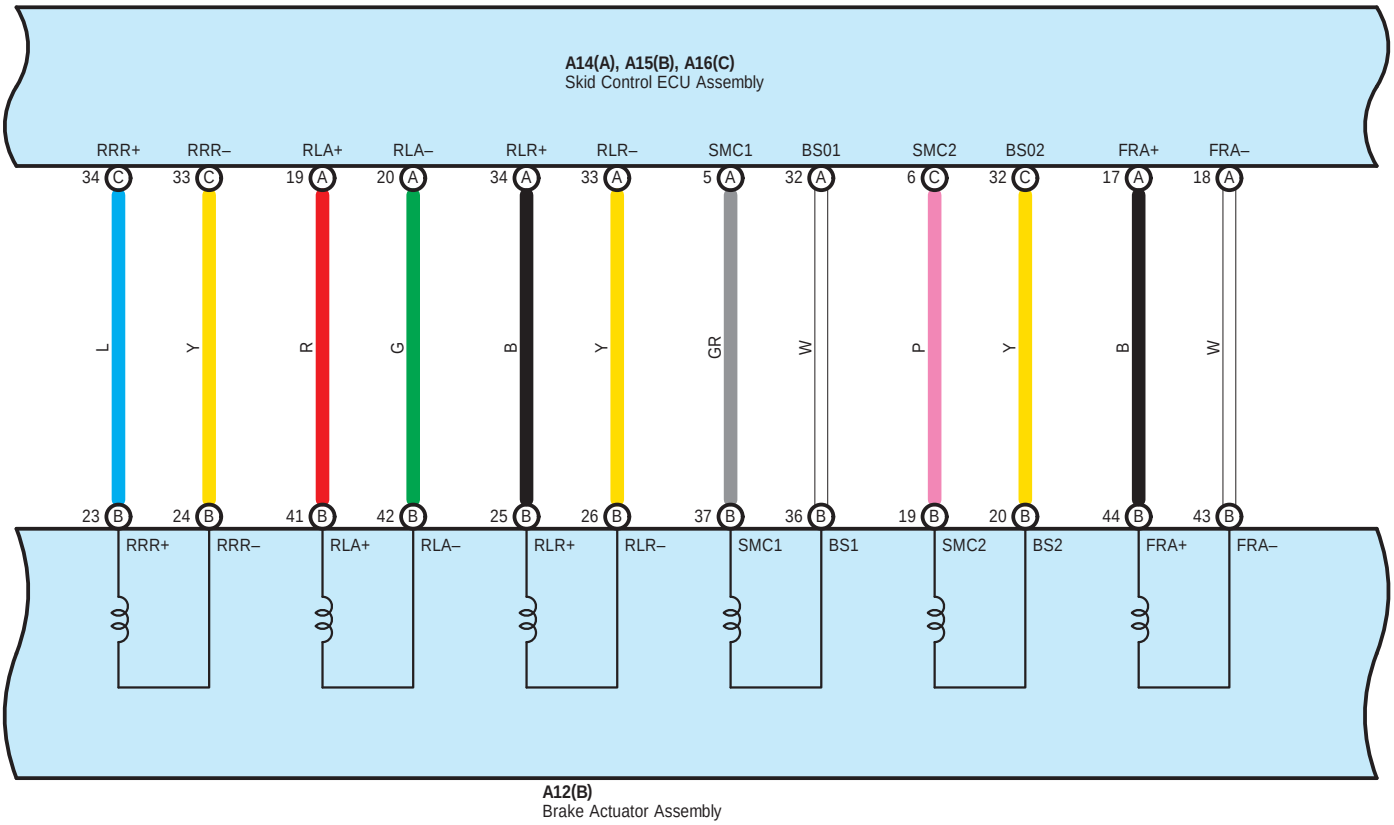
A14(A), A15(B), A16(C)
Skid Control ECU Assembly
RRR+
RRR–
RLA+
RLA–
RLR+
RLR–
SMC1
BS01
SMC2
BS02
FRA+
FRA–
34 C
33 C
19 A
20 A
34 A
33 A
5 A
32 A
6 C
32 C
17 A
18 A
L
Y
R
G
B
Y
GR
W
P
Y
B
W
23 B
24 B
41 B
42 B
25 B
26 B
37 B
36 B
19 B
20 B
44 B
43 B
RRR+
RRR–
RLA+
RLA–
RLR+
RLR–
SMC1
BS1
SMC2
BS2
FRA+
FRA–
A12(B)
Brake Actuator Assembly

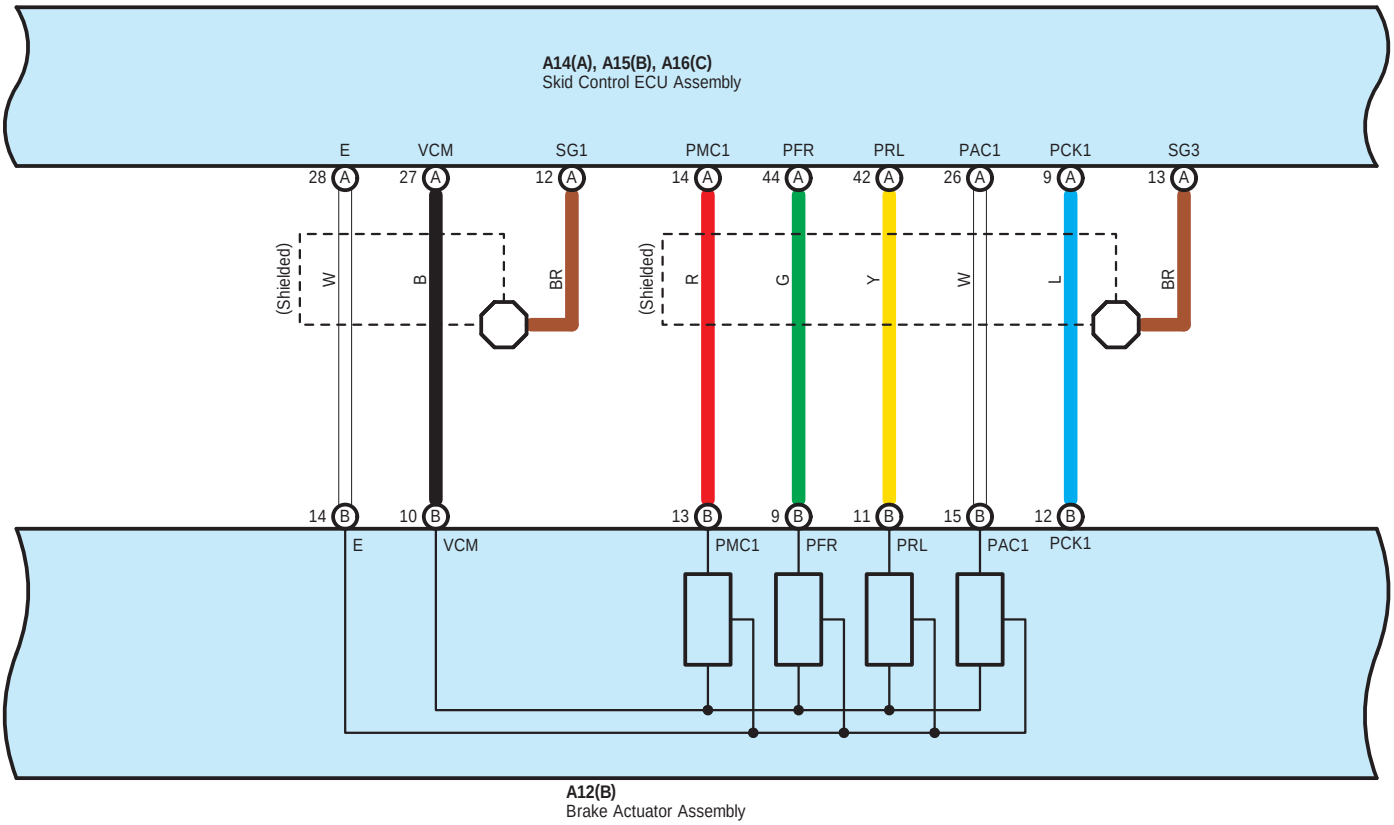
A14(A), A15(B), A16(C)
Skid Control ECU Assembly
E
VCM
SG1
PMC1
PFR
PRL
PAC1
PCK1
SG3
28 A
27 A
12 A
14 A
44 A
42 A
26 A
9 A
13 A
(Shielded)
W
B
BR
(Shielded)
R
G
Y
W
L
BR
14 B
10 B
13 B
9 B
11 B
15 B
12 B
E
VCM
PMC1
PFR
PRL
PAC1
PCK1
A12(B)
Brake Actuator Assembly

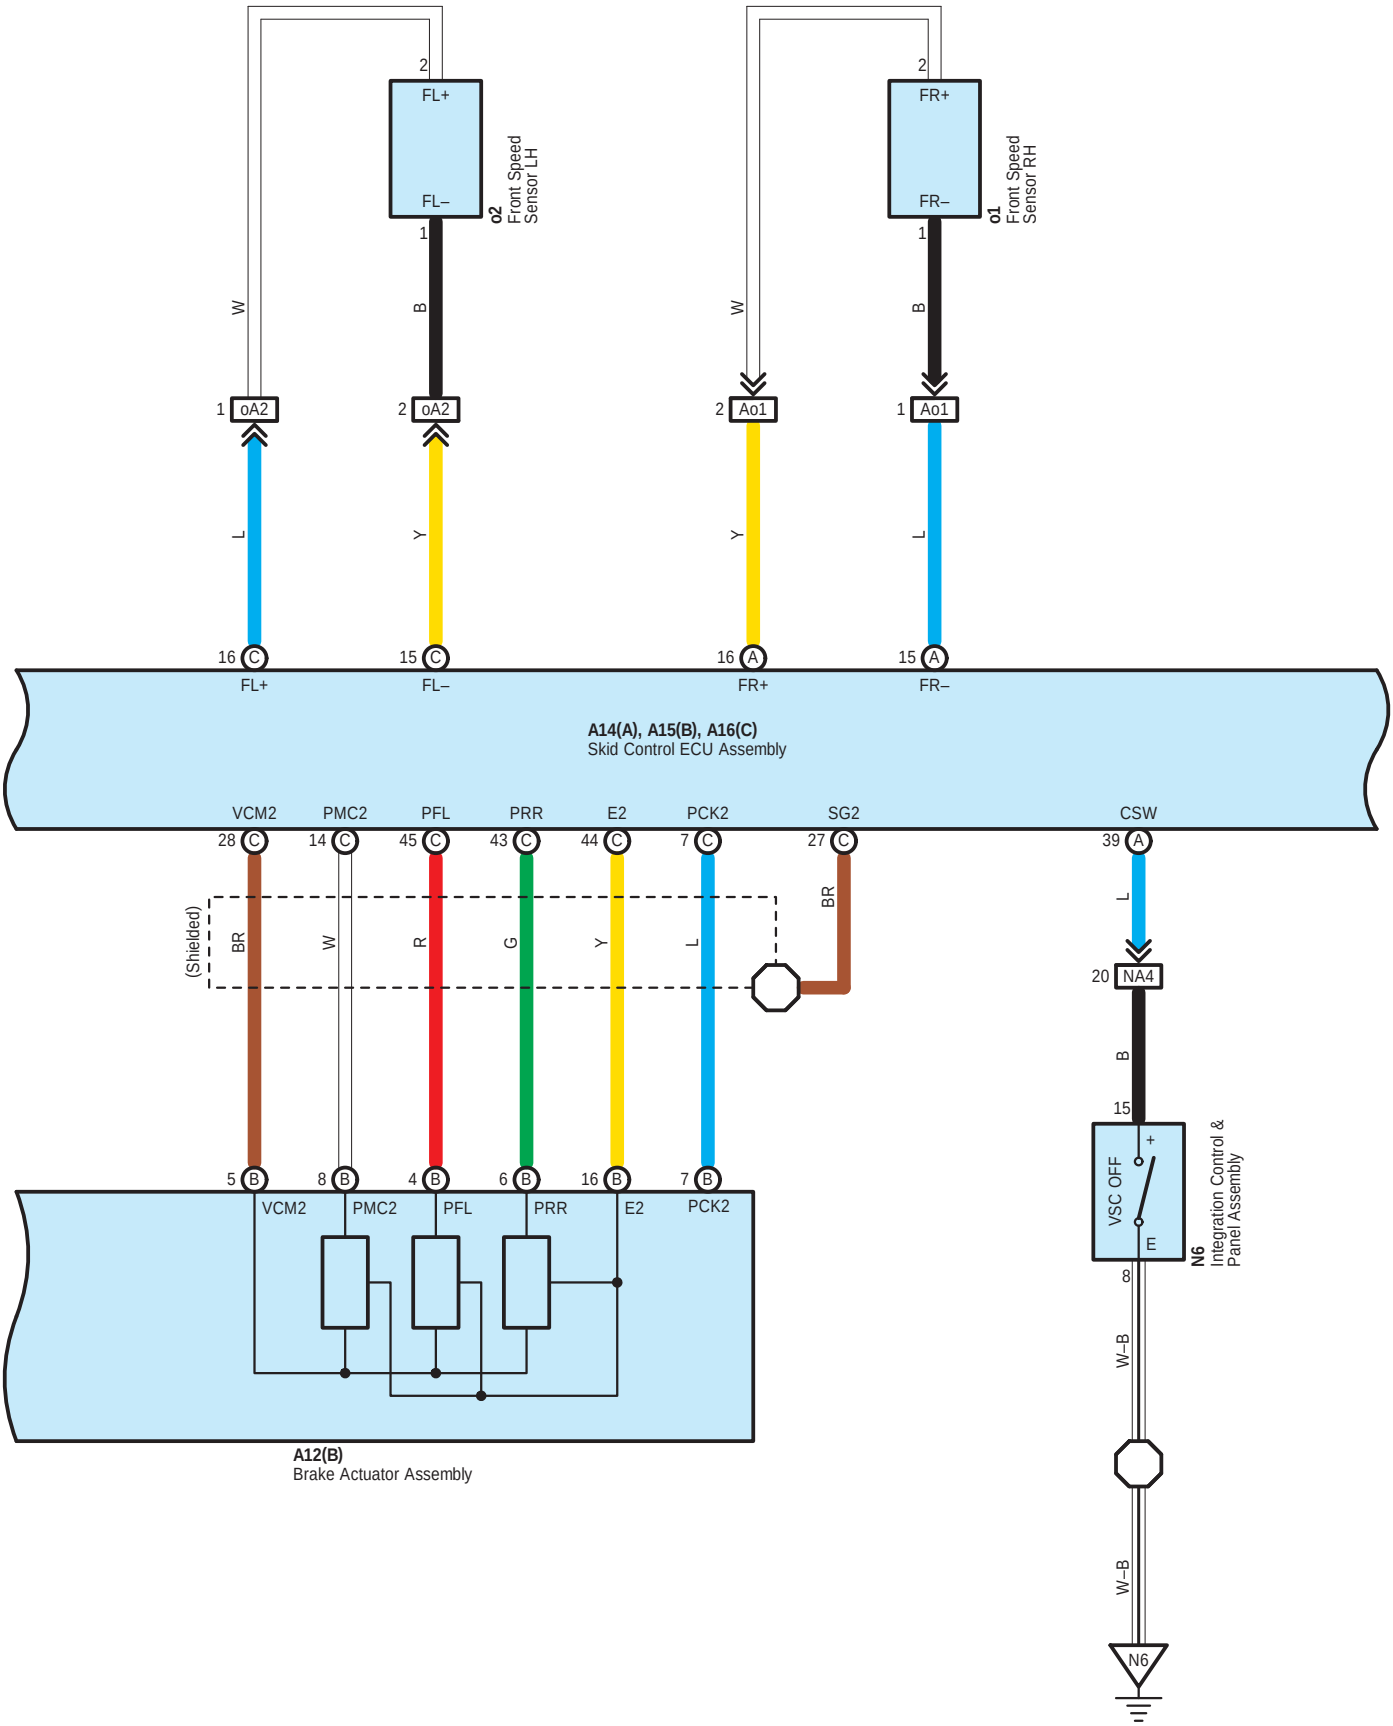
FL+
FL–
o2
Front Speed Sensor LH
FR+
FR–
o1
Front Speed Sensor RH
oA2
Ao1
W
B
L
Y
16 C FL+
15 C FL–
16 A FR+
15 A FR–
A14(A), A15(B), A16(C)
Skid Control ECU Assembly
VCM2
PMC2
PFL
PRR
E2
PCK2
SG2
CSW
(Shielded)
BR
R
G
NA4
VSC OFF
E
N6
Integration Control & Panel Assembly
W–B
A12(B)
Brake Actuator Assembly

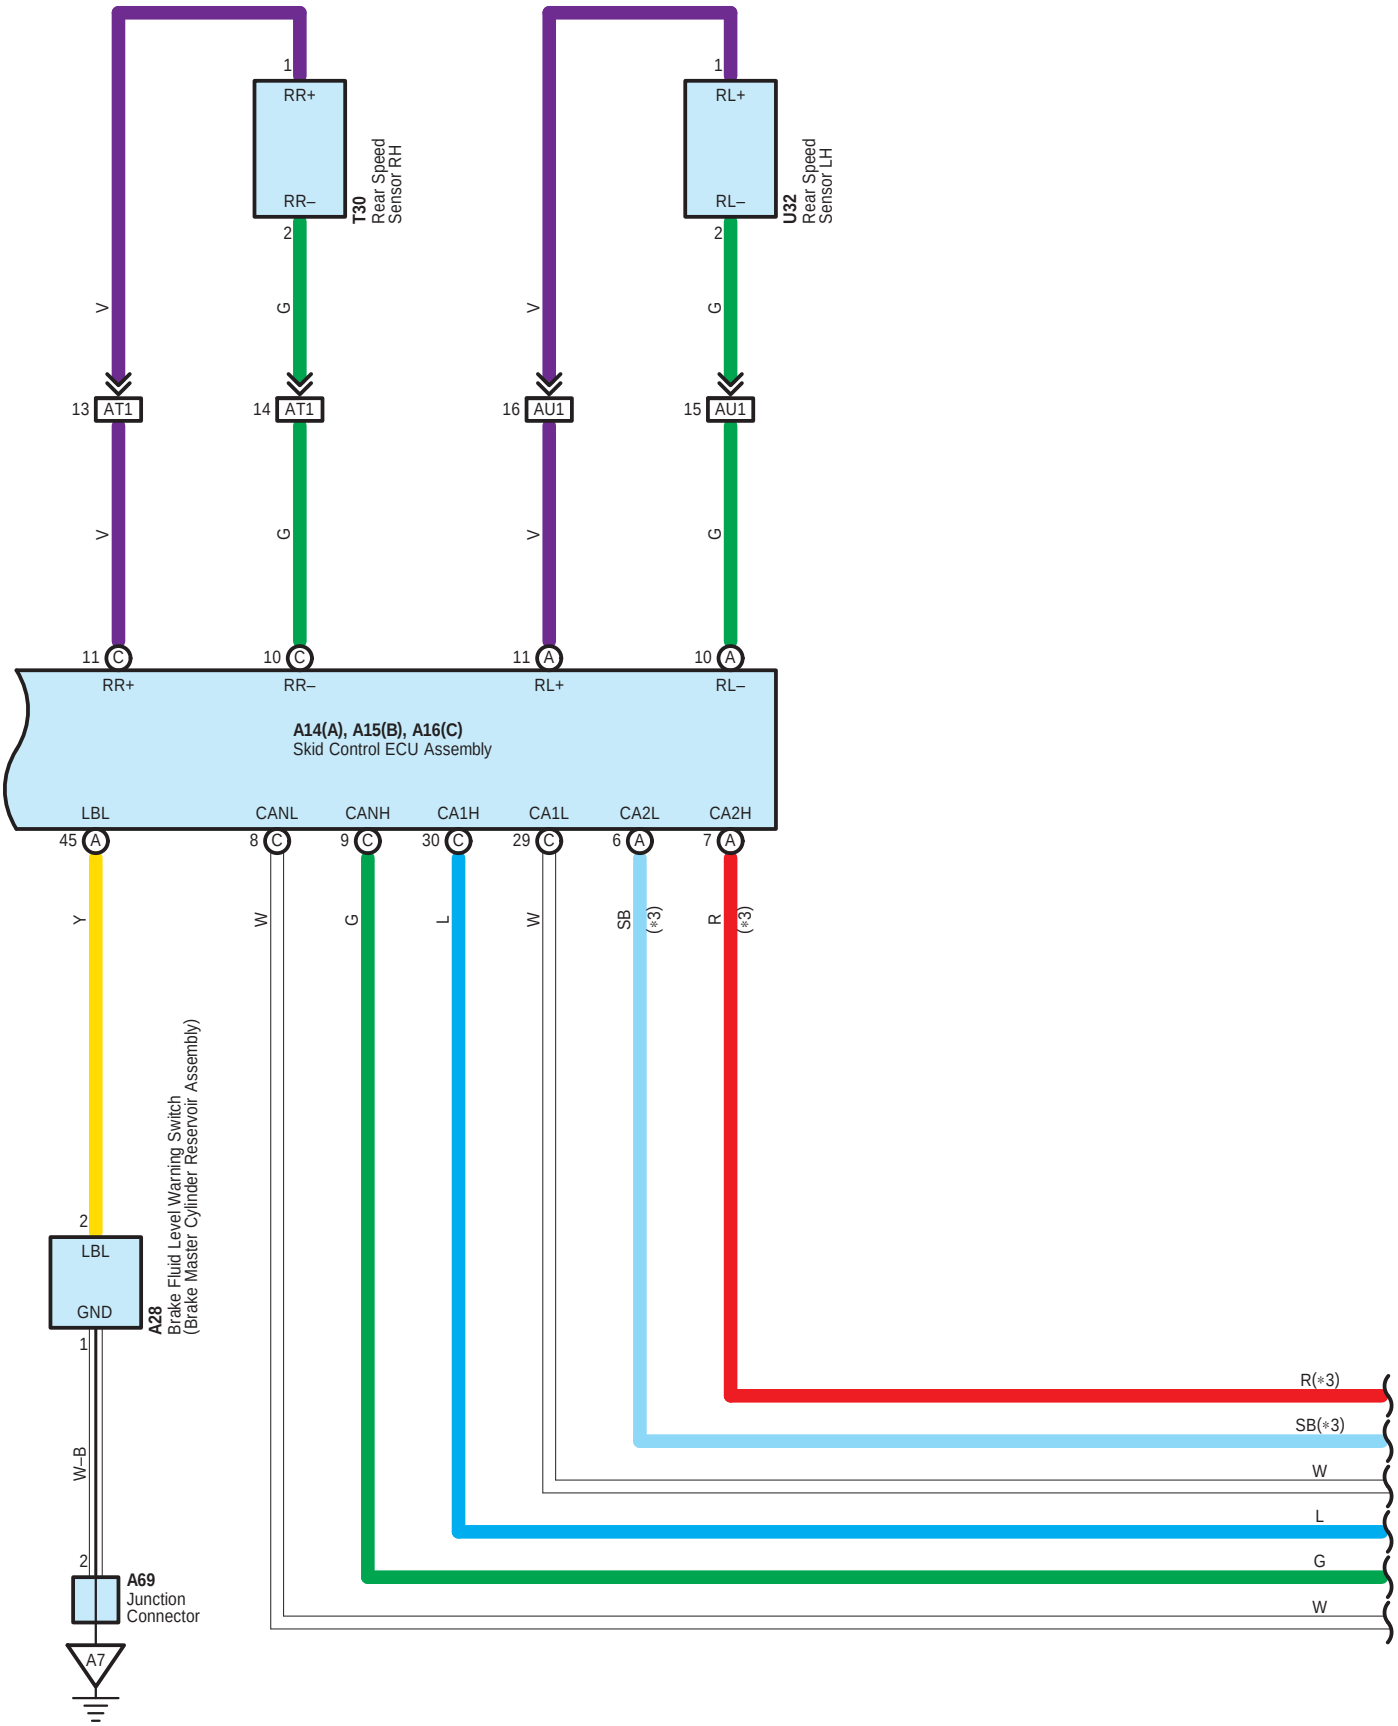
1
RR+
RR–
2
T30
Rear Speed
Sensor RH
1
RL+
RL–
2
U32
Rear Speed
Sensor LH
V
G
V
G
13 AT1
14 AT1
16 AU1
15 AU1
V
G
V
G
11 C
10 C
11 A
10 A
RR+
RR–
RL+
RL–
A14(A), A15(B), A16(C)
Skid Control ECU Assembly
LBL
CANL
CANH
CA1H
CA1L
CA2L
CA2H
45 A
8 C
9 C
30 C
29 C
6 A
7 A
Y
W
G
L
W
SB
(*3)
R
(*3)
2
LBL
GND
1
A28
Brake Fluid Level Warning Switch
(Brake Master Cylinder Reservoir Assembly)
W–B
2
A69
Junction
Connector
A7
R(*3)
SB(*3)
W
L
G
W

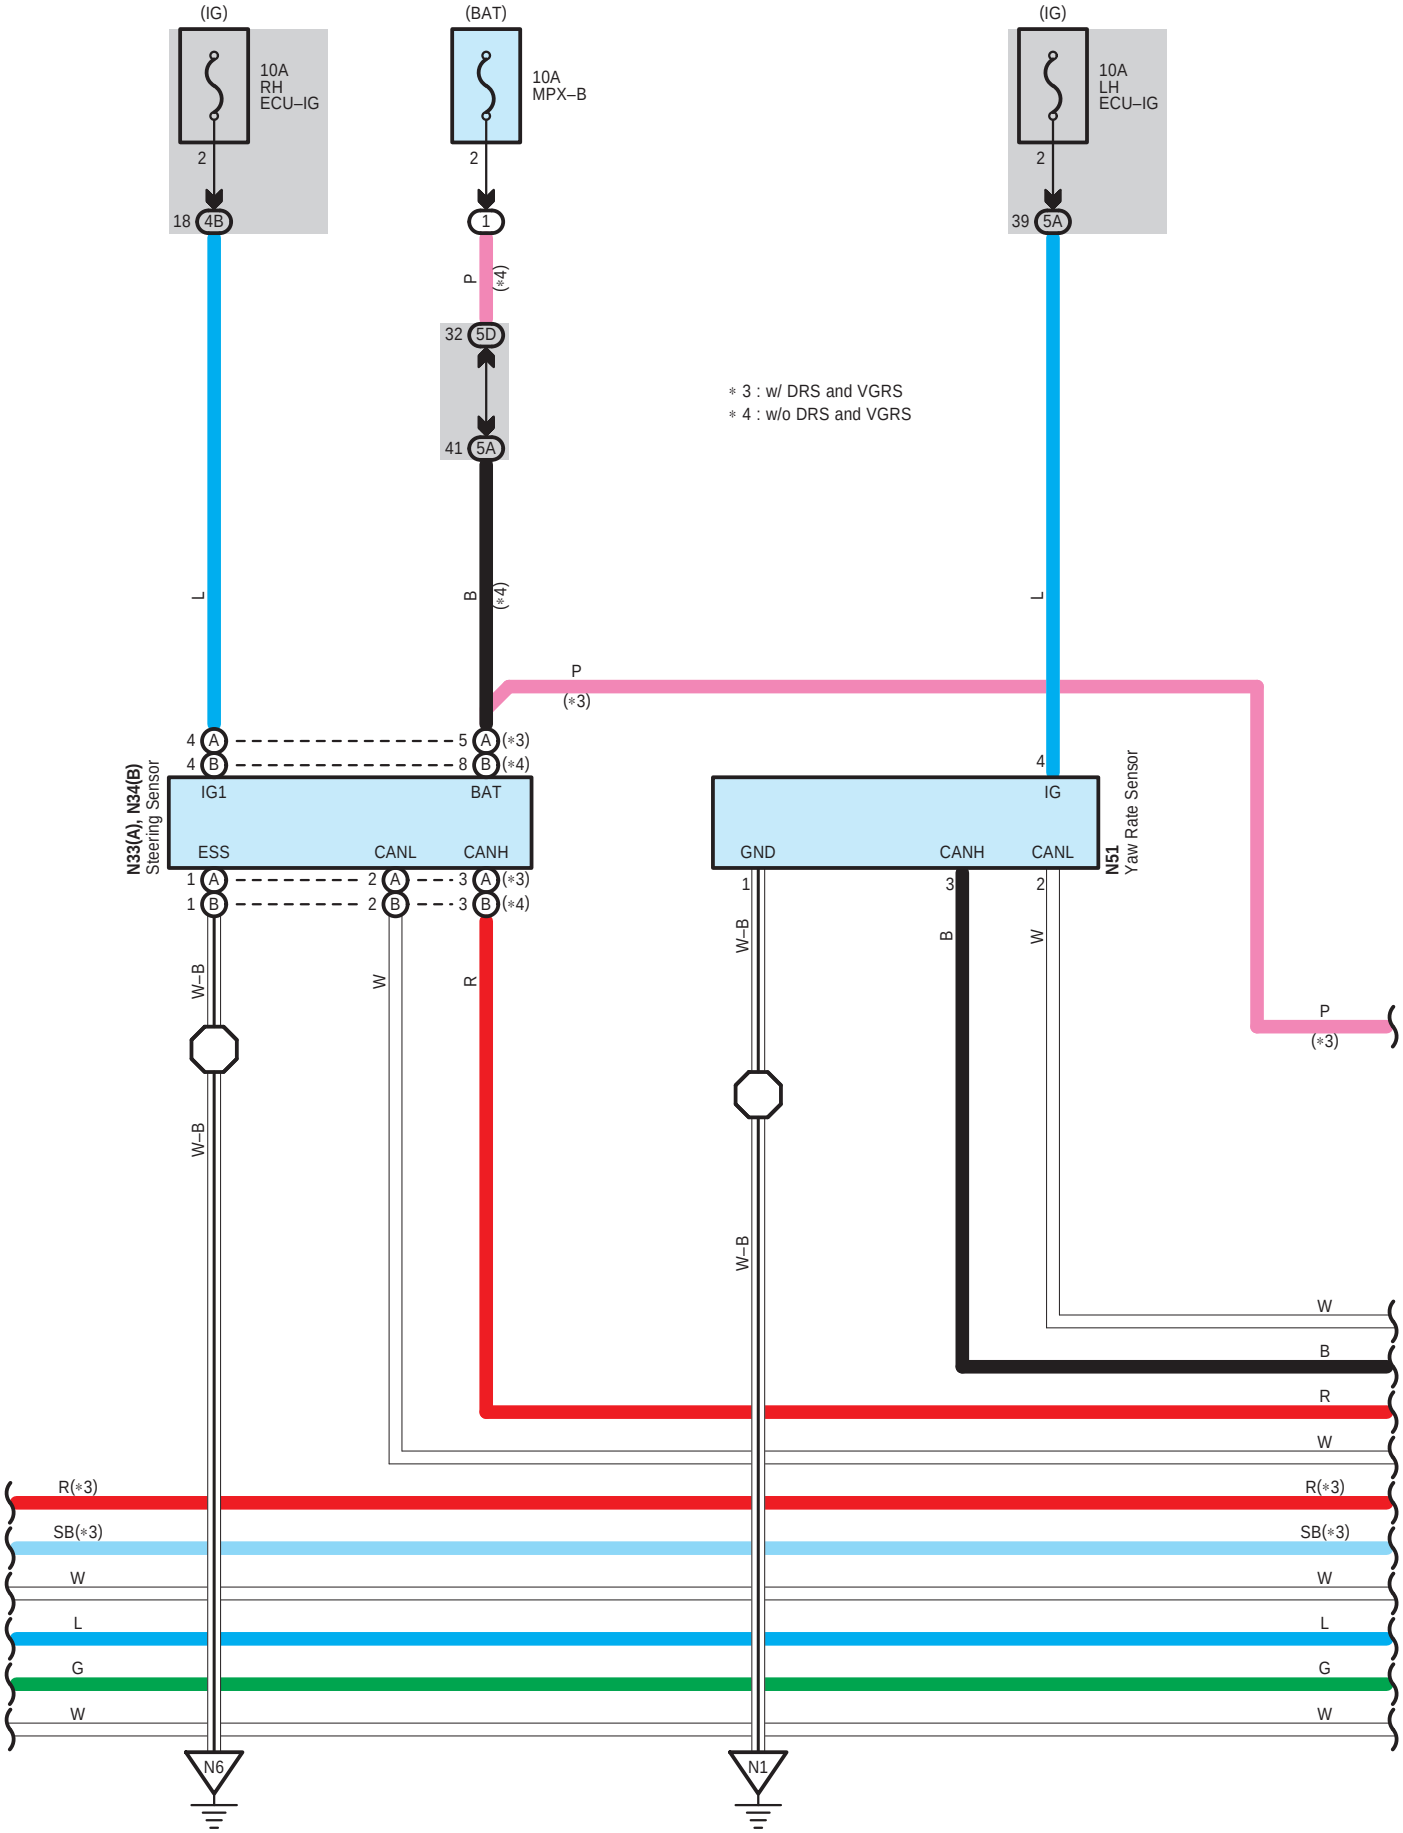
(IG)
10A
RH
ECU–IG
2
18 4B
(BAT)
10A
MPX–B
2
1
P
(*4)
32 5D
41 5A
B
(*4)
(IG)
10A
LH
ECU–IG
2
39 5A
L
L
* 3 : w/ DRS and VGRS
* 4 : w/o DRS and VGRS
P
(*3)
4 A
4 B
5 A (*3)
8 B (*4)
N33(A), N34(B)
Steering Sensor
IG1
BAT
ESS
CANL
CANH
1 A
1 B
2 A
2 B
3 A (*3)
3 B (*4)
W–B
W–B
W
R
4
IG
GND
CANH
CANL
N51
Yaw Rate Sensor
1
3
2
W–B
B
W
W–B
P
(*3)
W
B
R
W
R(*3)
SB(*3)
W
L
G
W
R(*3)
SB(*3)
W
L
G
W
N6
N1

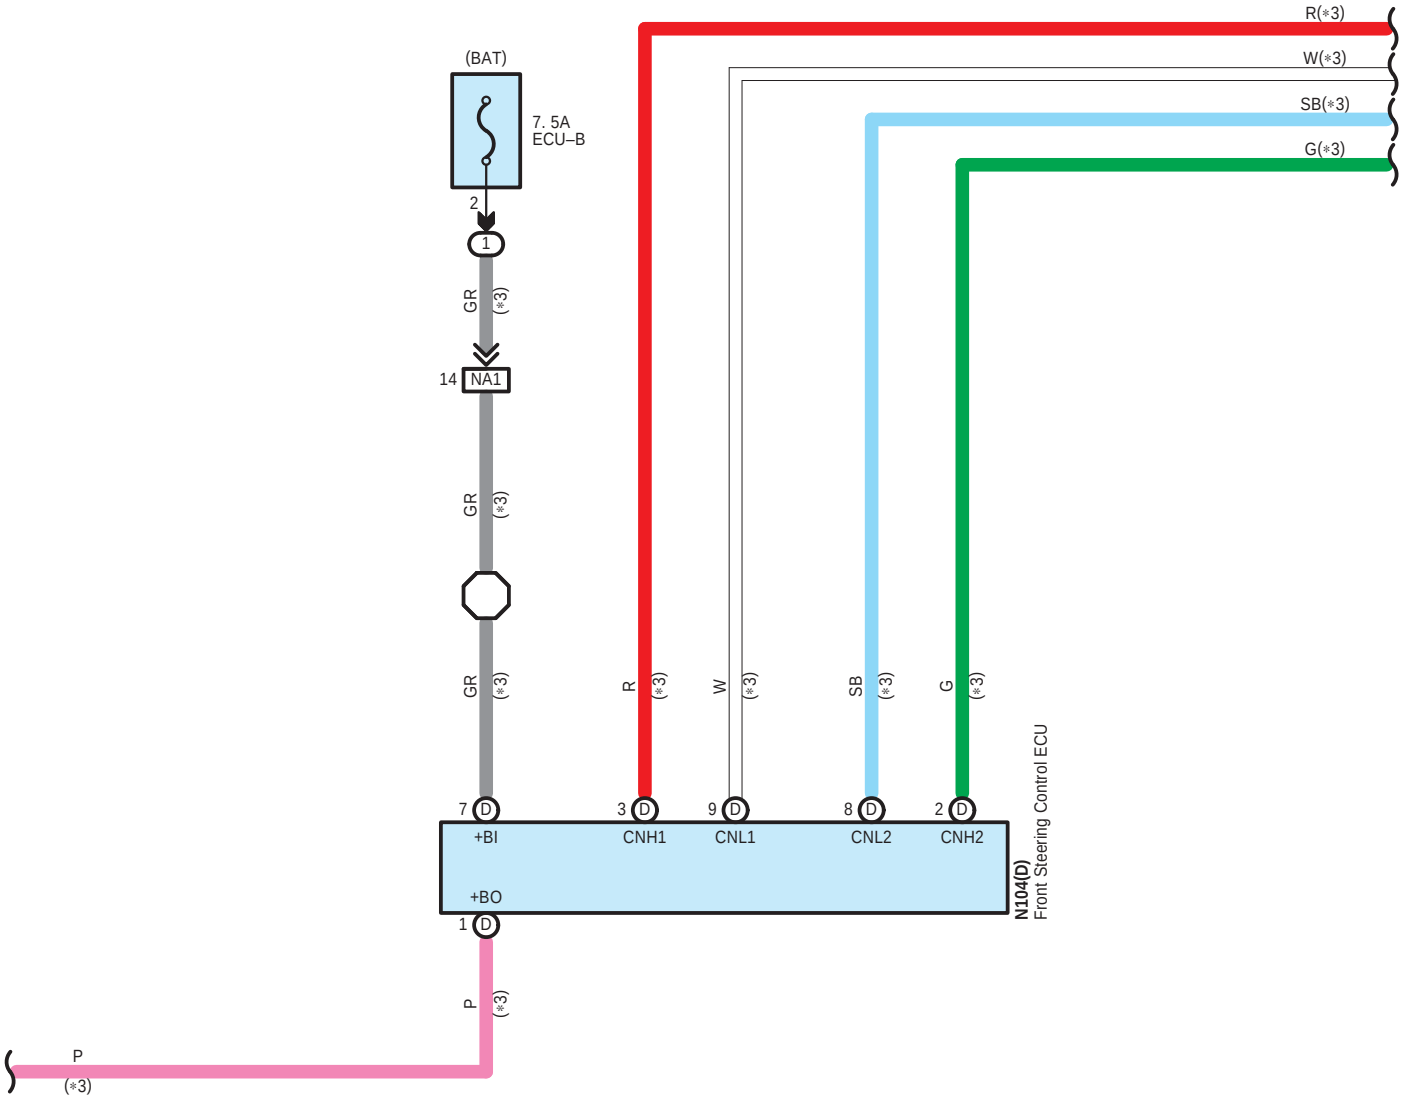
(BAT)
7. 5A
ECU–B
2
1
GR
(*3)
14
NA1
GR
(*3)
GR
(*3)
R
(*3)
W
(*3)
SB
(*3)
G
(*3)
R(*3)
W(*3)
SB(*3)
G(*3)
7
D
+BI
3
D
CNH1
9
D
CNL1
8
D
CNL2
2
D
CNH2
+BO
1
D
N104(D)
Front Steering Control ECU
P
(*3)
P
(*3)

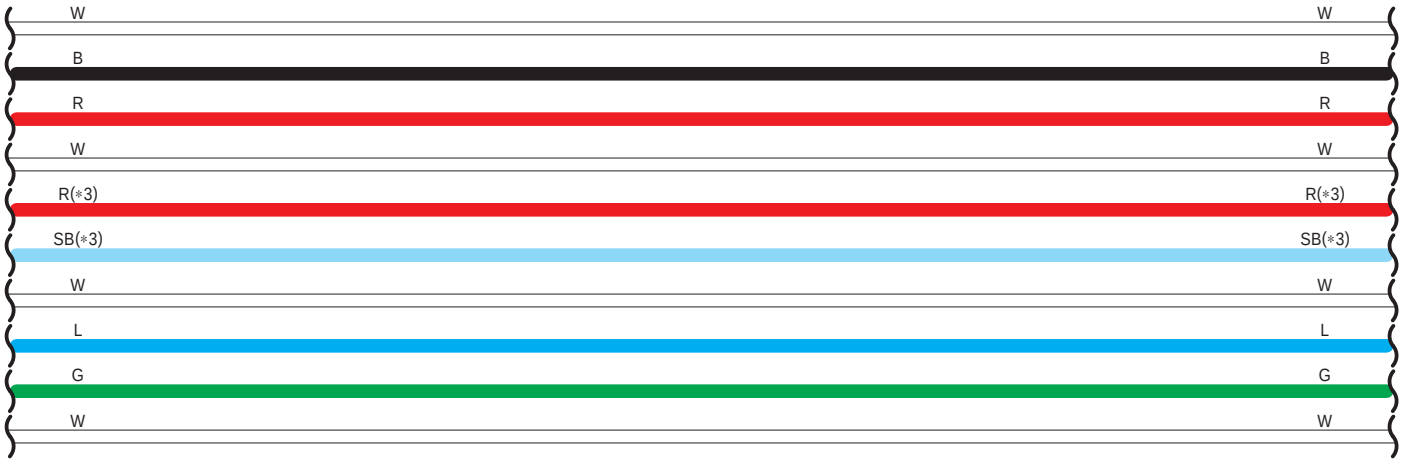
W
B
R
W
R(*3)
SB(*3)
W
L
G
W
W
B
R
W
R(*3)
SB(*3)
W
L
G
W

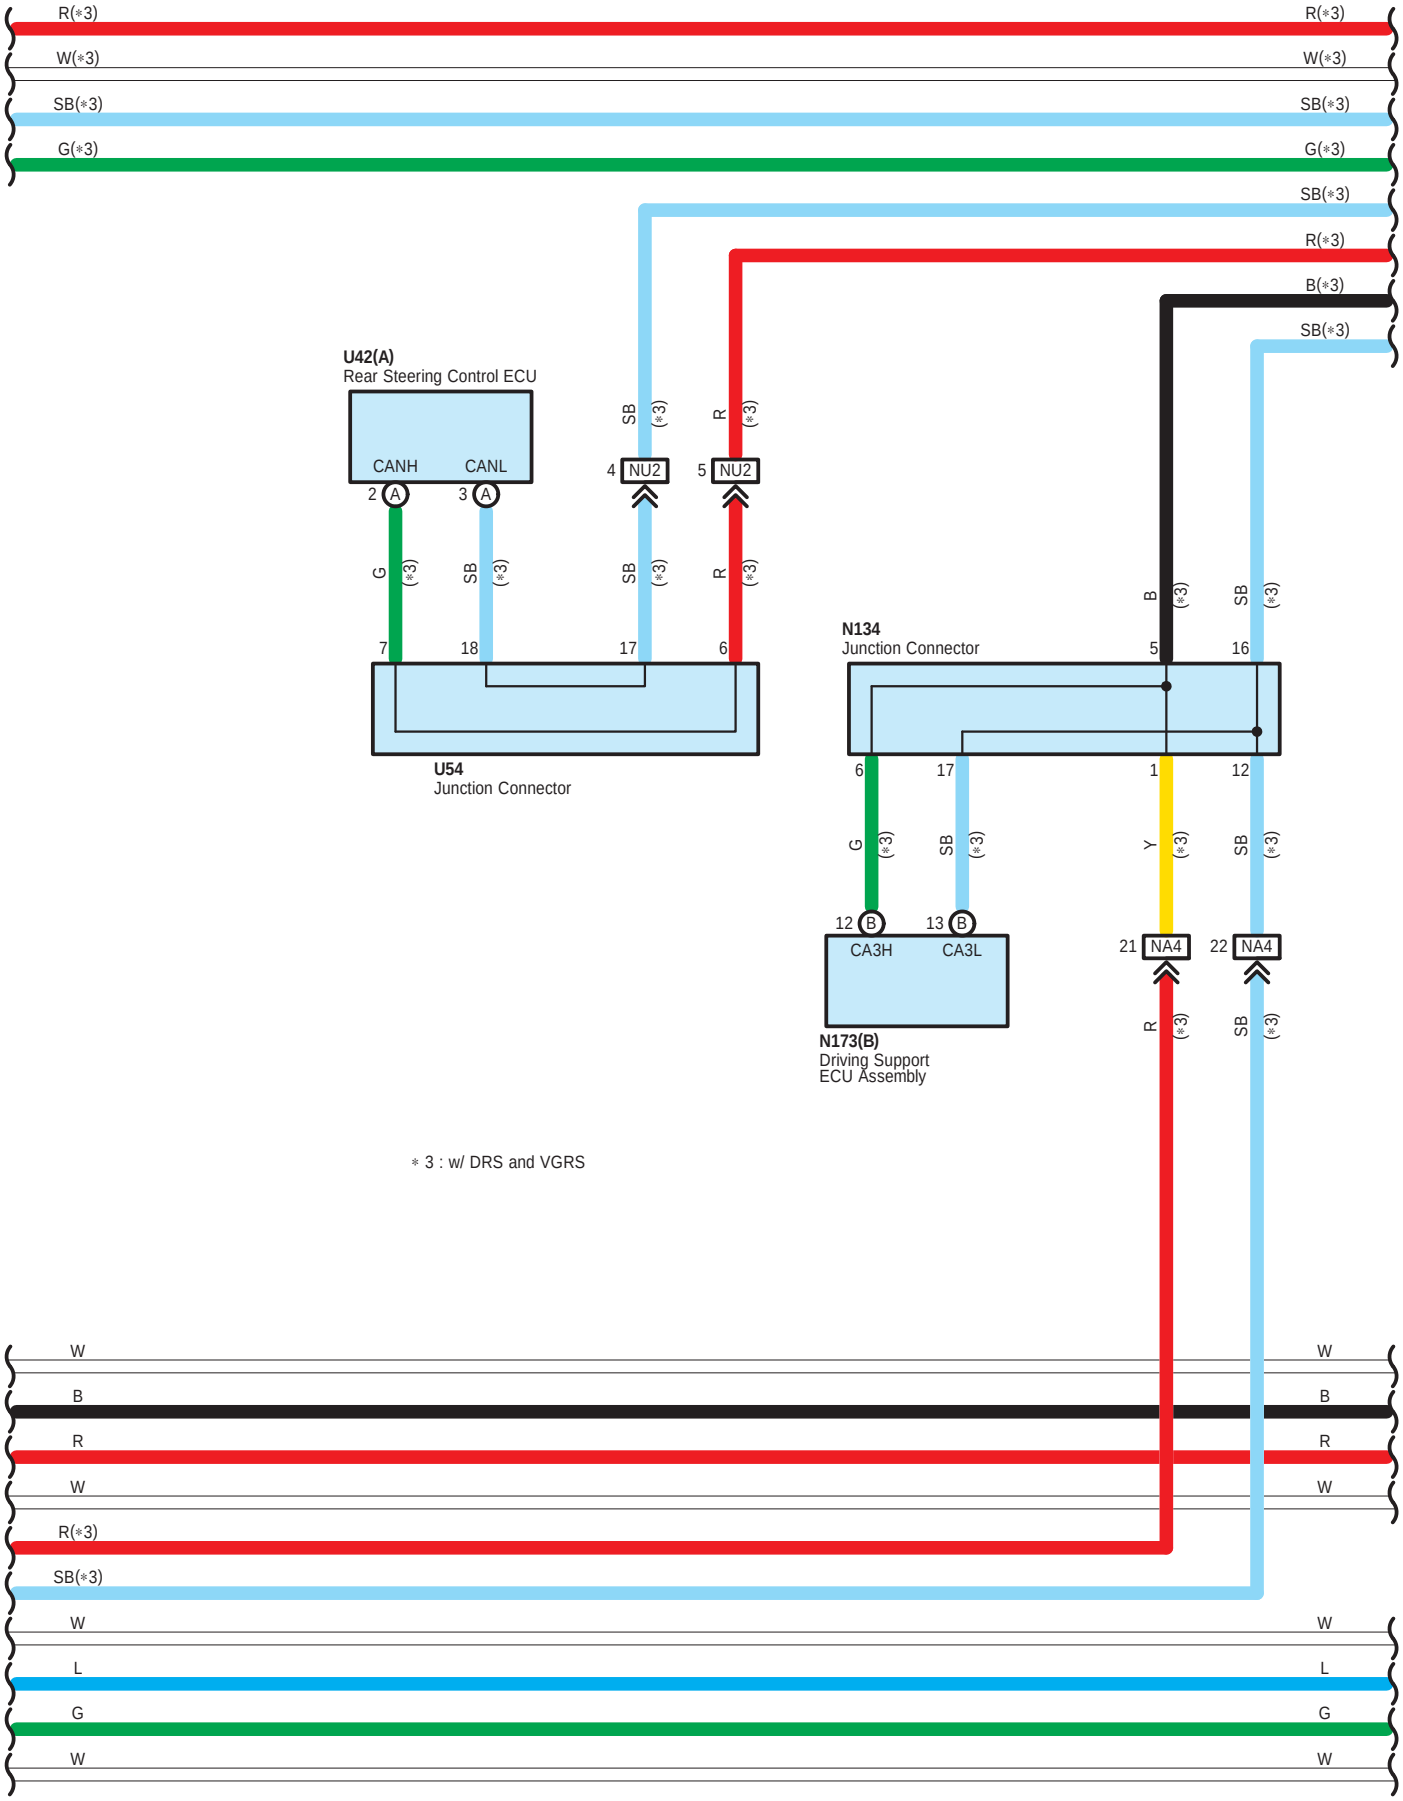
R(*3)
W(*3)
SB(*3)
G(*3)
U42(A)
Rear Steering Control ECU
CANH
CANL
2 A
3 A
4 NU2
5 NU2
SB (*3)
R (*3)
G (*3)
SB (*3)
7
18
17
6
U54
Junction Connector
B (*3)
N134
Junction Connector
5
16
6
17
1
12
G (*3)
SB (*3)
Y (*3)
12 B
13 B
CA3H
CA3L
21 NA4
22 NA4
N173(B)
Driving Support
ECU Assembly
* 3 : w/ DRS and VGRS
W
B
R
L
G

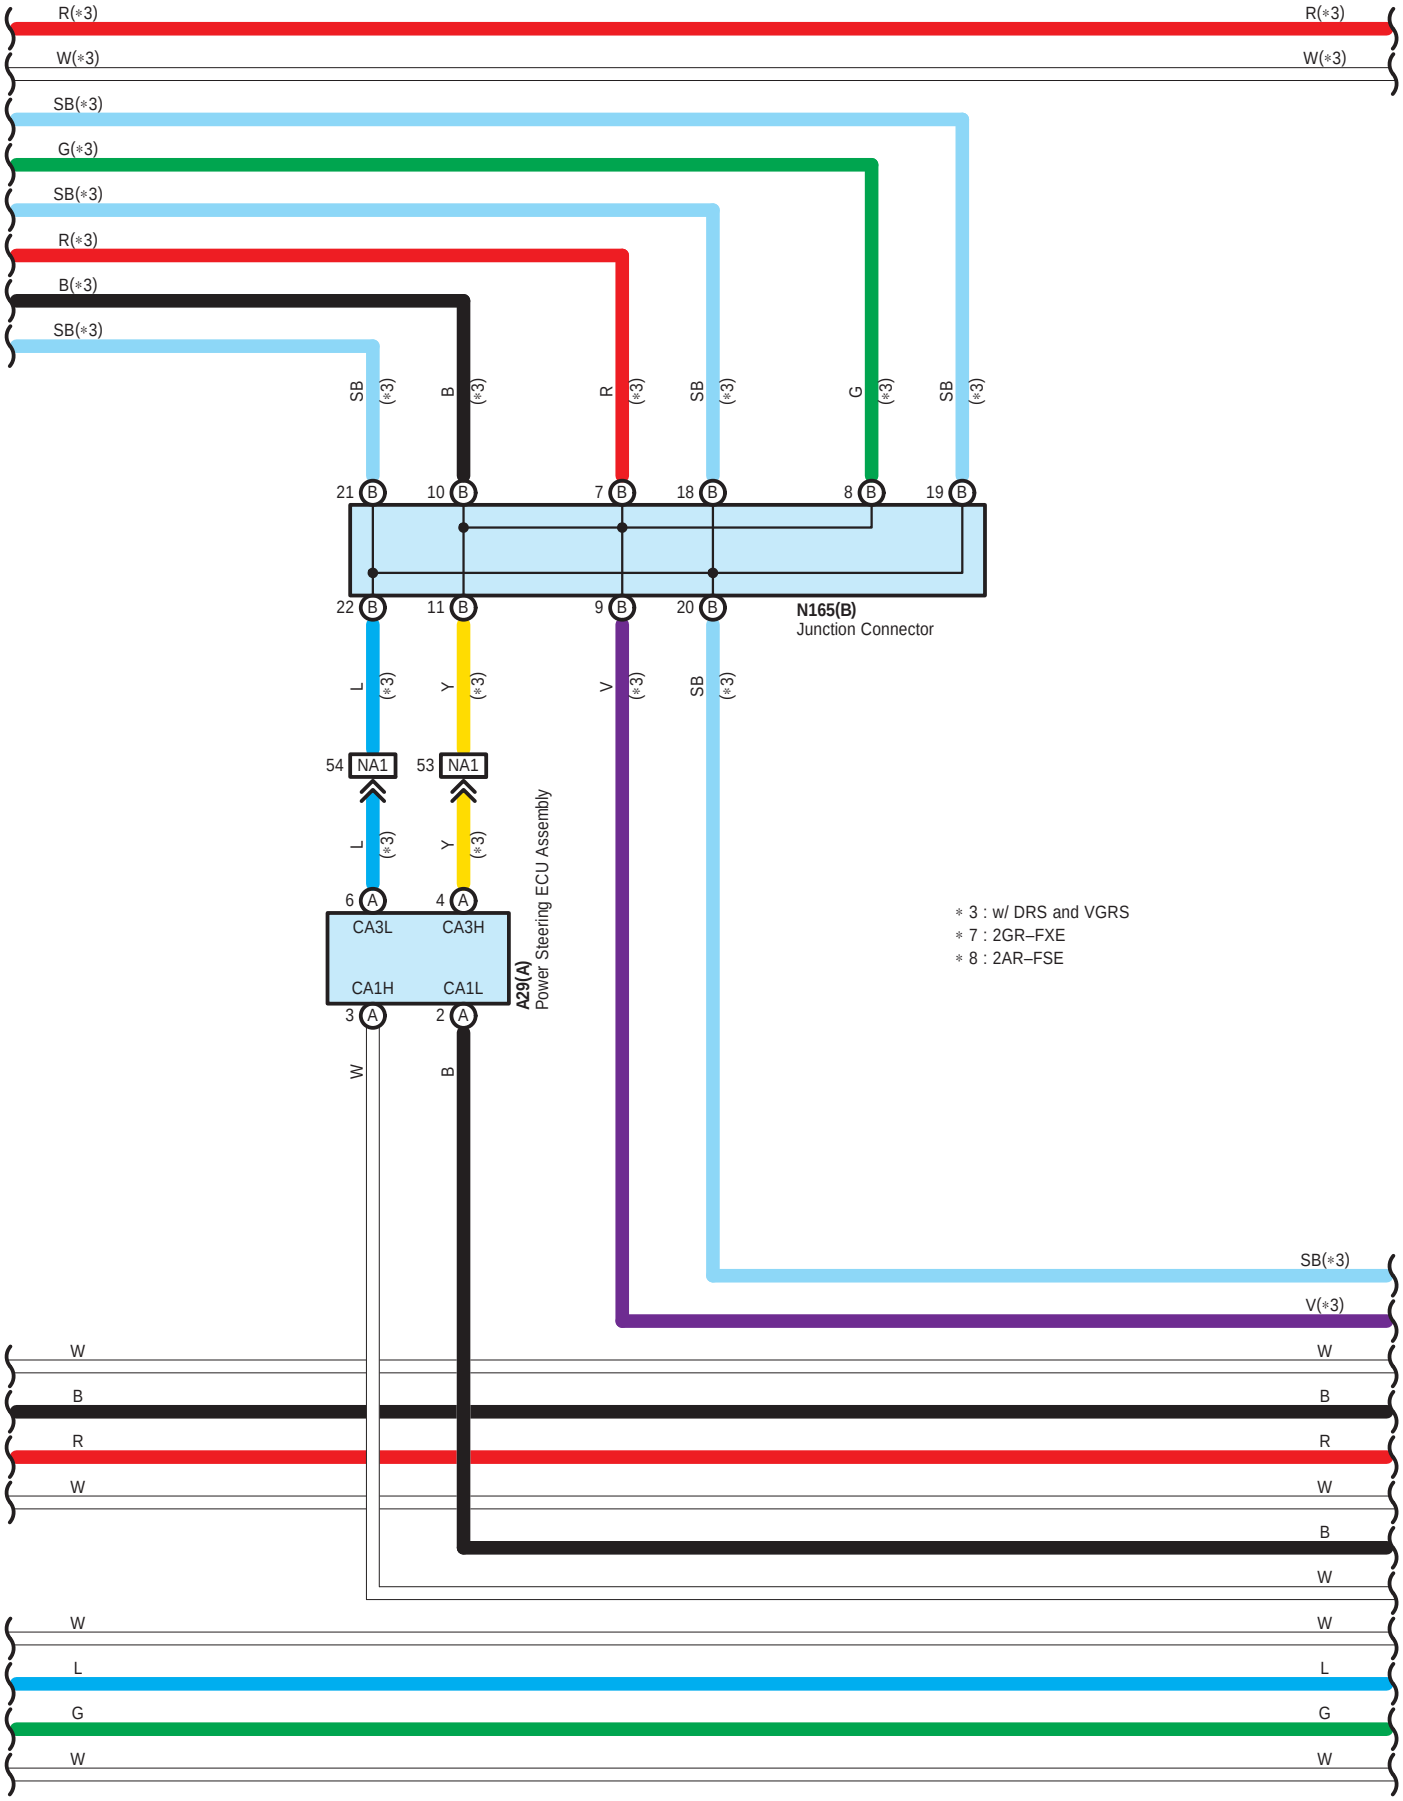
R(*3)
W(*3)
SB(*3)
G(*3)
SB(*3)
R(*3)
B(*3)
SB(*3)
SB (*3)
B (*3)
R (*3)
SB (*3)
G (*3)
SB (*3)
21 B
10 B
7 B
18 B
8 B
19 B
22 B
11 B
9 B
20 B
N165(B)
Junction Connector
L (*3)
Y (*3)
V (*3)
SB (*3)
54 NA1
53 NA1
L (*3)
Y (*3)
6 A
4 A
CA3L
CA3H
CA1H
CA1L
3 A
2 A
A29(A)
Power Steering ECU Assembly
W
B
* 3 : w/ DRS and VGRS
* 7 : 2GR–FXE
* 8 : 2AR–FSE
SB(*3)
V(*3)
W
B
R
W
W
B
W
W
L
G
W

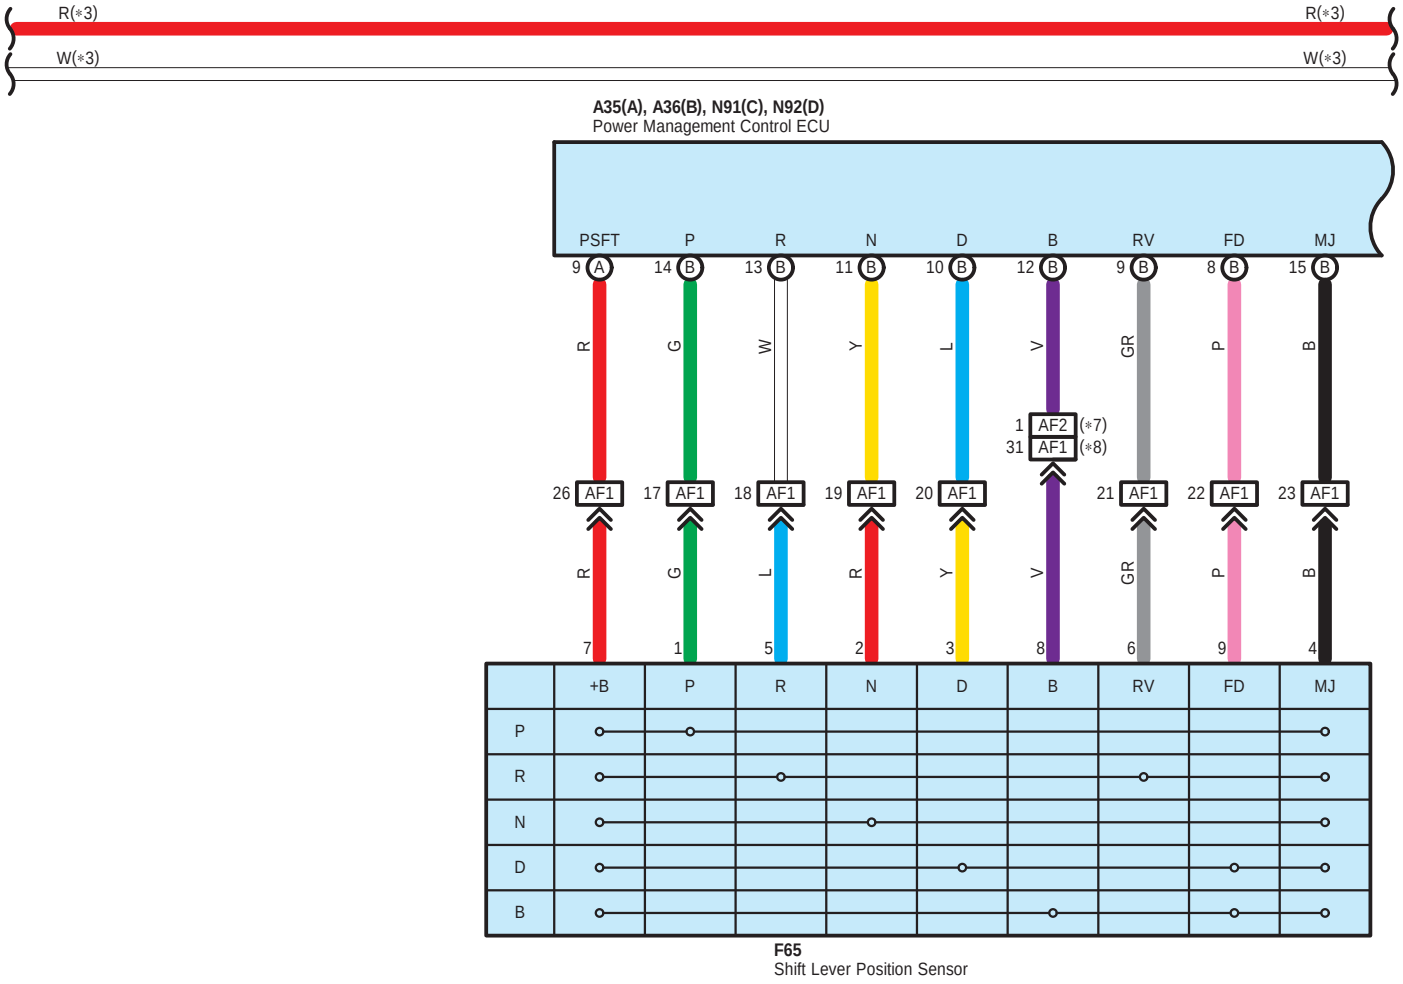
R(*3)
W(*3)
A35(A), A36(B), N91(C), N92(D)
Power Management Control ECU
PSFT
P
R
N
D
B
RV
FD
MJ
9 A
14 B
13 B
11 B
10 B
12 B
9 B
8 B
15 B
R
G
W
Y
L
V
GR
P
B
1 AF2 (*7)
31 AF1 (*8)
26 AF1
17 AF1
18 AF1
19 AF1
20 AF1
21 AF1
22 AF1
23 AF1
R
G
L
R
Y
V
GR
P
B
7
1
5
2
3
8
6
9
4
+B
P
R
N
D
B
RV
FD
MJ
P
R
N
D
B
F65
Shift Lever Position Sensor

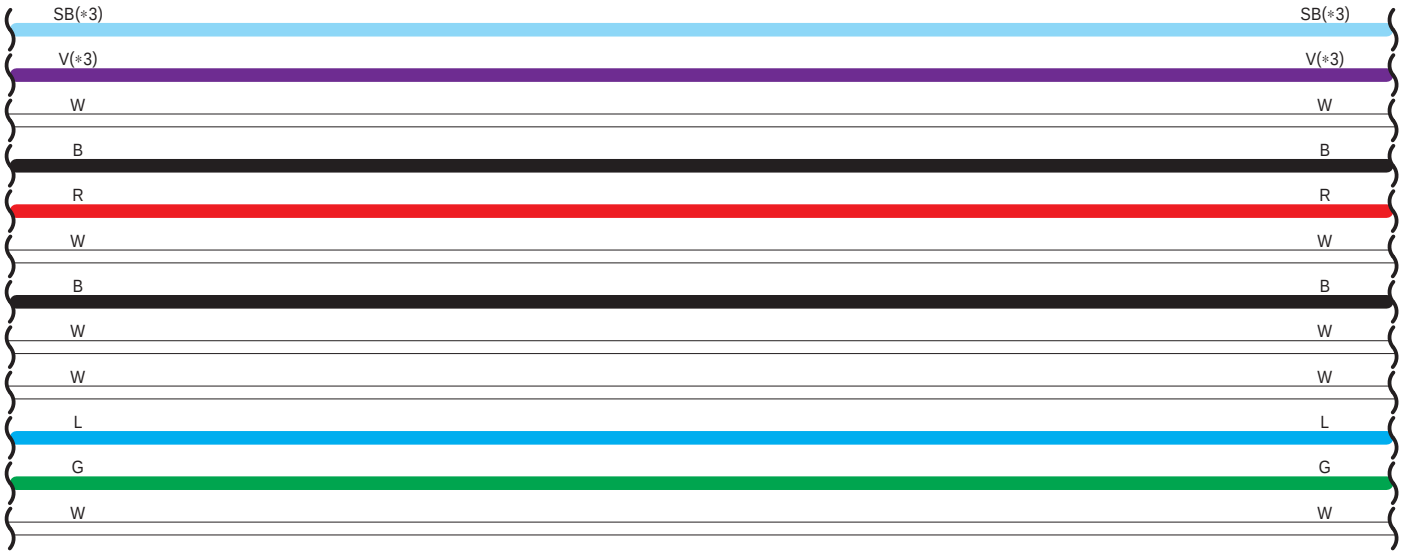
SB(*3)
V(*3)
W
B
R
W
B
W
W
L
G
W

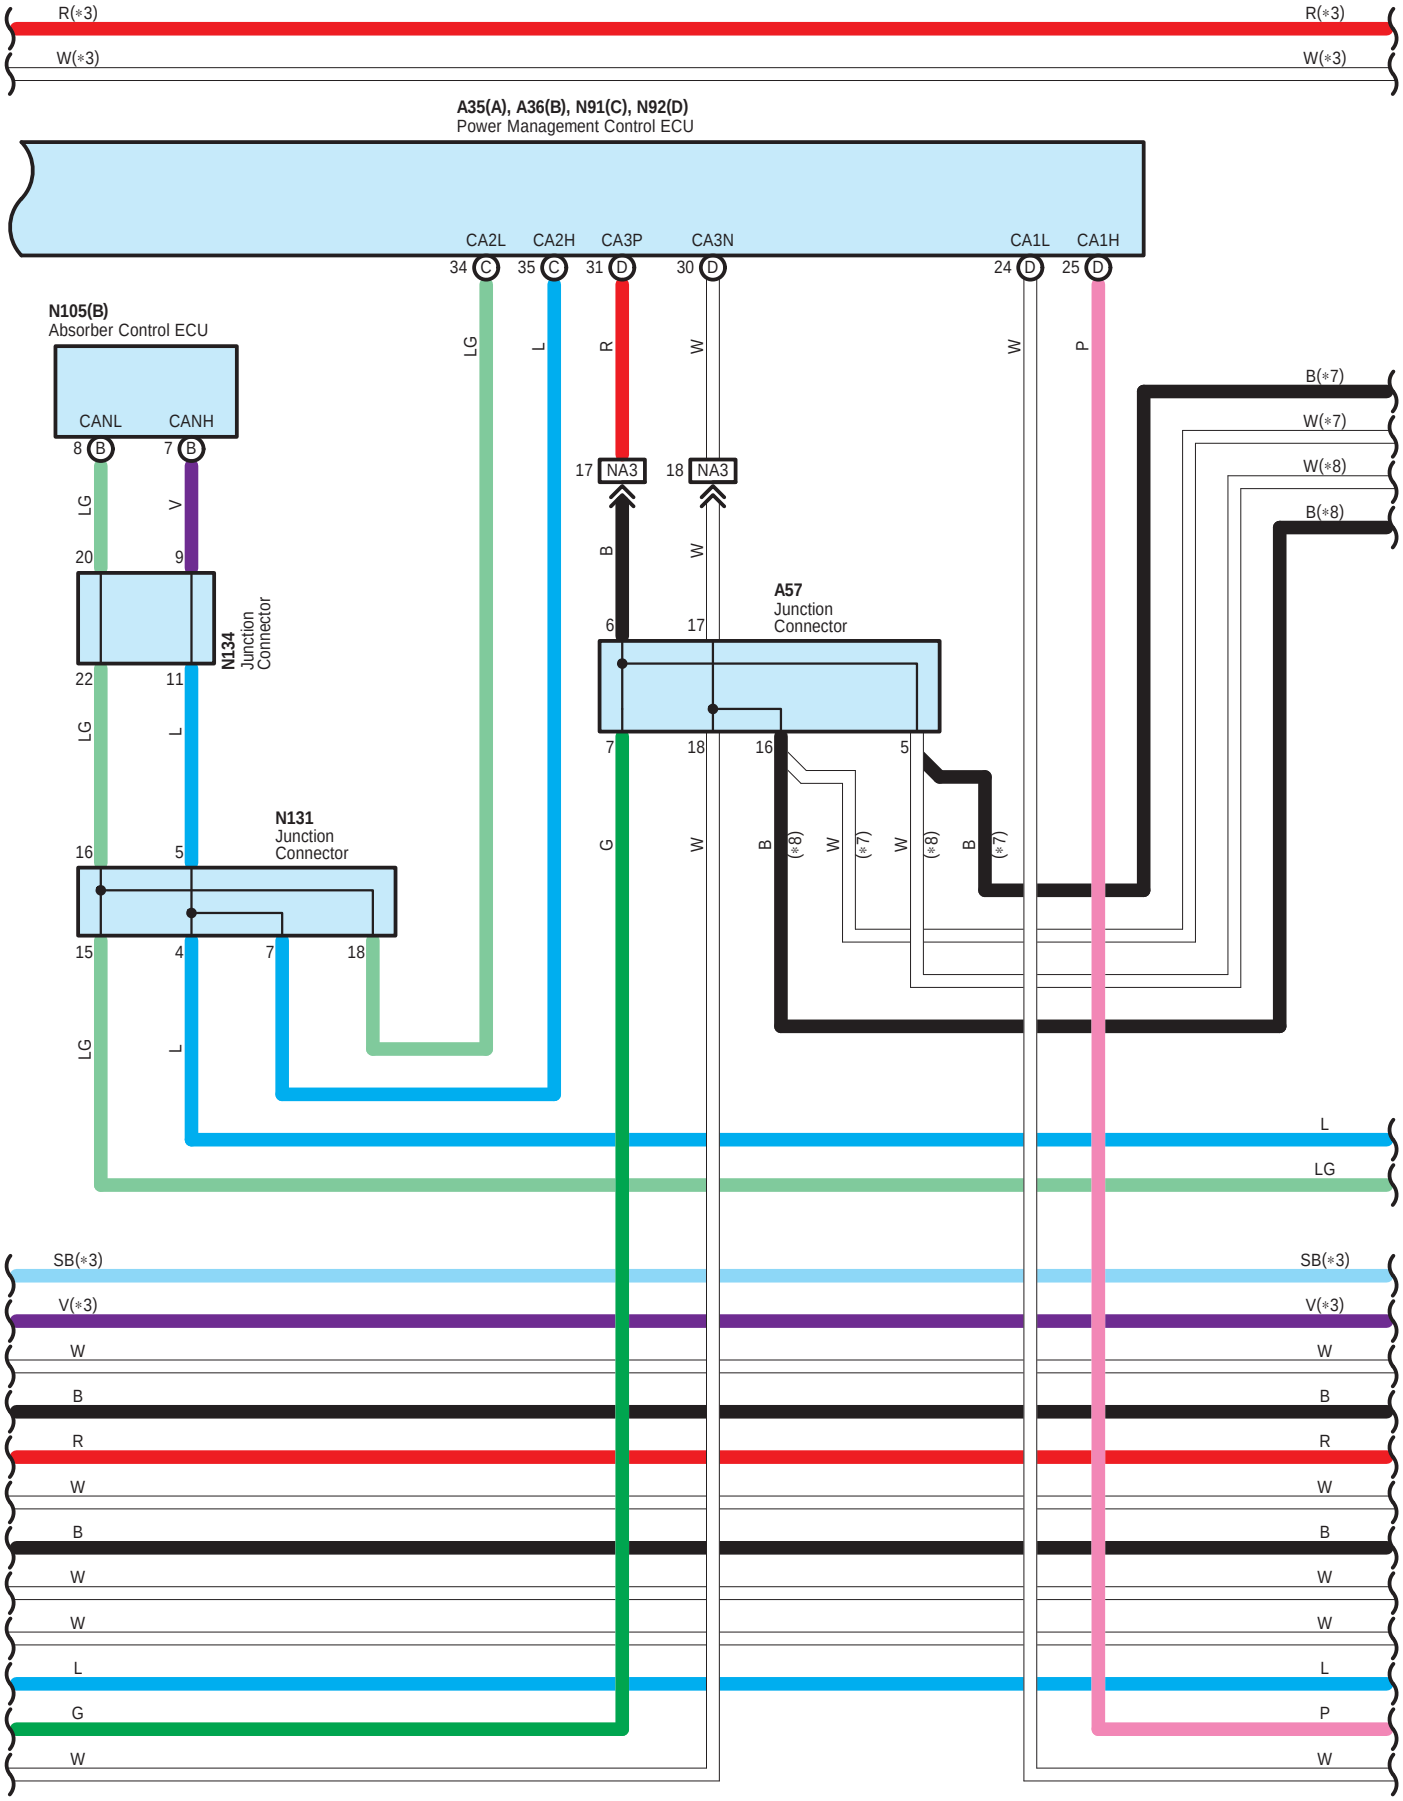
R(*3)
W(*3)
A35(A), A36(B), N91(C), N92(D)
Power Management Control ECU
CA2L
CA2H
CA3P
CA3N
CA1L
CA1H
34 C
35 C
31 D
30 D
24 D
25 D
N105(B)
Absorber Control ECU
CANL
CANH
8 B
7 B
LG
V
20
9
N134
Junction
Connector
22
11
LG
L
16
5
N131
Junction
Connector
15
4
7
18
LG
L
LG
L
R
W
W
P
17 NA3
18 NA3
B
W
6
17
A57
Junction
Connector
7
18
16
5
G
W
B
(*8)
W
(*7)
W
(*8)
B
(*7)
B(*7)
W(*7)
W(*8)
B(*8)
L
LG
SB(*3)
V(*3)
W
B
R
W
B
W
W
L
G
W
SB(*3)
V(*3)
W
B
R
W
B
W
W
L
P
W

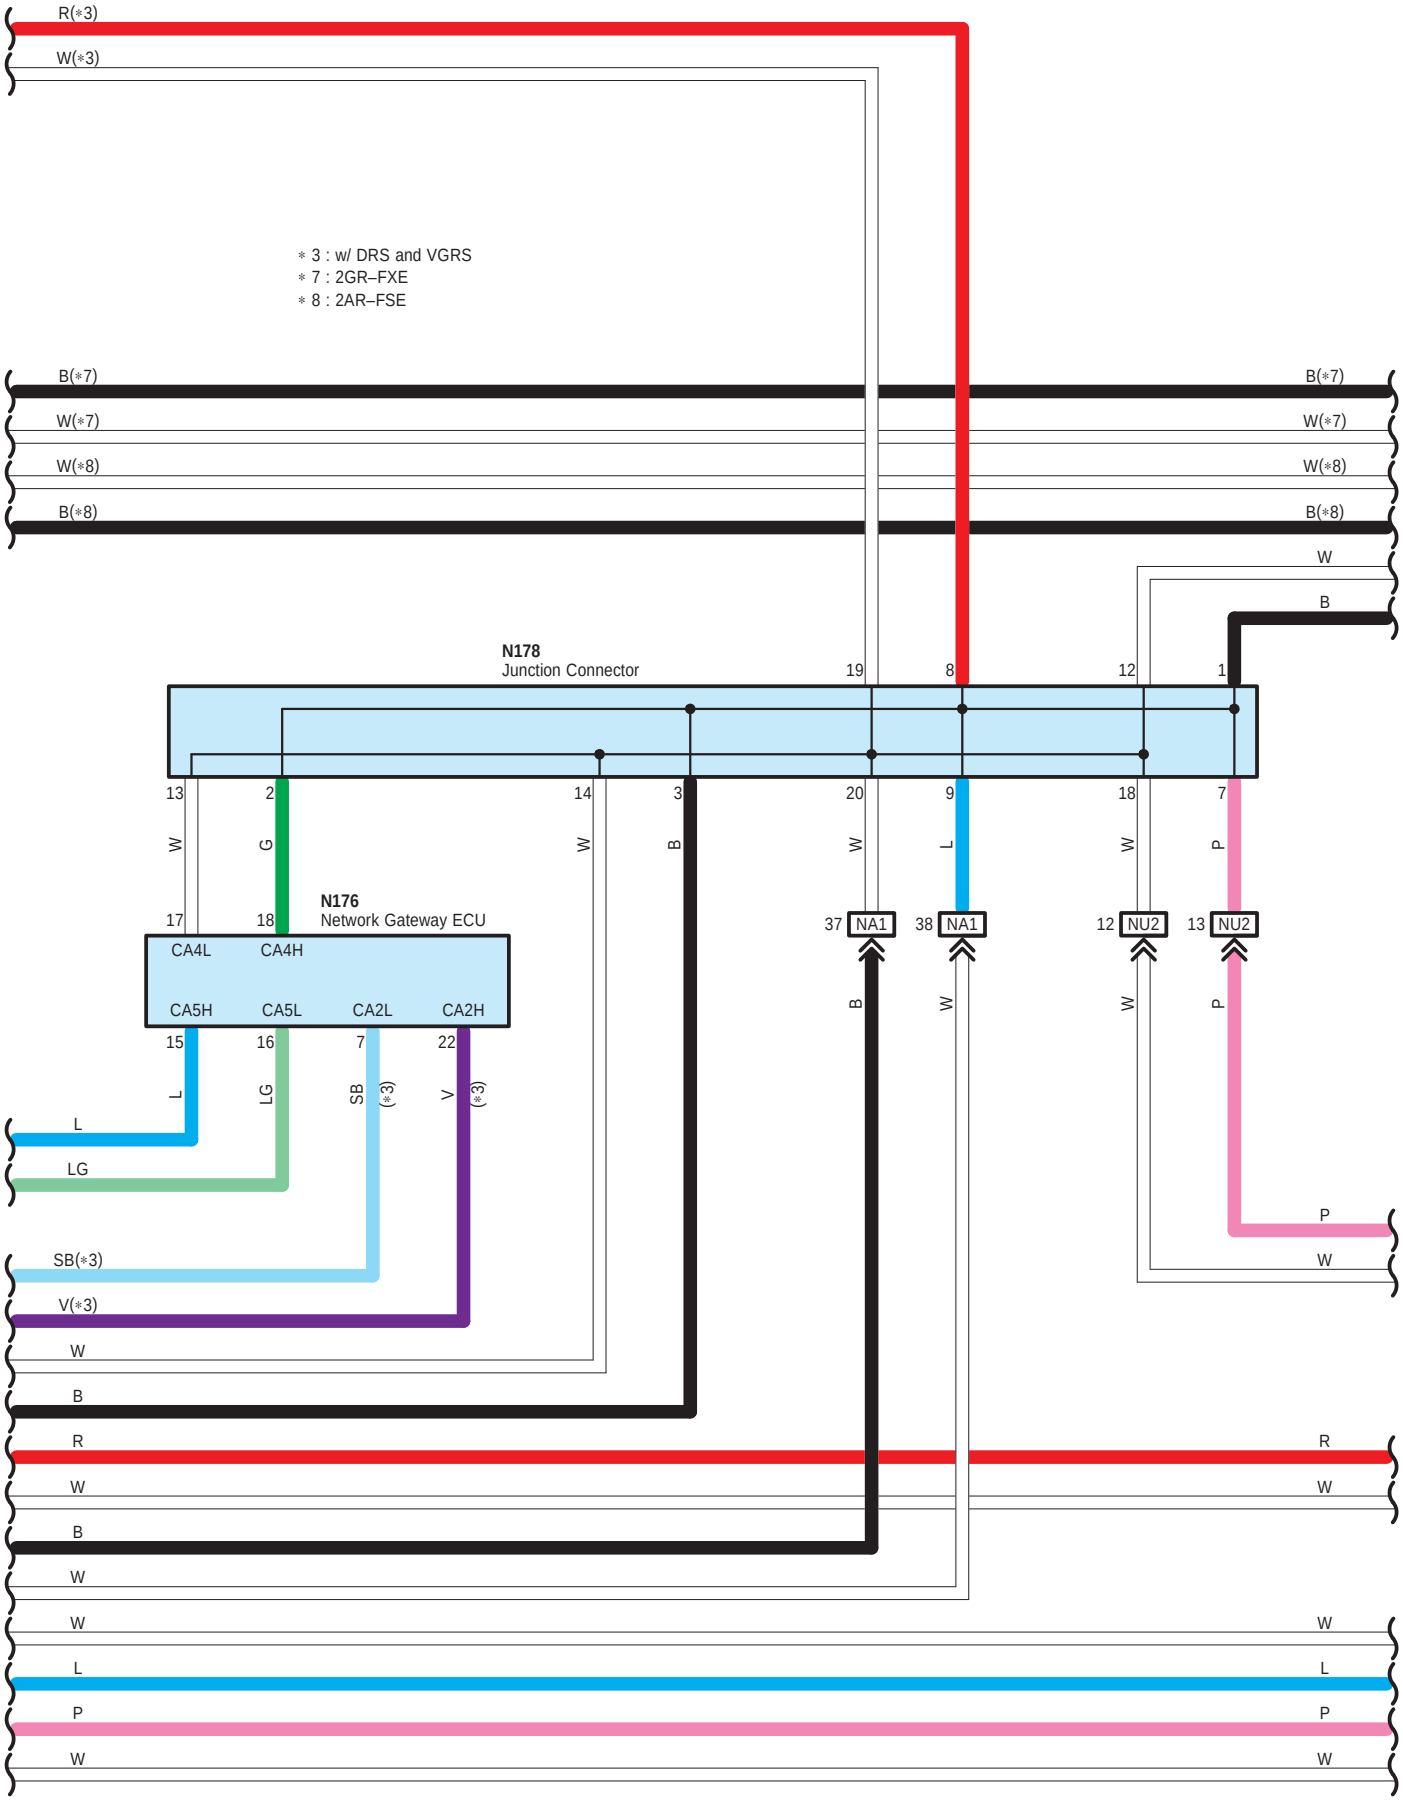
R(*3)
W(*3)
* 3 : w/ DRS and VGRS
* 7 : 2GR–FXE
* 8 : 2AR–FSE
B(*7)
W(*7)
W(*8)
B(*8)
W
B
N178
Junction Connector
19
8
12
1
13
2
14
3
20
9
18
7
W
G
W
B
W
L
W
P
N176
Network Gateway ECU
17
18
CA4L
CA4H
CA5H
CA5L
CA2L
CA2H
15
16
7
22
L
LG
SB
(*3)
V
(*3)
37 NA1
38 NA1
12 NU2
13 NU2
B
W
W
P
L
LG
SB(*3)
V(*3)
W
B
R
W
B
W
W
L
P
W
R
W
W
L
P
W

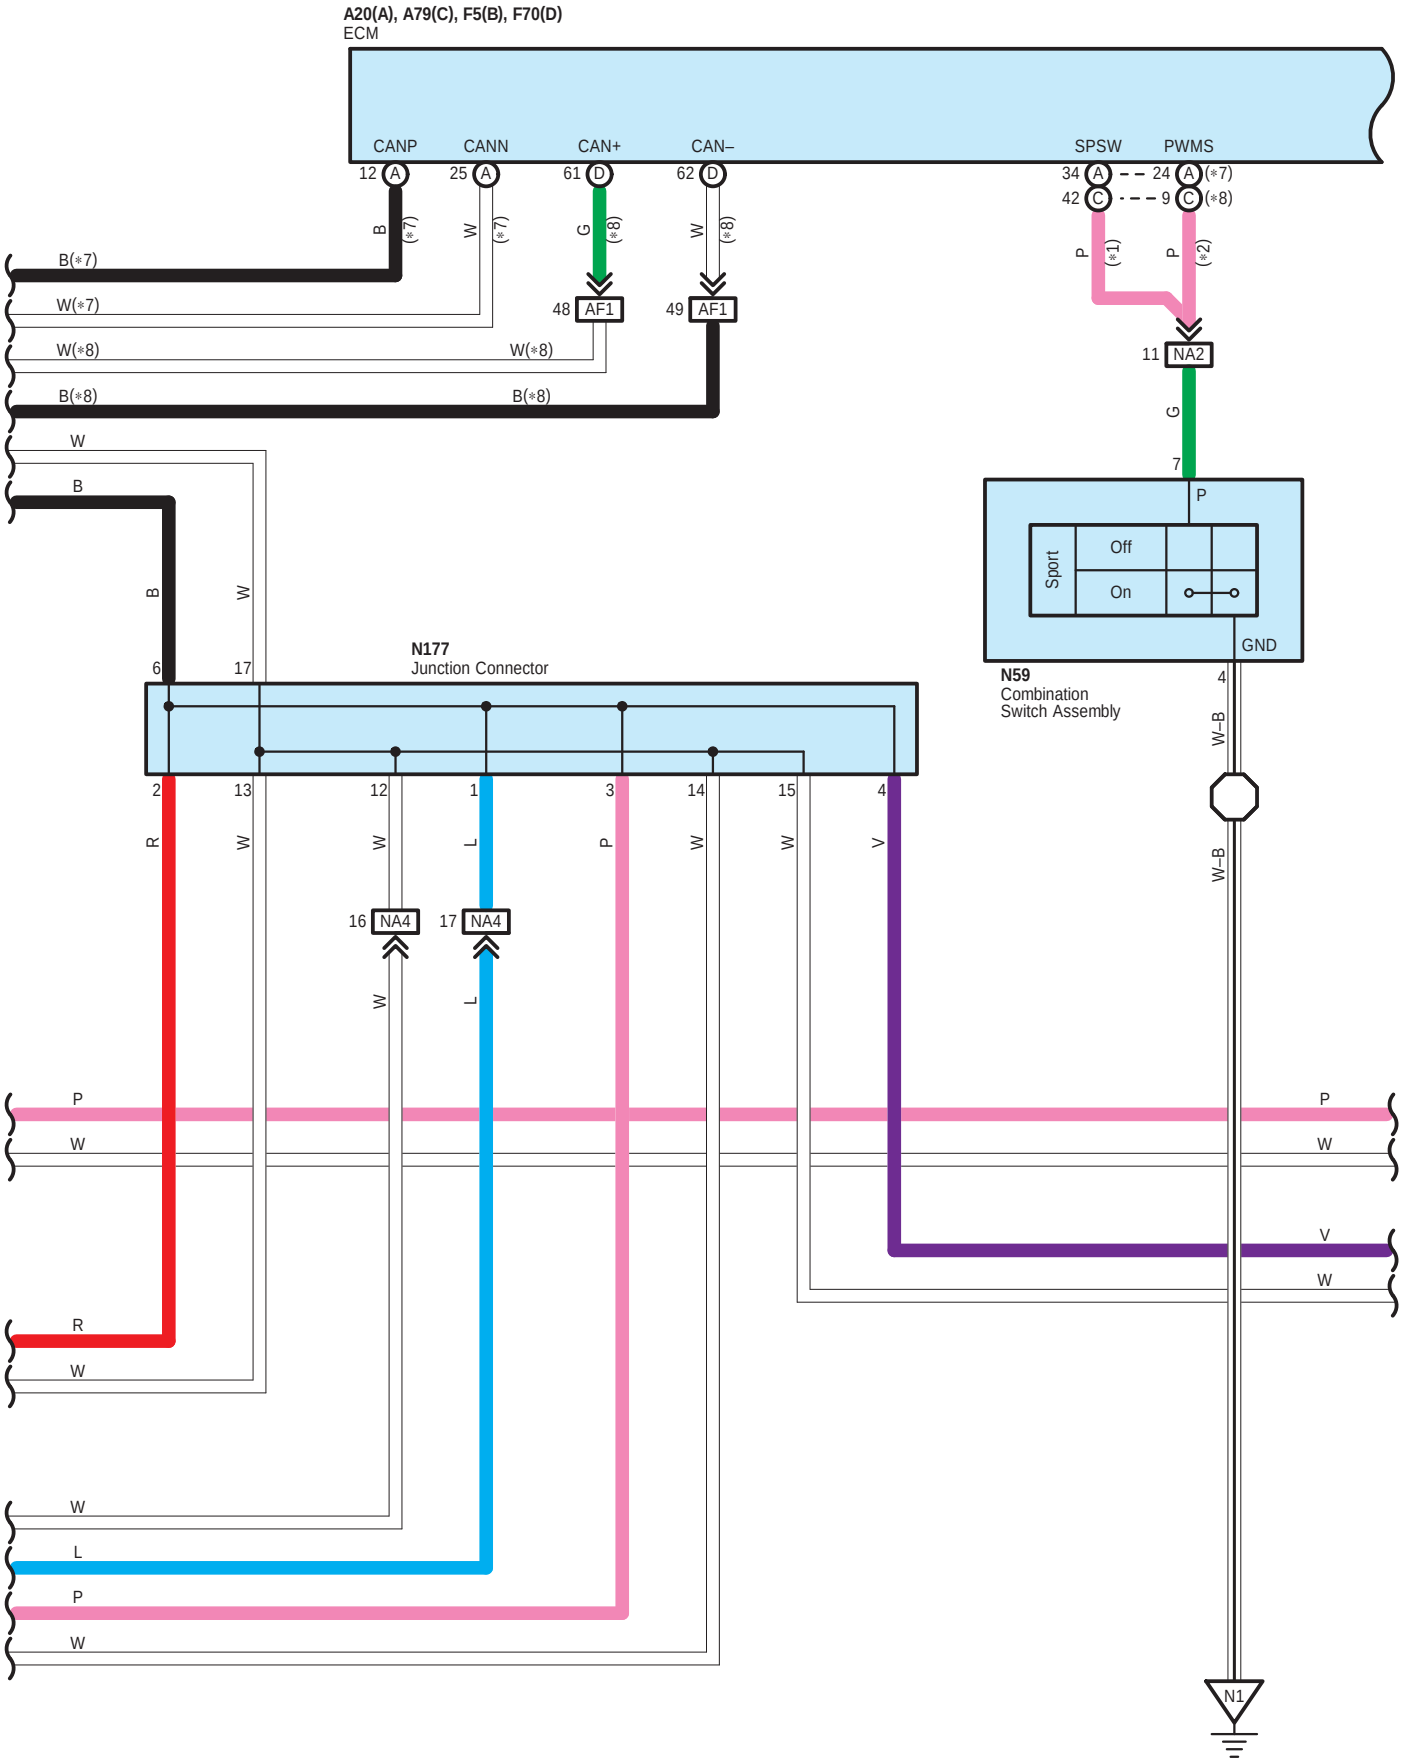
A20(A), A79(C), F5(B), F70(D)
ECM
CANP
CANN
CAN+
CAN–
SPSW
PWMS
12 A
25 A
61 D
62 D
34 A
24 A (*7)
42 C
9 C (*8)
B (*7)
W (*7)
W (*8)
B (*8)
48 AF1
49 AF1
11 NA2
7
P
Off
On
Sport
GND
N59
Combination
Switch Assembly
4
W–B
N177
Junction Connector
6
17
2
13
12
1
3
14
15
4
16 NA4
17 NA4
N1

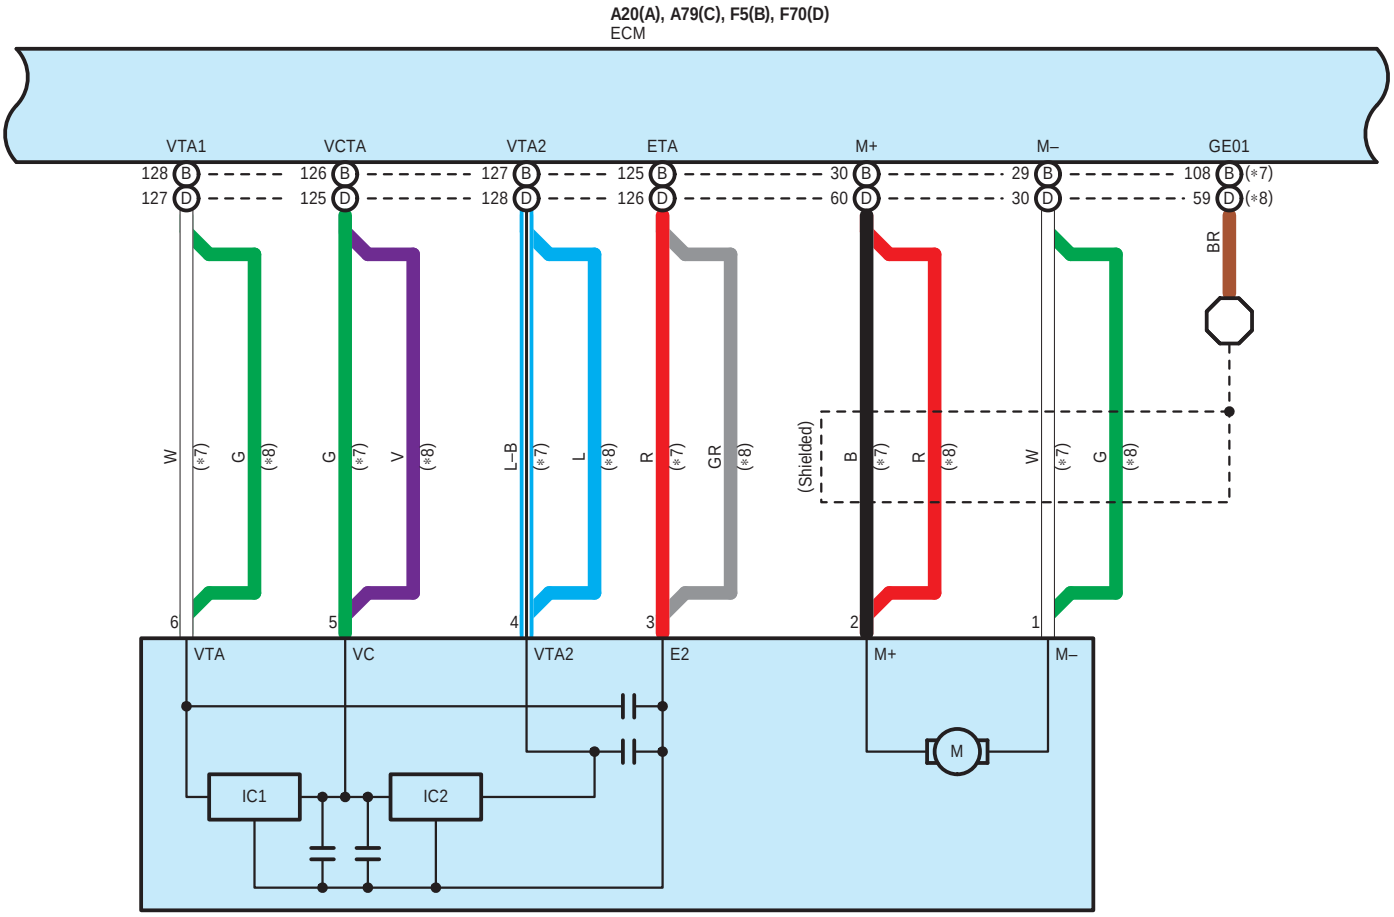

F24
Throttle Body with Motor Assembly

* 1 : w/ Adaptive Variable Suspension
* 2 : w/o Adaptive Variable Suspension
* 7 : 2GR–FXE
* 8 : 2AR–FSE

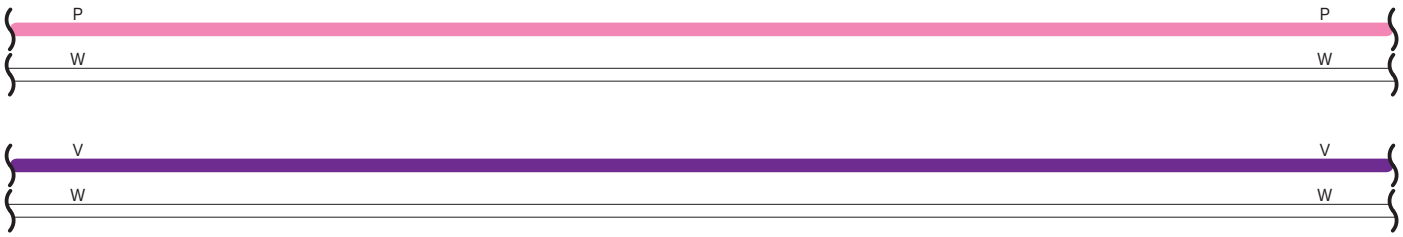

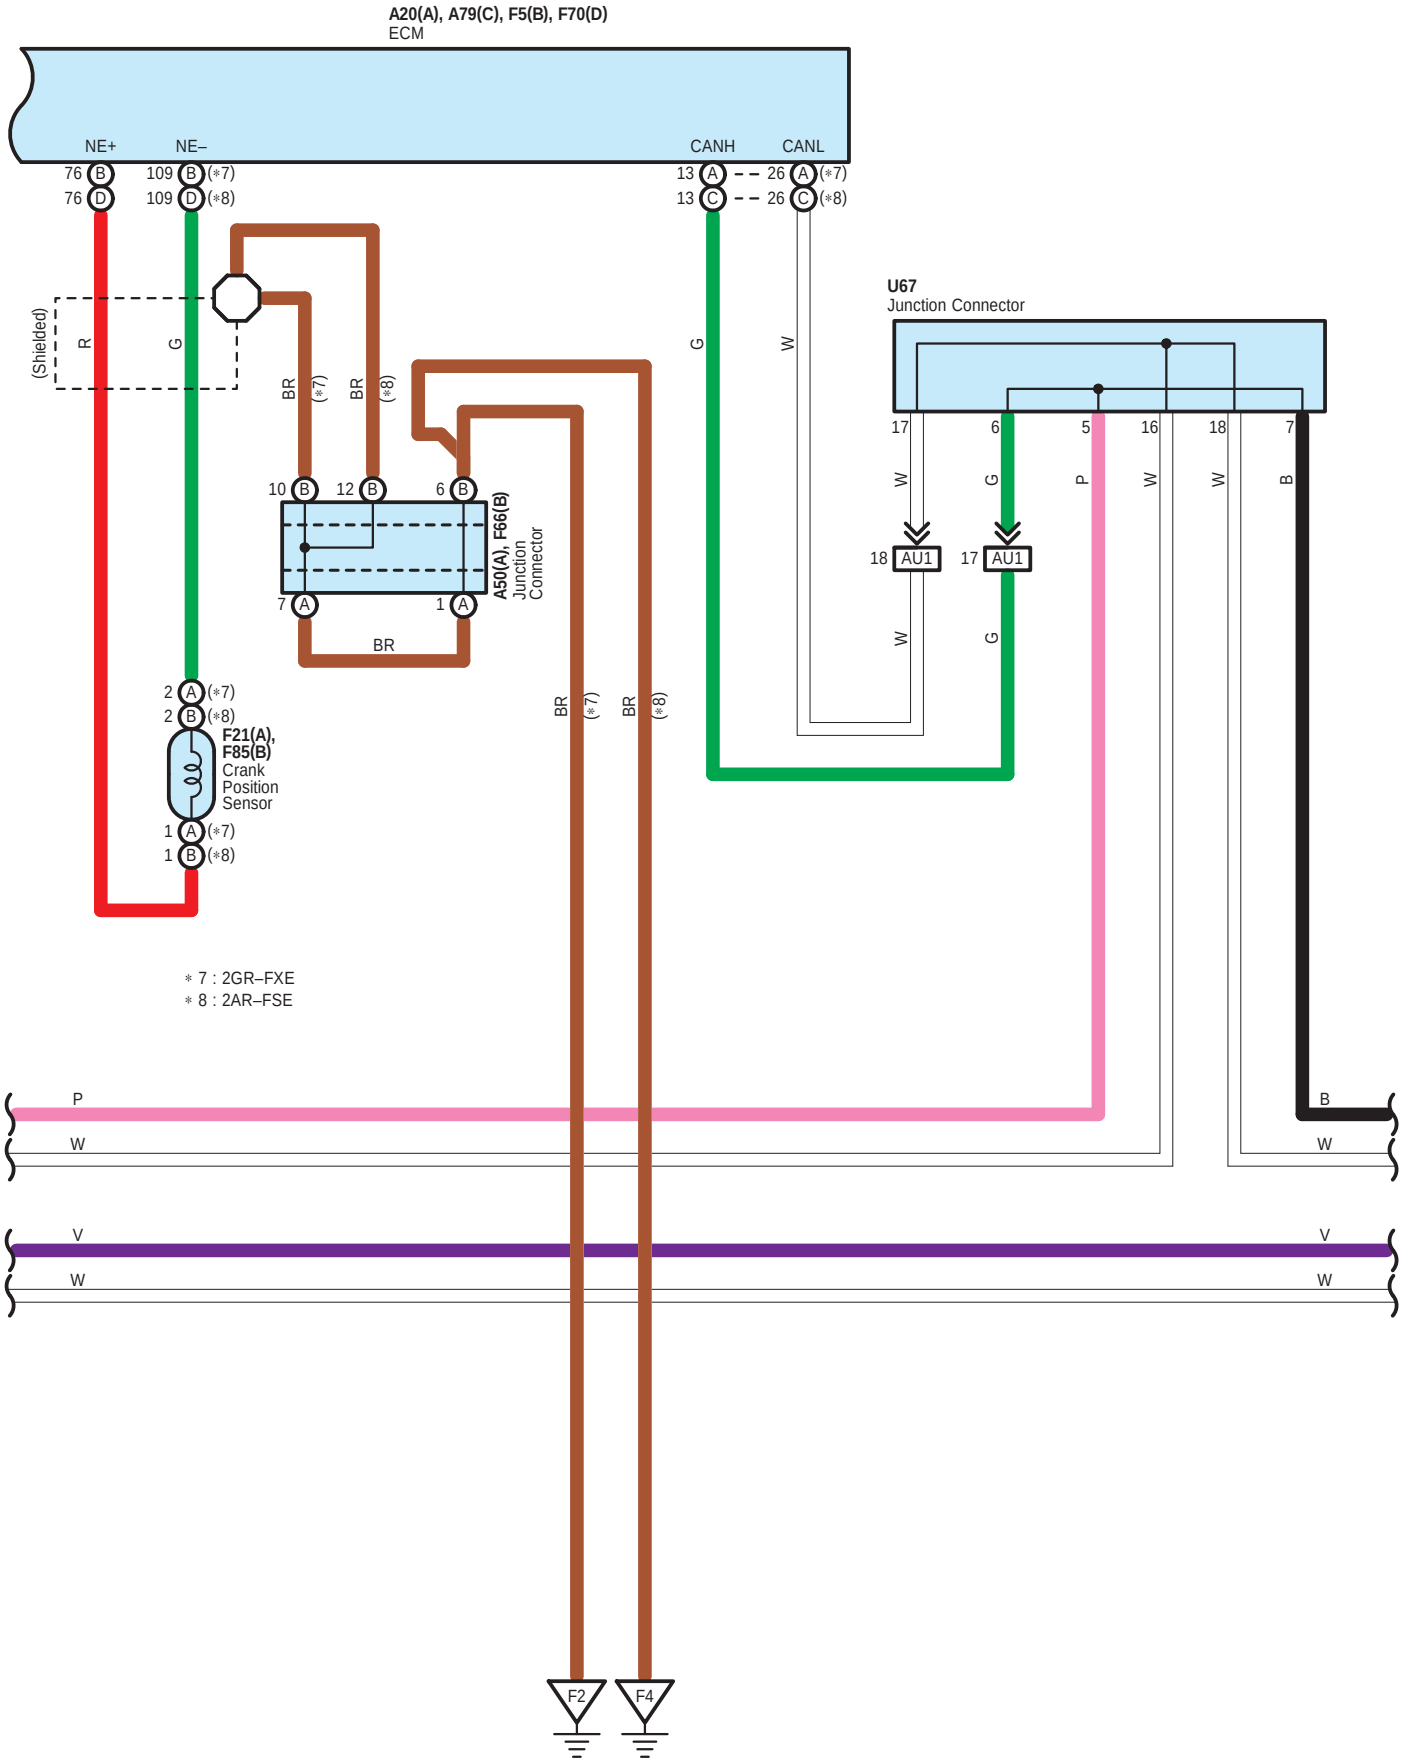
A20(A), A79(C), F5(B), F70(D)
ECM
NE+
NE–
CANH
CANL
76 B
76 D
109 B (*7)
109 D (*8)
13 A
13 C
26 A (*7)
26 C (*8)
(Shielded)
R
G
BR (*7)
BR (*8)
G
W
U67
Junction Connector
17
6
5
16
18
7
W
G
P
W
W
B
18 AU1
17 AU1
W
G
10 B
12 B
6 B
7 A
1 A
A50(A), F66(B)
Junction Connector
BR
2 A (*7)
2 B (*8)
F21(A), F85(B)
Crank Position Sensor
1 A (*7)
1 B (*8)
BR (*7)
BR (*8)
* 7 : 2GR–FXE
* 8 : 2AR–FSE
P
W
B
W
V
W
V
W
F2
F4

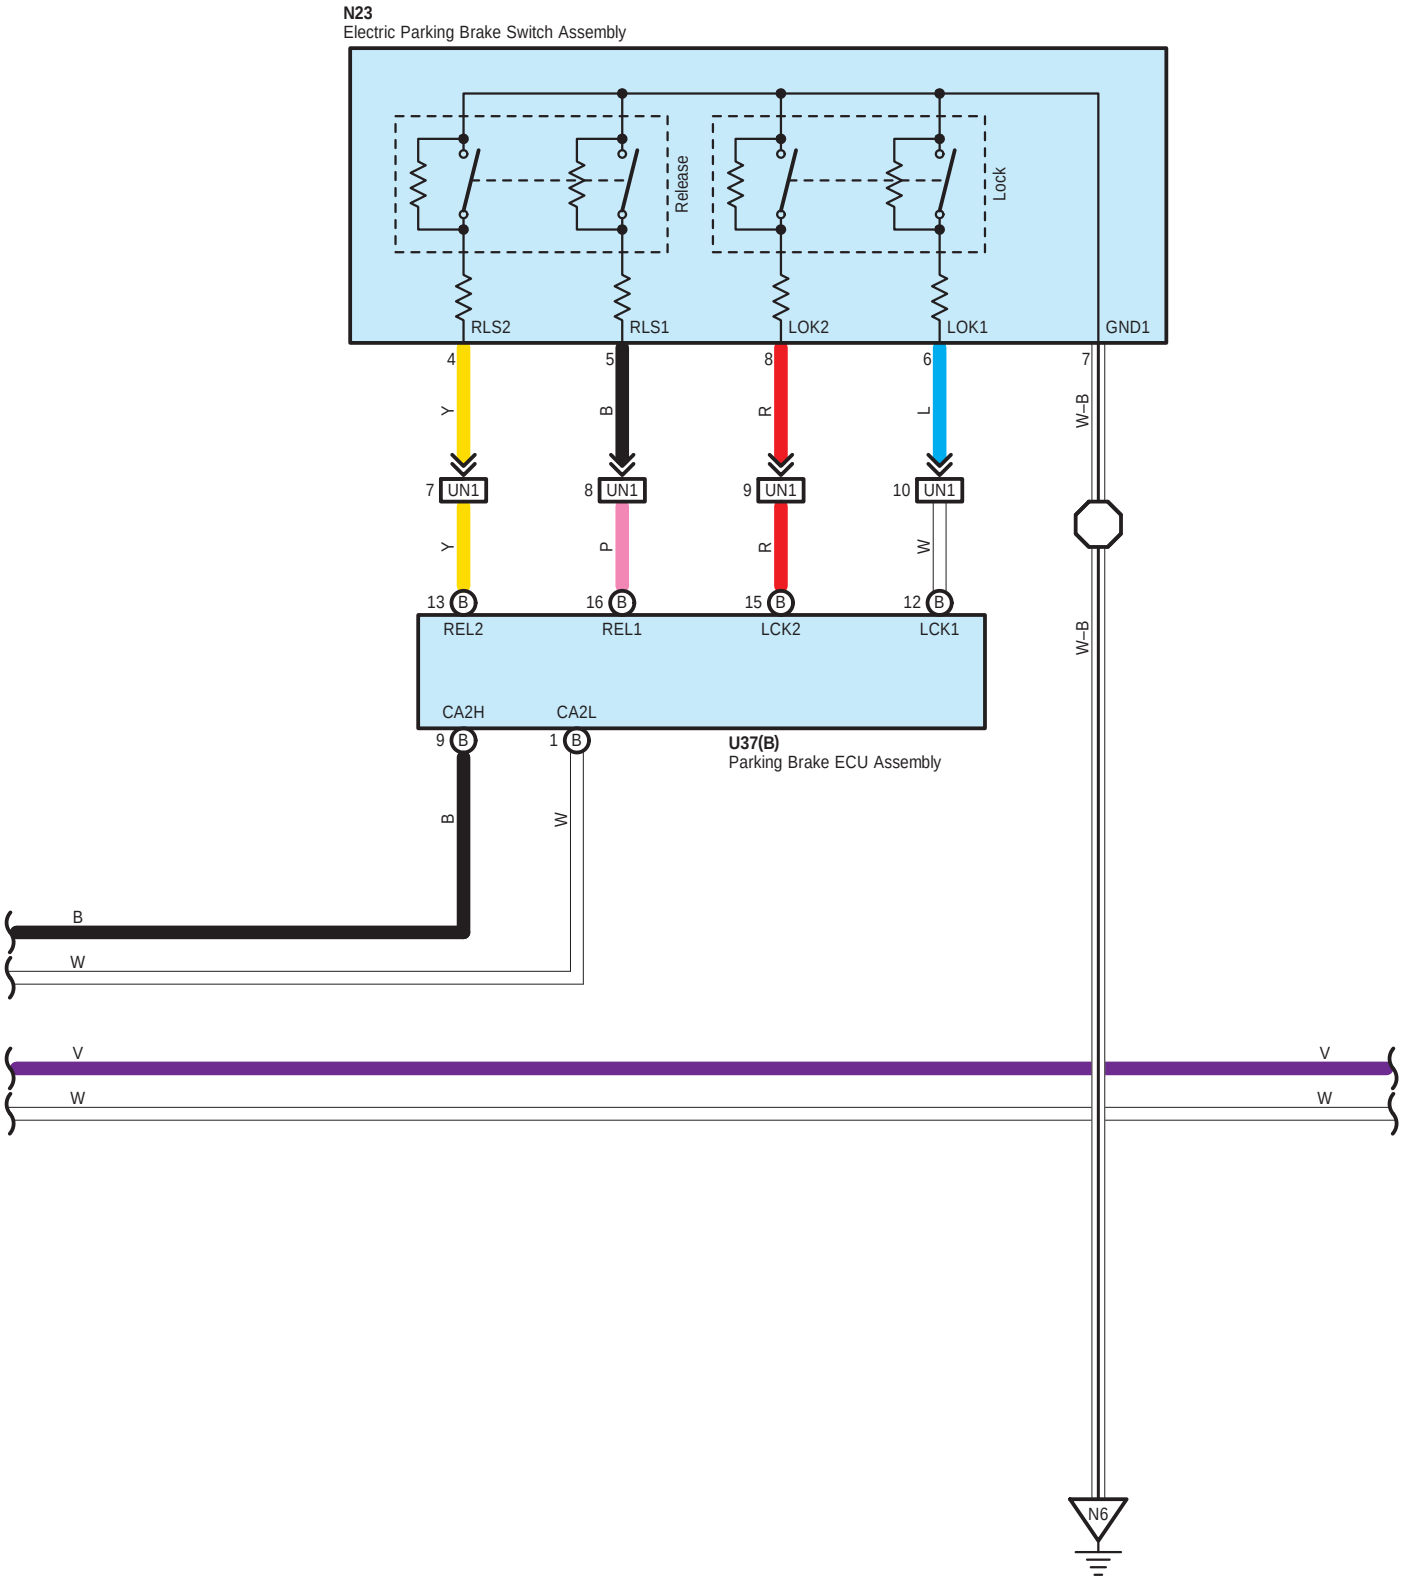
N23
Electric Parking Brake Switch Assembly
Release
Lock
RLS2
RLS1
LOK2
LOK1
GND1
4
5
8
6
7
Y
B
R
L
W–B
7 UN1
8 UN1
9 UN1
10 UN1
Y
P
R
W
13 B
16 B
15 B
12 B
REL2
REL1
LCK2
LCK1
W–B
CA2H
CA2L
9 B
1 B
U37(B)
Parking Brake ECU Assembly
B
W
B
W
V
W
V
W
N6

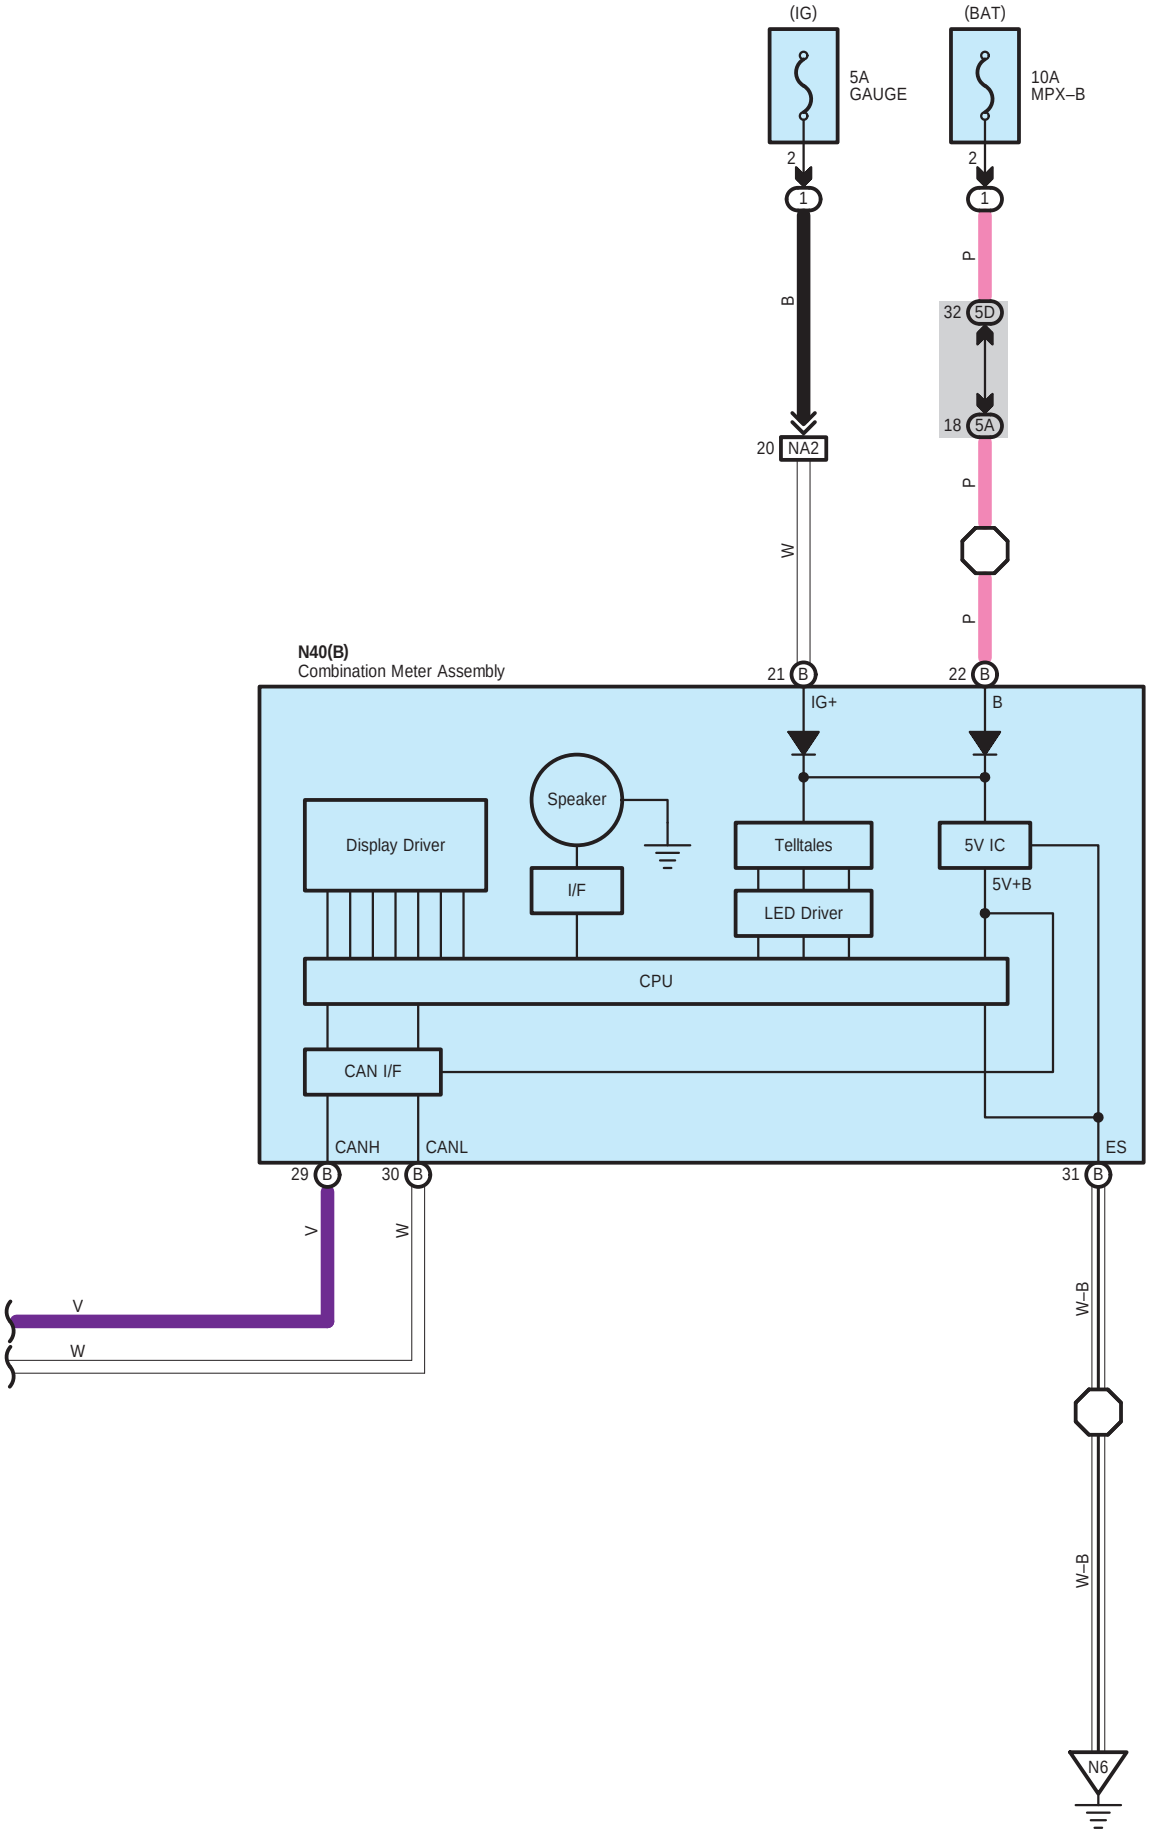
(IG)
(BAT)
5A
GAUGE
10A
MPX–B
2
1
B
P
32
5D
18
5A
20
NA2
W
N40(B)
Combination Meter Assembly
21
22
IG+
Speaker
Display Driver
I/F
Telltales
LED Driver
5V IC
5V+B
CPU
CAN I/F
CANH
CANL
ES
29
30
31
V
W
W–B
N6

A 4
Black

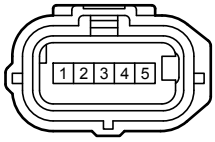

A 5
White

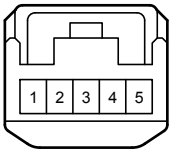

A 12
Black

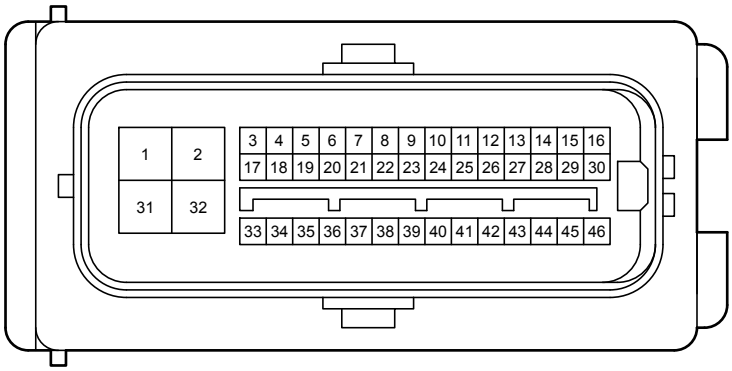

A 14
Black

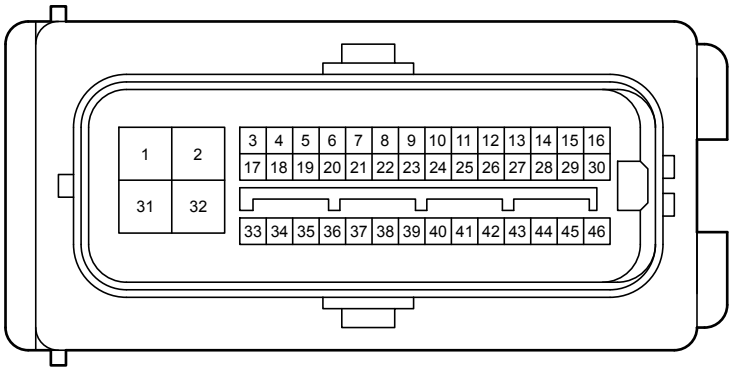

A 15
Black

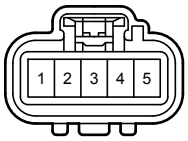

A 16
Gray

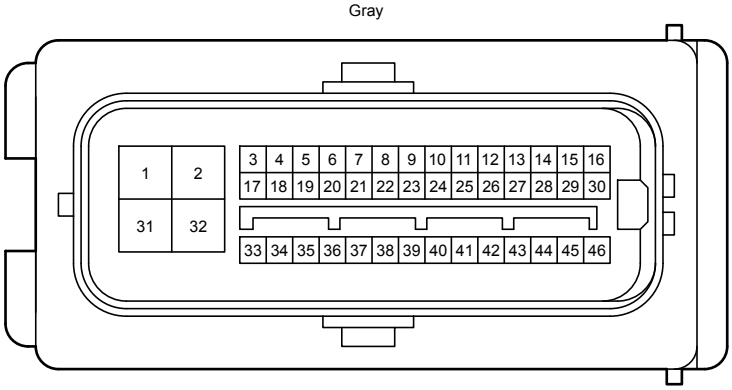

A 20
Black

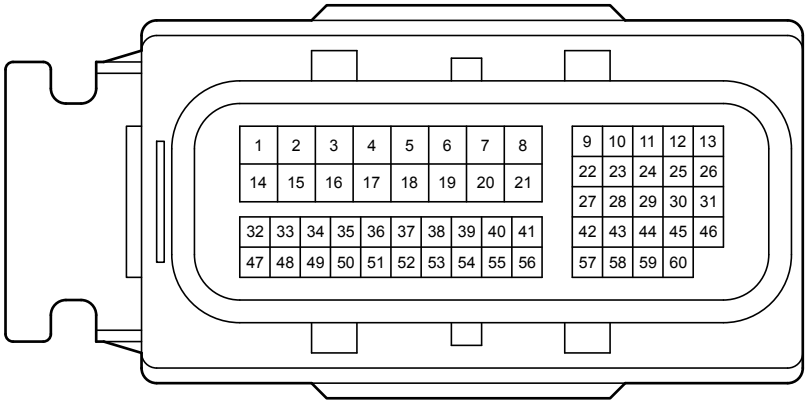

A 28
Black

A 29
Black

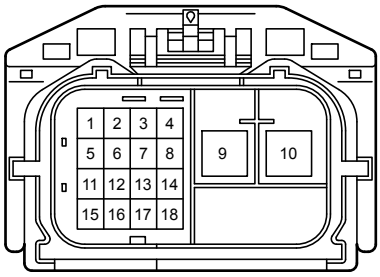

A 35
Gray

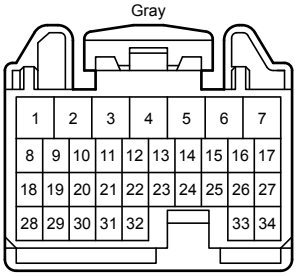

A 36
Gray

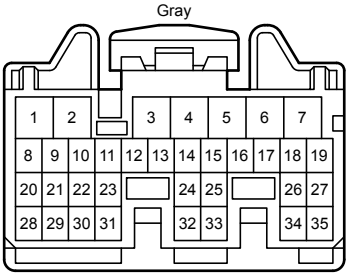

A 50
Gray

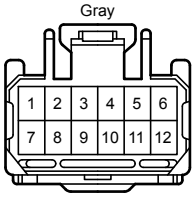

A 51
Blue

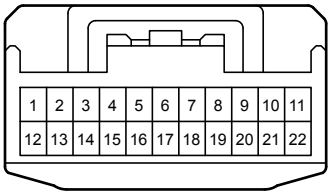

A 53
White

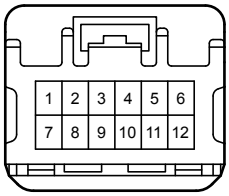

A 57
Blue

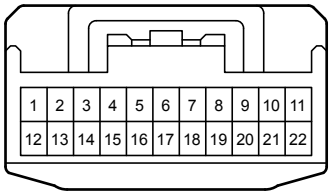

A 69
Gray

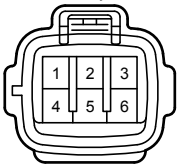

A 79

Black

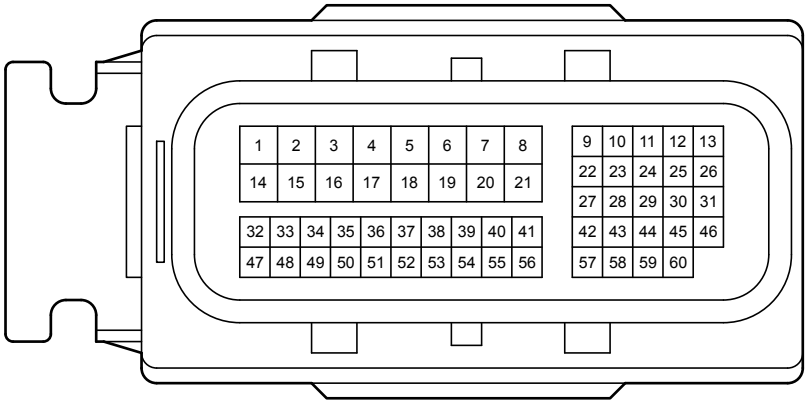

F 5

Black

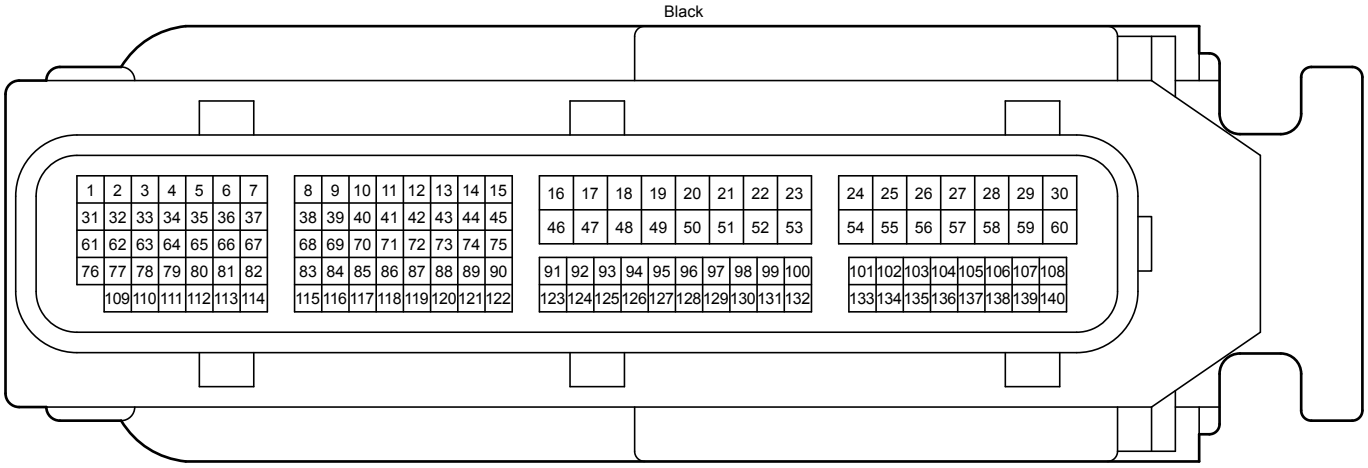

F 21

Black

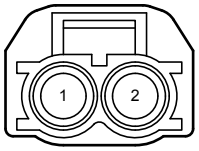

F 24

Black

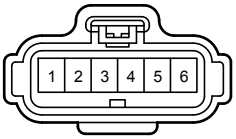

F 65

Gray

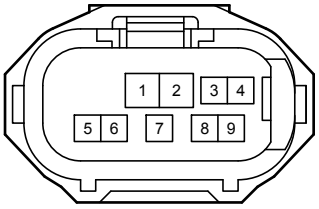

F 66

Gray

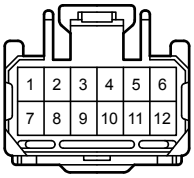

F 70

Black

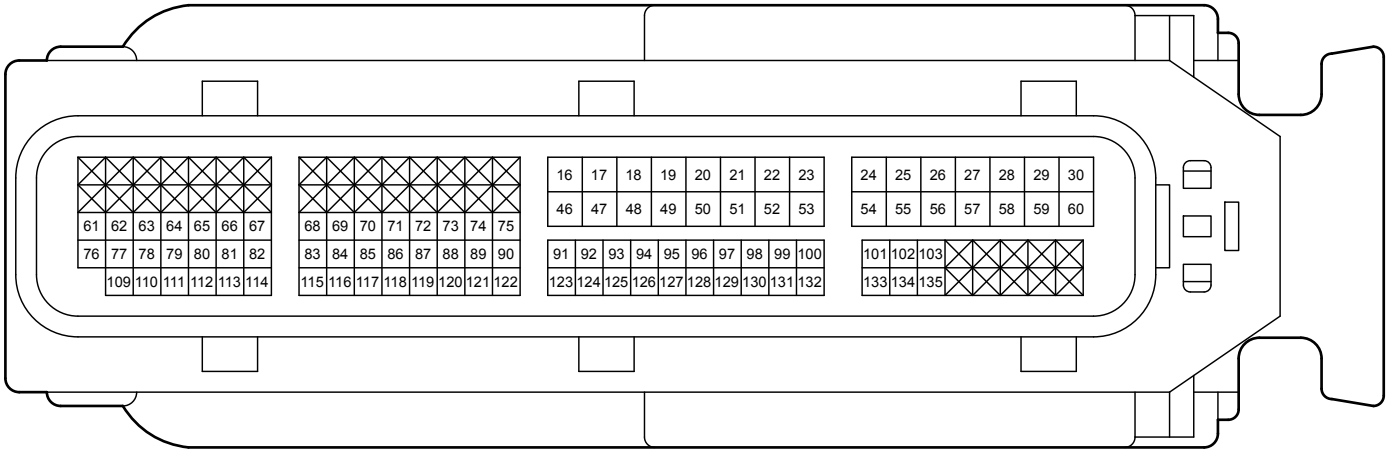

F 85
Black

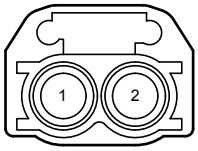

N 6
Black

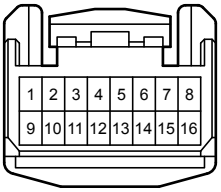

N 23
Black

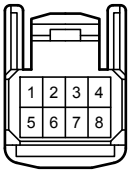

N 33
White

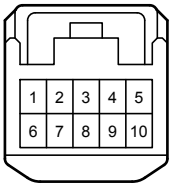

N 34
Black

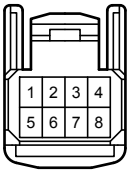

N 40
Black

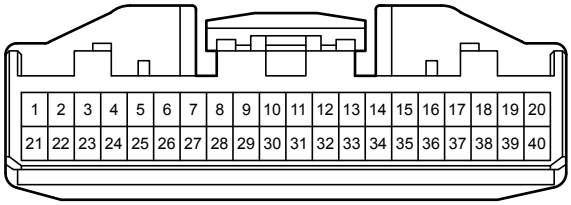

N 42
Black

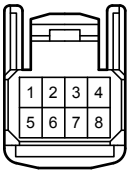

N 51
Black

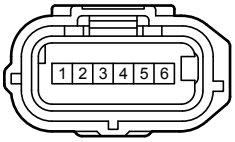

N 59
Black

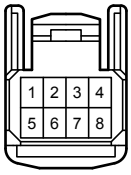

N 91
Gray

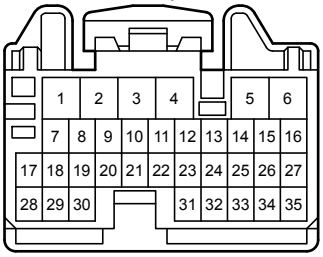

N 92
Gray

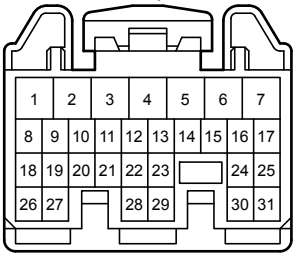

N104
White

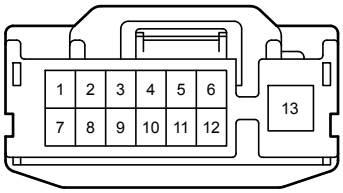

N105
Black

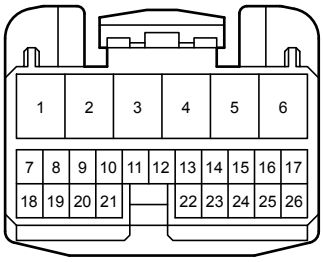

N131
Gray

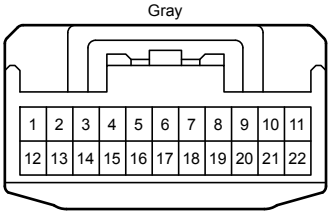

N134
Black

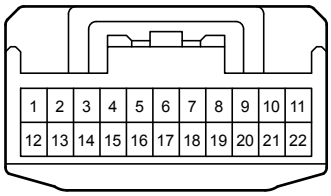

N165
Black

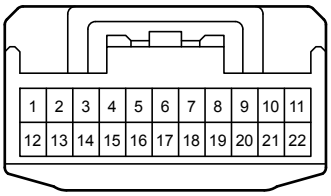

N173
White

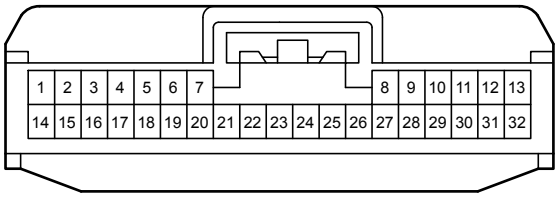

N176
Black

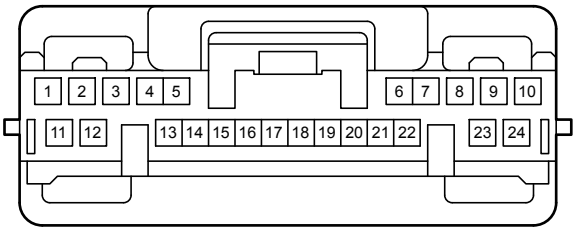

N177
Gray

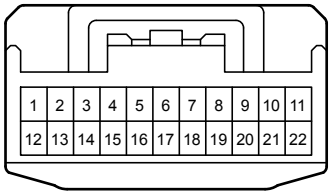

N178
Gray

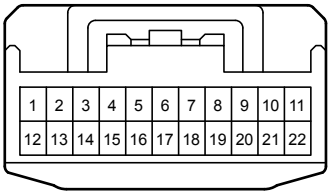

T 6
Black

T 30
White

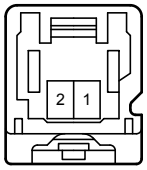

T 44
Blue

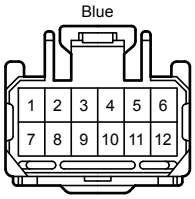

T 45
Blue

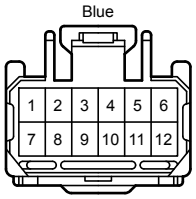

U 32
White

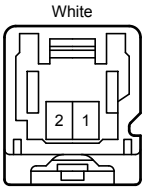

U 37
White

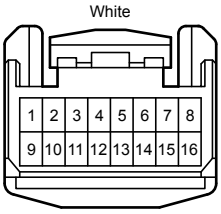

U 42
Black

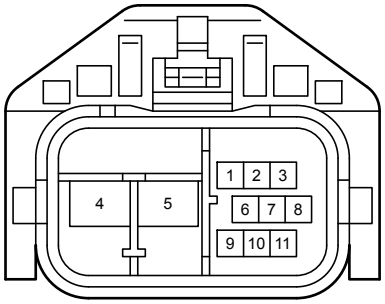

U 54
Blue

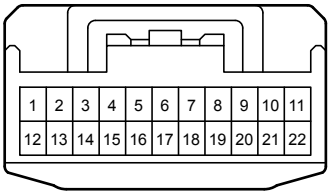

U 65
White

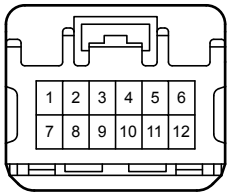

U 67
Gray

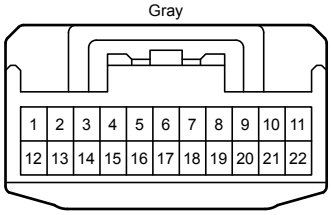

X 7
White

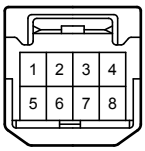

o 1
Black

o 2
Black

1A
Black

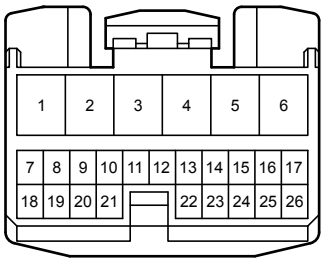

1B
Black

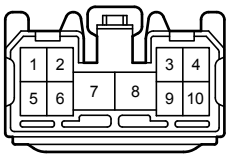

1E
White

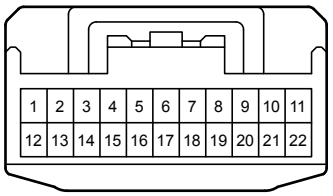

1F
White



1G
Black



1I
White



4A
White

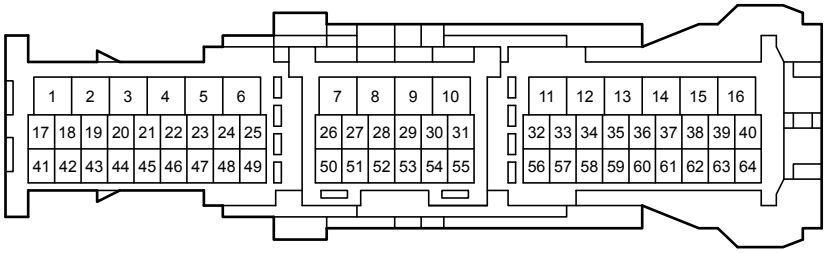

4B
White

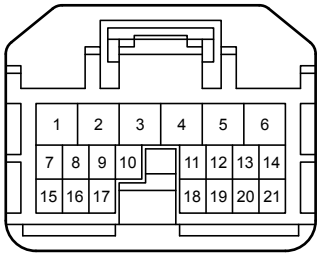

4C
White

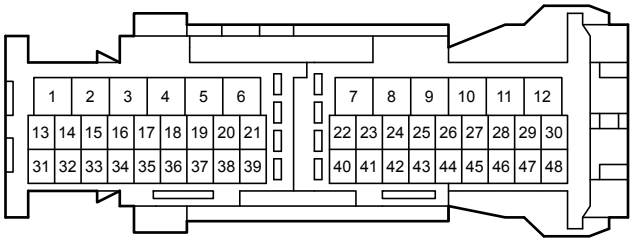

4D
White

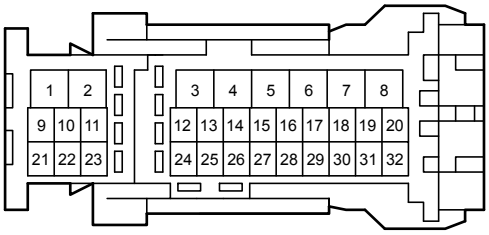

5A
White

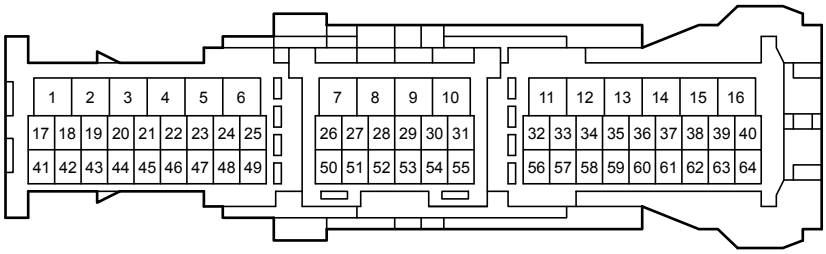

5B
White

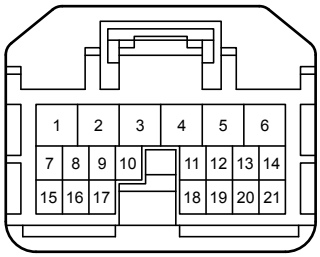

5D
White

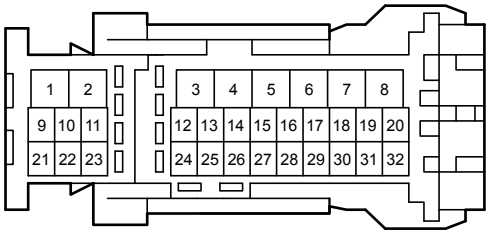

AF1
White

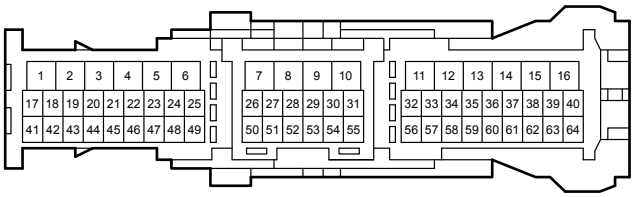

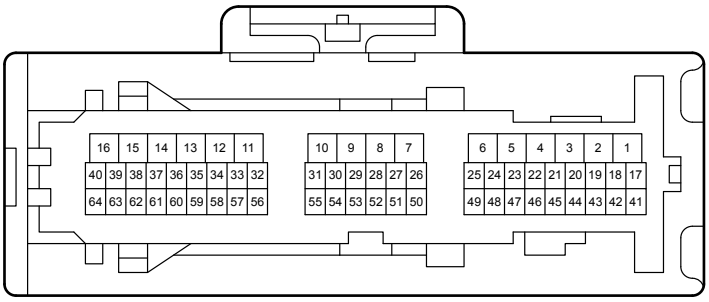

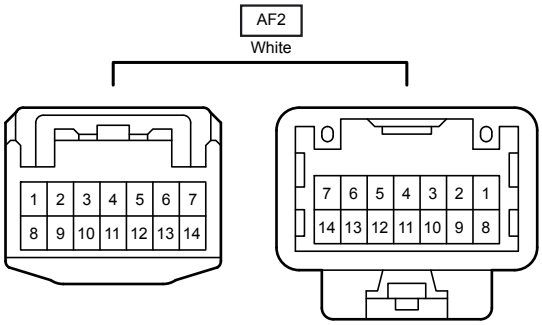
AF2
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8

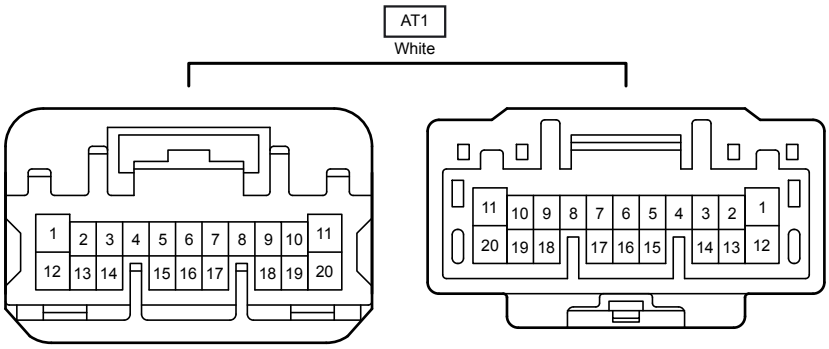
AT1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

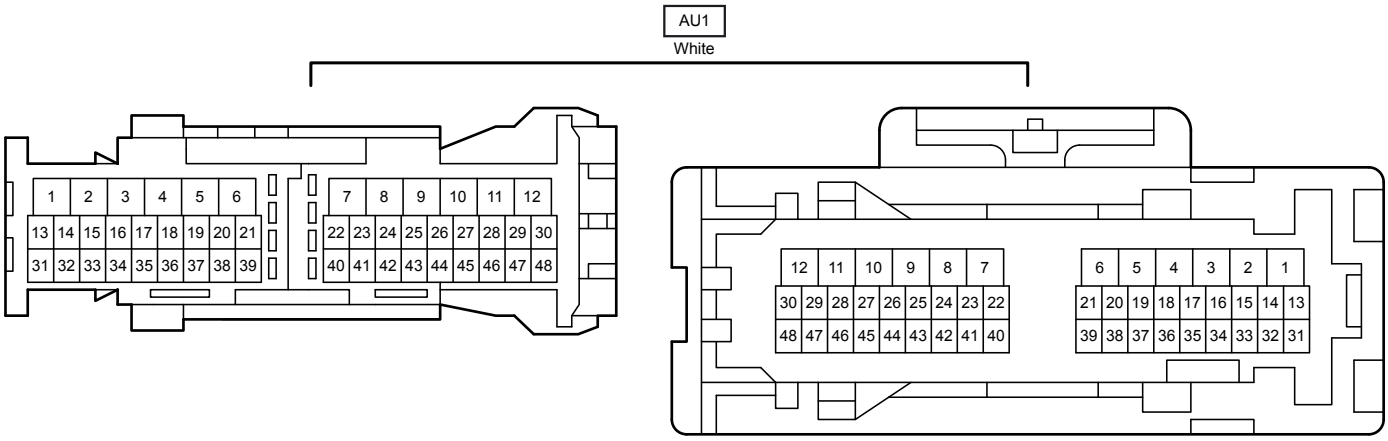
AU1
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
12 11 10 9 8 7
30 29 28 27 26 25 24 23 22
48 47 46 45 44 43 42 41 40
6 5 4 3 2 1
21 20 19 18 17 16 15 14 13
39 38 37 36 35 34 33 32 31

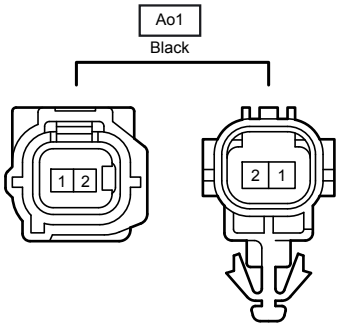
Ao1
Black
1 2
2 1

NA1
White

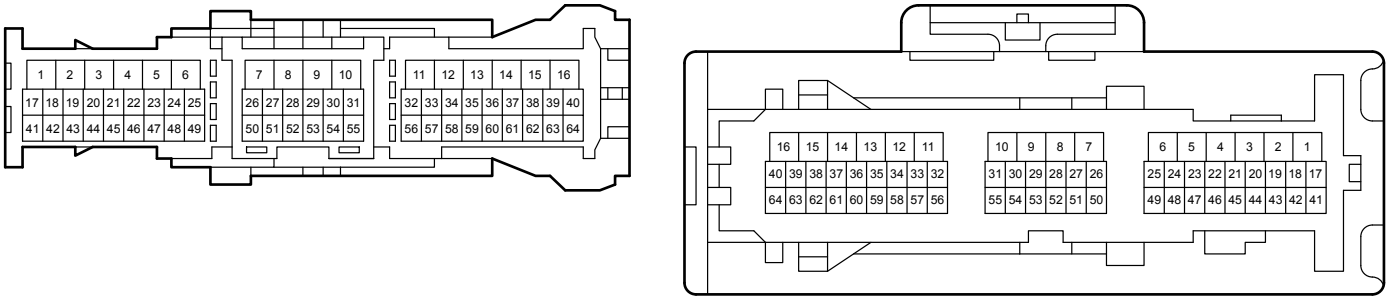

NA2
White

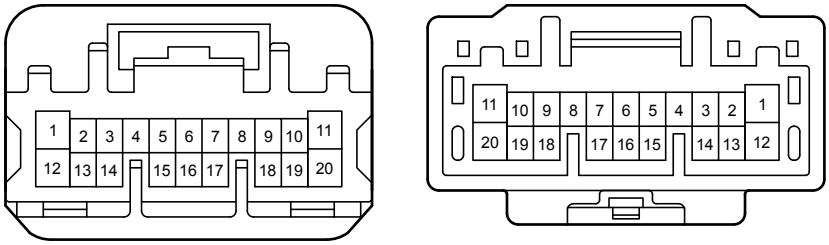

NA3
White

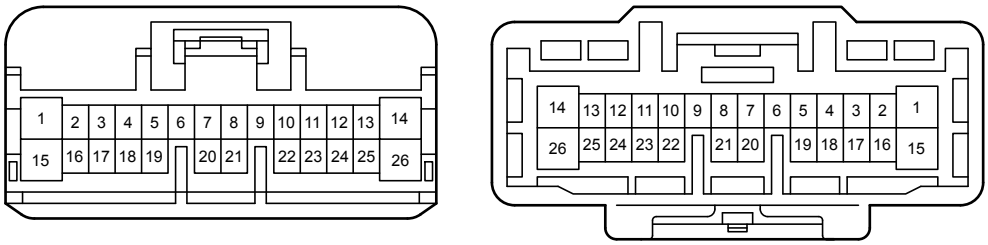

NA4
Gray

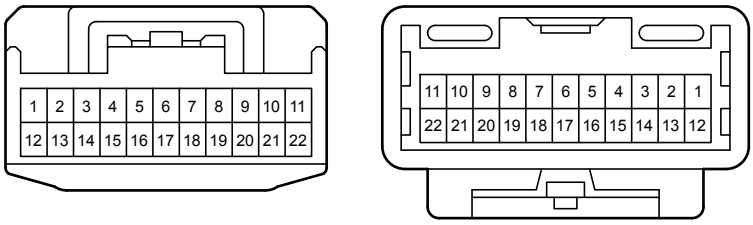

NU2
White

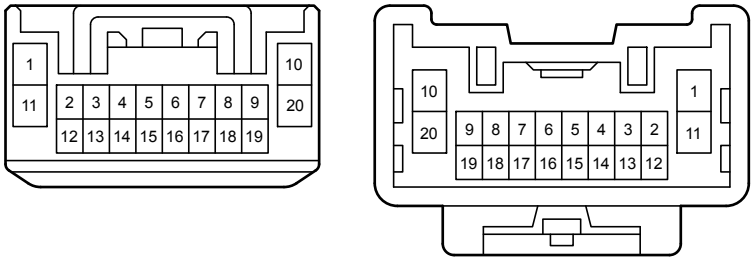

TU1
White

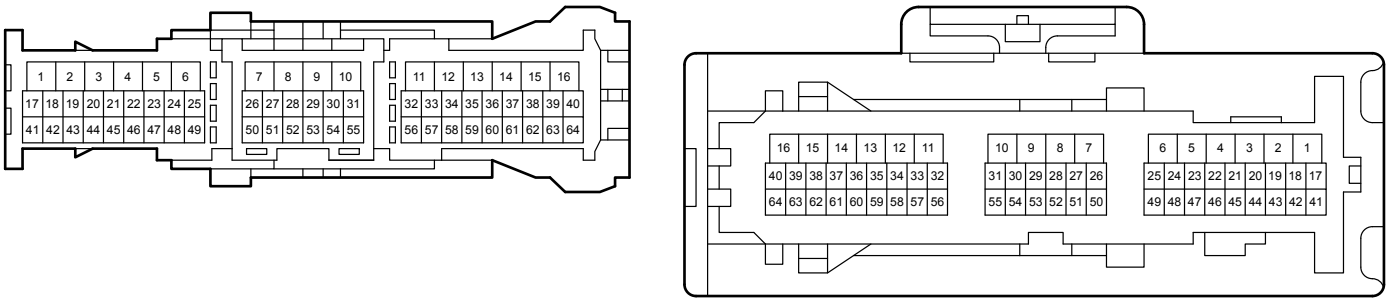

UN1
White

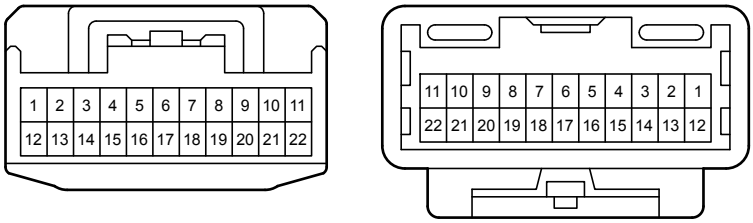

UX2
White

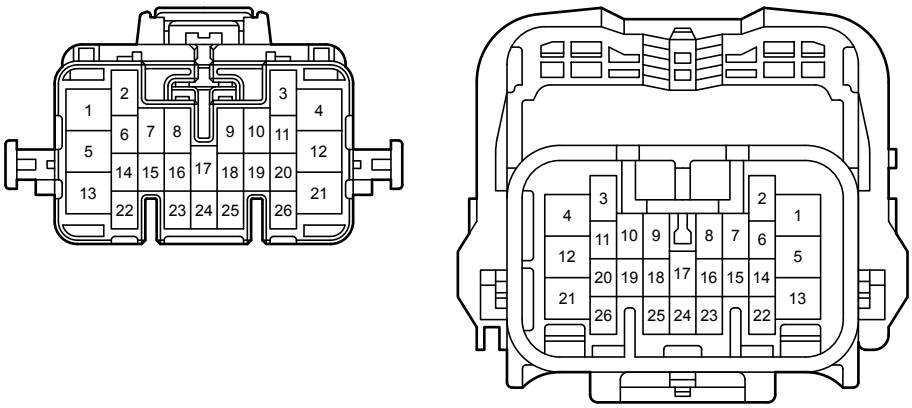

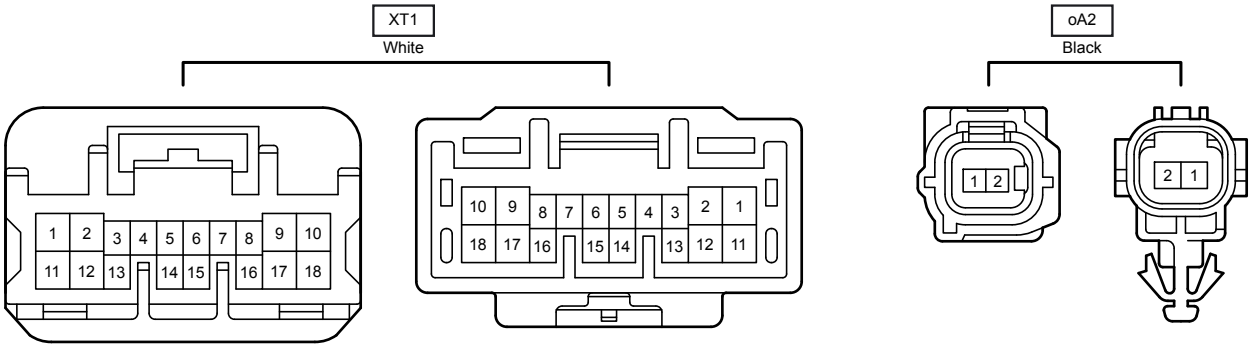
XT1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11
oA2
Black
1 2
2 1