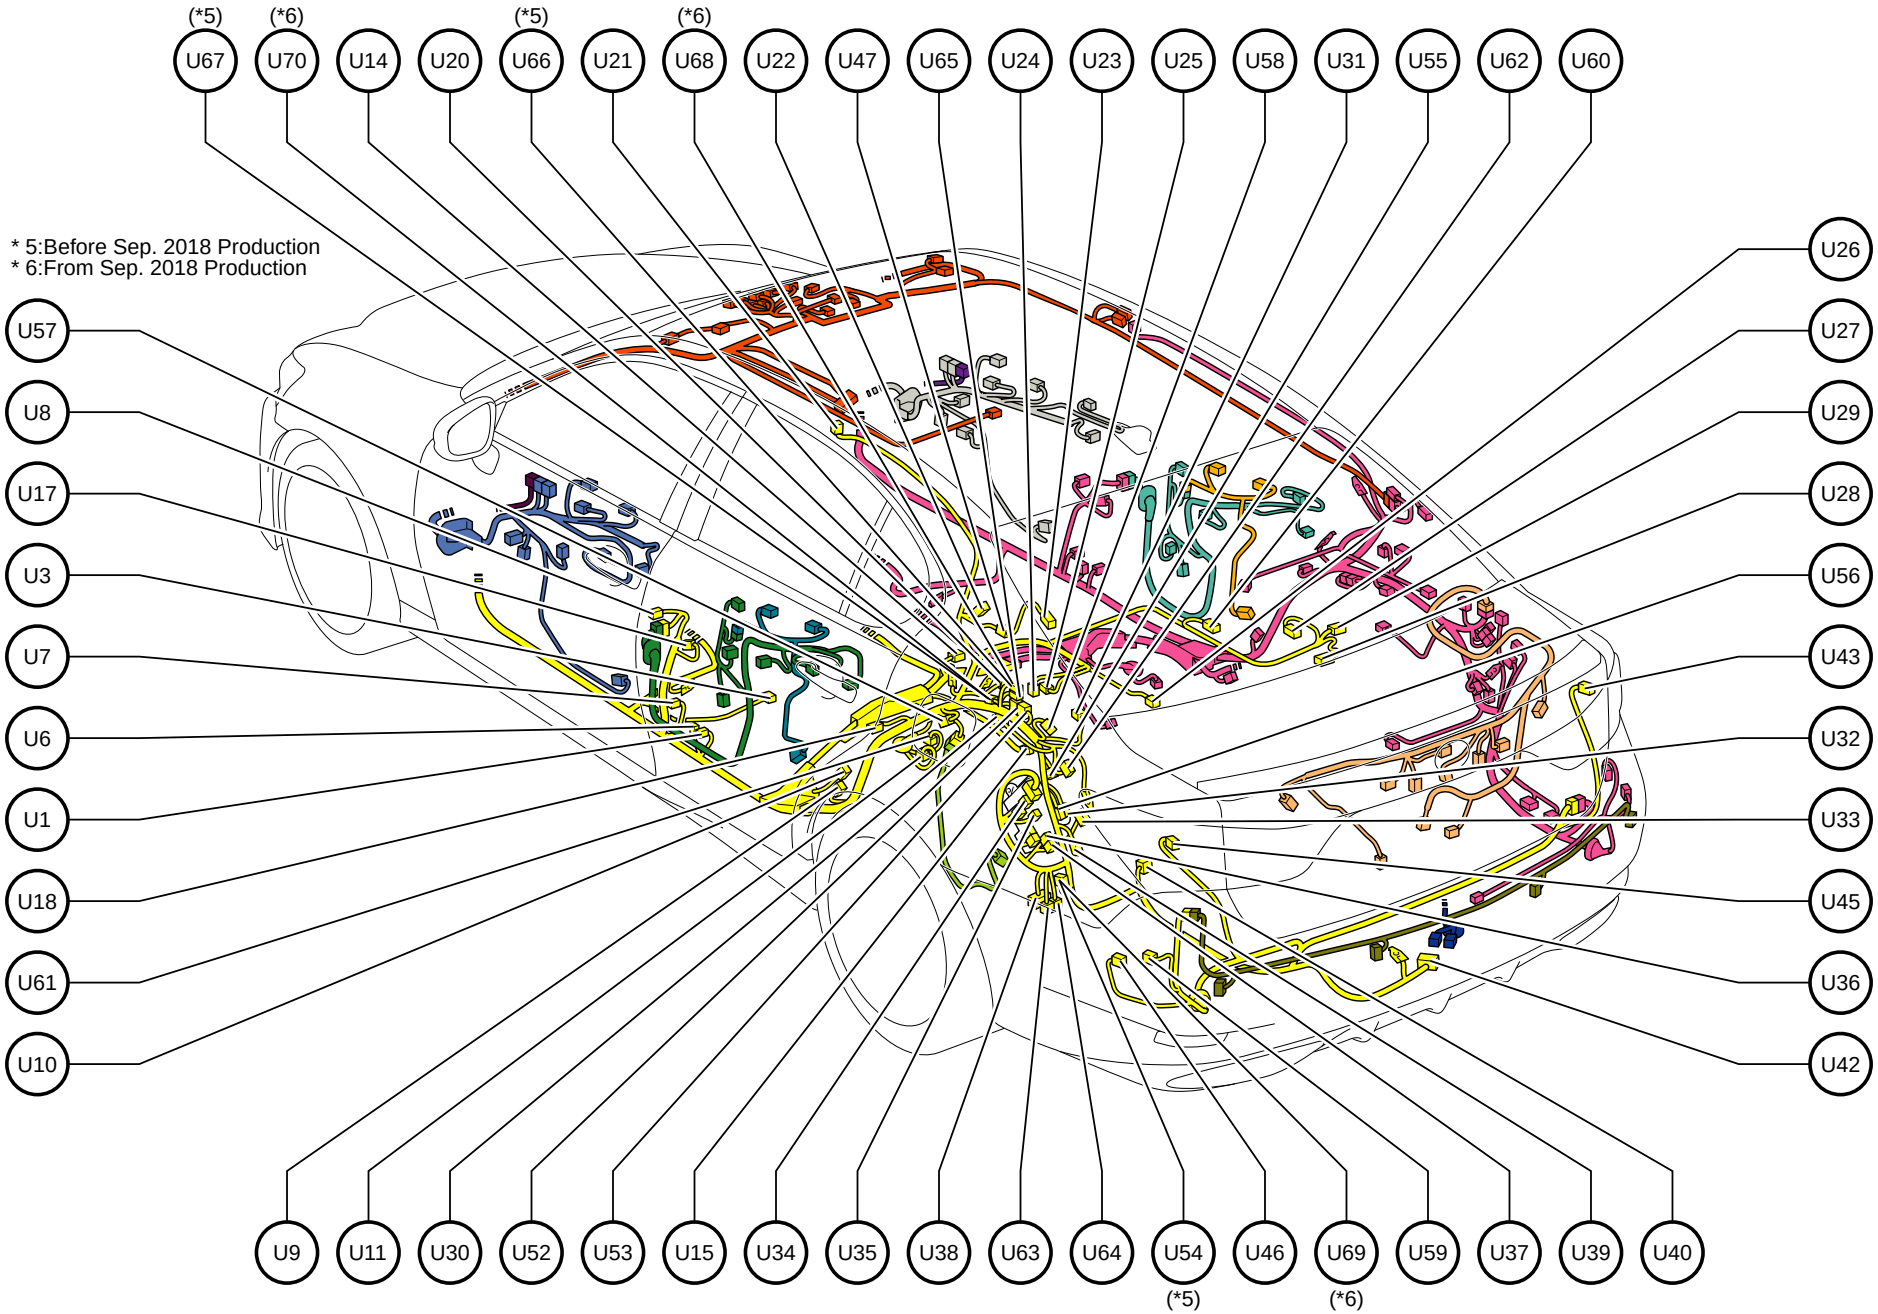
(*5)
(*6)
(*5)
(*6)
U67
U70
U14
U20
U66
U21
U68
U22
U47
U65
U24
U23
U25
U58
U31
U55
U62
U60
* 5:Before Sep. 2018 Production
* 6:From Sep. 2018 Production
U57
U8
U17
U3
U7
U6
U1
U18
U61
U10
U26
U27
U29
U28
U56
U43
U32
U33
U45
U36
U42
U9
U11
U30
U52
U53
U15
U34
U35
U38
U63
U64
U54
(*5)
U46
U69
(*6)
U59
U37
U39
U40

U 1 Front Seat Outer Belt Assembly LH
U 3 Rear No. 2 Oxygen Sensor (Bank 2 Sensor 2)
U 6 Front Seat Outer Belt Assembly LH
U 7 Front Seat Outer Belt Assembly LH
U 8 Front Door Courtesy Light Switch Assembly LH
U 9 Rear Airbag Sensor LH
U 10 Rear Side Airbag Squib Circuit LH
U 11 Fuel Sender Gage Assembly
U 14 No. 2 Indoor Electrical Key Antenna Assembly
U 15 Rear Seat Inner with Center Belt Assembly LH
U 17 Side Airbag Sensor Assembly LH
U 18 Rear Door Courtesy Light Switch Assembly LH
U 20 Noise Filter (Center Stop Light and Luggage Compartment Light)
U 21 Curtain Shield Airbag Assembly LH
U 22 Tire Pressure Warning ECU and Receiver
U 23 Rear Window Defogger (Back Window Glass)
U 24 Rear Seat 3 Point Type Belt Assembly Outer LH
U 25 Rear Seat 3 Point Type Belt Assembly Outer LH
U 26 Rear Header Speaker Assembly LH
U 27 Center Stop Light Assembly
U 28 No. 1 Luggage Compartment Light Assembly
U 29 Rear Sunshade Relay (Rear Window Shade Assembly)
U 30 Fuel Lid Lock Assembly with Motor
U 31 Rear Absorber Control Actuator LH
U 32 Rear Speed Sensor LH
U 33 Luggage Closer Motor Assembly
U 34 Seat Belt Control ECU
U 35 Seat Belt Control ECU
U 36 Parking Brake ECU Assembly
U 37 Parking Brake ECU Assembly
U 38 Fuel Pump Control ECU
U 39 Rear Tire Pressure Monitor Initiator
U 40 Parking Brake Actuator Assembly with Bracket
U 42 Rear Steering Control ECU
U 43 Rear Combination Light Assembly RH
U 45 Rear Combination Light Assembly LH
U 46 Blind Spot Monitor Sensor LH
U 47 Noise Filter (Rear Window Defogger)
U 52 Junction Connector
U 53 Junction Connector
U 54 Junction Connector
U 55 Junction Terminal
U 56 Junction Terminal
U 57 Junction Connector
U 58 Junction Connector
U 59 Blind Spot Monitor Sensor LH
U 60 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
U 61 Fuel Suction Tube with Pump and Gauge Assembly
U 62 Multiplex Network Door ECU
U 63 Fuel Pump Control ECU
U 64 Fuel Pump Control ECU
U 65 Junction Connector
U 66 Junction Connector
U 67 Junction Connector
U 68 Junction Connector
U 69 Junction Connector
U 70 Junction Connector

U 1
White



U 3
Gray

U 6
Black



U 7
White



U 8
Black

U 9
Yellow

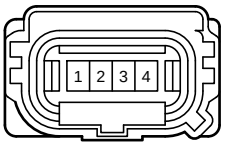

U 10
Yellow

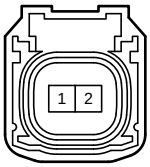

U 11
White

U 14
White

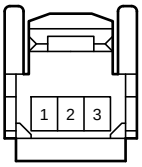

U 15
White

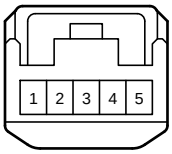

U 17
Yellow

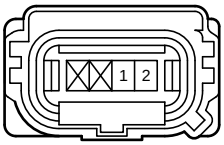

U 18
Black

U 20
Black



U 21
Black

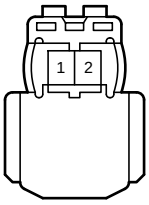

U 22
White

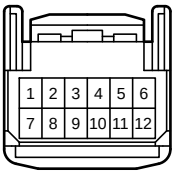

U 23
White

U 24
White



U 25
Black



U 26
Black

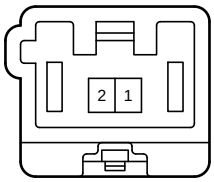

U 27
White



U 28
White

U 29
White

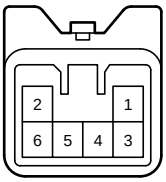

U 30
Black



U 31
Black

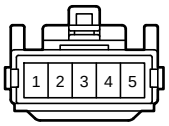

U 32
White

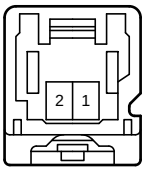

U 33
White

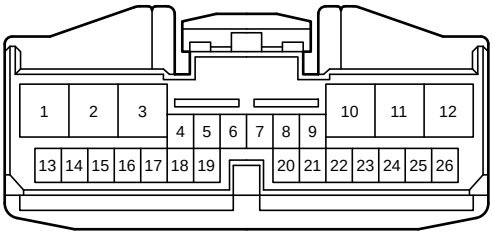

U 34
White

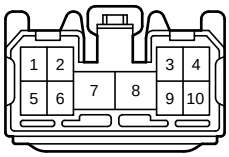

U 35
White

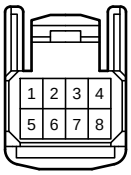

U 36
White

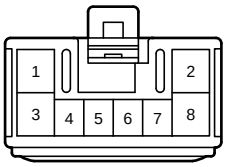

U 37
White

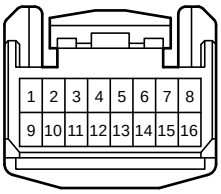

U 38
Black

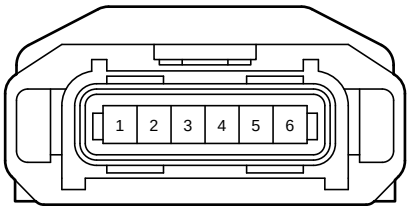

U 39
White

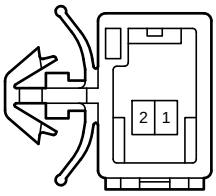

U 40
White

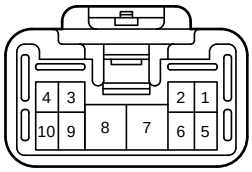

U 42
Black

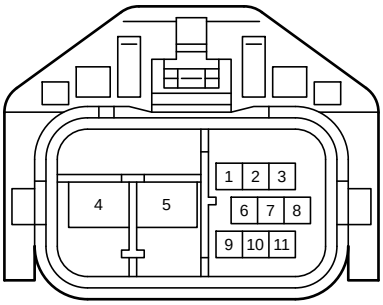

U 43
White



U 45
White



U 46
Black

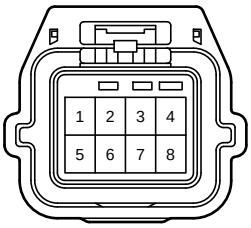

U 47
Black



U 52
Blue

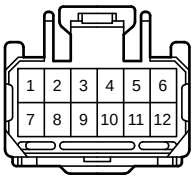

U 53
Blue

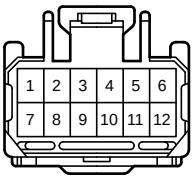

U 54
Blue

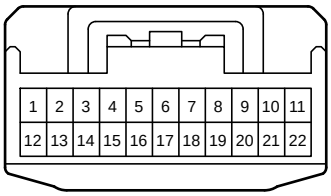

U 55
White

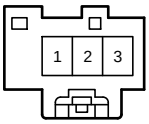

U 56
White

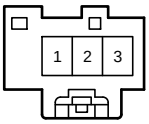

U 57
Black



U 58
Black



U 59
Black

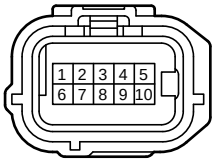

U 60
Black



U 61
Black

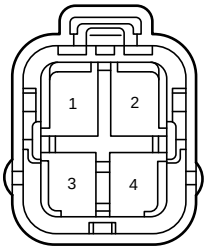

U 62
Black

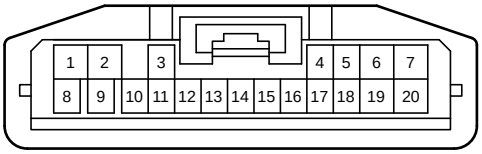

U 63
Black

U 64
Black

U 65
White

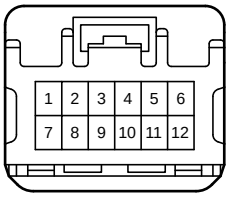

U 66
Gray

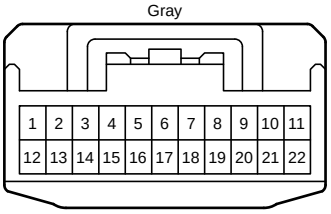

U 67

Gray

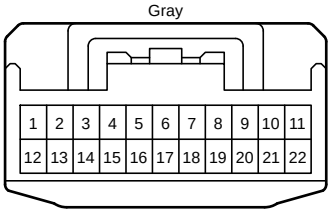

U 68

Black

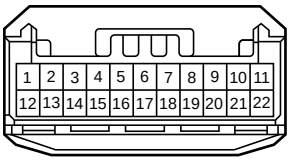

U 69

Black

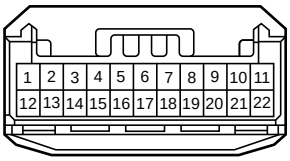

U 70
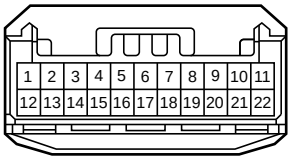
Black