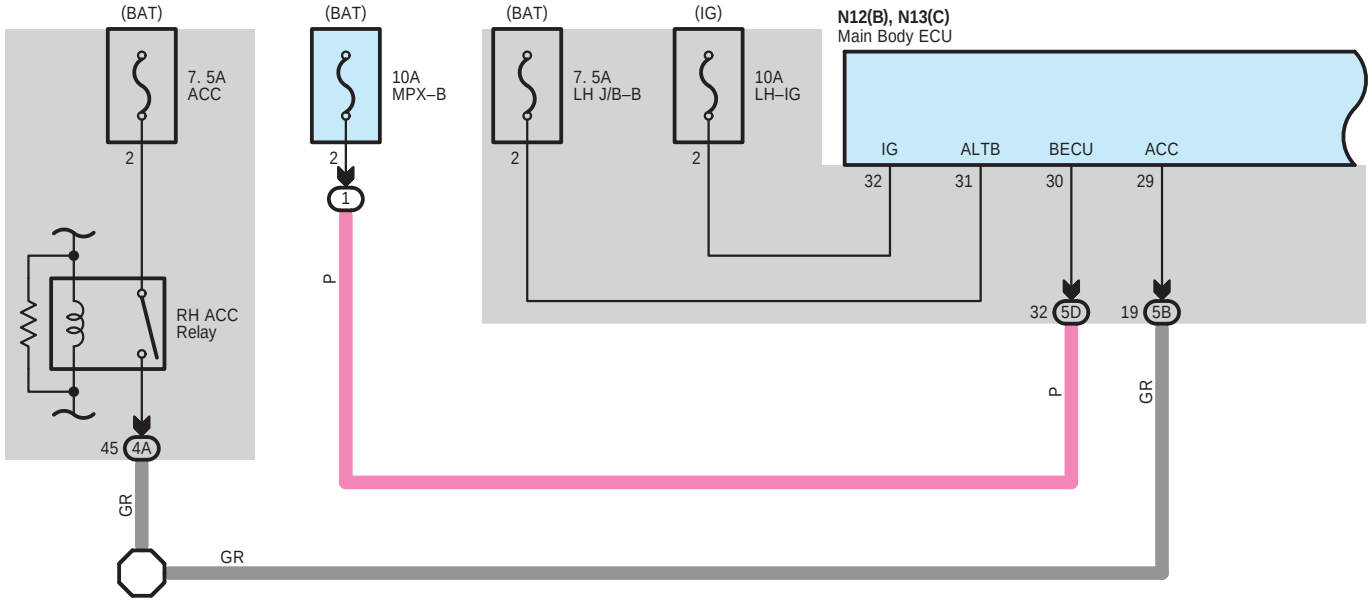
(BAT)
7. 5A
ACC
2
RH ACC
Relay
45
4A
GR
(BAT)
10A
MPX–B
2
1
P
(BAT)
7. 5A
LH J/B–B
2
(IG)
10A
LH–IG
2
N12(B), N13(C)
Main Body ECU
IG
ALTB
BECU
ACC
32
31
30
29
32
5D
19
5B
P
GR
GR

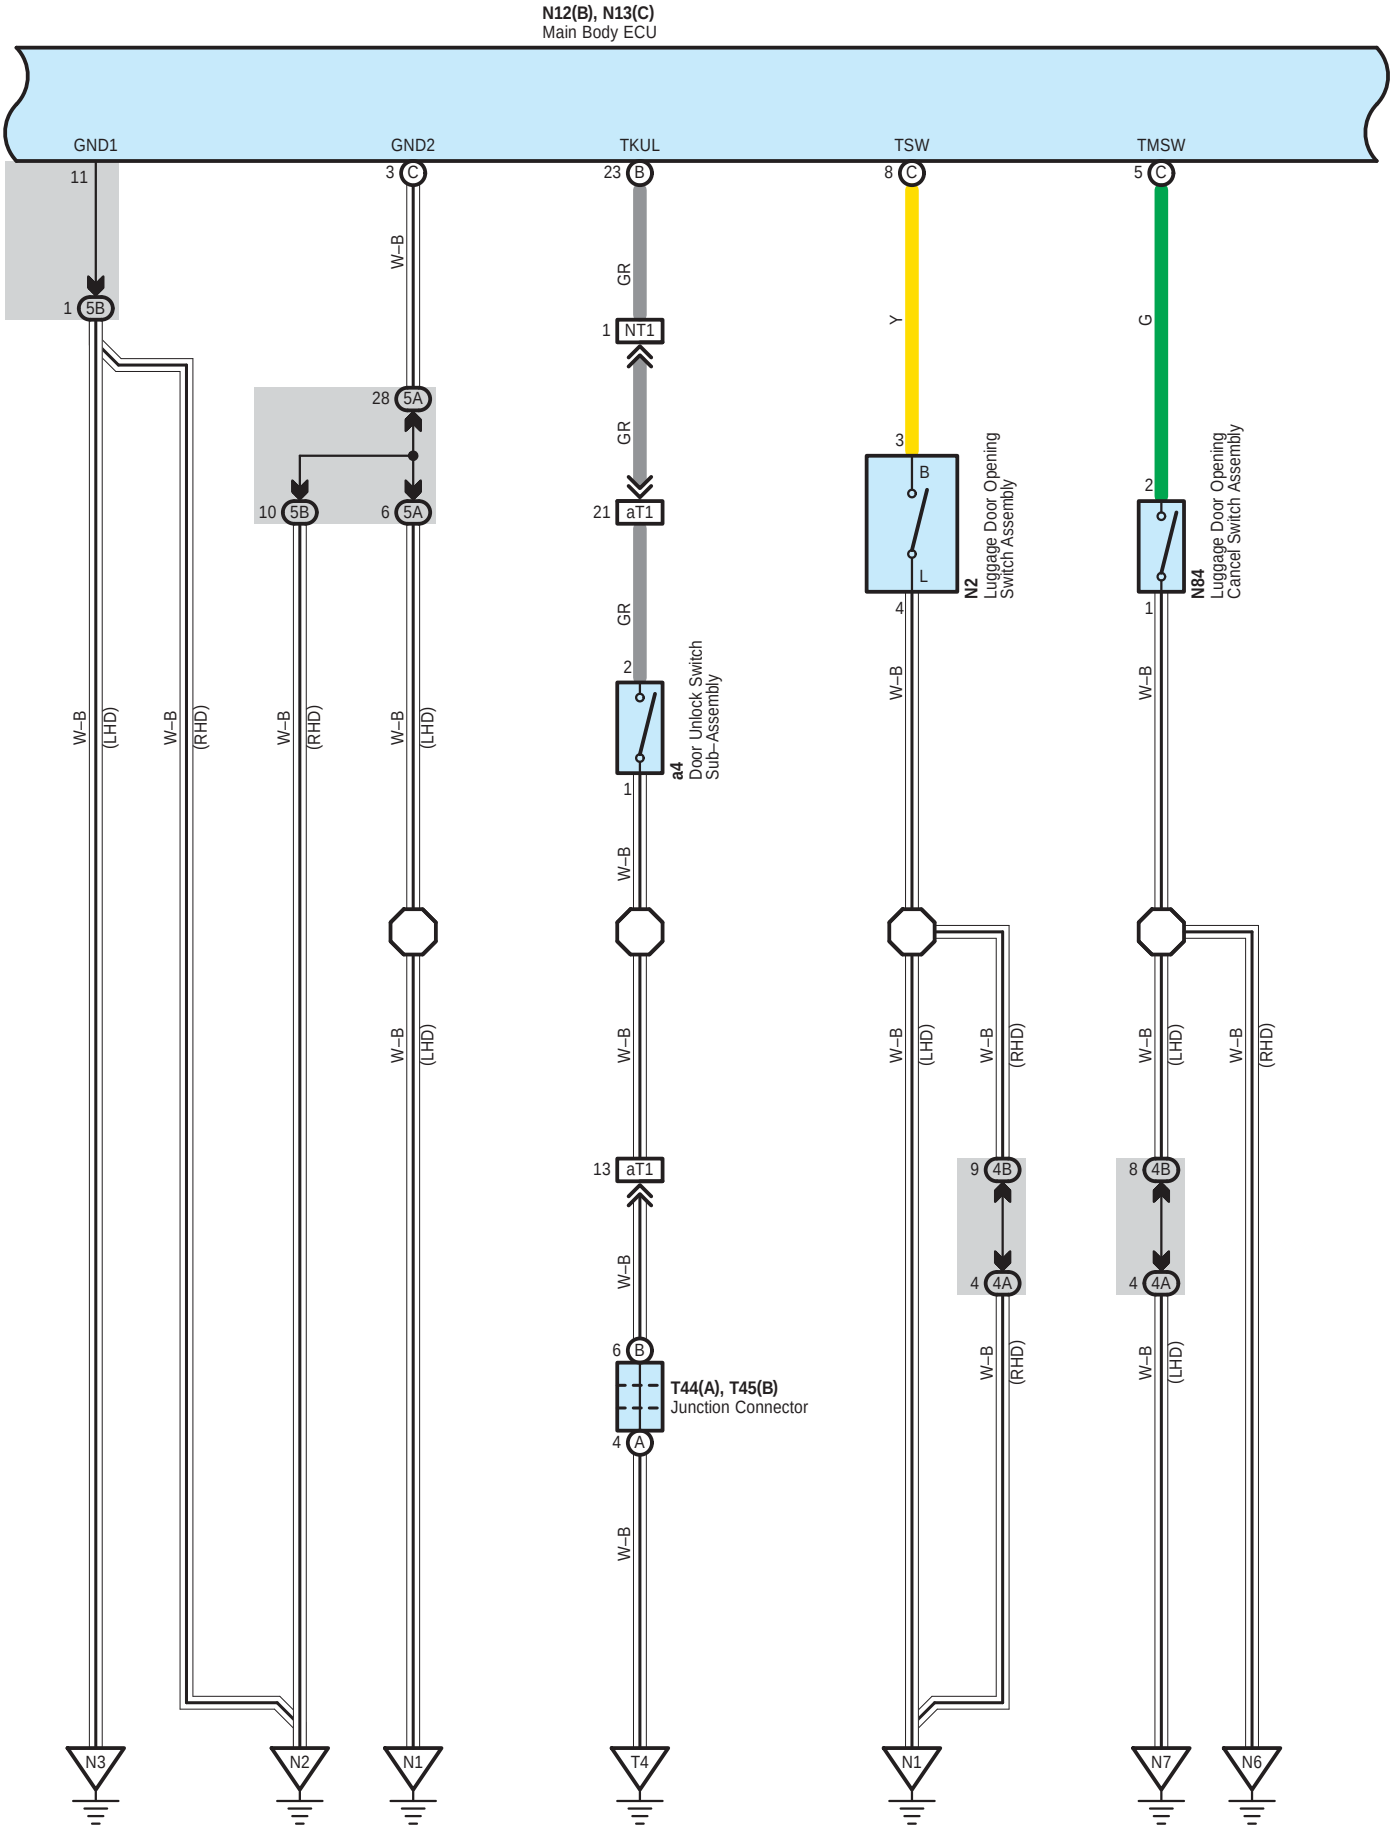
N12(B), N13(C)
Main Body ECU
GND1
GND2
TKUL
TSW
TMSW
11
1 5B
3 C
W–B
28 5A
10 5B
6 5A
23 B
GR
1 NT1
21 aT1
2
1
a4
Door Unlock Switch
Sub–Assembly
13 aT1
6 B
4 A
T44(A), T45(B)
Junction Connector
8 C
Y
3
B
L
4
N2
Luggage Door Opening
Switch Assembly
9 4B
4 4A
5 C
G
2
1
N84
Luggage Door Opening
Cancel Switch Assembly
8 4B
4 4A
(LHD)
(RHD)
N3
N2
N1
T4
N1
N7
N6

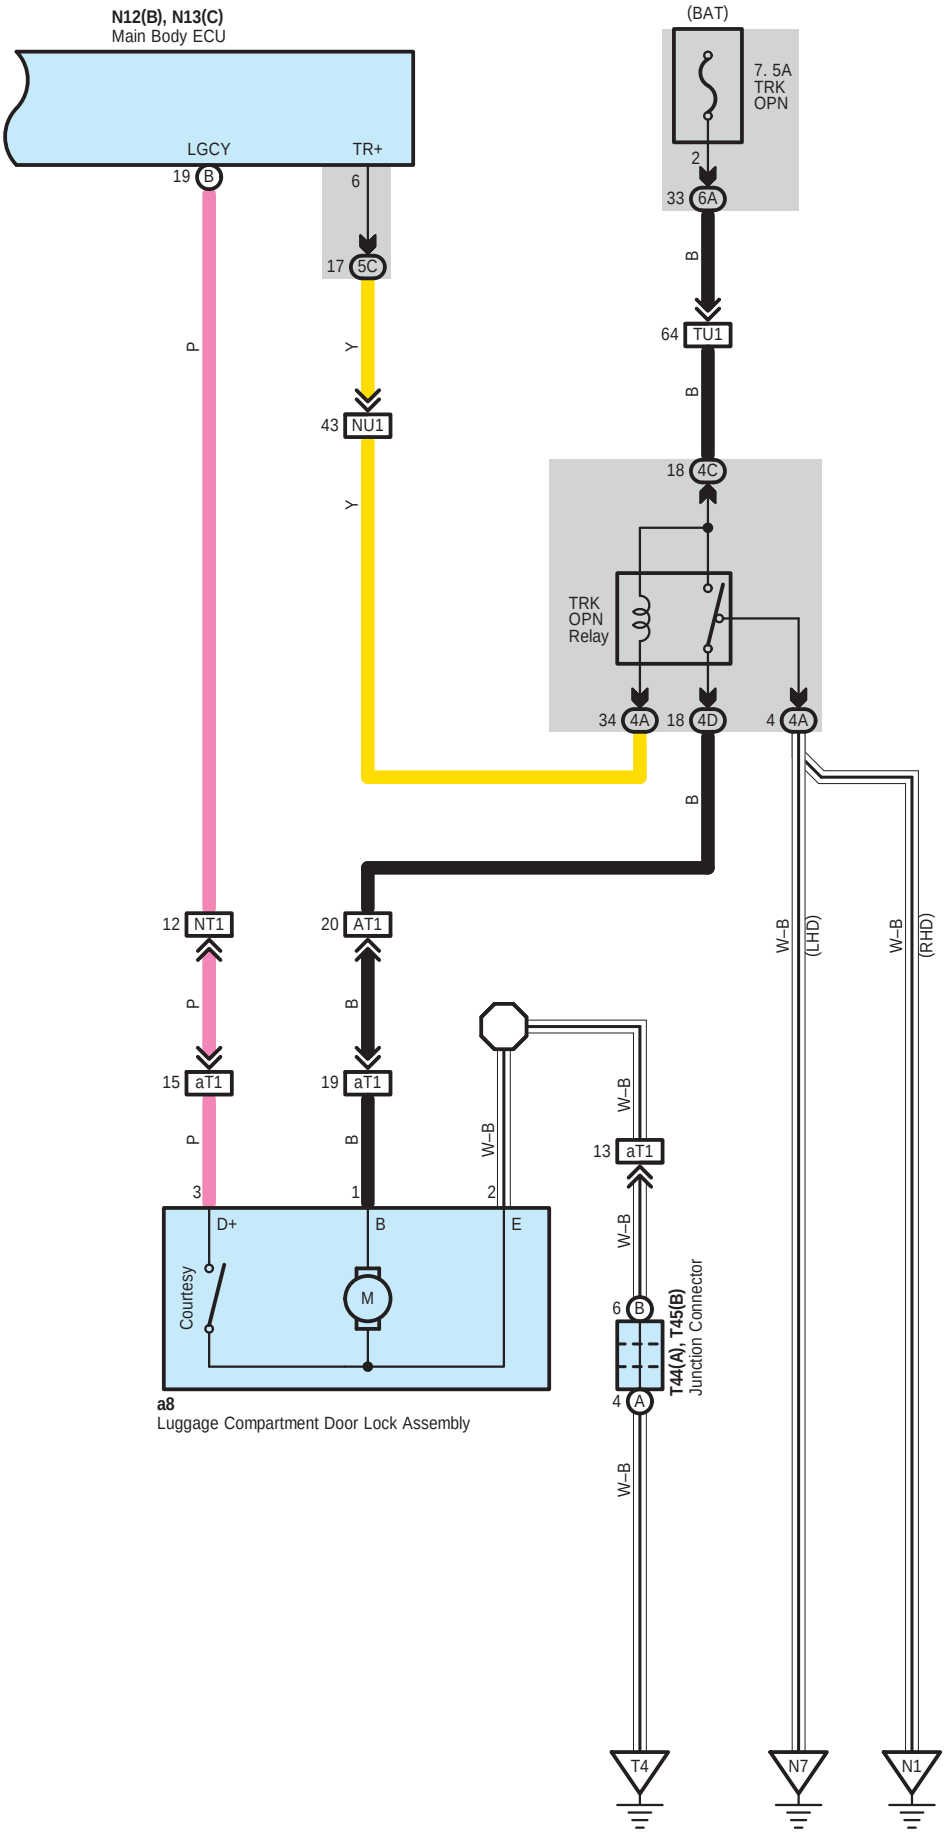
N12(B), N13(C)
Main Body ECU
LGCY
TR+
19 B
6
17 5C
P
Y
43 NU1
Y
(BAT)
7. 5A
TRK
OPN
2
33 6A
B
64 TU1
B
18 4C
TRK
OPN
Relay
34 4A
18 4D
4 4A
B
12 NT1
20 AT1
P
B
15 aT1
19 aT1
P
B
W–B
3
1
2
D+
B
E
Courtesy
M
a8
Luggage Compartment Door Lock Assembly
W–B
13 aT1
W–B
6 B
4 A
T44(A), T45(B)
Junction Connector
W–B
W–B
(LHD)
W–B
(RHD)
T4
N7
N1

N 2
Black

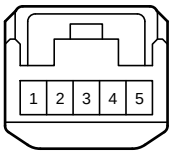

N 12
White

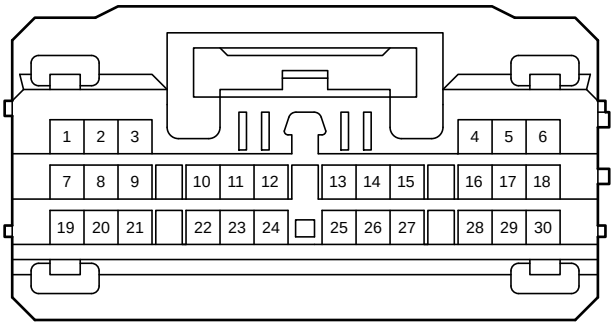

N 13
White

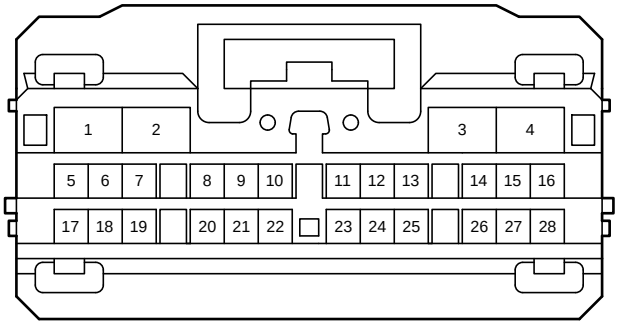

N 84
Blue



T 44
Blue

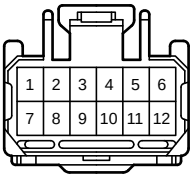

T 45
Blue

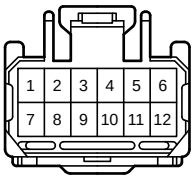

a 4
White

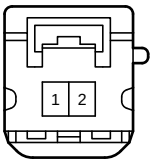

a 8
Black

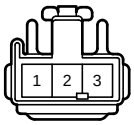

4A
White

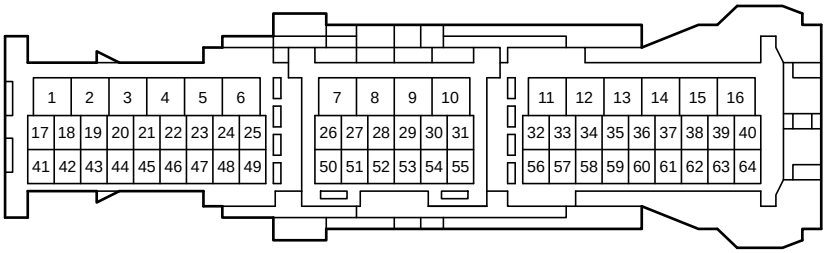

4B
White

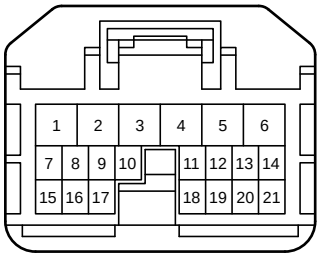

4C
White

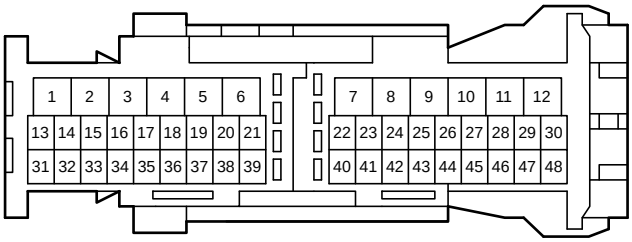

4D
White

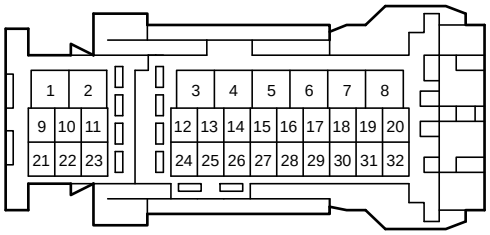

5A
White

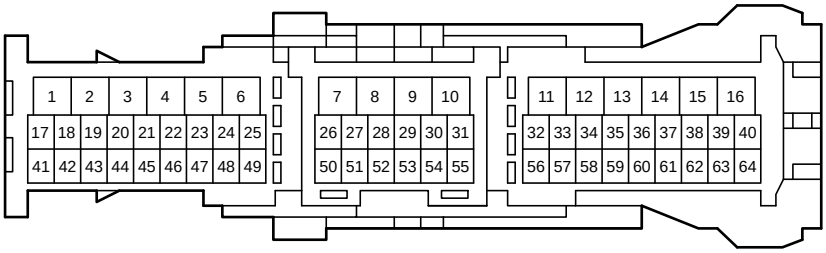

5B
White

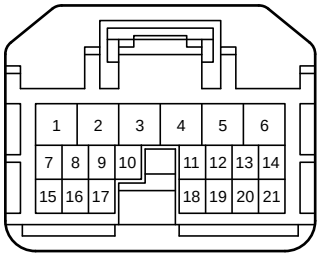

5C
White

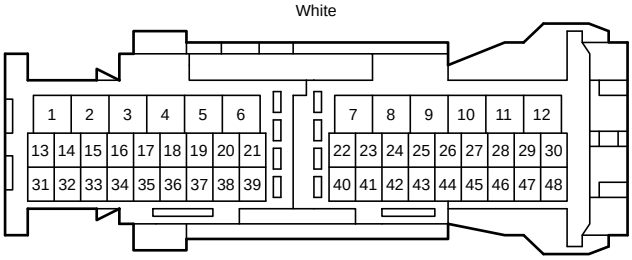

5D
White

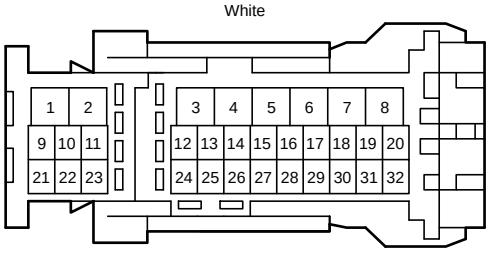

6A
White

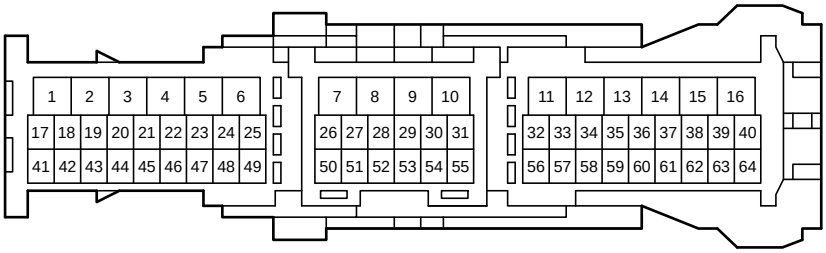

AT1
White

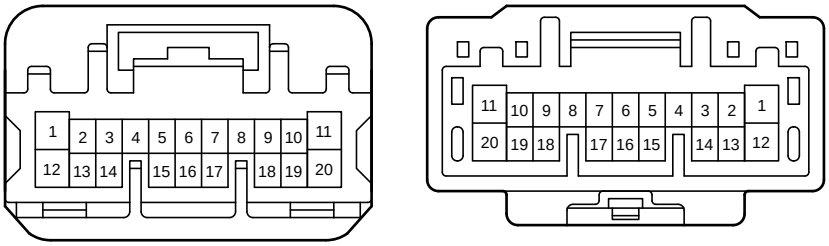

NT1
White

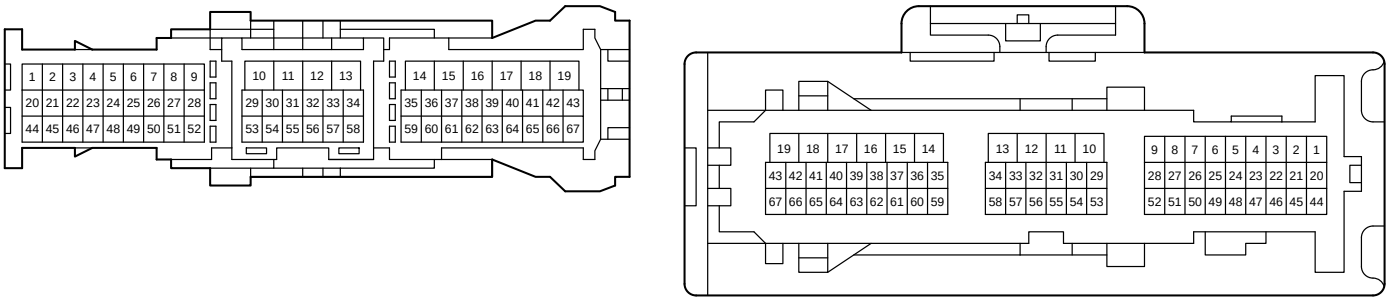

NU1
White

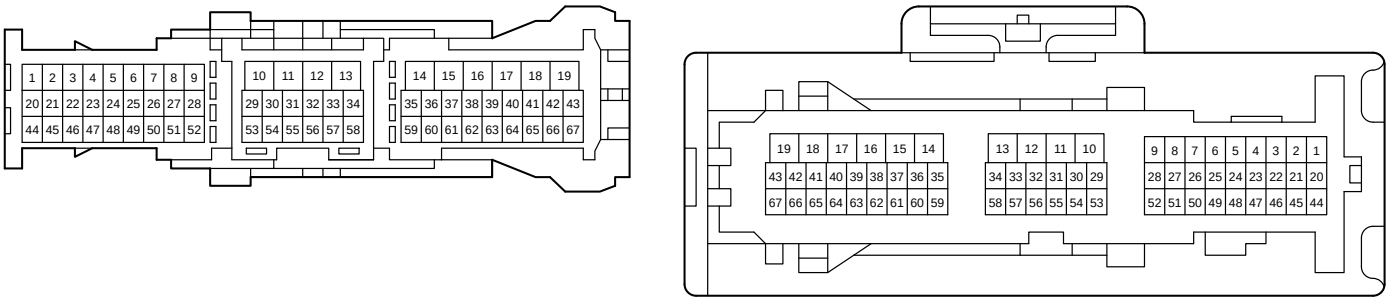

TU1
White

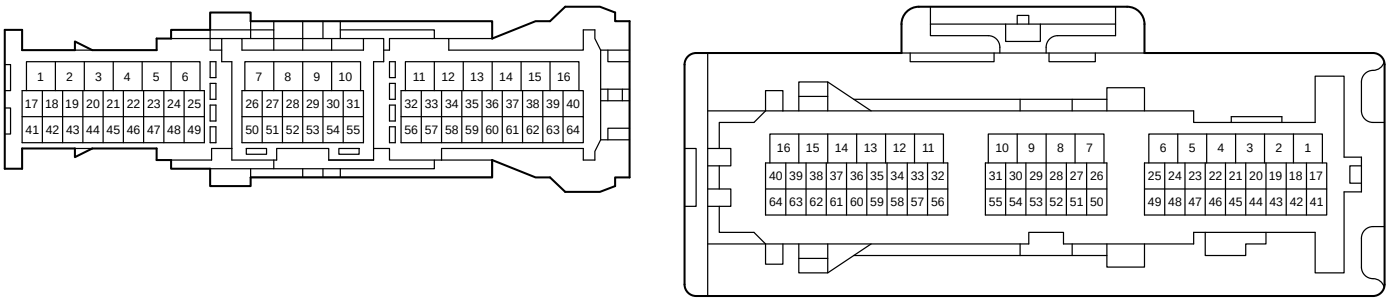
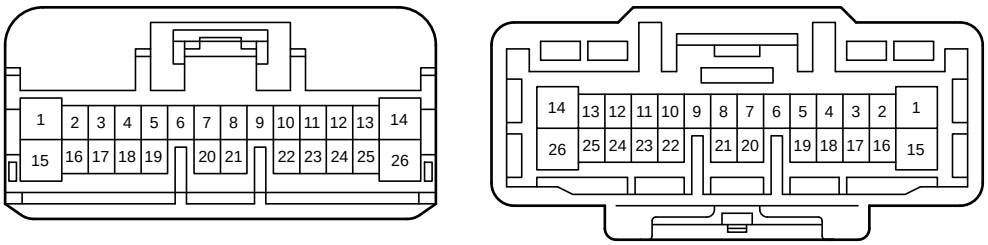
aT1
White