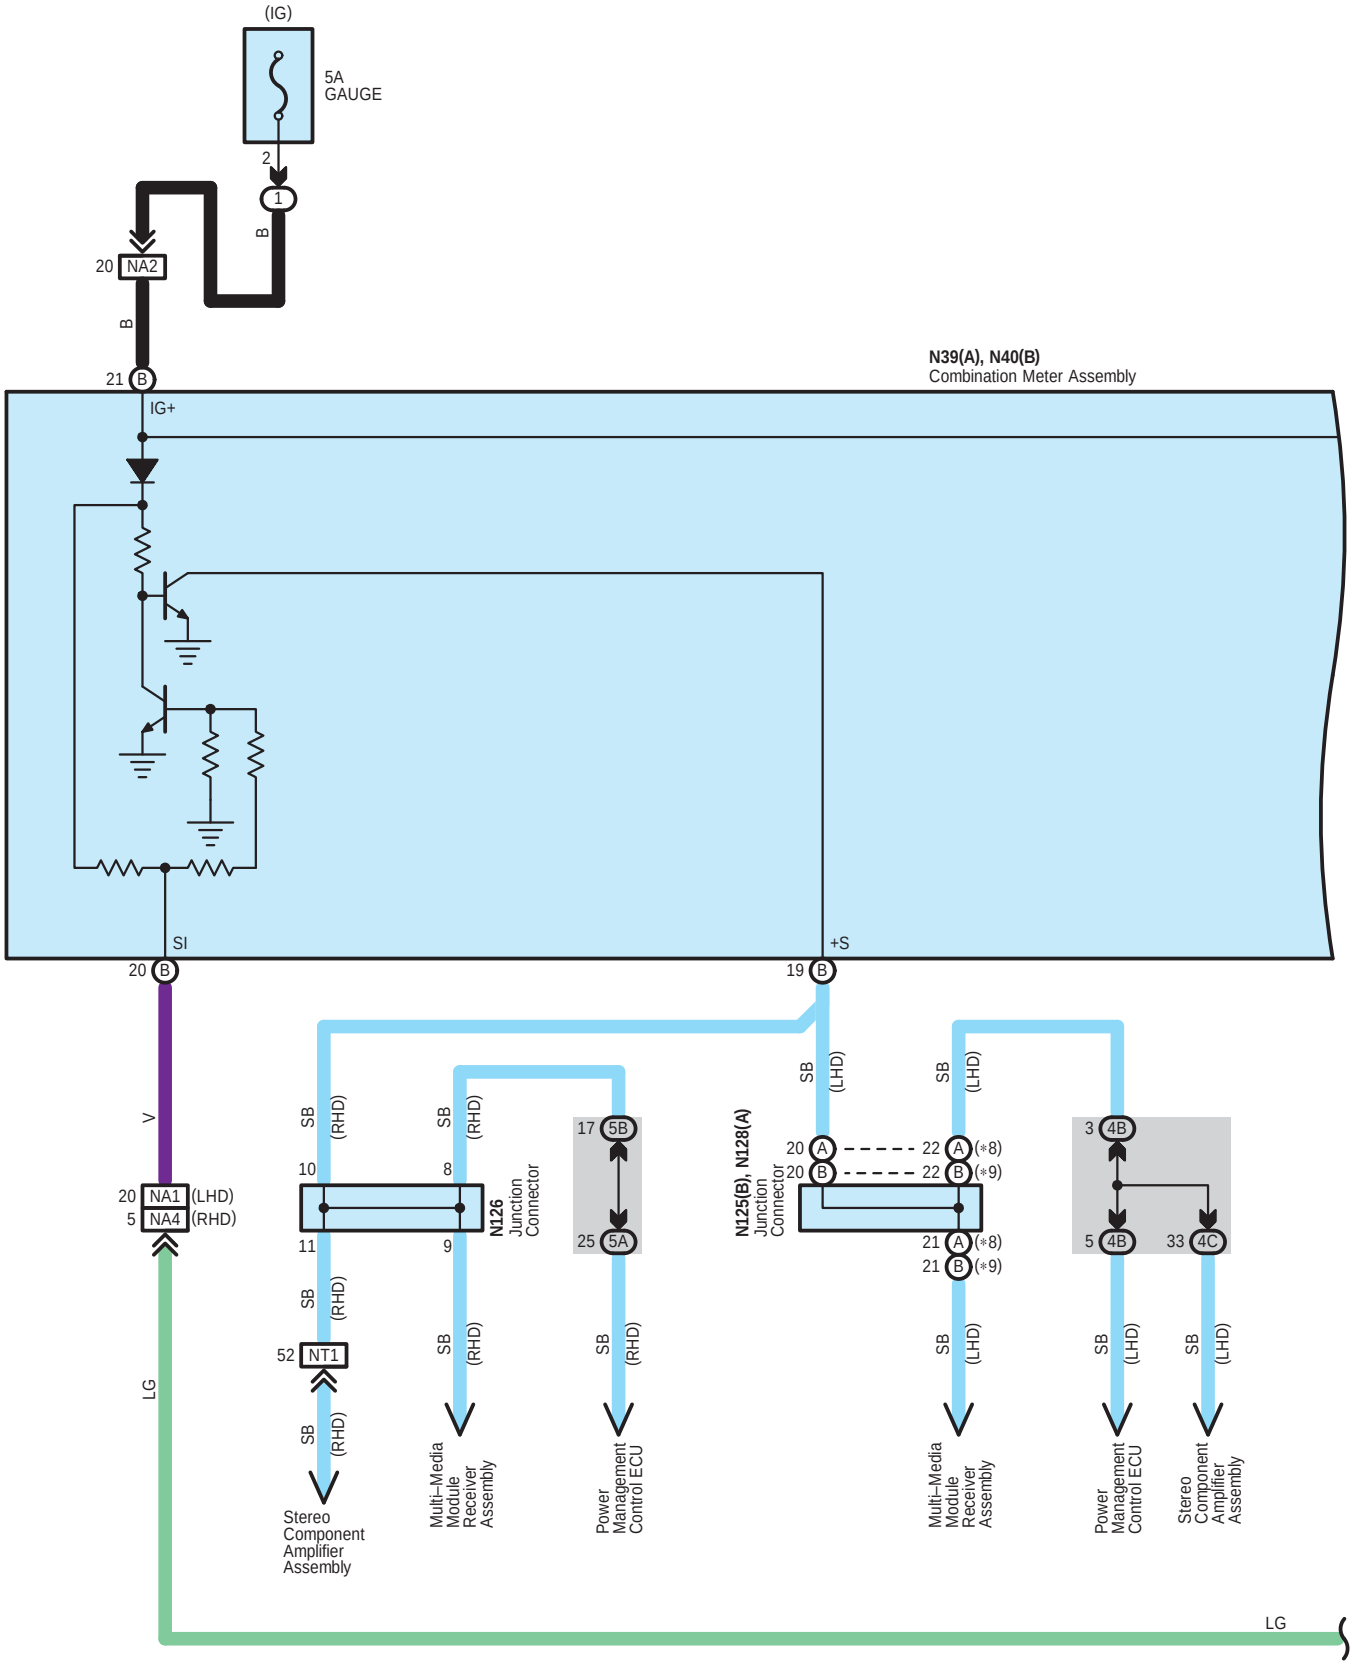
(IG)
5A
GAUGE
2
1
B
20 NA2
B
21 B
IG+
N39(A), N40(B)
Combination Meter Assembly
SI
20 B
+S
19 B
V
20 NA1 (LHD)
5 NA4 (RHD)
LG
SB (RHD)
10
11
8
9
N126
Junction
Connector
17 5B
25 5A
52 NT1
SB (RHD)
Stereo
Component
Amplifier
Assembly
Multi-Media
Module
Receiver
Assembly
Power
Management
Control ECU
SB (LHD)
N125(B), N128(A)
Junction
Connector
20 A
20 B
22 A (*8)
22 B (*9)
21 A (*8)
21 B (*9)
3 4B
5 4B
33 4C
Stereo
Component
Amplifier
Assembly
LG

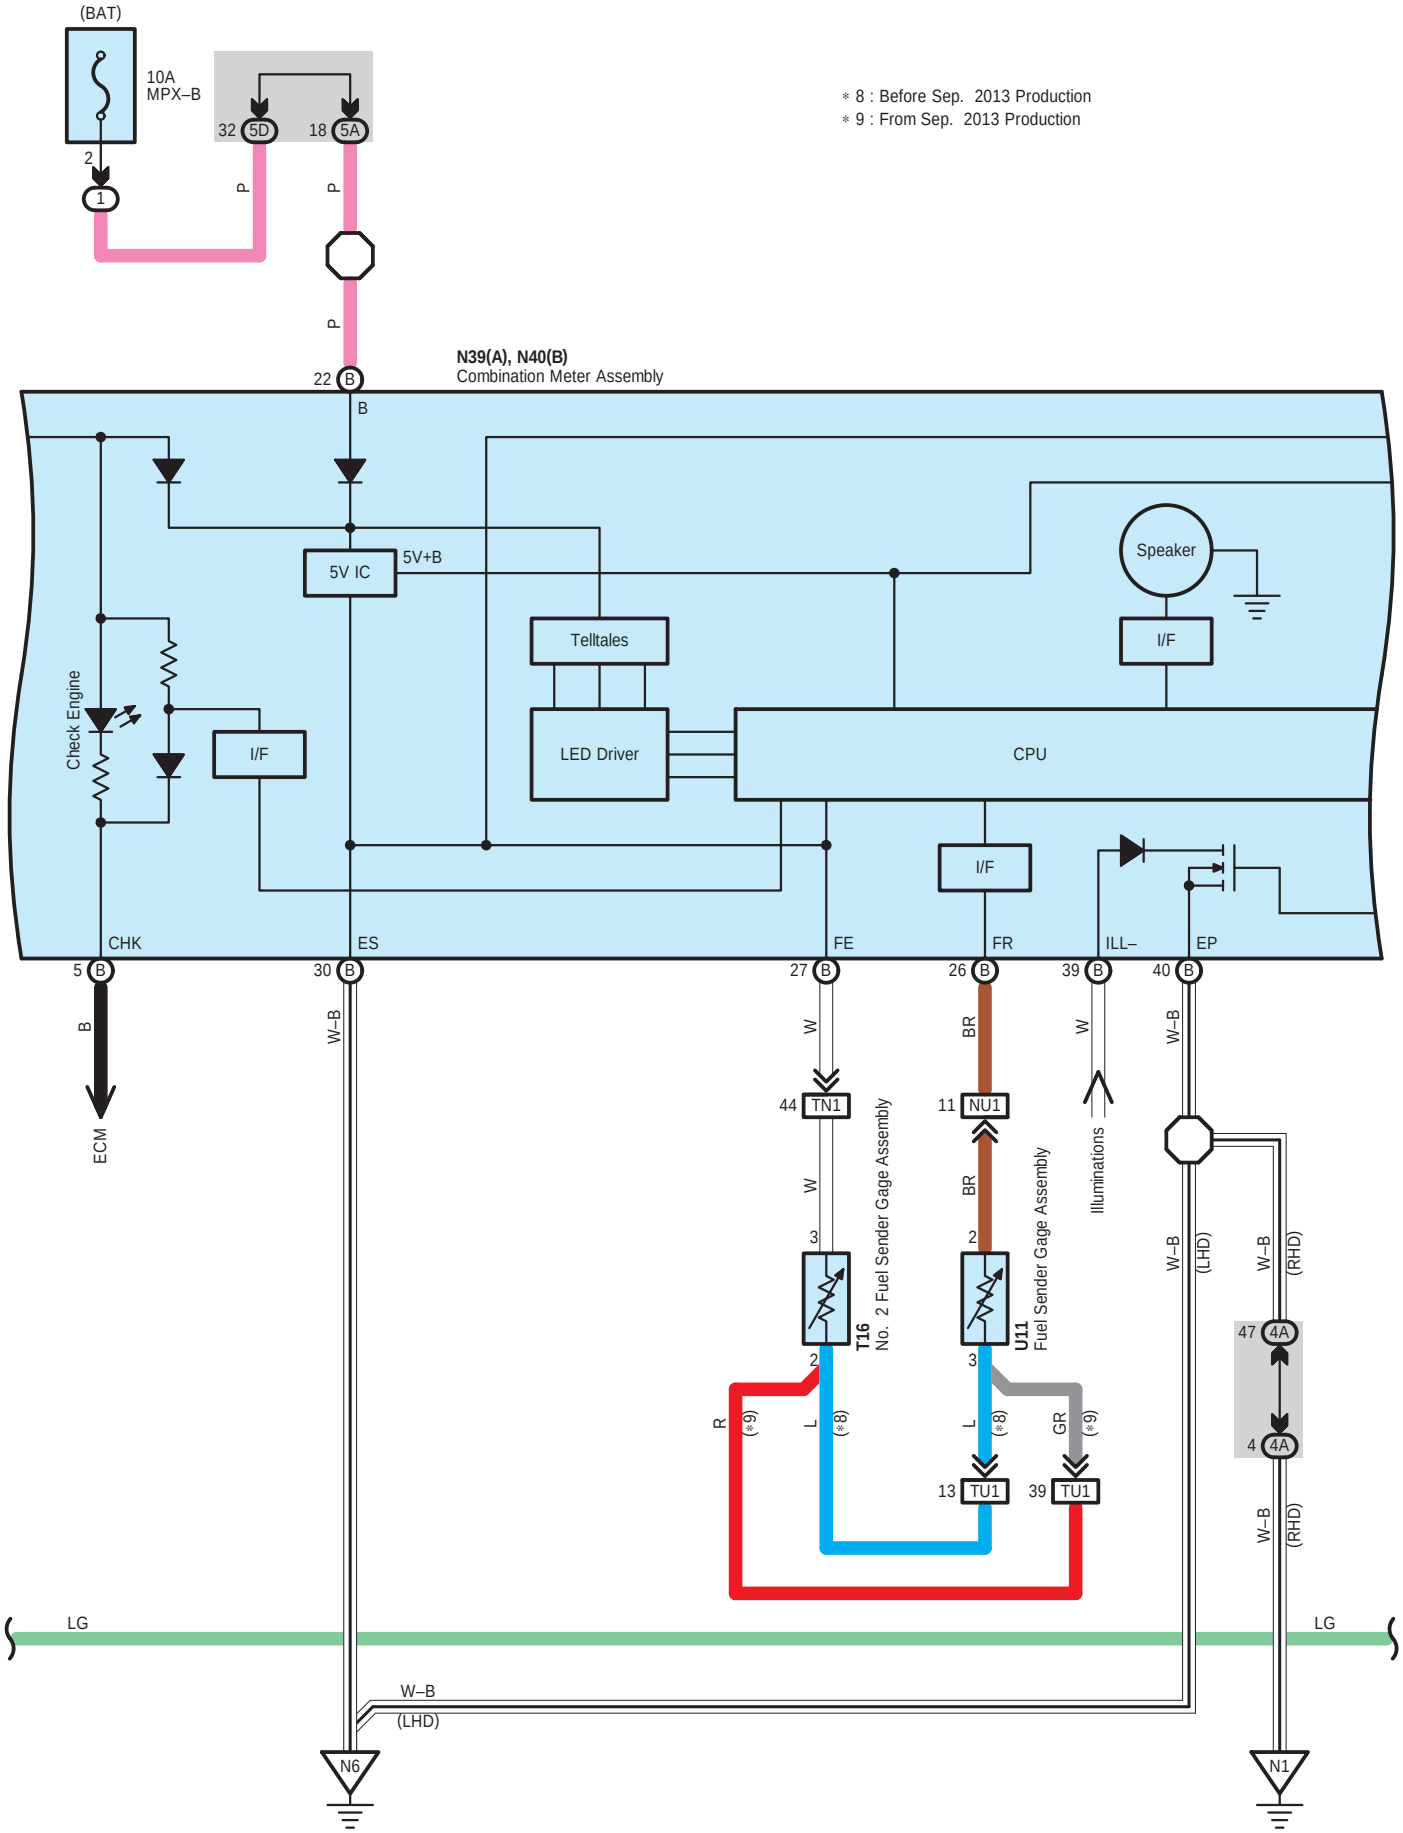
(BAT)
10A
MPX–B
2
1
32 5D
18 5A
P
P
P
22 B
B
N39(A), N40(B)
Combination Meter Assembly
∗ 8 : Before Sep. 2013 Production
∗ 9 : From Sep. 2013 Production
5V IC
5V+B
Telltales
LED Driver
CPU
Speaker
I/F
I/F
I/F
Check Engine
CHK
ES
FE
FR
ILL–
EP
5 B
30 B
27 B
26 B
39 B
40 B
B
ECM
W–B
W
BR
W
W–B
44 TN1
11 NU1
W
BR
Illuminations
3
2
T16
No. 2 Fuel Sender Gage Assembly
U11
Fuel Sender Gage Assembly
2
3
R
(∗9)
L
(∗8)
L
(∗8)
GR
(∗9)
13 TU1
39 TU1
W–B
(LHD)
W–B
(RHD)
47 4A
4 4A
W–B
(RHD)
LG
LG
W–B
(LHD)
N6
N1

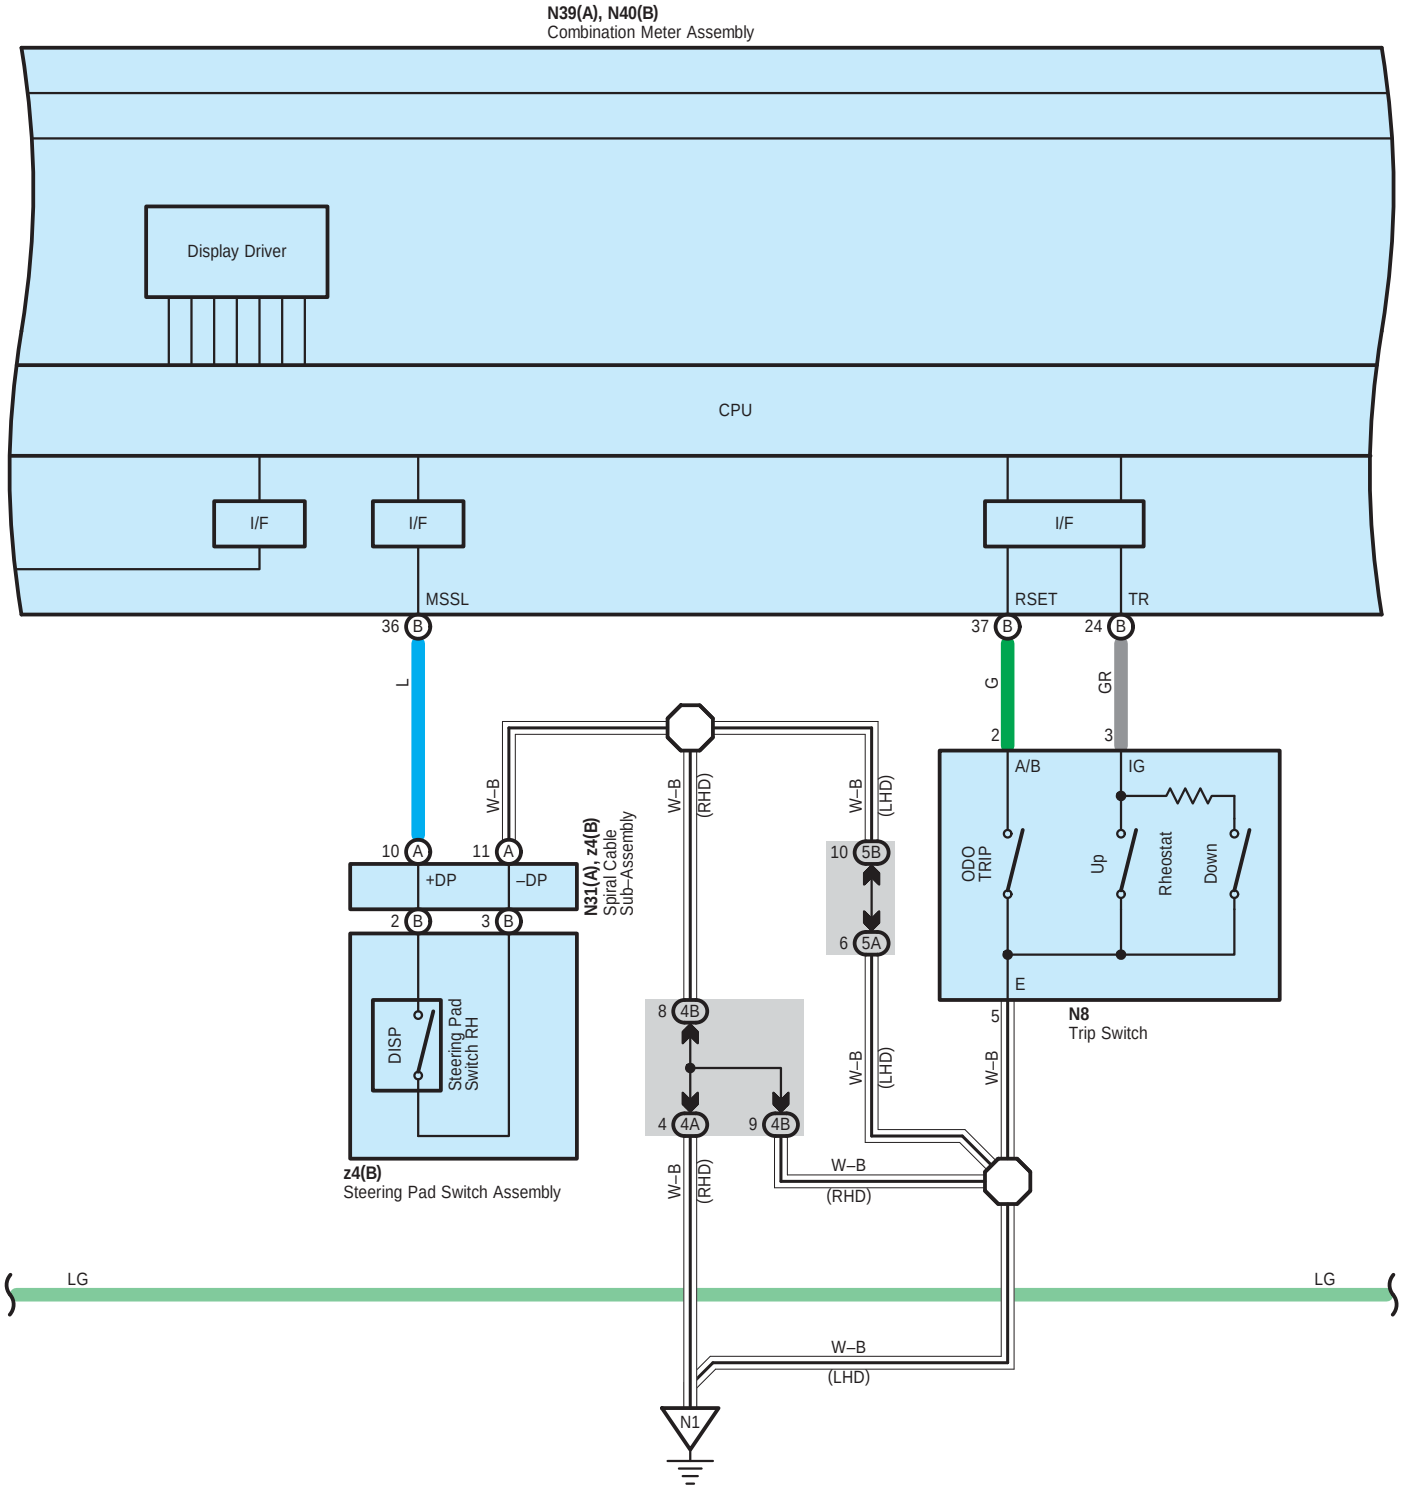
N39(A), N40(B)
Combination Meter Assembly
Display Driver
CPU
I/F
I/F
I/F
MSSL
RSET
TR
36 B
37 B
24 B
L
G
GR
2
3
A/B
IG
W–B
W–B (RHD)
W–B (LHD)
10 A
11 A
+DP
–DP
N31(A), z4(B)
Spiral Cable
Sub–Assembly
10 5B
6 5A
ODO TRIP
Up
Rheostat
Down
2 B
3 B
DISP
Steering Pad Switch RH
8 4B
4 4A
9 4B
E
5
N8
Trip Switch
z4(B)
Steering Pad Switch Assembly
W–B (LHD)
W–B
W–B (RHD)
LG
LG
W–B (LHD)
N1

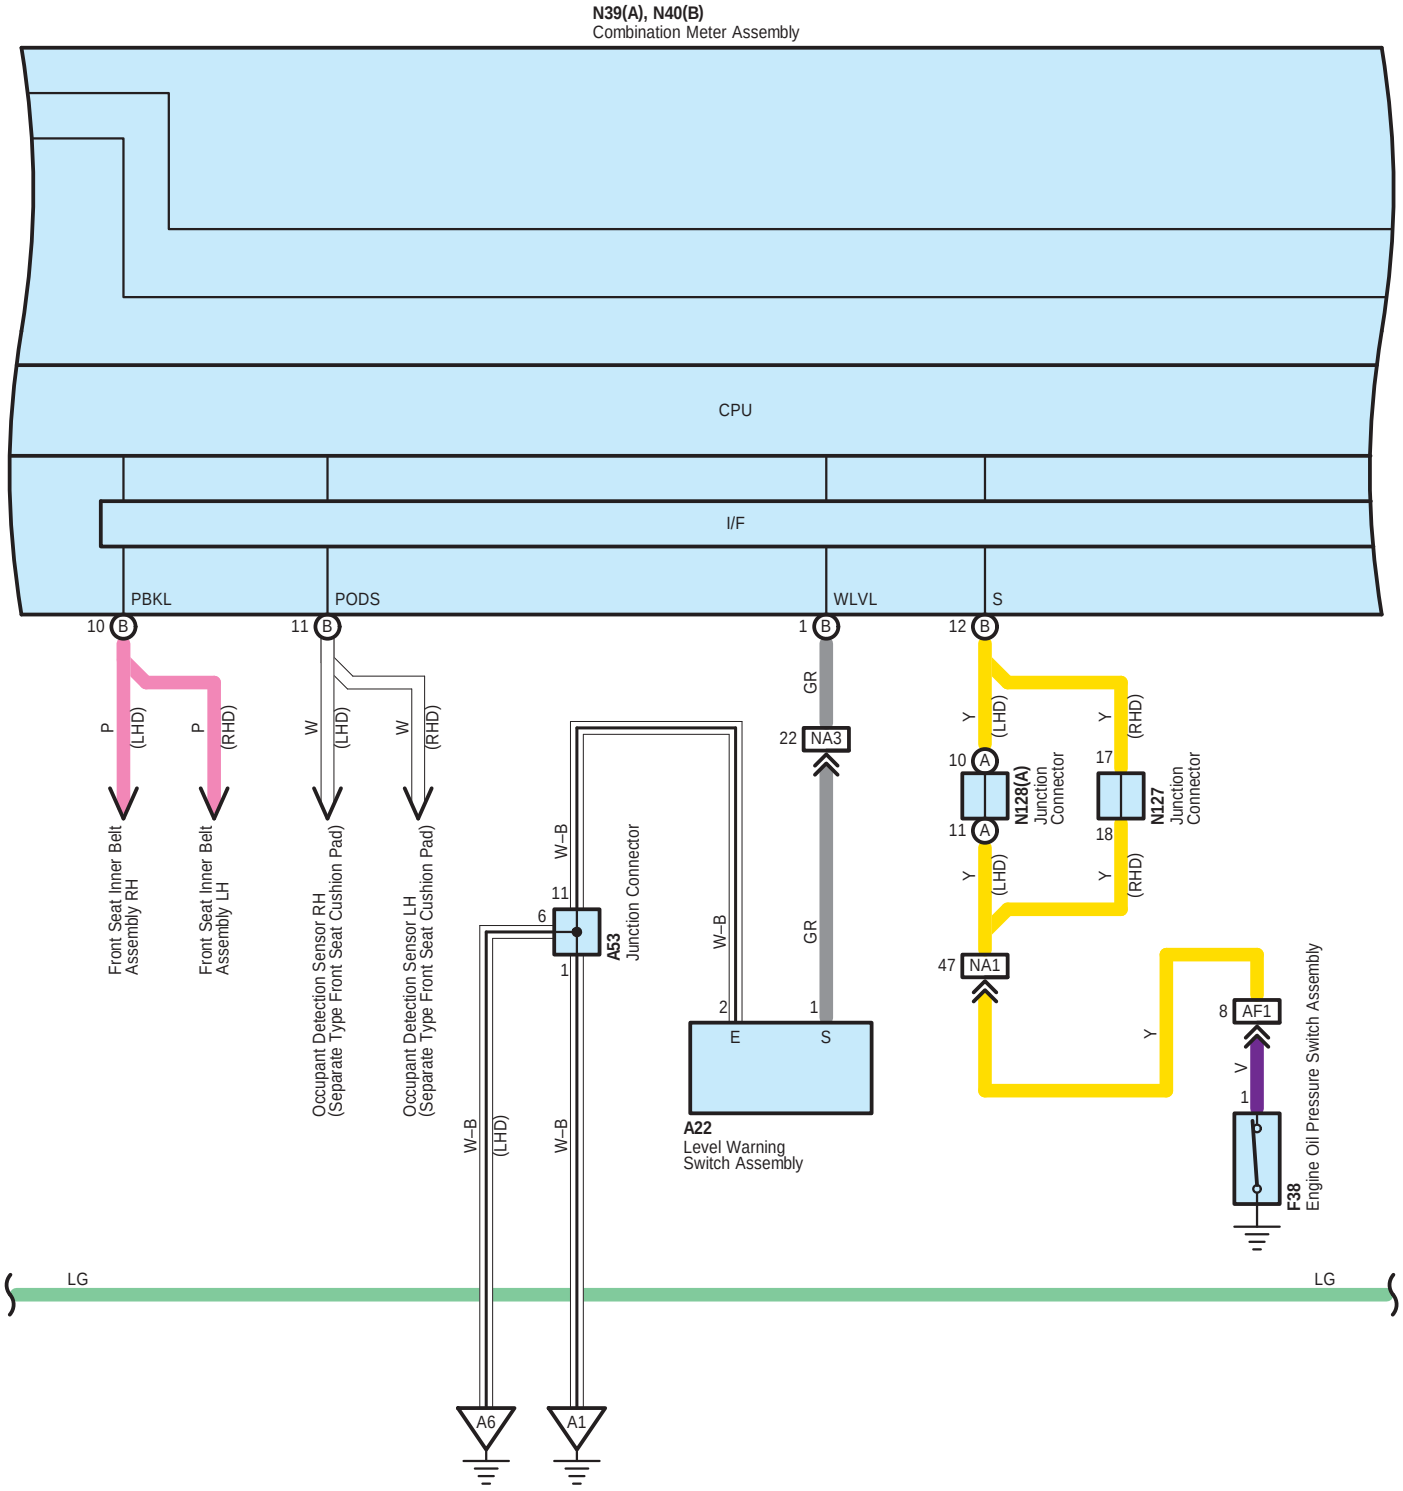
N39(A), N40(B)
Combination Meter Assembly
CPU
I/F
PBKL
PODS
WLVL
S
10 B
11 B
1 B
12 B
P (LHD)
P (RHD)
W (LHD)
W (RHD)
GR
22 NA3
Y (LHD)
Y (RHD)
10 A
11 A
17
18
N128(A) Junction Connector
N127 Junction Connector
Front Seat Inner Belt Assembly RH
Front Seat Inner Belt Assembly LH
Occupant Detection Sensor RH (Separate Type Front Seat Cushion Pad)
Occupant Detection Sensor LH (Separate Type Front Seat Cushion Pad)
W–B
11
6
1
A53 Junction Connector
W–B
GR
2
1
E
S
A22
Level Warning Switch Assembly
47 NA1
8 AF1
V
1
F38
Engine Oil Pressure Switch Assembly
W–B (LHD)
W–B
LG
LG
A6
A1

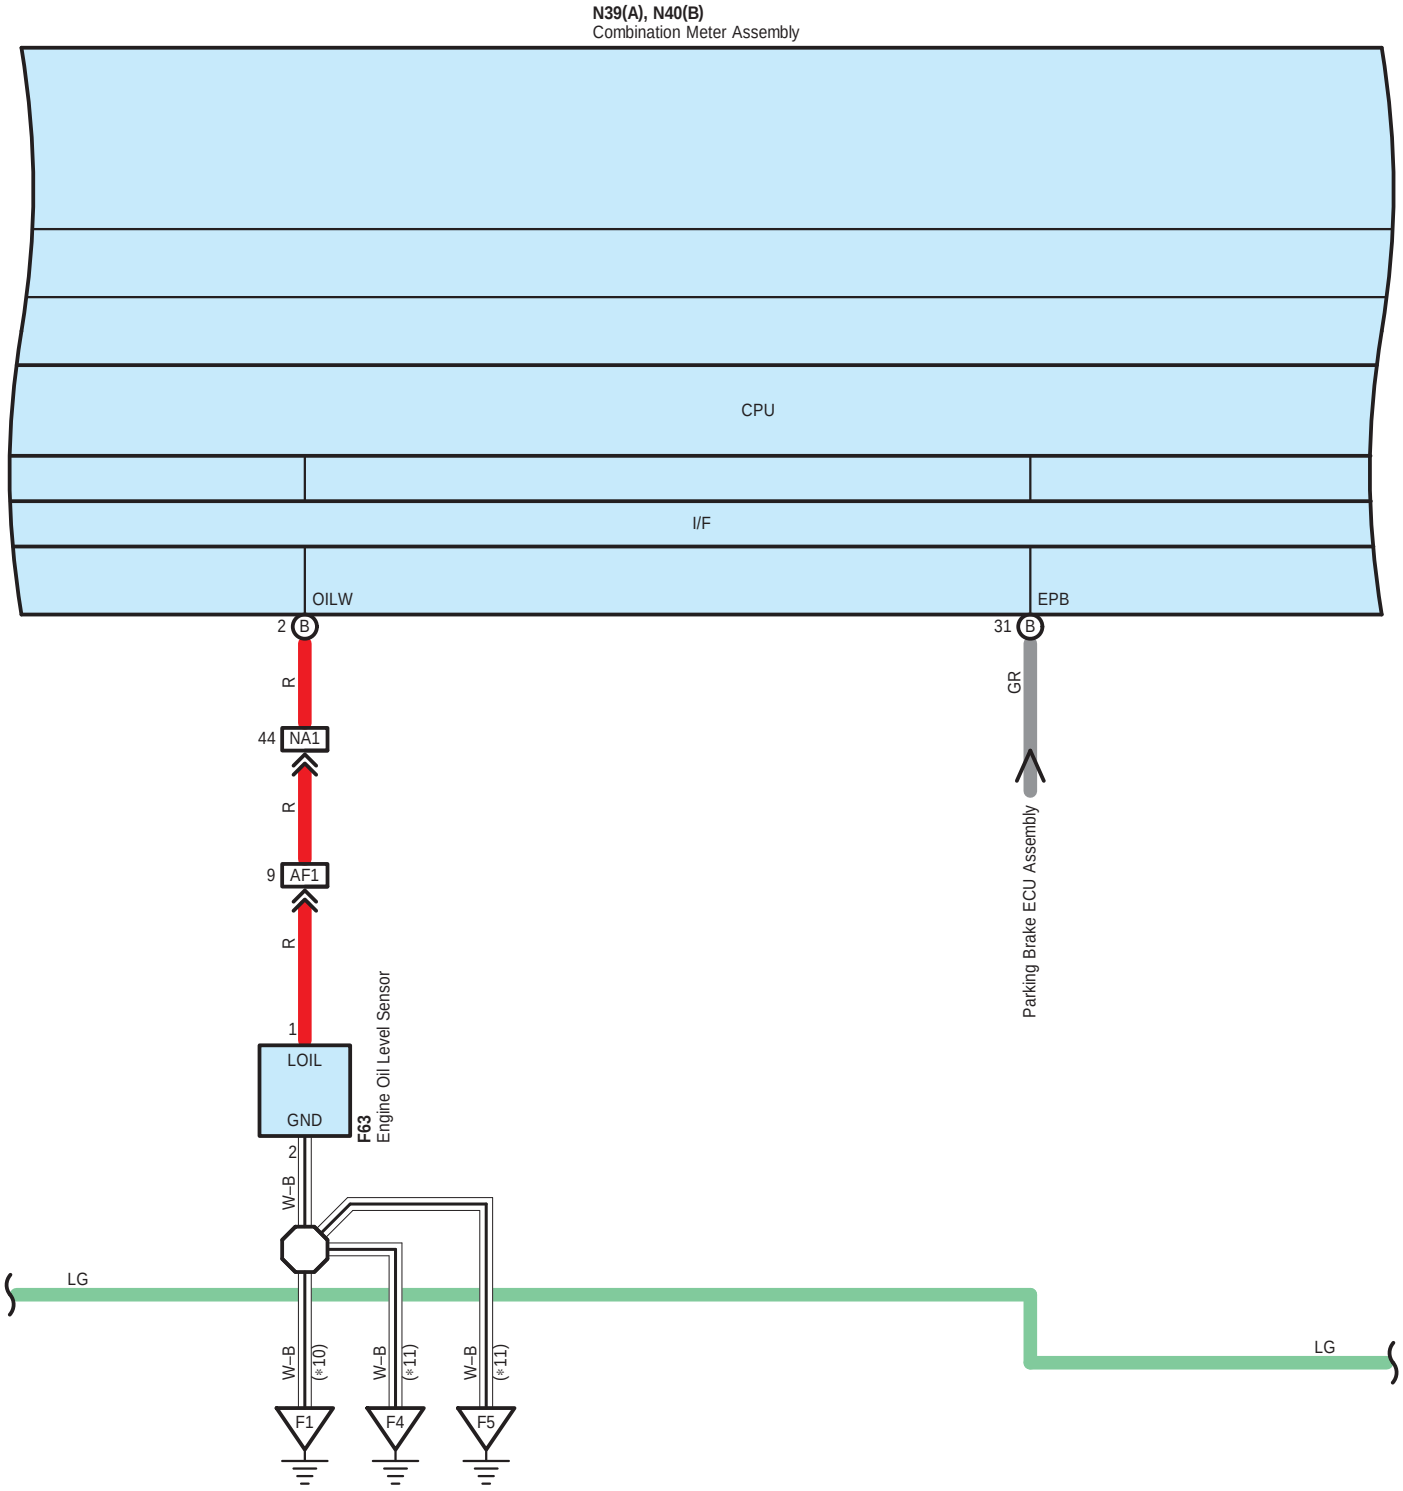
N39(A), N40(B)
Combination Meter Assembly
CPU
I/F
OILW
EPB
2
B
31
B
R
GR
44
NA1
R
9
AF1
R
1
LOIL
GND
F63
Engine Oil Level Sensor
Parking Brake ECU Assembly
2
W-B
LG
W-B
(*10)
W-B
(*11)
W-B
(*11)
LG
F1
F4
F5

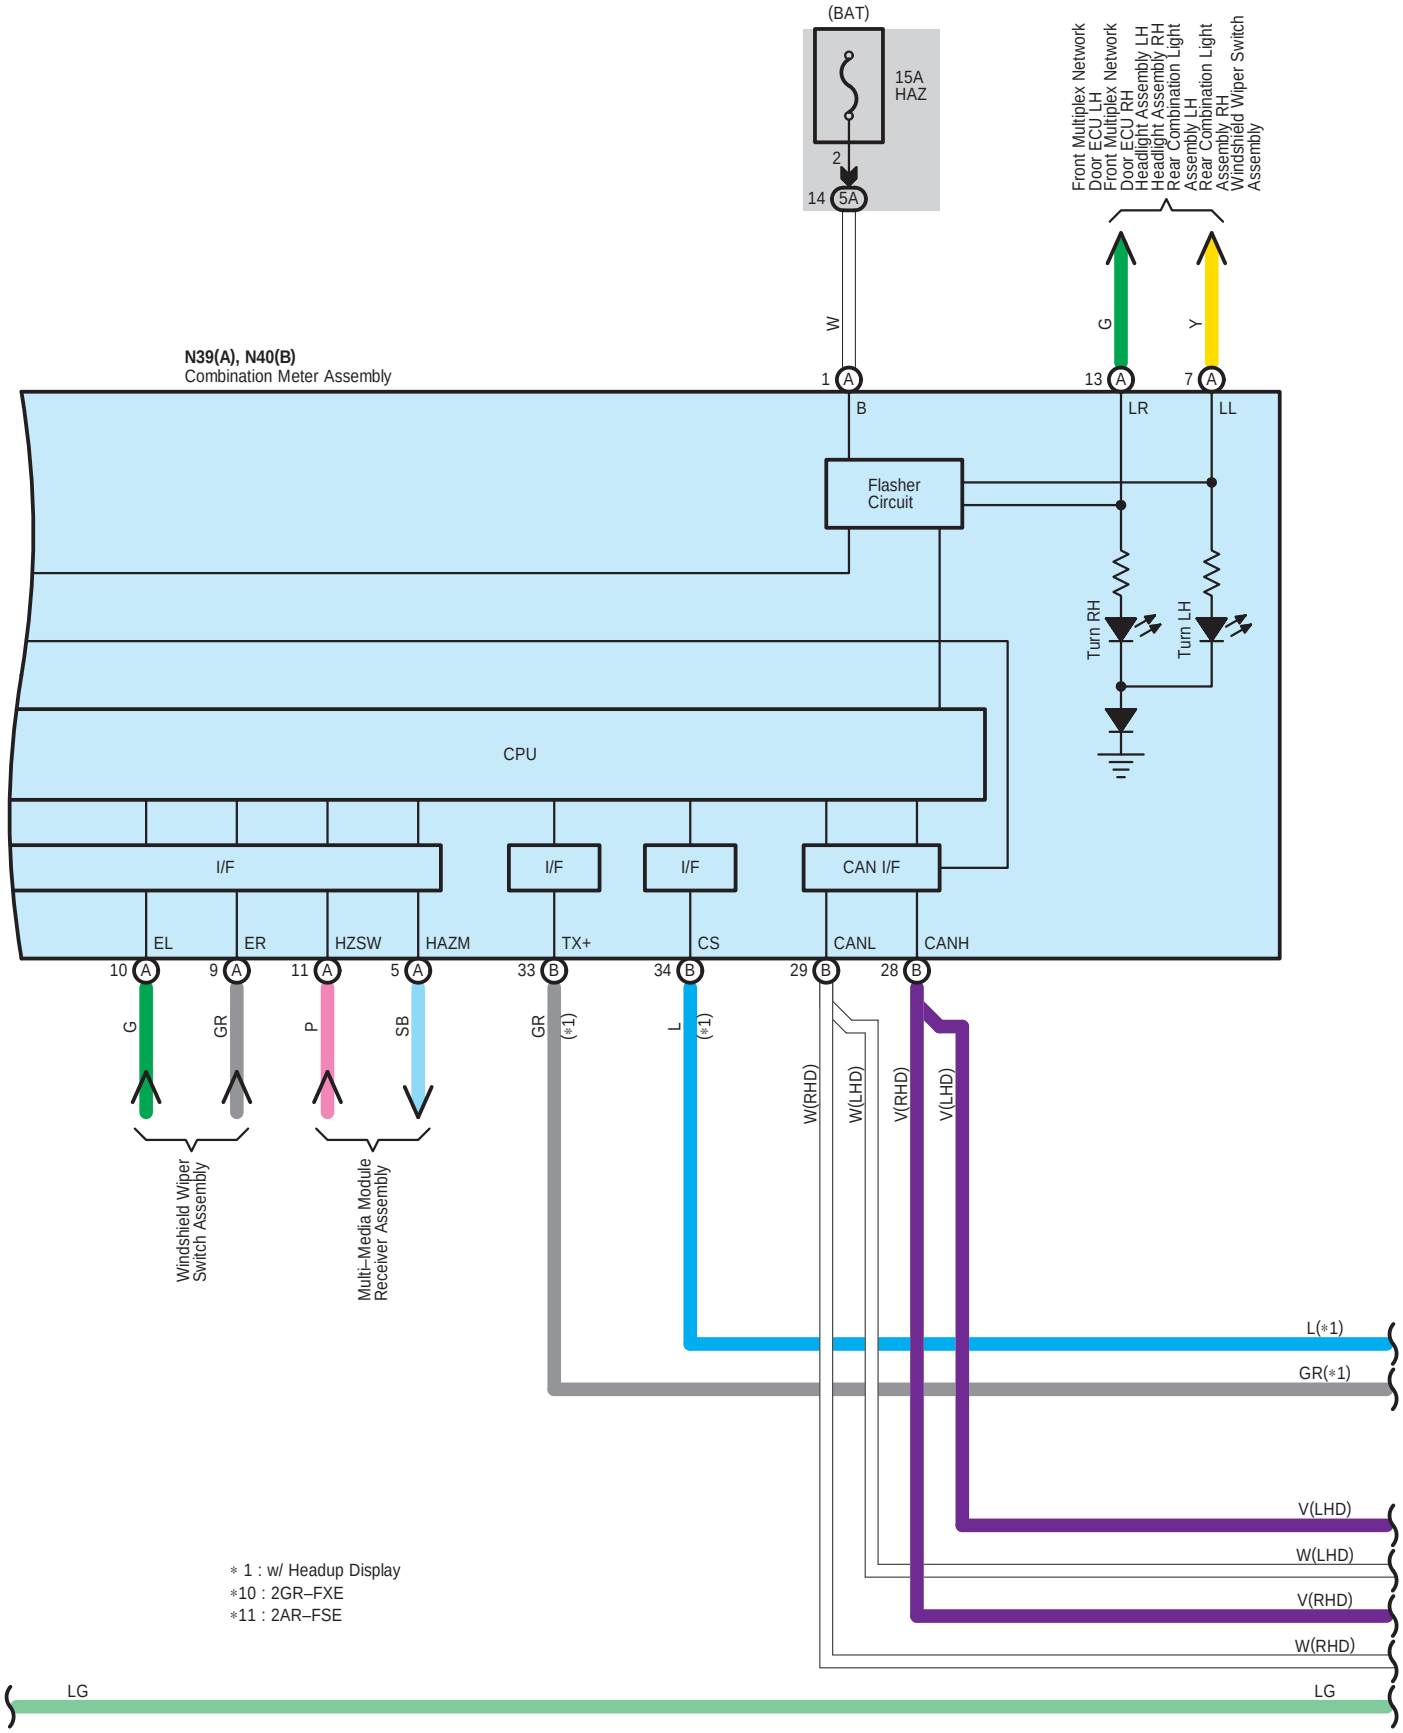
(BAT)
15A
HAZ
2
14
5A
W
Front Multiplex Network
Door ECU LH
Front Multiplex Network
Door ECU RH
Headlight Assembly LH
Headlight Assembly RH
Rear Combination Light
Assembly LH
Rear Combination Light
Assembly RH
Windshield Wiper Switch
Assembly
G
Y
N39(A), N40(B)
Combination Meter Assembly
1
B
13
LR
7
LL
Flasher
Circuit
Turn RH
Turn LH
CPU
I/F
I/F
I/F
CAN I/F
EL
ER
HZSW
HAZM
TX+
CS
CANL
CANH
10
9
11
5
33
34
29
28
G
GR
P
SB
GR
(*1)
L
(*1)
W(RHD)
W(LHD)
V(RHD)
V(LHD)
Windshield Wiper
Switch Assembly
Multi-Media Module
Receiver Assembly
L(*1)
GR(*1)
V(LHD)
W(LHD)
V(RHD)
W(RHD)
LG
LG
* 1 : w/ Headup Display
*10 : 2GR–FXE
*11 : 2AR–FSE

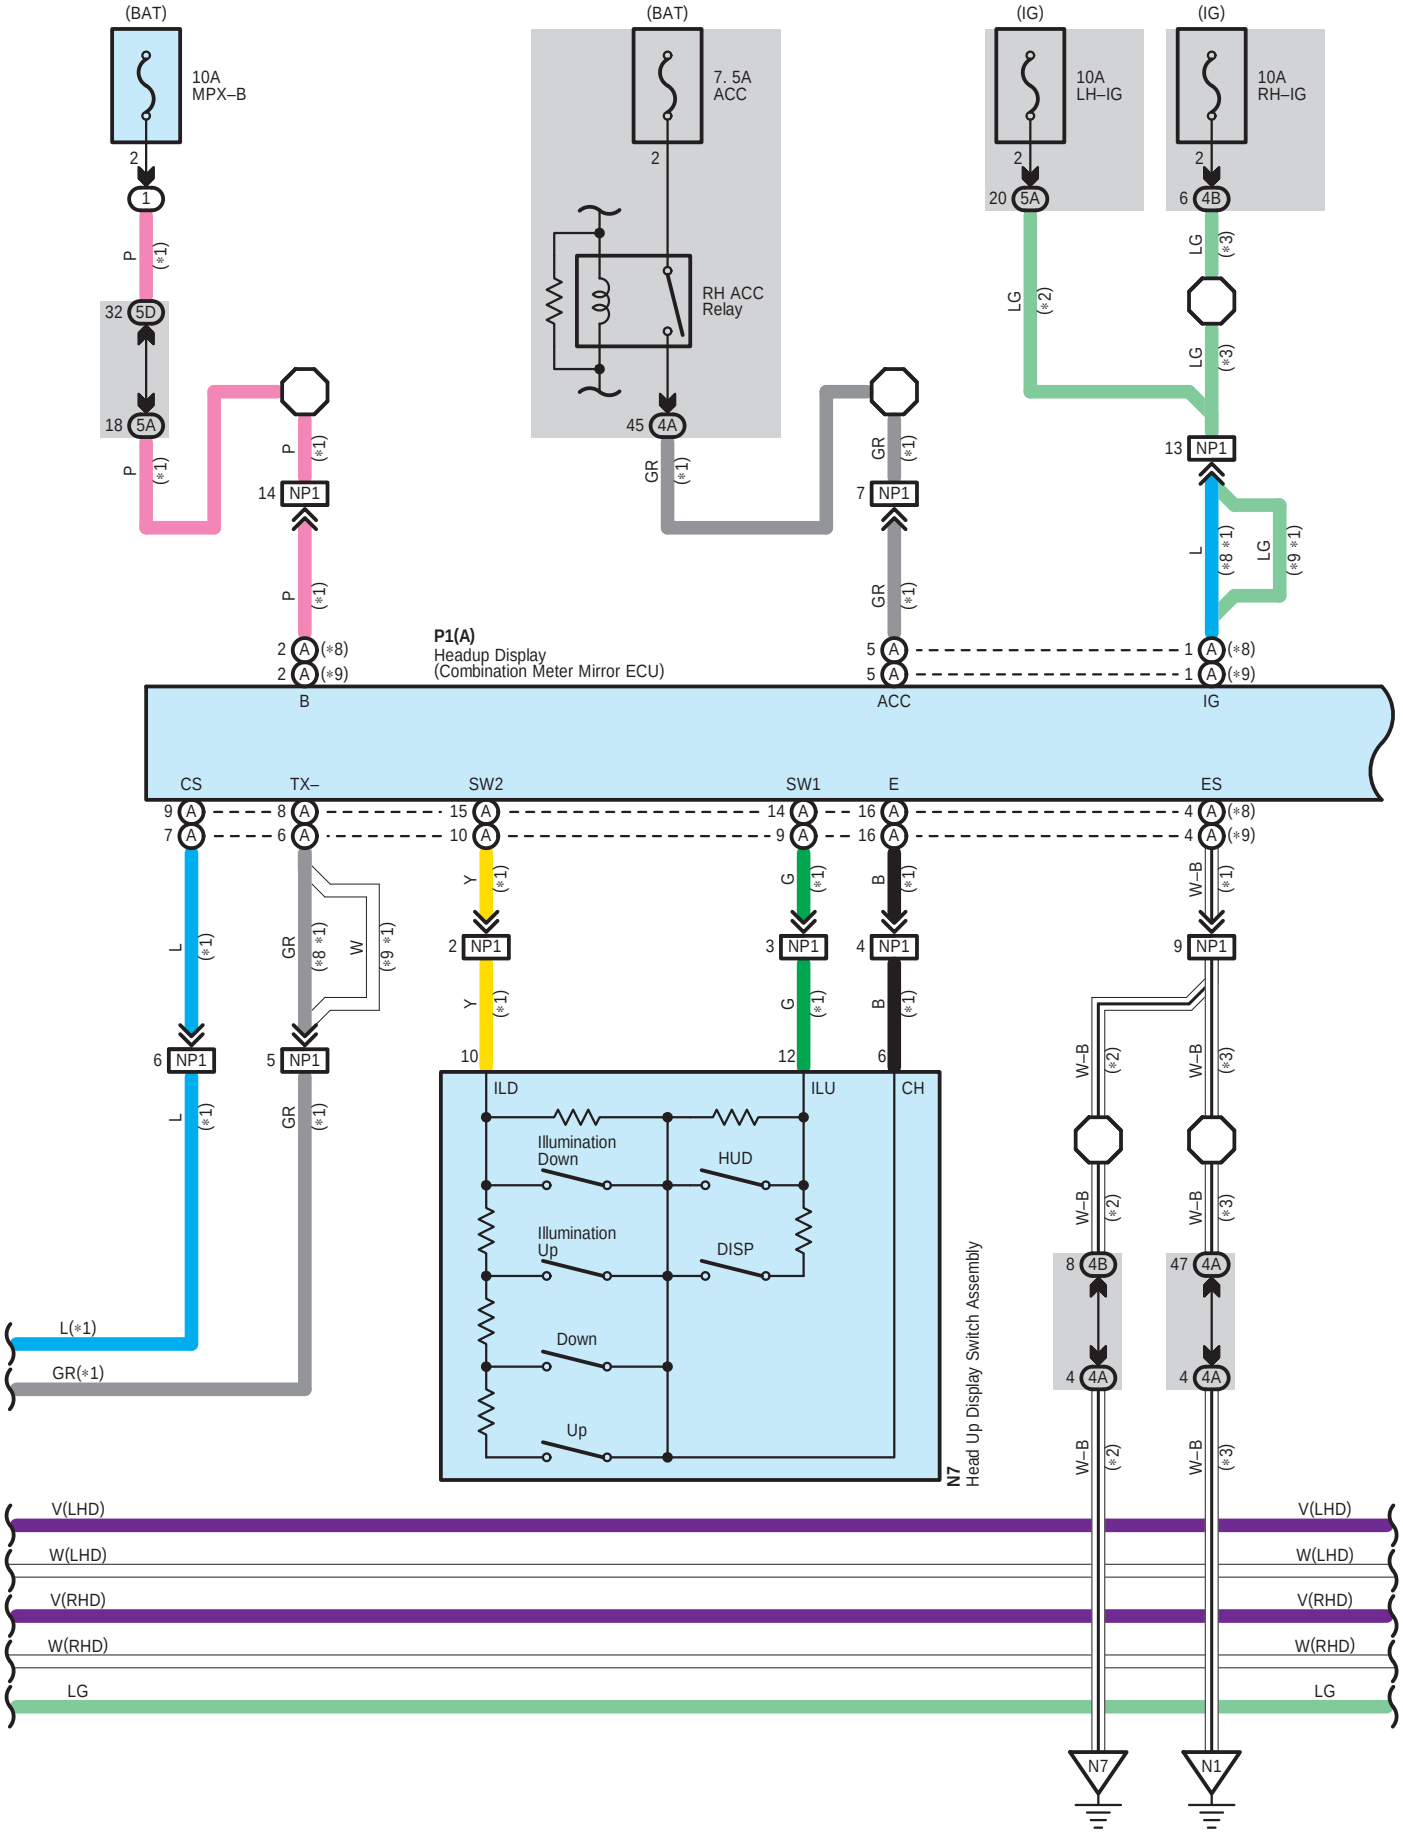
(BAT)
10A
MPX–B
(BAT)
7. 5A
ACC
RH ACC
Relay
(IG)
10A
LH–IG
(IG)
10A
RH–IG
P1(A)
Headup Display
(Combination Meter Mirror ECU)
B
ACC
IG
CS
TX–
SW2
SW1
E
ES
ILD
ILU
CH
Illumination
Down
HUD
Illumination
Up
DISP
Down
Up
N7
Head Up Display Switch Assembly
L(*1)
GR(*1)
V(LHD)
W(LHD)
V(RHD)
W(RHD)
LG
N7
N1

Combination Meter <Before Oct. 2015 Production>

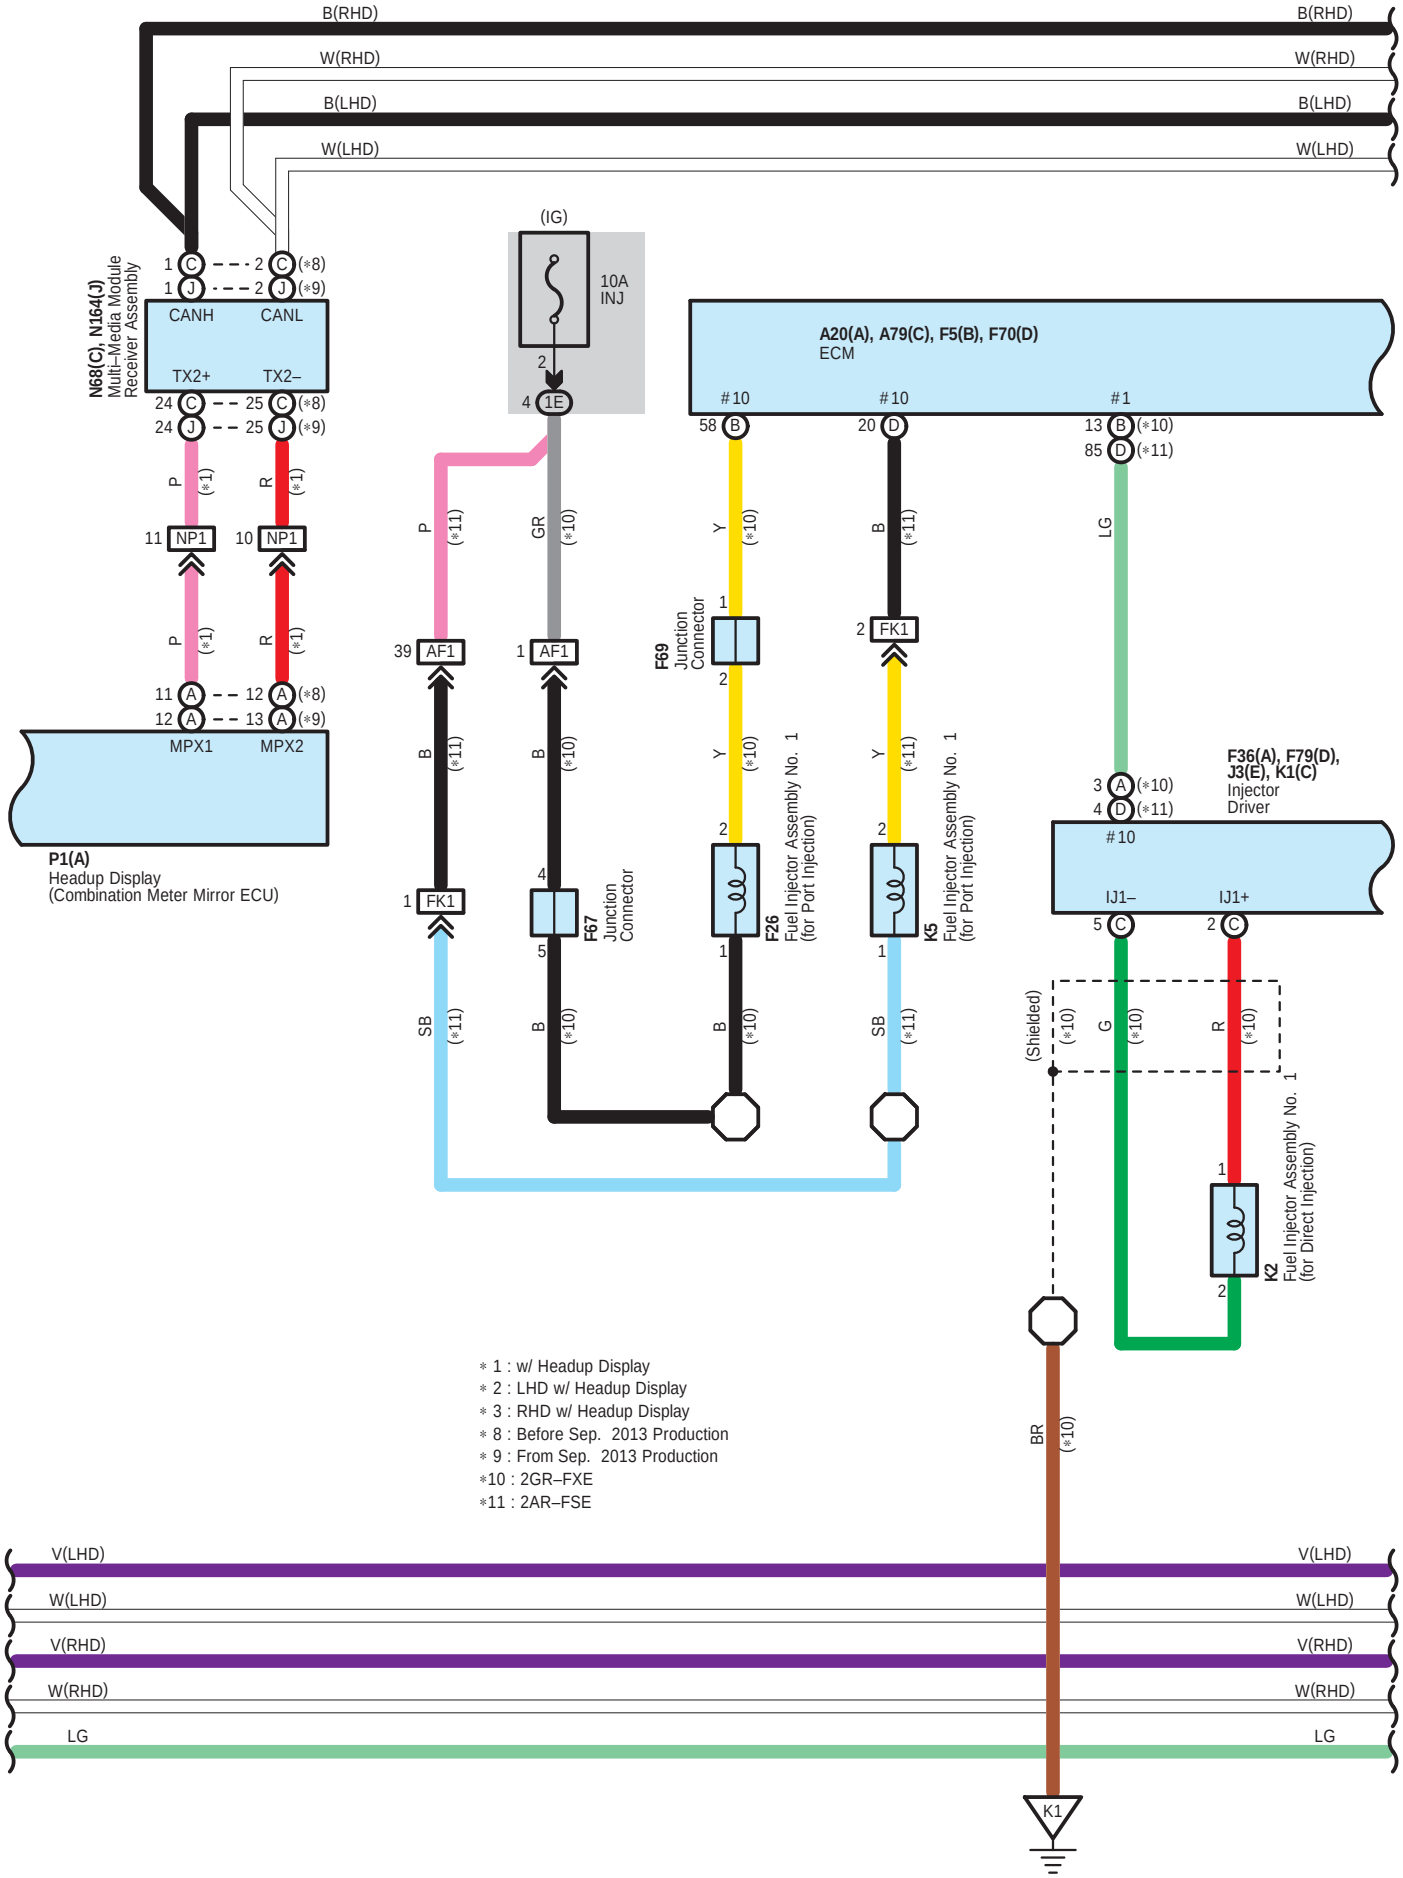

∗ 1 : w/ Headup Display
∗ 2 : LHD w/ Headup Display
∗ 3 : RHD w/ Headup Display
∗ 8 : Before Sep. 2013 Production
∗ 9 : From Sep. 2013 Production
∗10 : 2GR–FXE
∗11 : 2AR–FSE

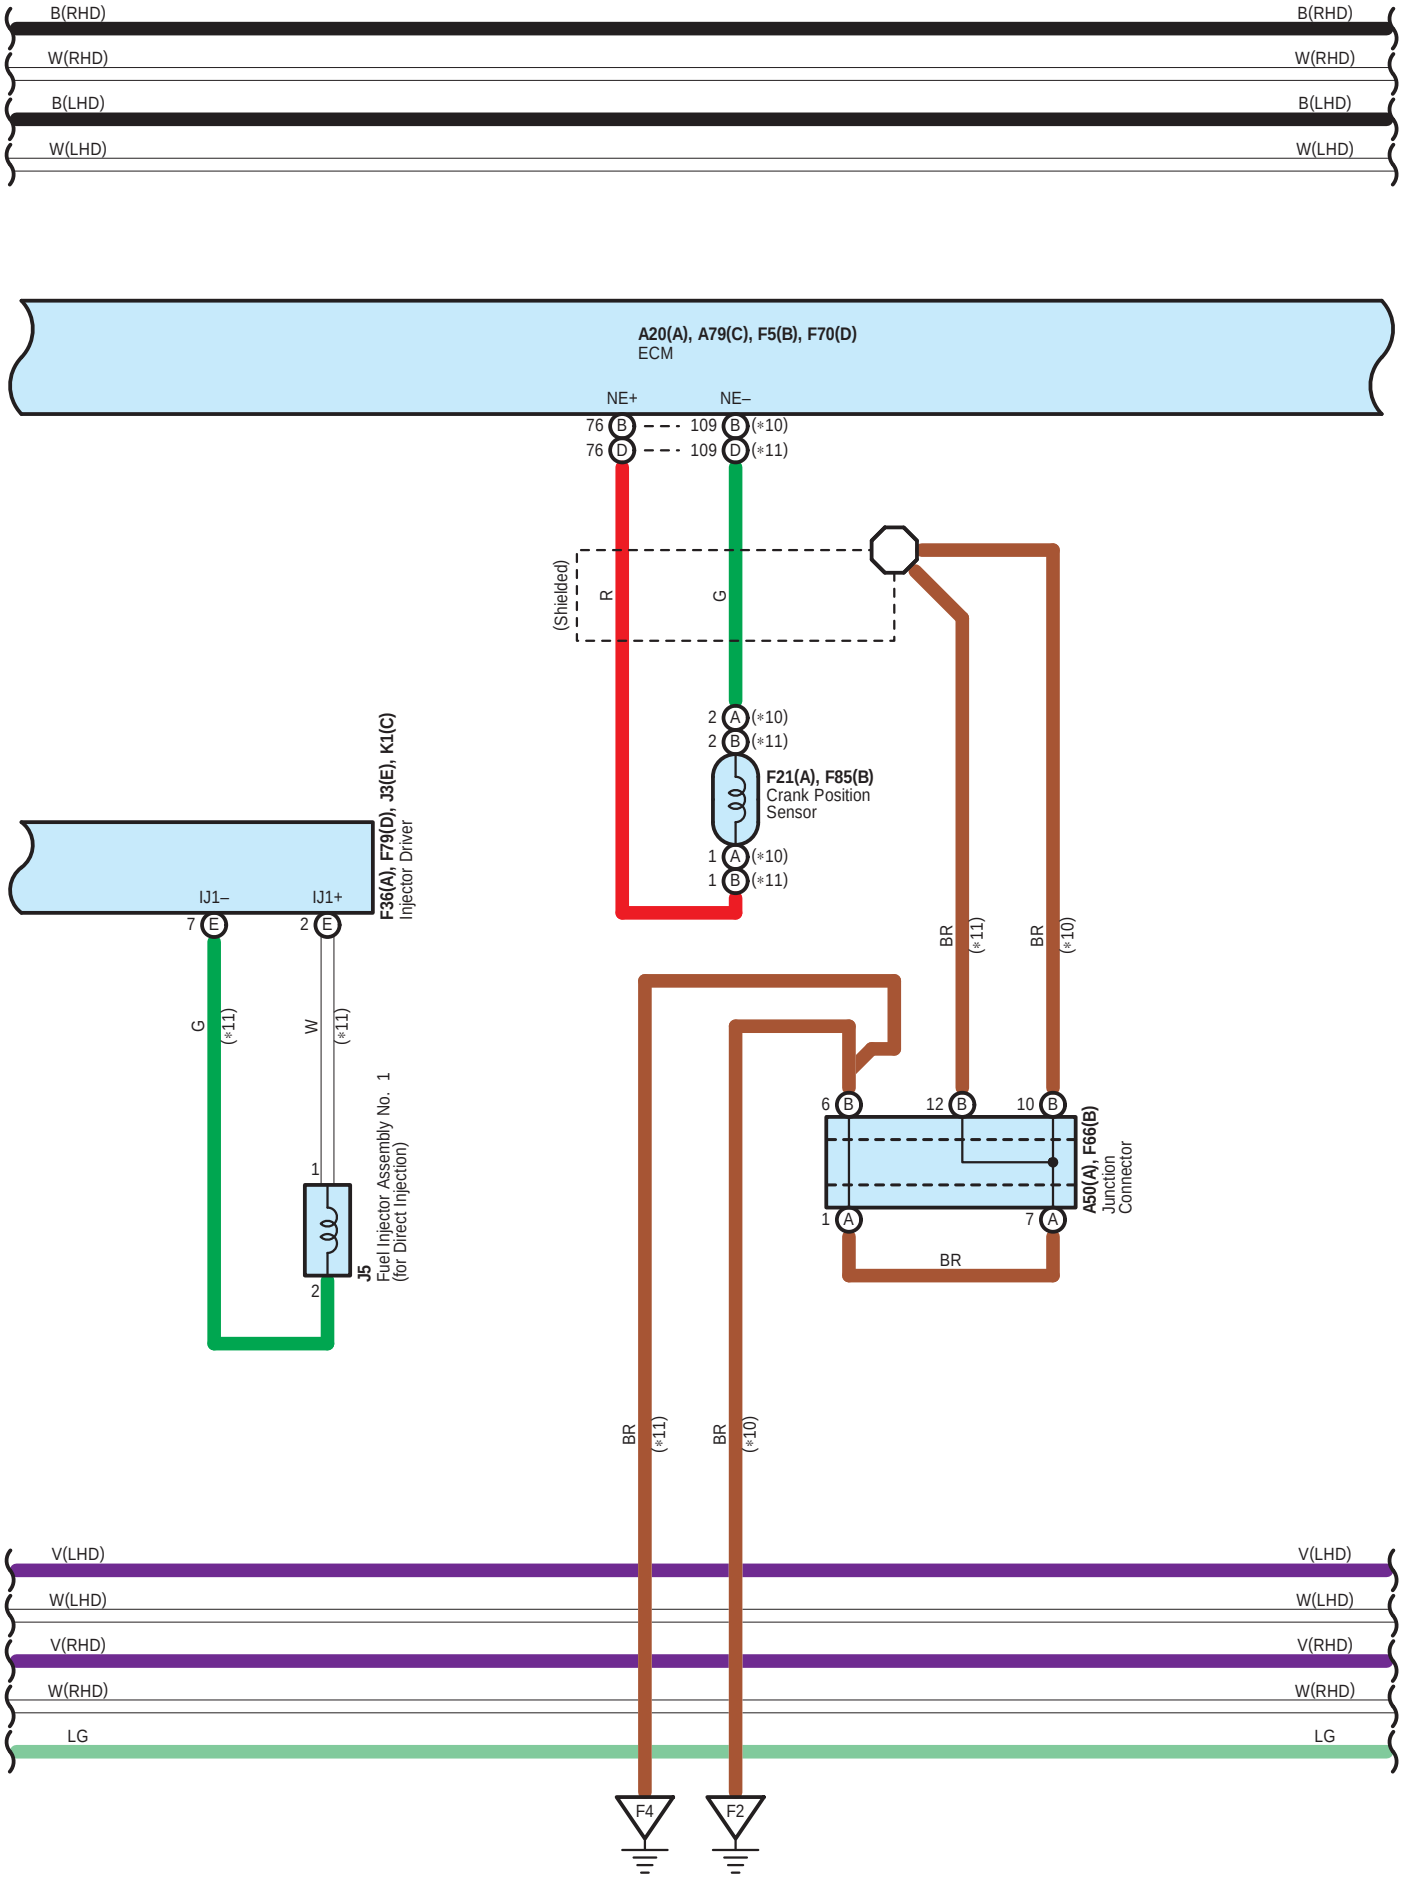
B(RHD)
W(RHD)
B(LHD)
W(LHD)
A20(A), A79(C), F5(B), F70(D)
ECM
NE+
NE–
76 B
76 D
109 B (*10)
109 D (*11)
(Shielded)
R
G
2 A (*10)
2 B (*11)
F21(A), F85(B)
Crank Position Sensor
1 A (*10)
1 B (*11)
F36(A), F79(D), J3(E), K1(C)
Injector Driver
IJ1–
IJ1+
7 E
2 E
G
(*11)
W
(*11)
1
2
J5
Fuel Injector Assembly No. 1
(for Direct Injection)
BR
(*11)
BR
(*10)
6 B
12 B
10 B
1 A
7 A
A50(A), F66(B)
Junction Connector
BR
BR
(*11)
BR
(*10)
V(LHD)
W(LHD)
V(RHD)
W(RHD)
LG
F4
F2

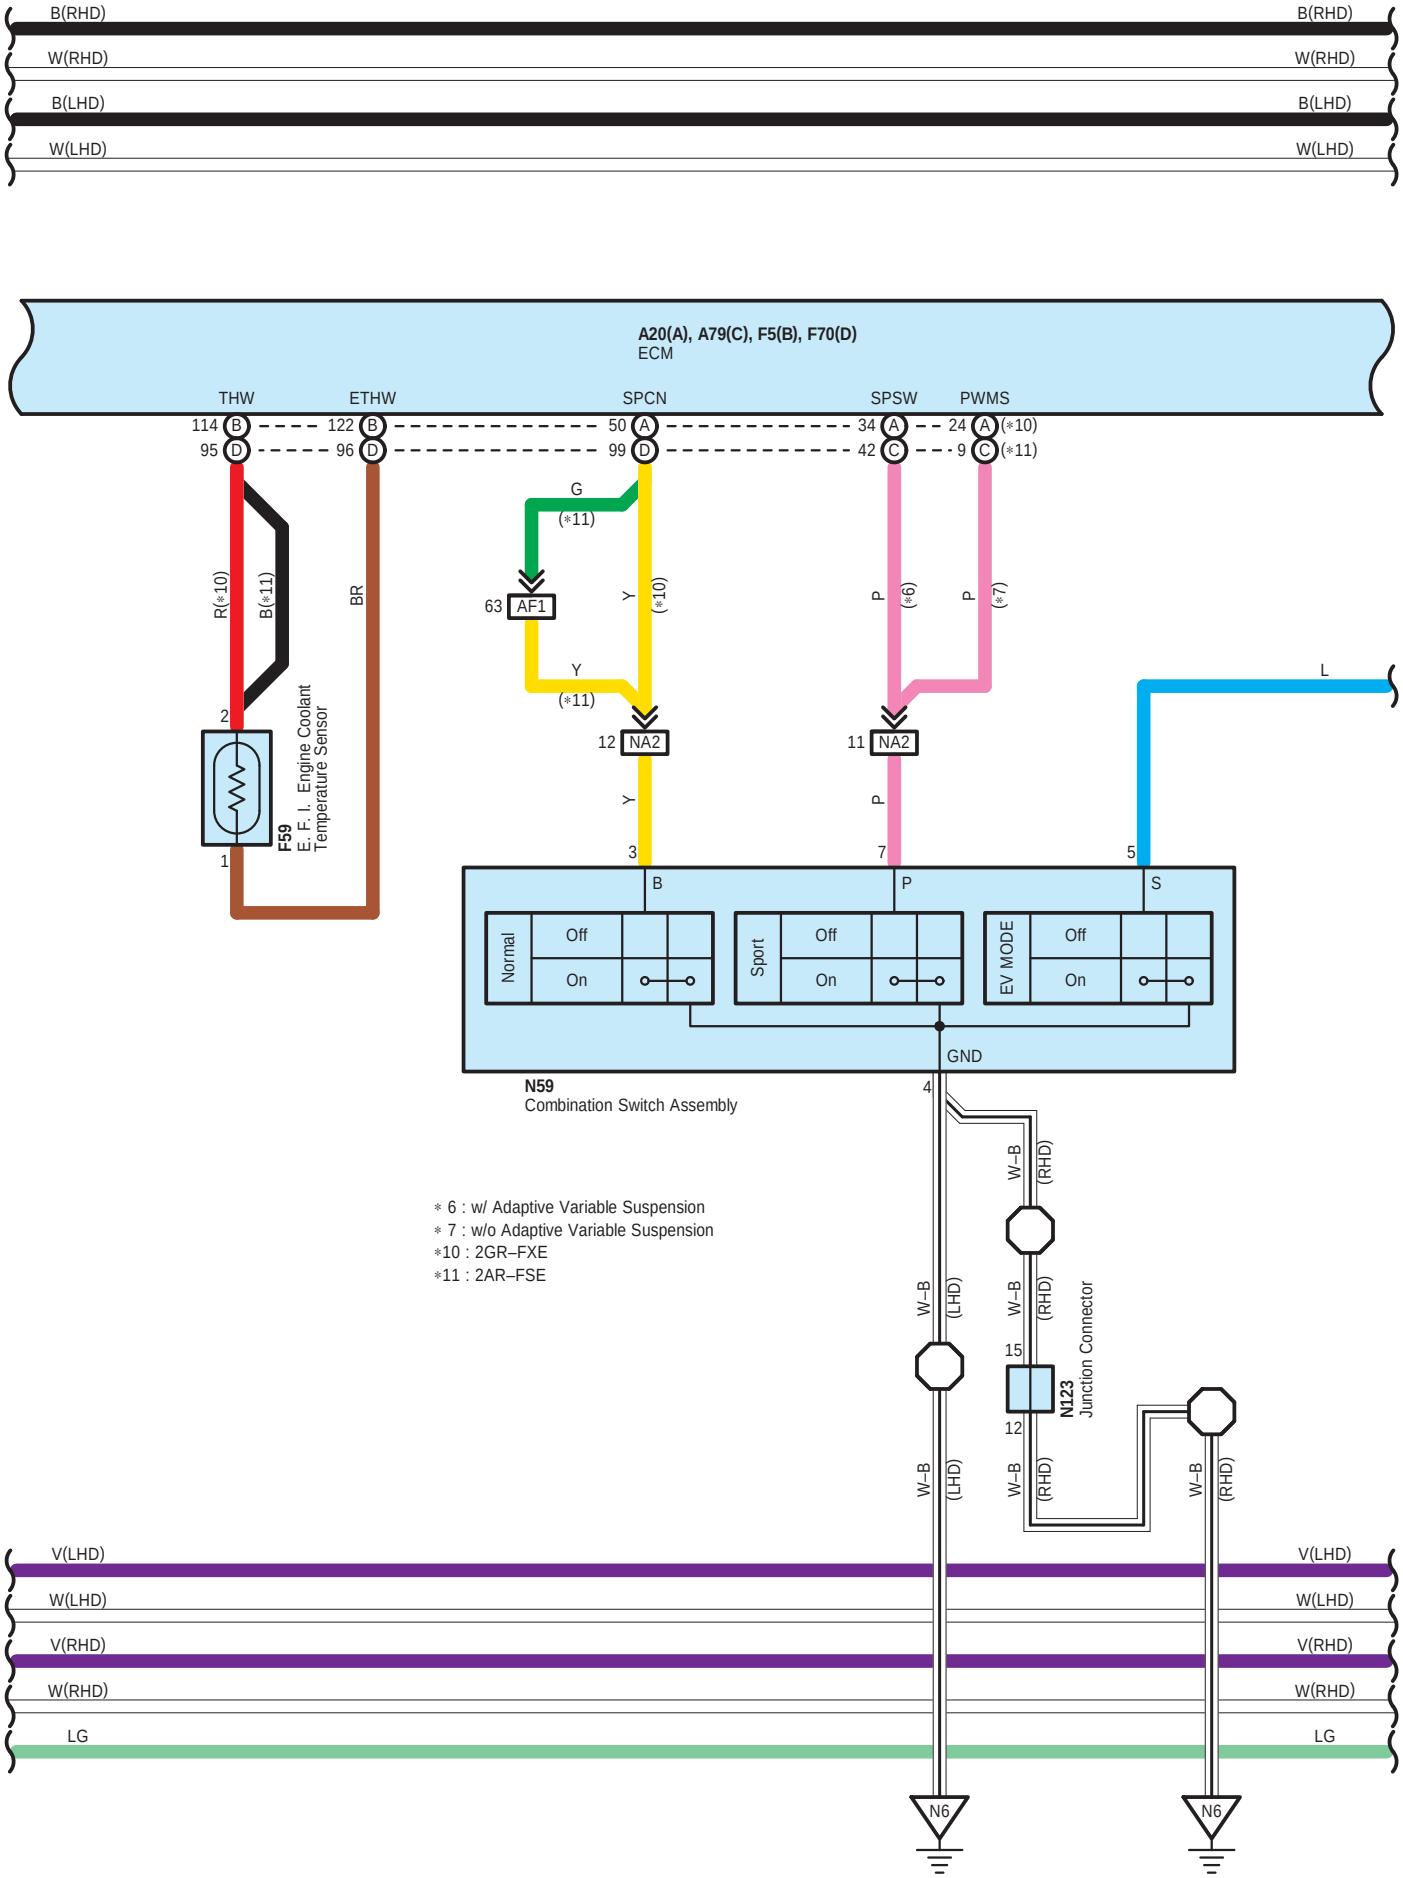
B(RHD)
W(RHD)
B(LHD)
W(LHD)
A20(A), A79(C), F5(B), F70(D)
ECM
THW
ETHW
SPCN
SPSW
PWMS
114 B
95 D
122 B
96 D
50 A
99 D
34 A
42 C
24 A (*10)
9 C (*11)
R(*10)
B(*11)
BR
G
(*11)
63 AF1
Y
(*10)
Y
(*11)
12 NA2
P
(*6)
P
(*7)
11 NA2
L
2
1
F59
E. F. I. Engine Coolant Temperature Sensor
3
7
5
B
P
S
Normal
Off
On
Sport
Off
On
EV MODE
Off
On
GND
4
N59
Combination Switch Assembly
* 6 : w/ Adaptive Variable Suspension
* 7 : w/o Adaptive Variable Suspension
*10 : 2GR–FXE
*11 : 2AR–FSE
W–B
(LHD)
W–B
(RHD)
15
12
N123
Junction Connector
V(LHD)
W(LHD)
V(RHD)
W(RHD)
LG
N6
N6

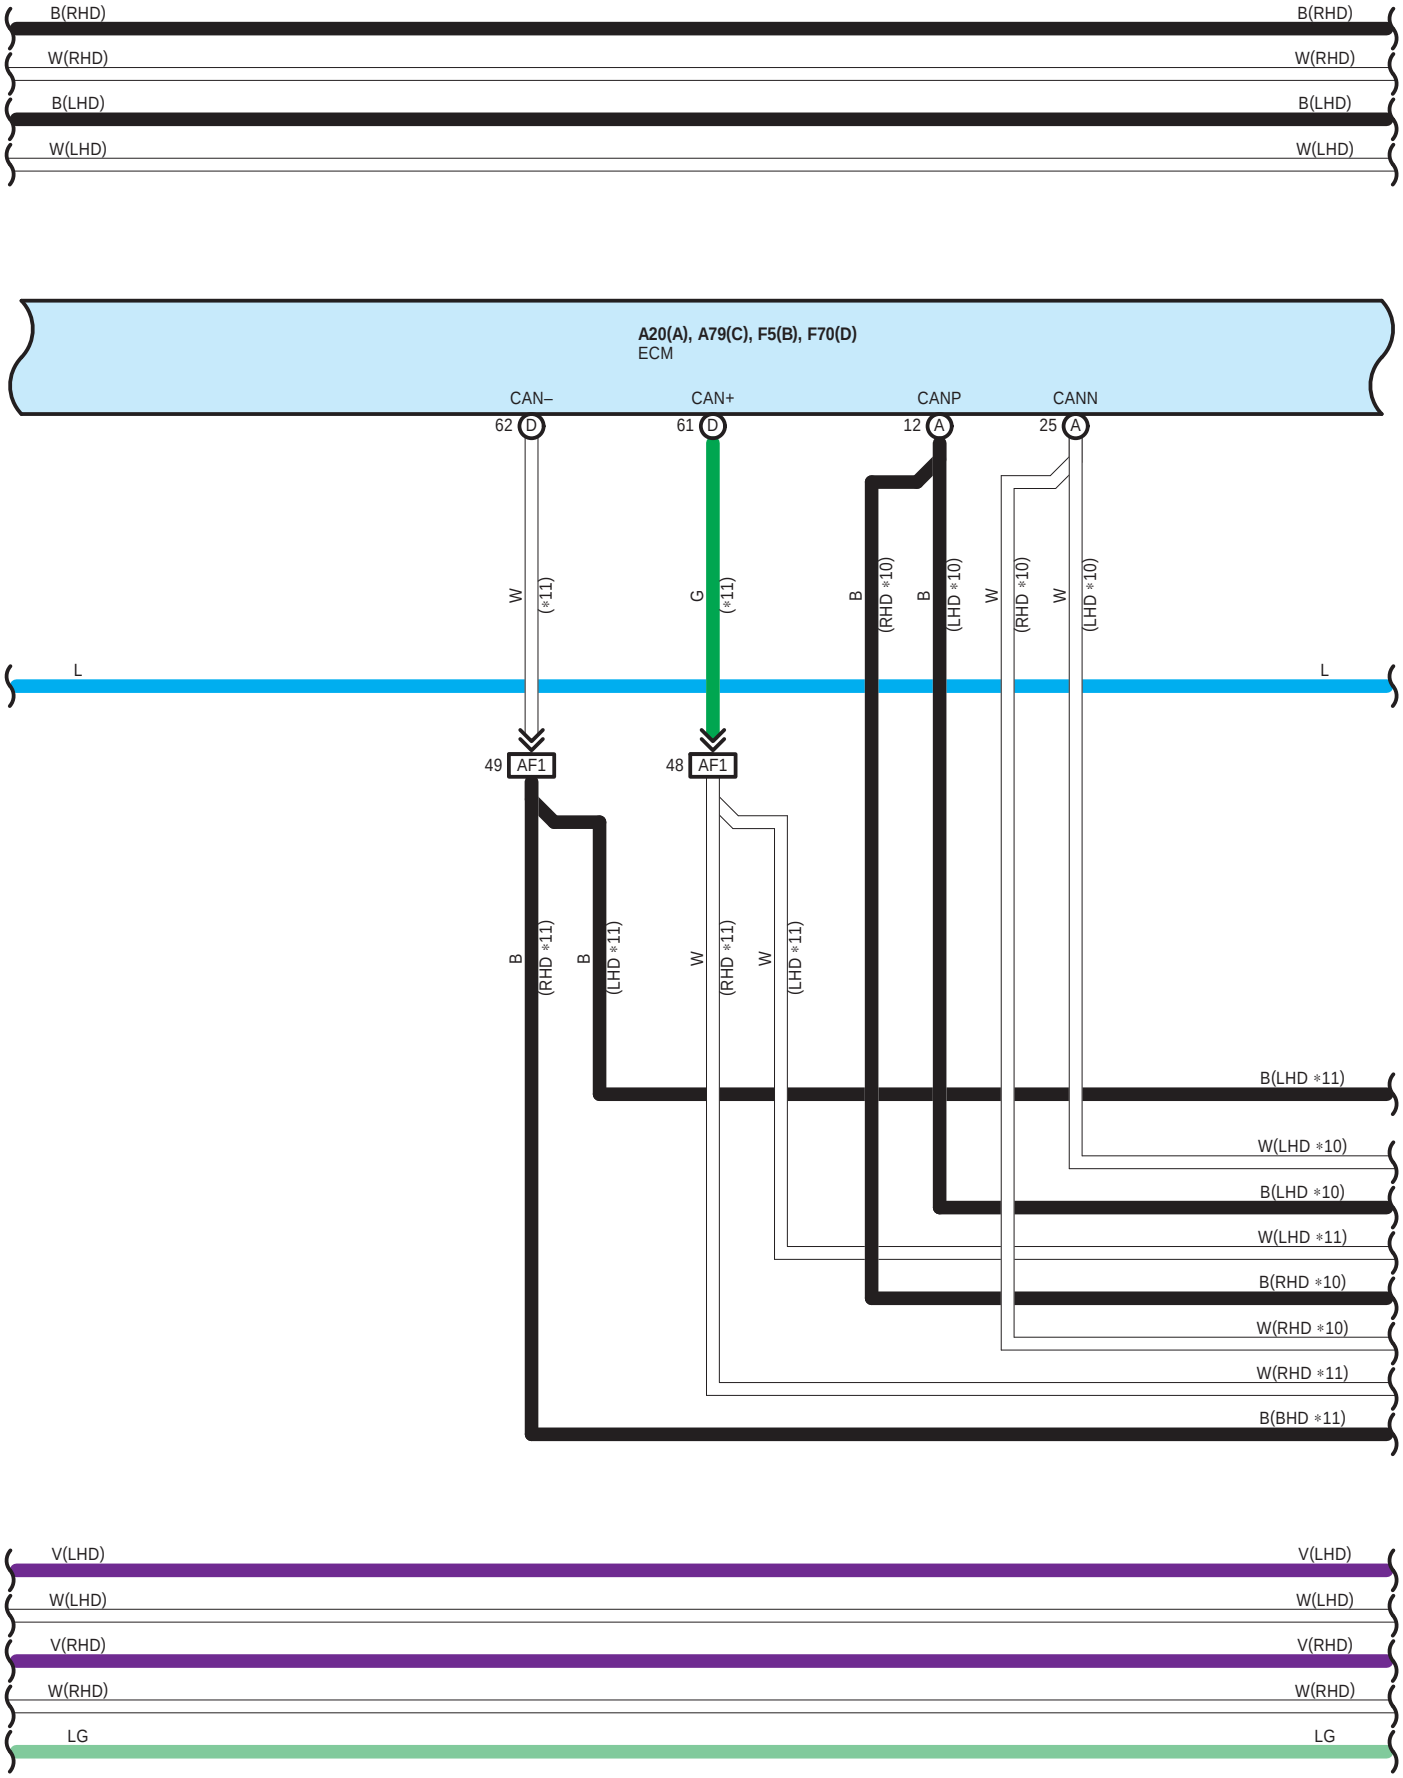
B(RHD)
W(RHD)
B(LHD)
W(LHD)
A20(A), A79(C), F5(B), F70(D)
ECM
CAN–
CAN+
CANP
CANN
62 D
61 D
12 A
25 A
W
(*11)
G
(*11)
B
(RHD *10)
B
(LHD *10)
W
(RHD *10)
W
(LHD *10)
L
49 AF1
48 AF1
B
(RHD *11)
B
(LHD *11)
W
(RHD *11)
W
(LHD *11)
B(LHD *11)
W(LHD *10)
B(LHD *10)
W(LHD *11)
B(RHD *10)
W(RHD *10)
W(RHD *11)
B(BHD *11)
V(LHD)
W(LHD)
V(RHD)
W(RHD)
LG

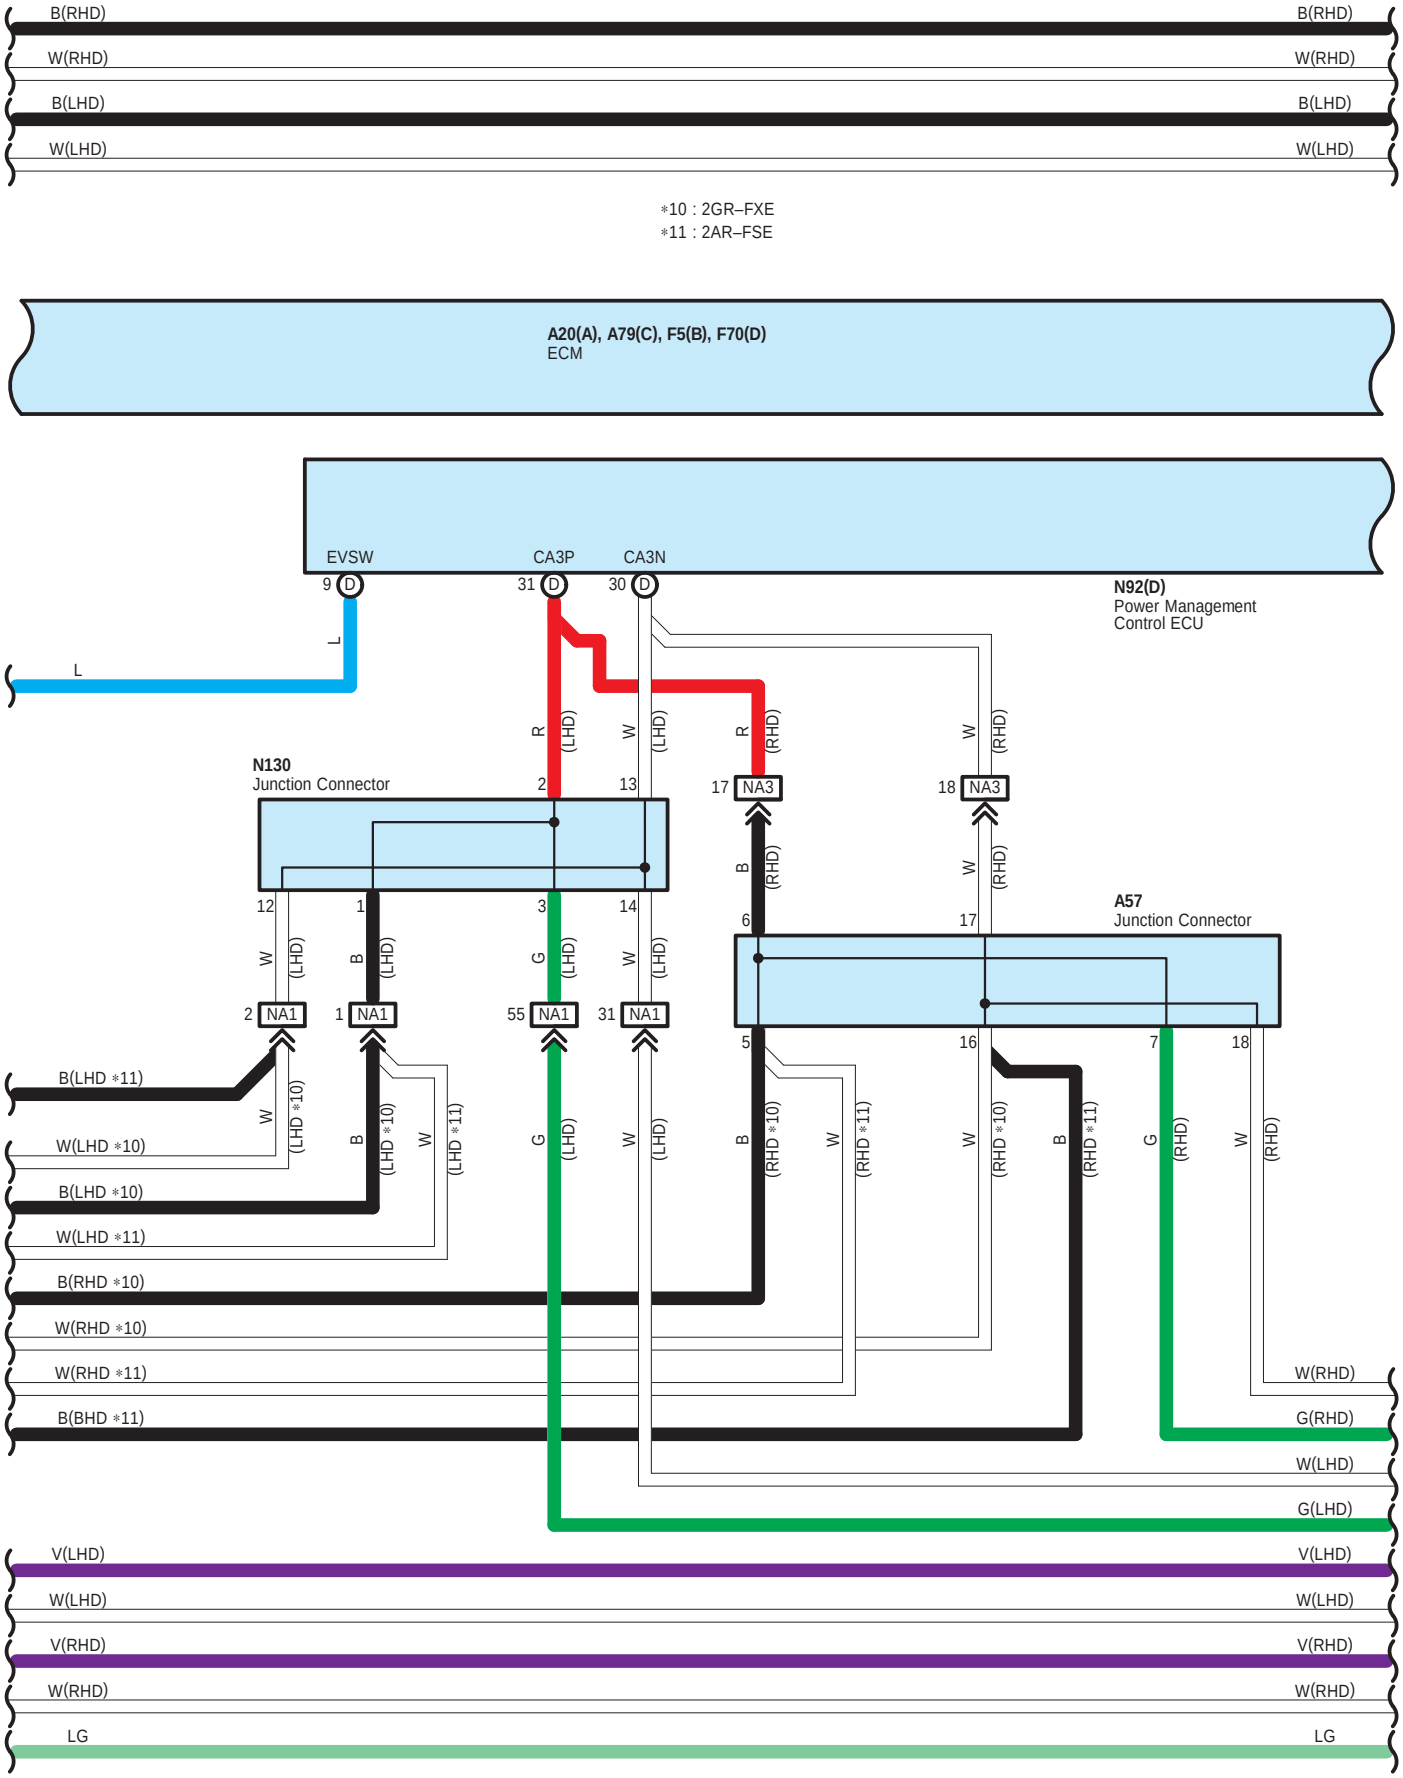
B(RHD)
W(RHD)
B(LHD)
W(LHD)
*10 : 2GR–FXE
*11 : 2AR–FSE
A20(A), A79(C), F5(B), F70(D)
ECM
EVSW
CA3P
CA3N
9 D
31 D
30 D
N92(D)
Power Management
Control ECU
L
R (LHD)
W (LHD)
R (RHD)
W (RHD)
N130
Junction Connector
2
13
17 NA3
18 NA3
B (RHD)
W (RHD)
A57
Junction Connector
12
1
3
14
6
17
W (LHD)
B (LHD)
G (LHD)
W (LHD)
2 NA1
1 NA1
55 NA1
31 NA1
5
16
7
18
B(LHD *11)
W(LHD *10)
B(LHD *10)
W(LHD *11)
B(RHD *10)
W(RHD *10)
W(RHD *11)
B(BHD *11)
W(RHD)
G(RHD)
W(LHD)
G(LHD)
V(LHD)
W(LHD)
V(RHD)
W(RHD)
LG

Combination Meter <Before Oct. 2015 Production>

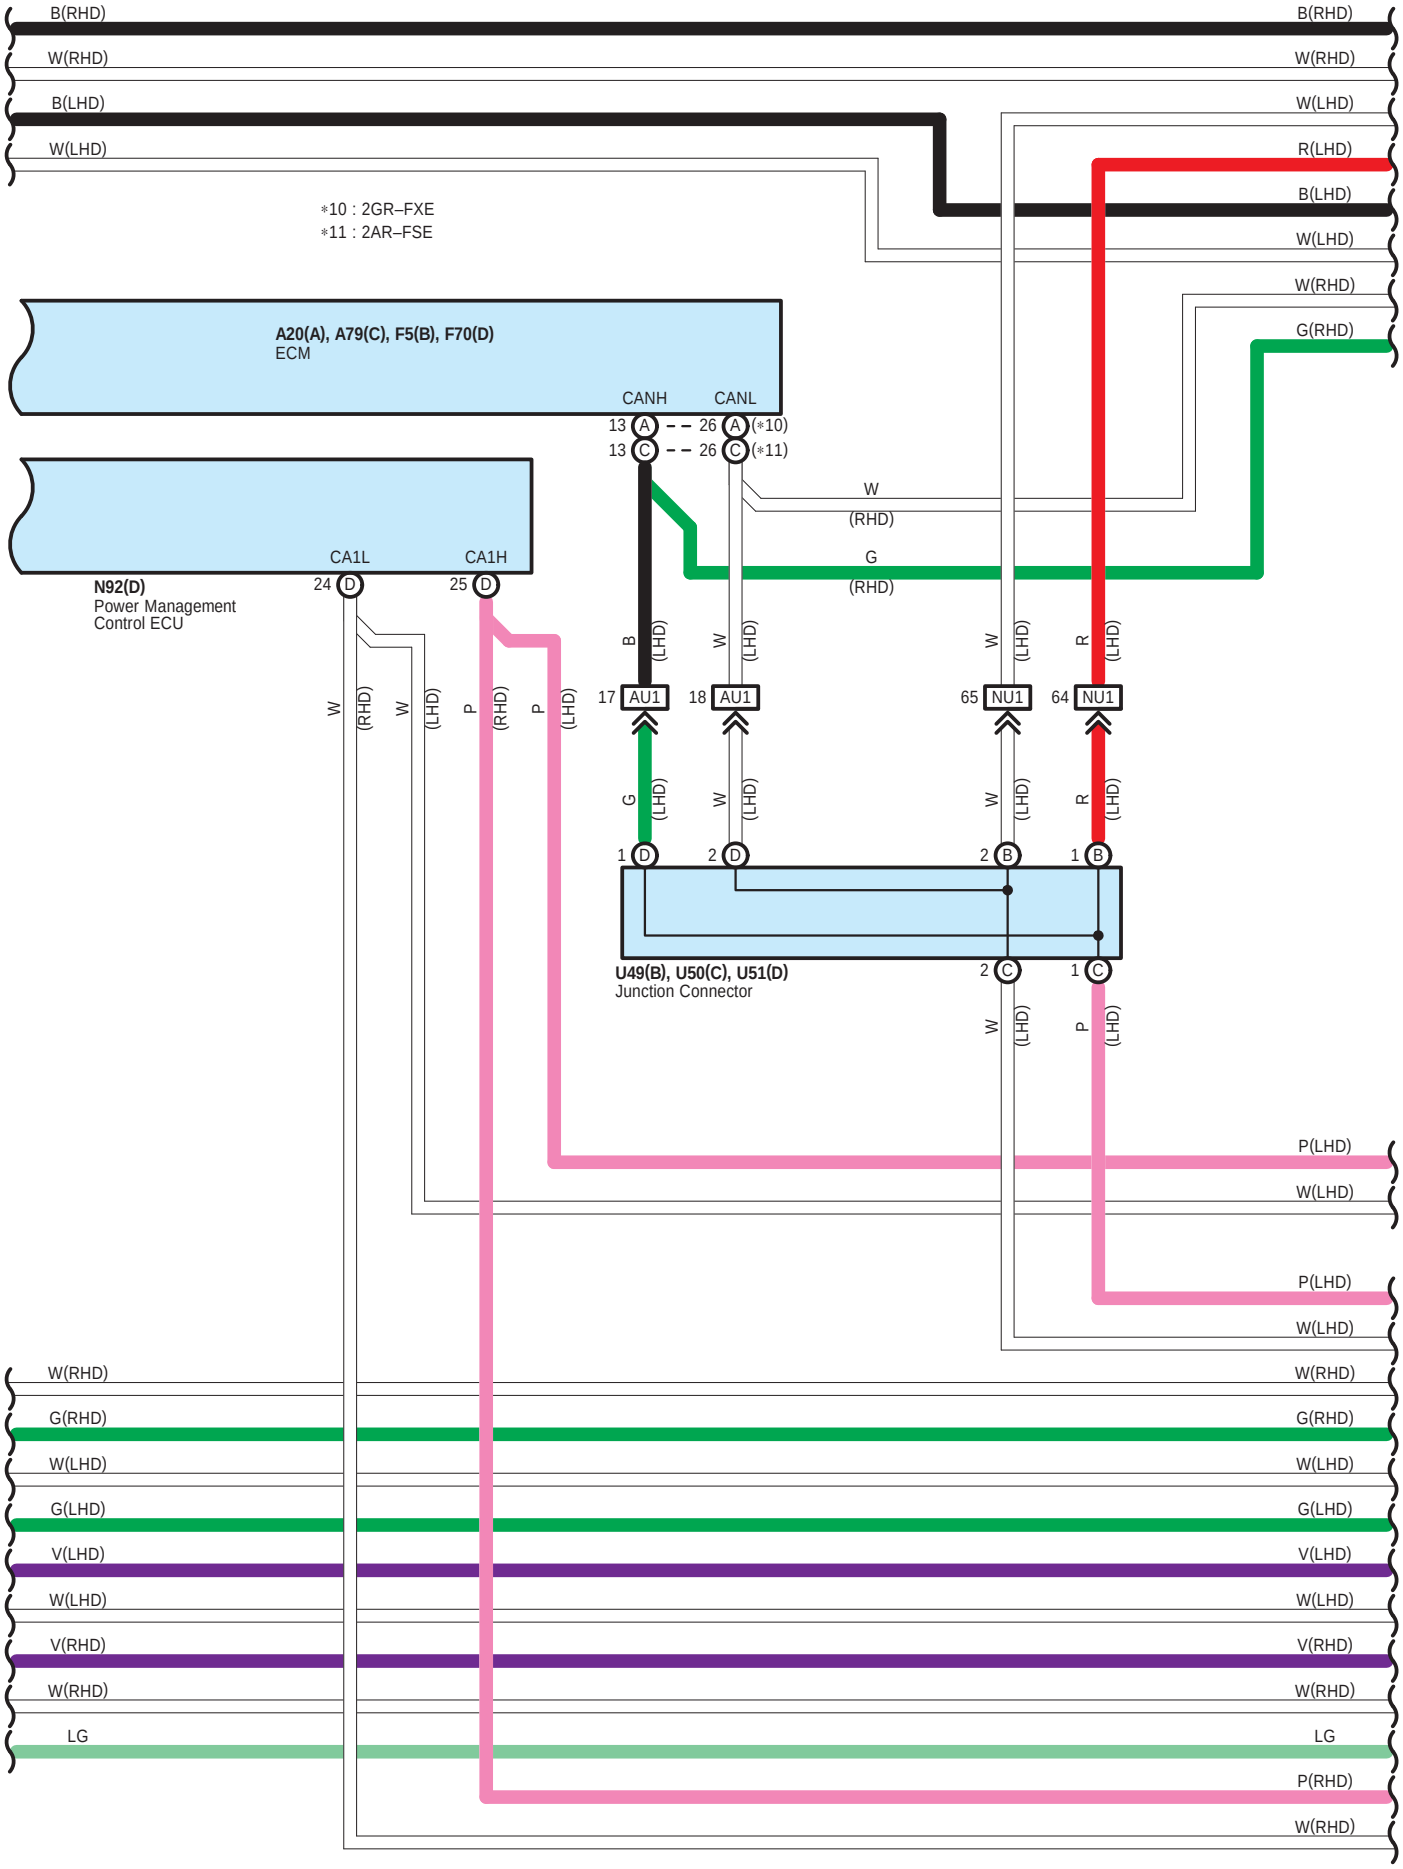

Combination Meter <Before Oct. 2015 Production>

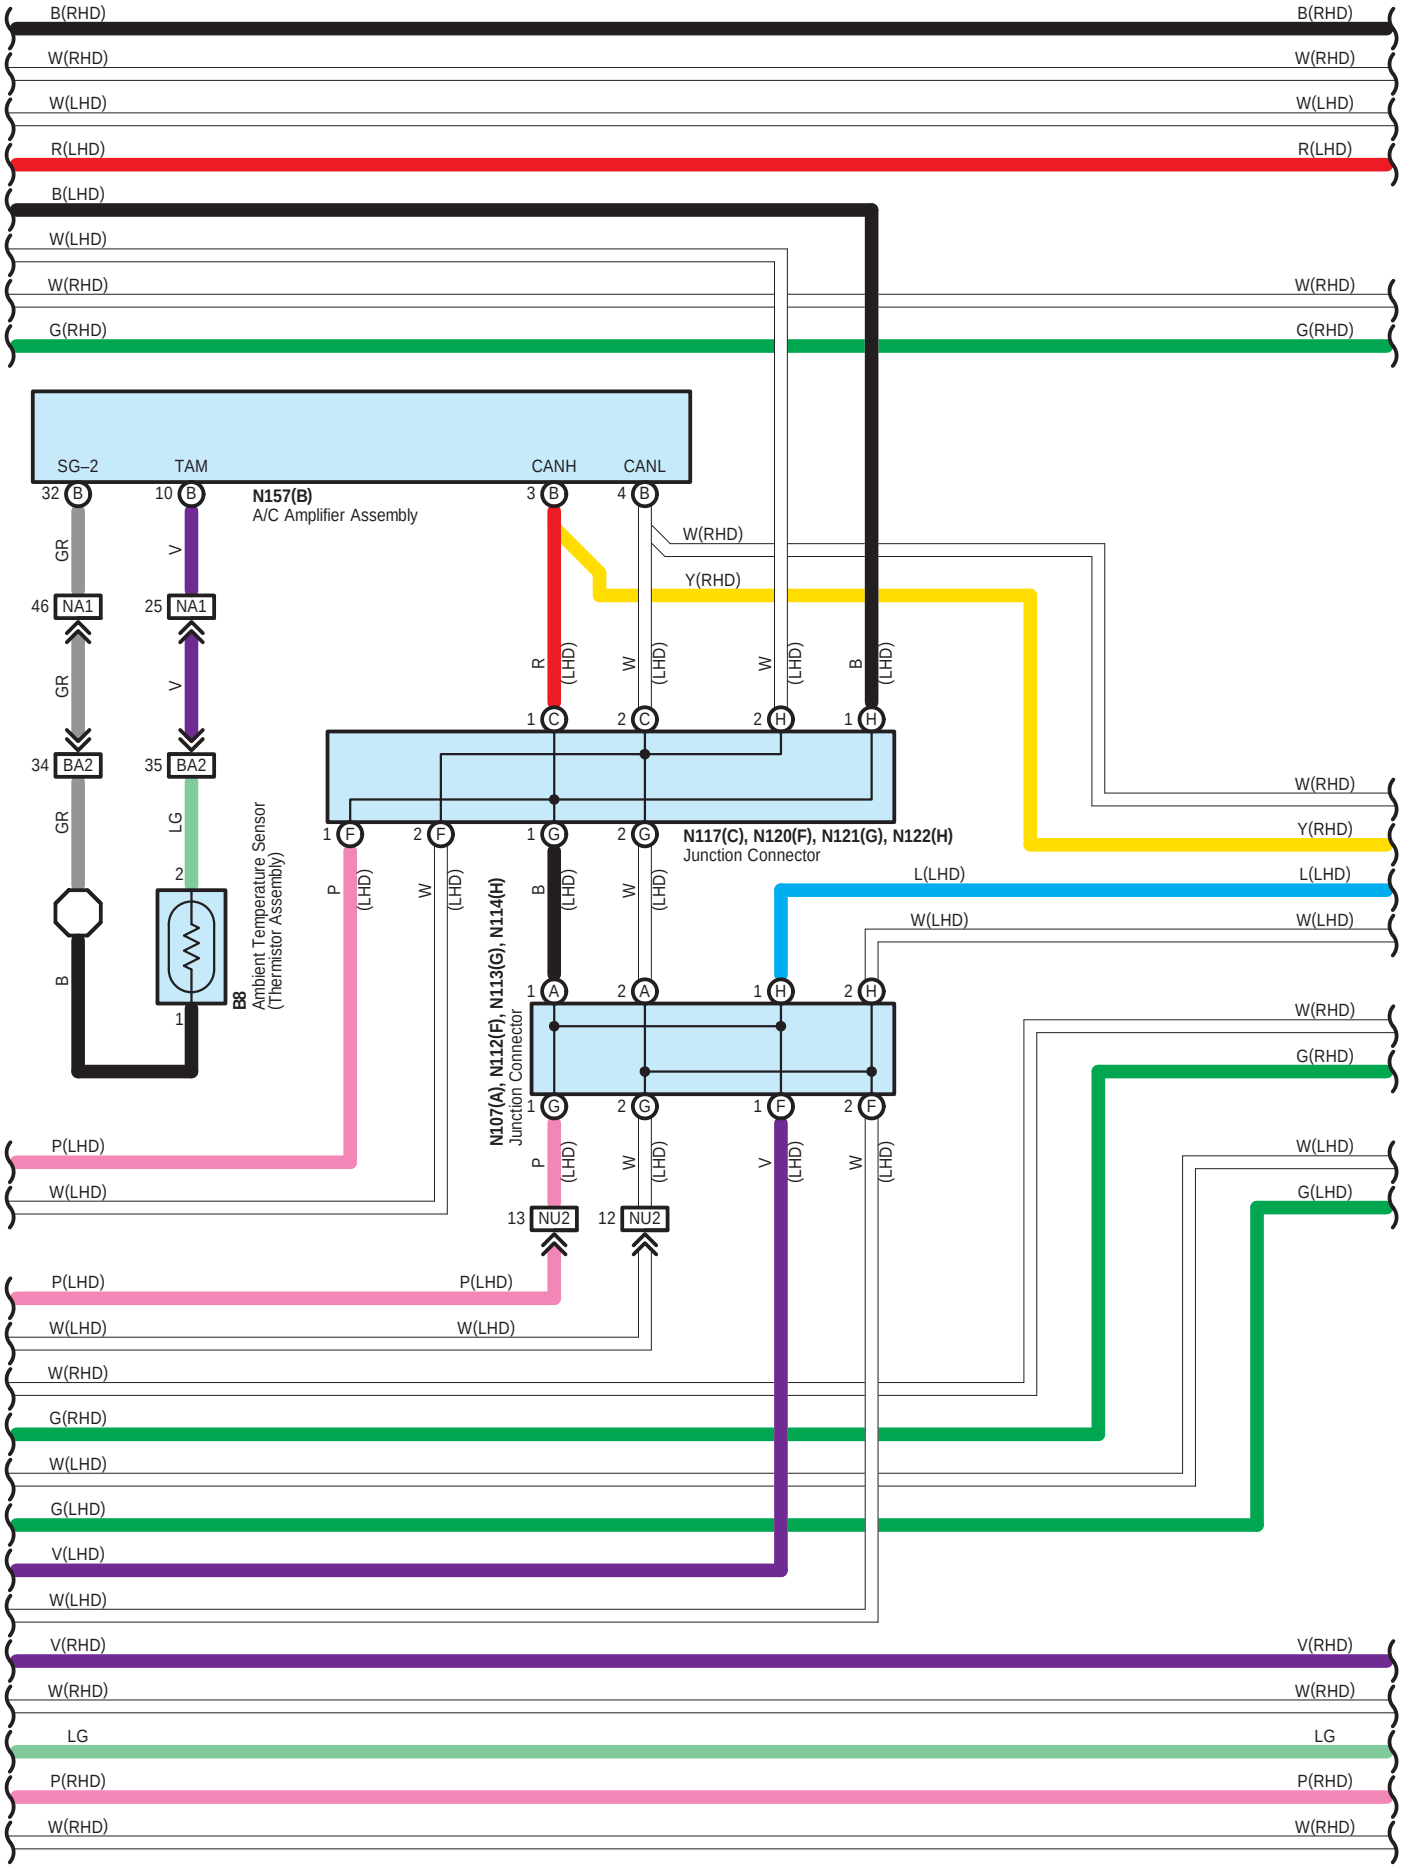

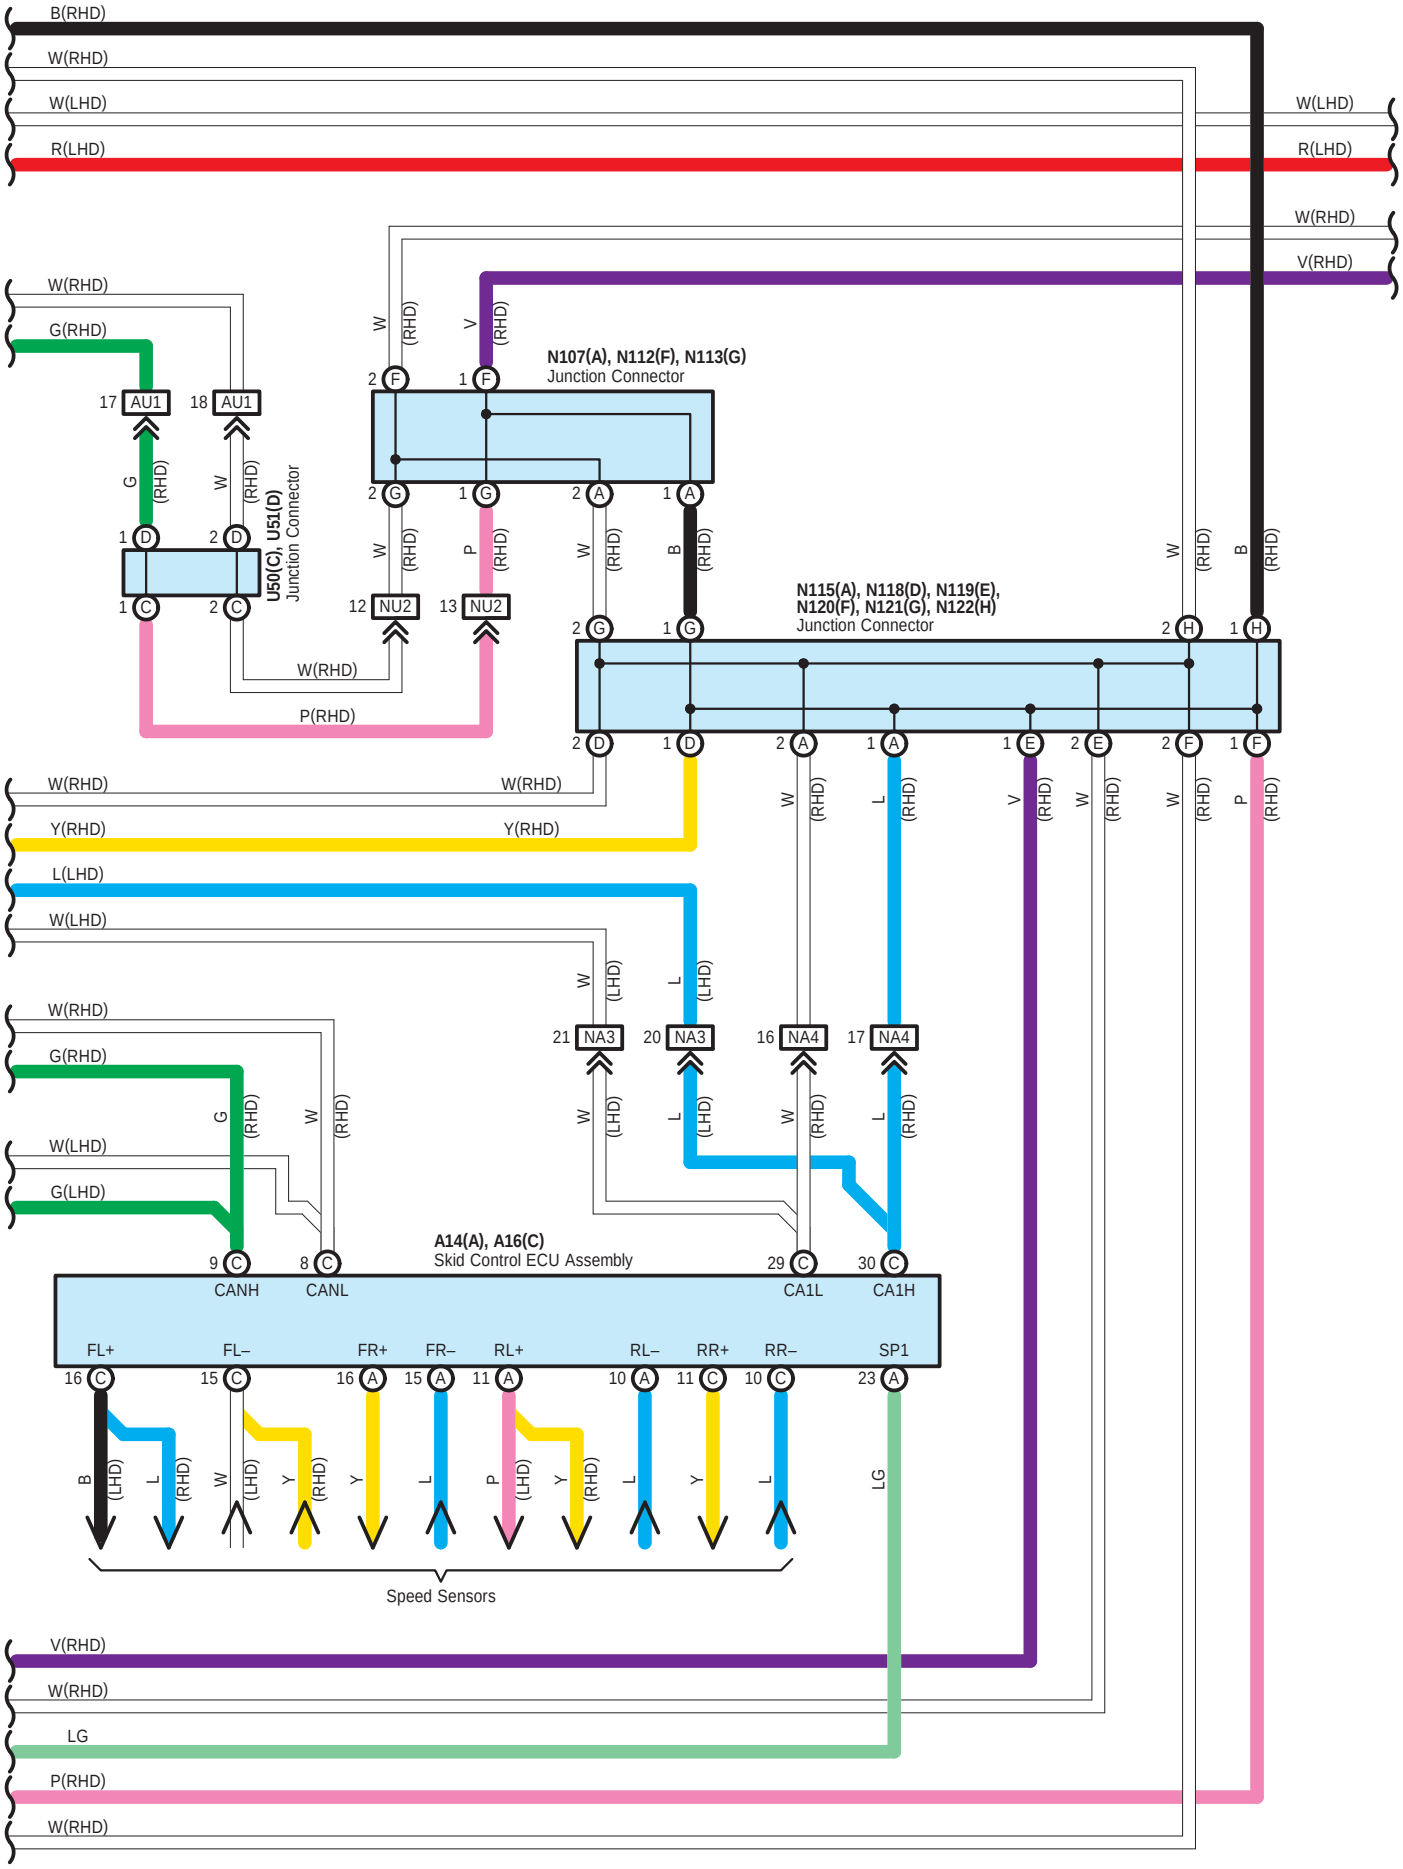
B(RHD)
W(RHD)
W(LHD)
R(LHD)
W(LHD)
R(LHD)
W(RHD)
V(RHD)
W(RHD)
G(RHD)
17 AU1
18 AU1
U50(C), U51(D)
Junction Connector
N107(A), N112(F), N113(G)
Junction Connector
12 NU2
13 NU2
W(RHD)
P(RHD)
N115(A), N118(D), N119(E),
N120(F), N121(G), N122(H)
Junction Connector
W(RHD)
Y(RHD)
L(LHD)
W(LHD)
21 NA3
20 NA3
16 NA4
17 NA4
W(RHD)
G(RHD)
W(LHD)
G(LHD)
A14(A), A16(C)
Skid Control ECU Assembly
CANH
CANL
CA1L
CA1H
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
Speed Sensors
V(RHD)
W(RHD)
LG
P(RHD)
W(RHD)

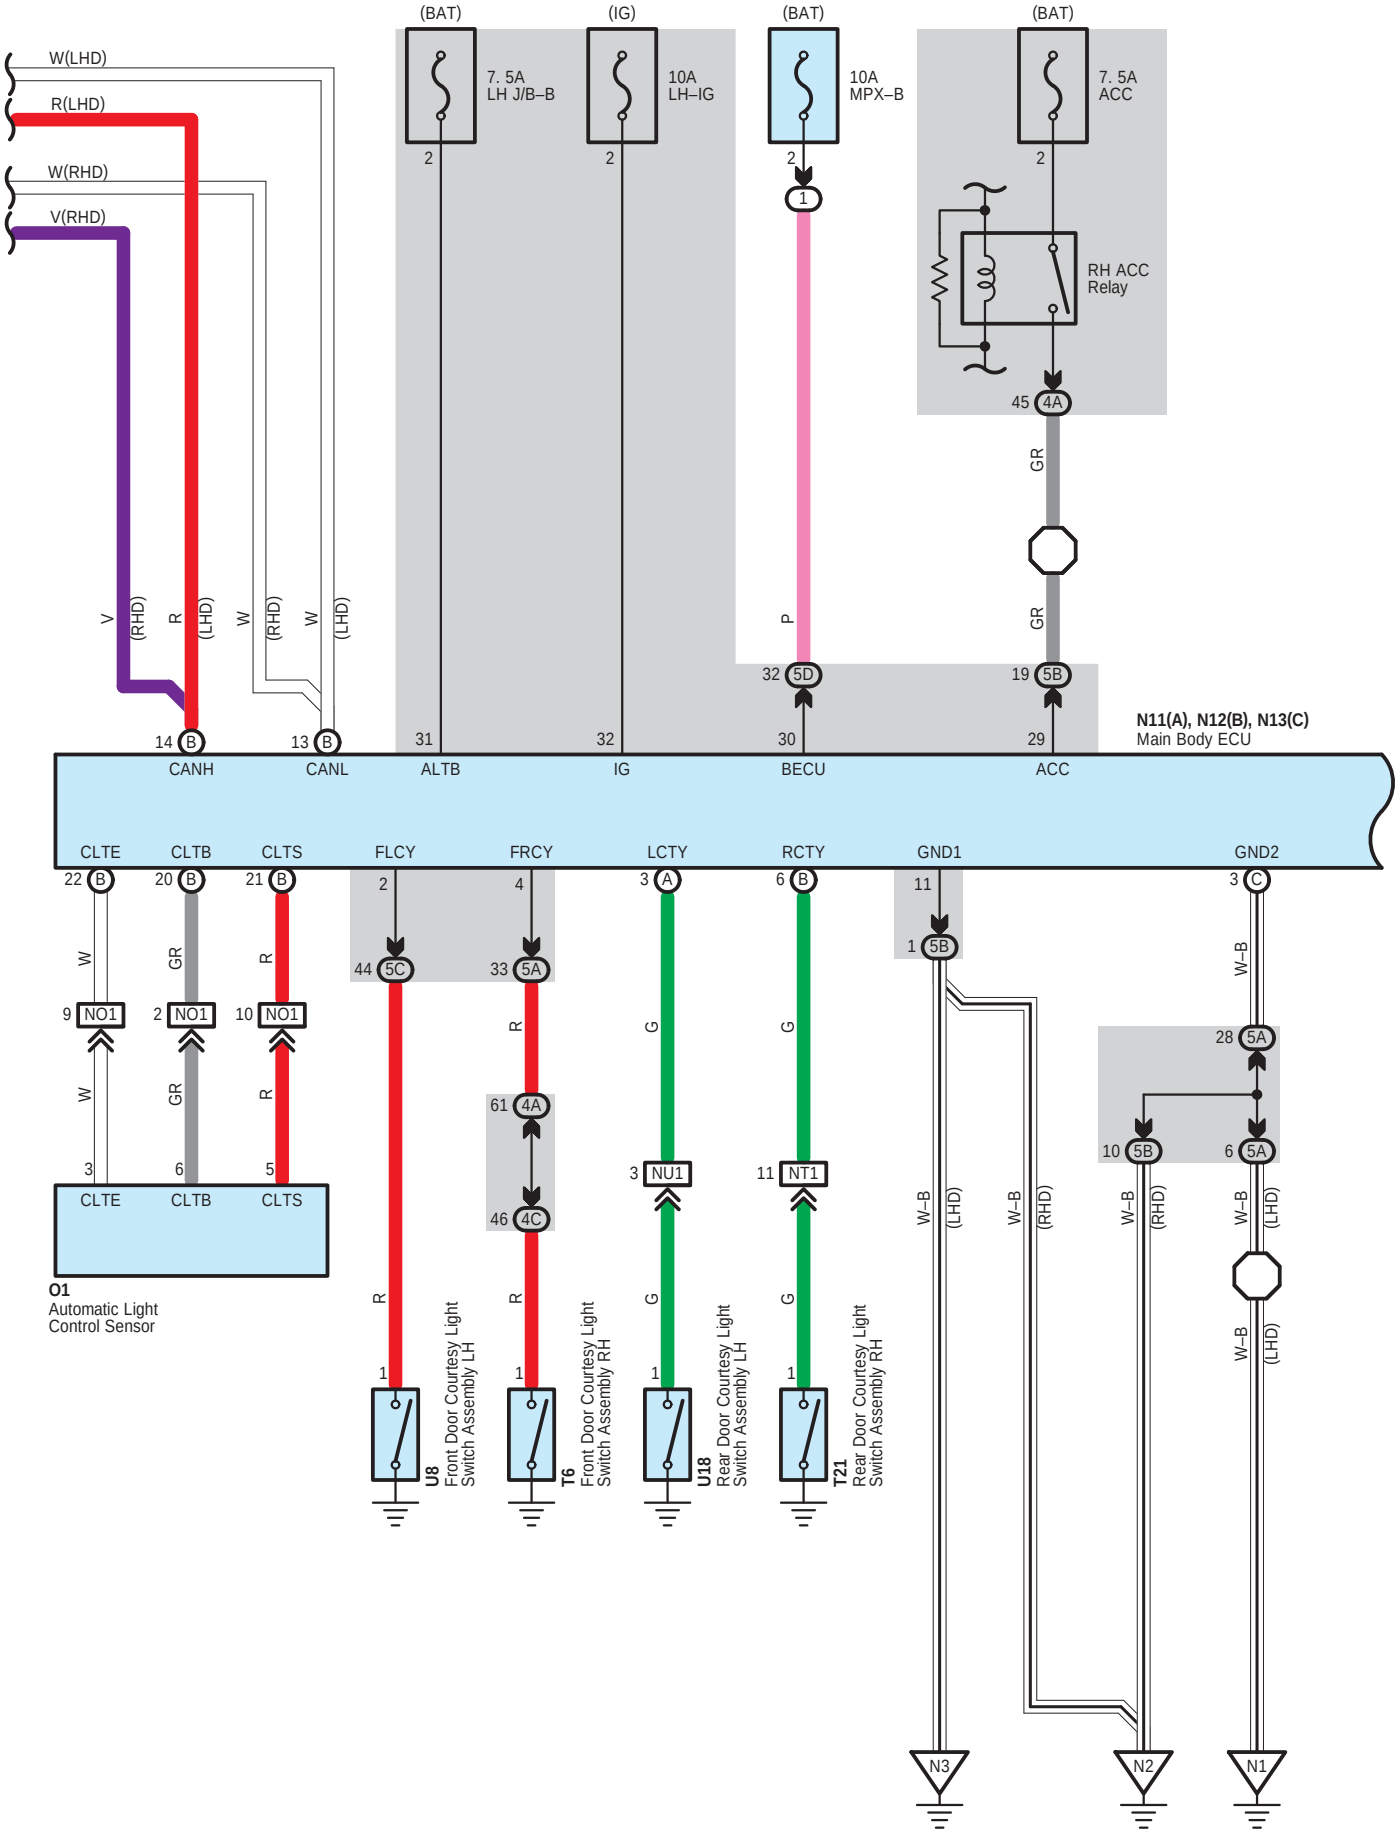
W(LHD)
R(LHD)
W(RHD)
V(RHD)
(BAT)
7. 5A
LH J/B–B
(IG)
10A
LH–IG
(BAT)
10A
MPX–B
(BAT)
7. 5A
ACC
RH ACC
Relay
45 4A
GR
GR
P
32 5D
19 5B
14 B
13 B
31
32
30
29
CANH
CANL
ALTB
IG
BECU
ACC
N11(A), N12(B), N13(C)
Main Body ECU
CLTE
CLTB
CLTS
FLCY
FRCY
LCTY
RCTY
GND1
GND2
22 B
20 B
21 B
9 NO1
2 NO1
10 NO1
3
6
5
CLTE
CLTB
CLTS
O1
Automatic Light
Control Sensor
44 5C
33 5A
61 4A
46 4C
3 NU1
11 NT1
U8
Front Door Courtesy Light
Switch Assembly LH
T6
Front Door Courtesy Light
Switch Assembly RH
U18
Rear Door Courtesy Light
Switch Assembly LH
T21
Rear Door Courtesy Light
Switch Assembly RH
1 5B
28 5A
10 5B
6 5A
W–B
(LHD)
W–B
(RHD)
N3
N2
N1

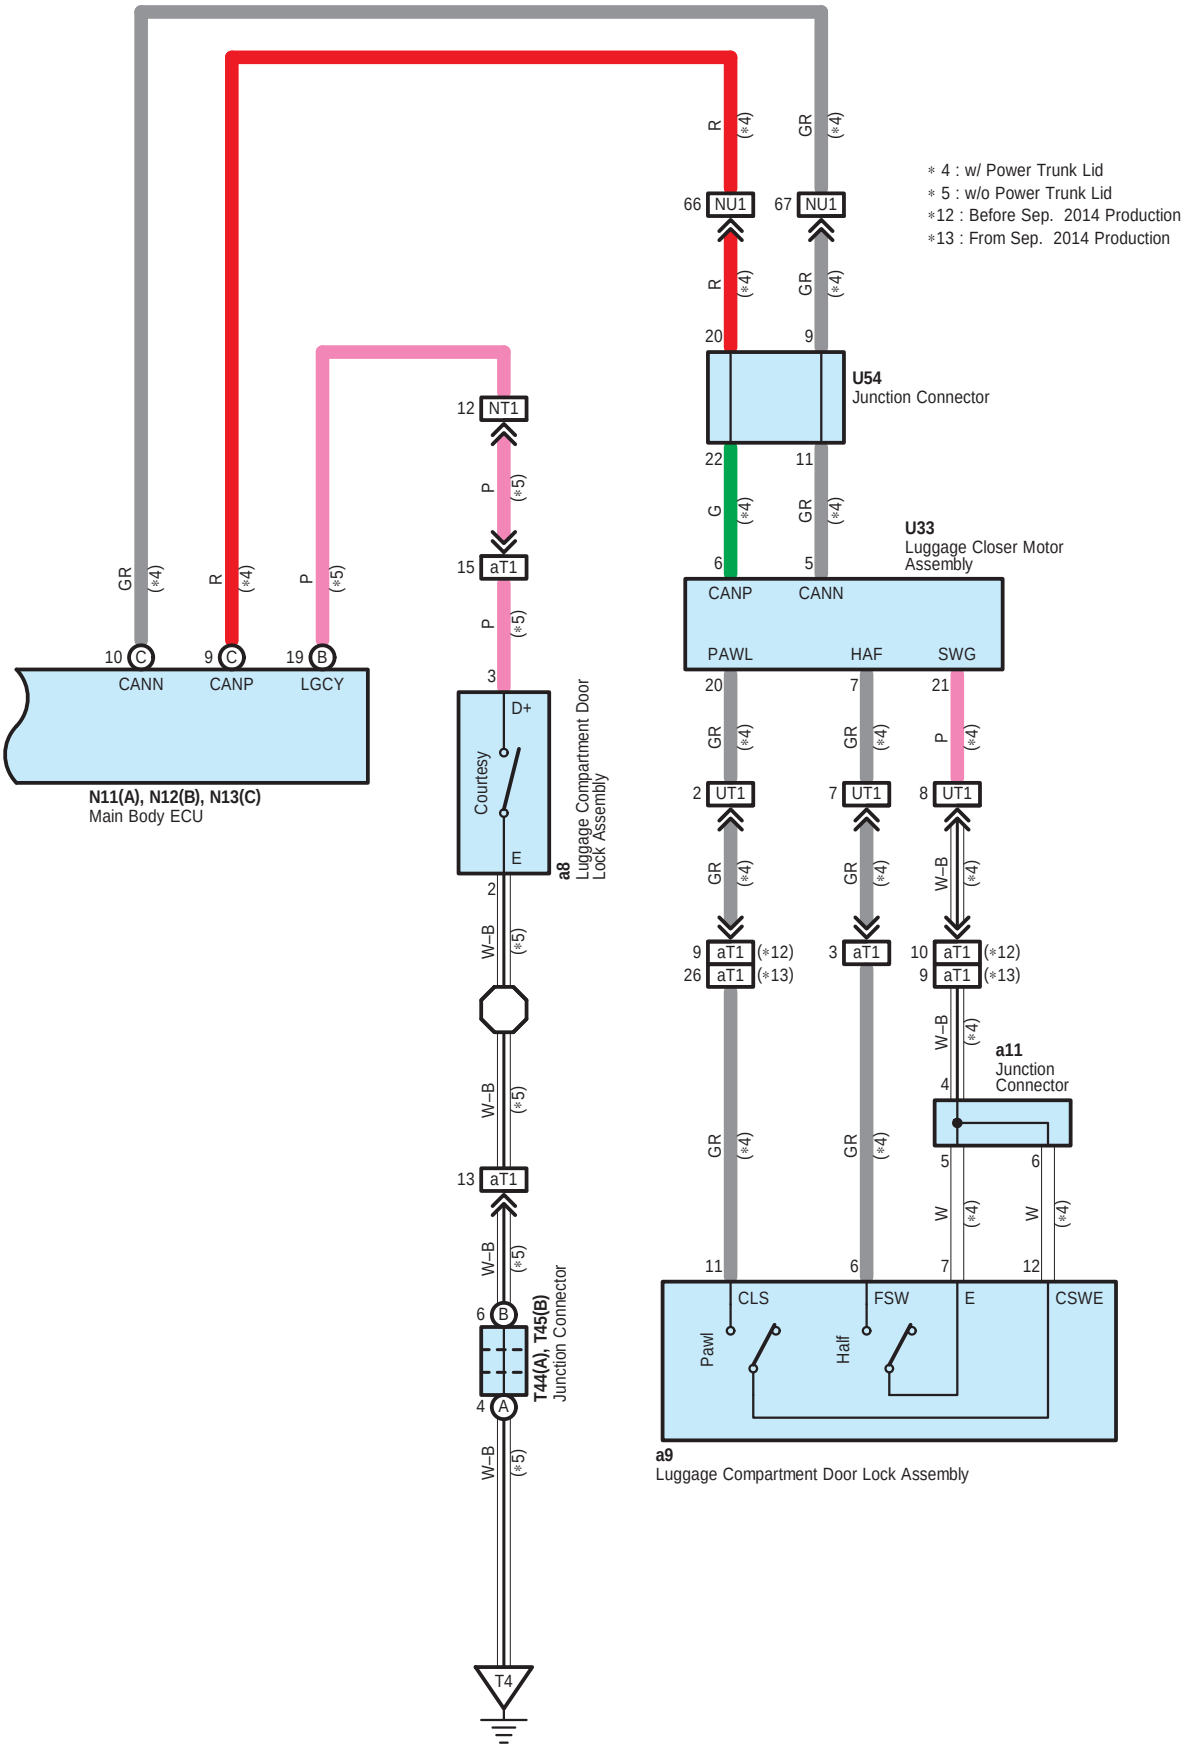
∗ 4 : w/ Power Trunk Lid
∗ 5 : w/o Power Trunk Lid
∗12 : Before Sep. 2014 Production
∗13 : From Sep. 2014 Production
N11(A), N12(B), N13(C)
Main Body ECU
CANN
CANP
LGCY
U54
Junction Connector
U33
Luggage Closer Motor Assembly
CANP
CANN
PAWL
HAF
SWG
a8
Luggage Compartment Door Lock Assembly
Courtesy
D+
E
T44(A), T45(B)
Junction Connector
a11
Junction Connector
a9
Luggage Compartment Door Lock Assembly
Pawl
Half
CLS
FSW
E
CSWE
T4

A 14
Black

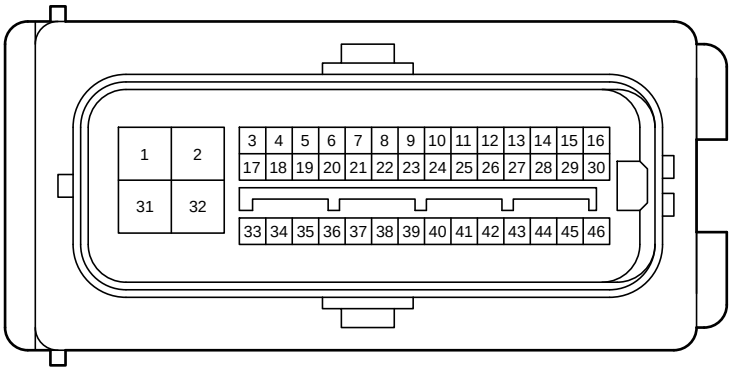

A 16
Gray

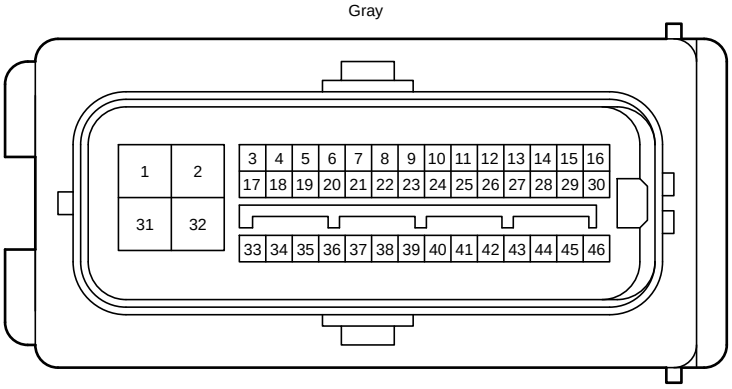

A 20
Black

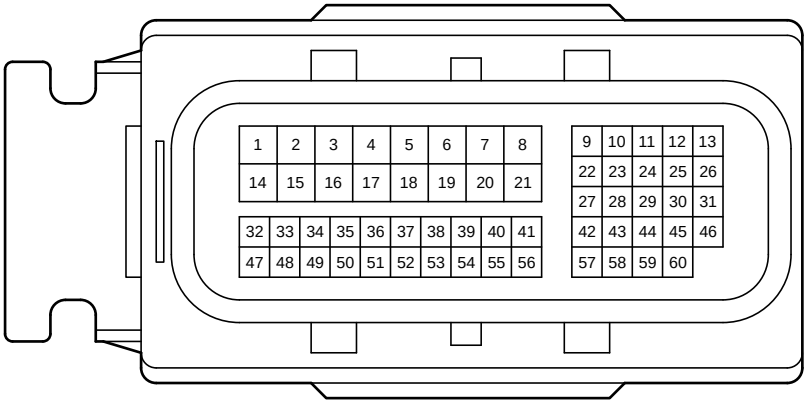

A 22
Black

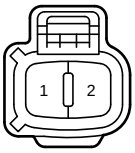

A 50
Gray

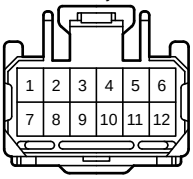

A 53
White

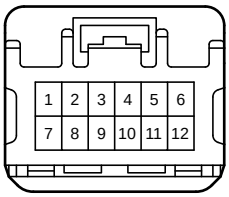

A 57
Blue

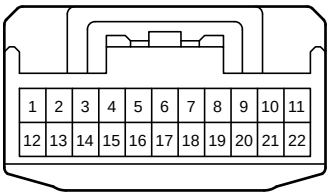

A 79
Black

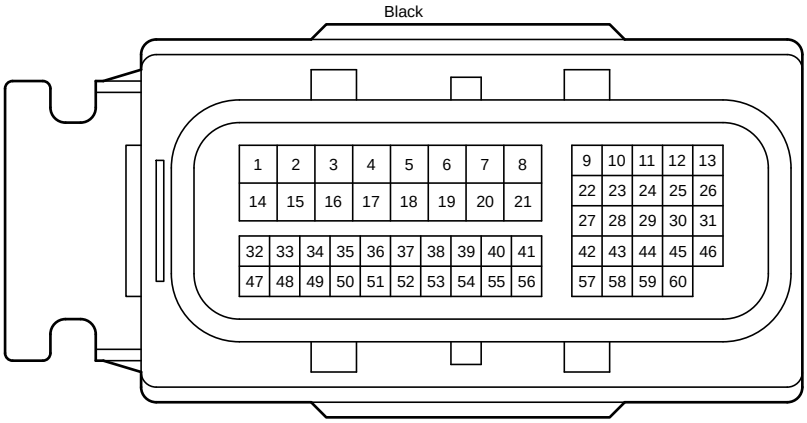

B 8
Black

F 5
Black

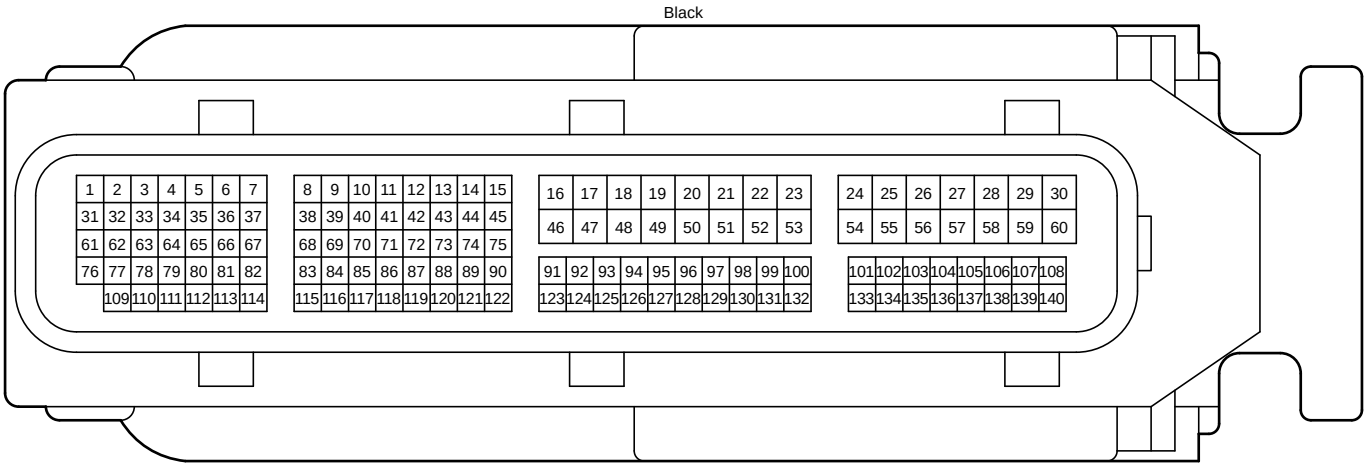

F 21
Black

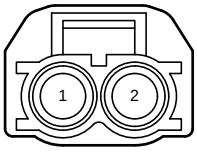

F 26
Black

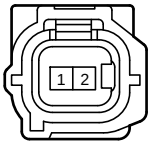

F 36
Black

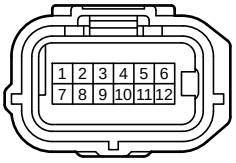

F 38
Gray

F 59
Gray

F 63
Gray



F 66
Gray

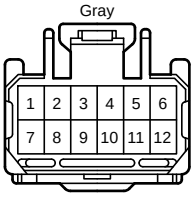

F 67
White

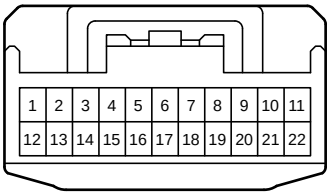

F 69
Black

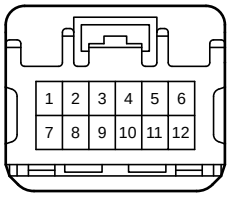

F 70
Black

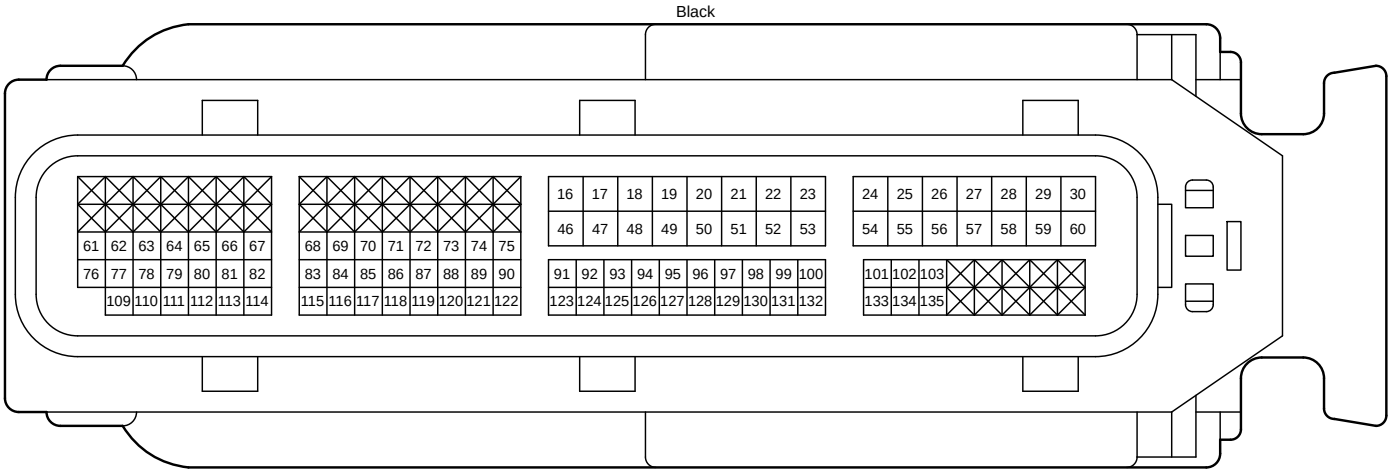

F 79
Black

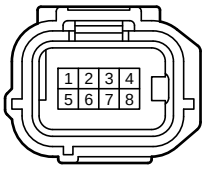

F 85
Black

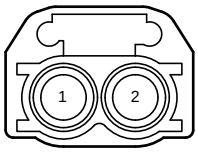

J 3
Black

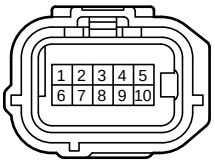

J 5
Black

K 1
Black

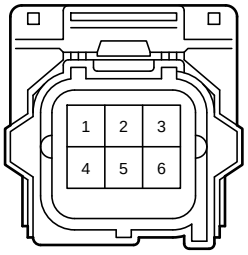

K 2
Black

K 5
Black



N 7
Black

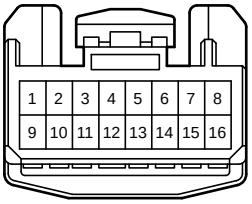

N 8
Black

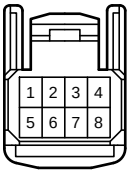

N 11
White

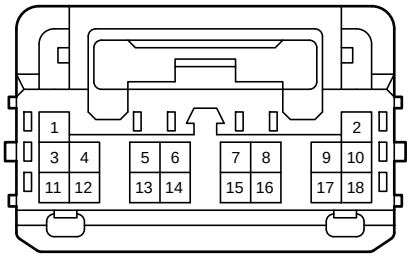

N 12
White

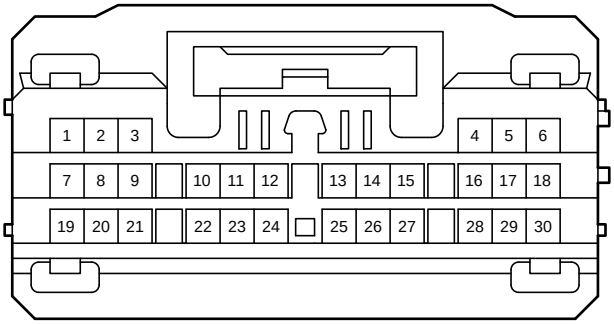

N 13
White

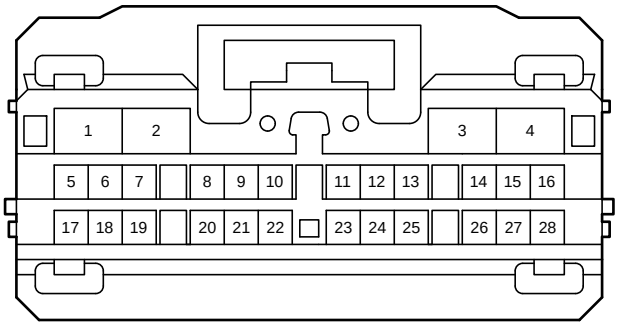

N 31
Black

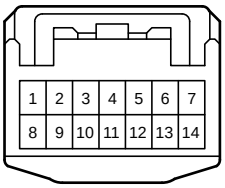

N 39
Black

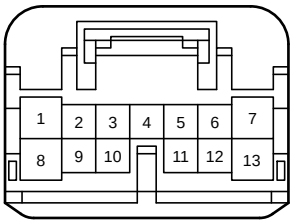

N 40
Black

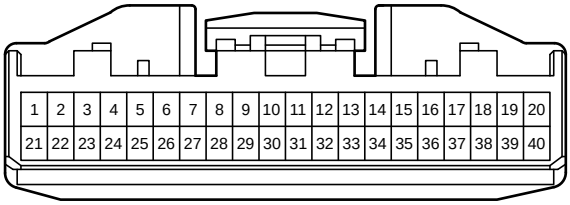

N 59
Black

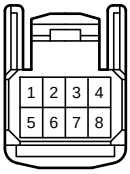

N 68
White

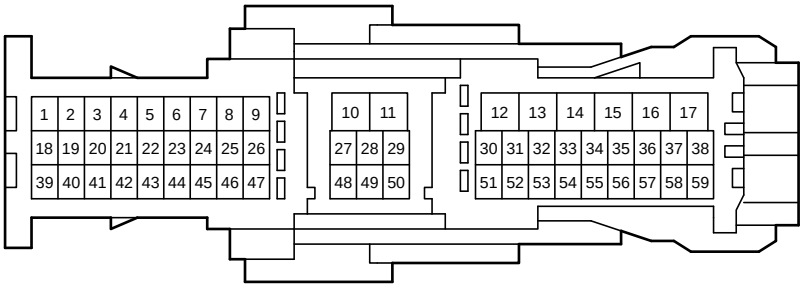

N 92
Gray

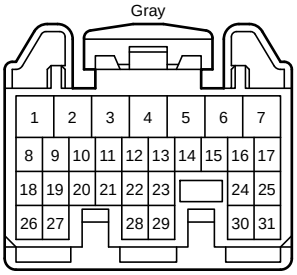

N107
White



N112
White



N113
White



N114
White



N115
White



N117
White



N118
White



N119
White



N120
White



N121
White



N122
White



N123
Blue

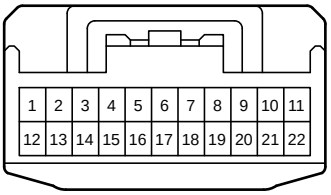

N125
Blue

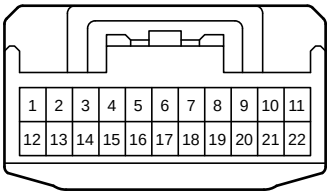

N126
Blue

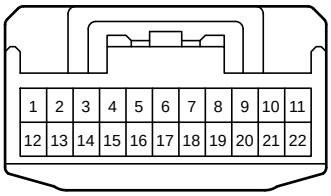

N127
Blue

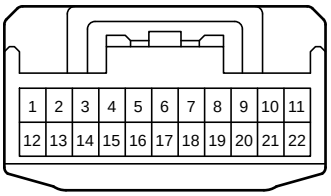

N128
Blue

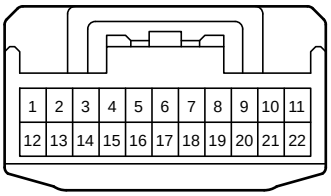

N130
Black

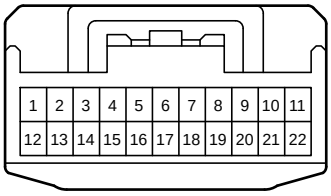

N157
White

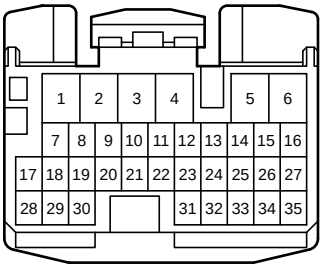

N164
White

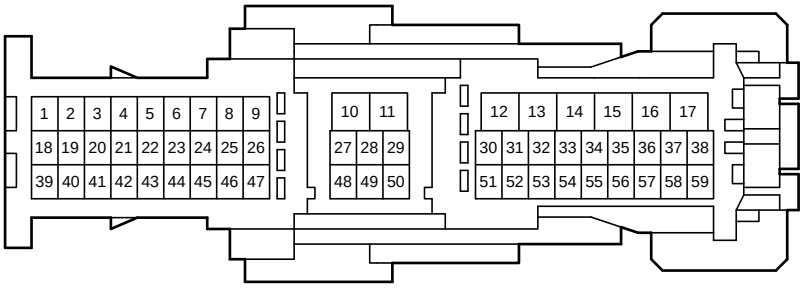

O 1
Blue

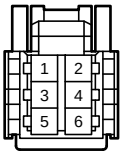

P 1
White

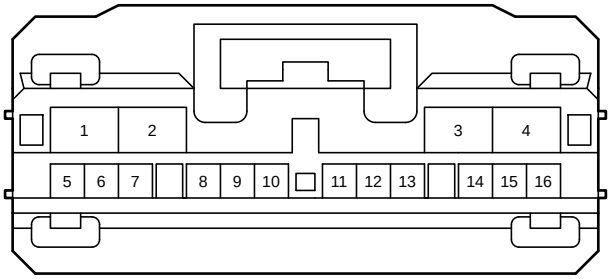

T 6
Black

T 16
White

T 21
Black

T 44
Blue

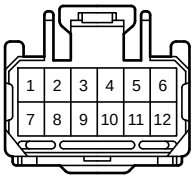

T 45
Blue

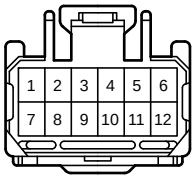

U 8
Black

U 11
White

U 18
Black

U 33
White

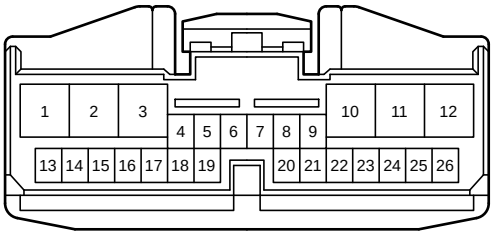

U 49
White



U 50
White



U 51
White



U 54
Blue

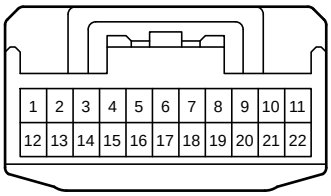

a 8
Black

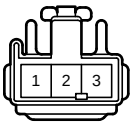

a 9
White

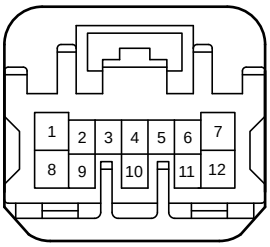

a 11
White

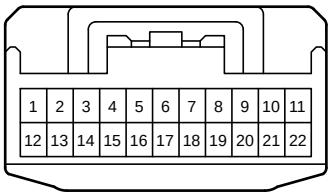

z 4
Black

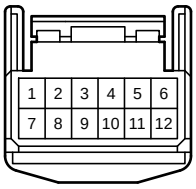

1E
White

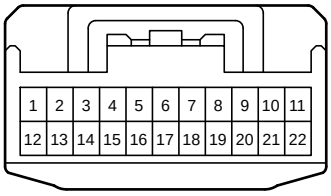

4A
White

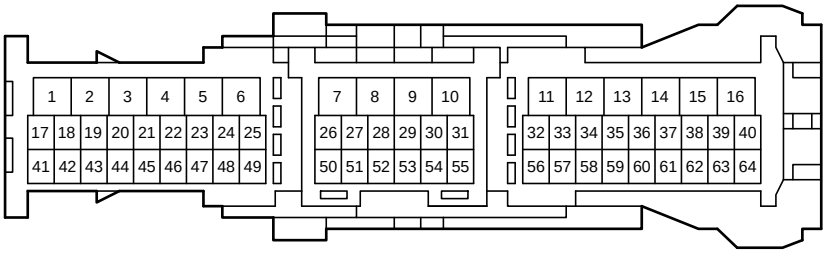

4B
White

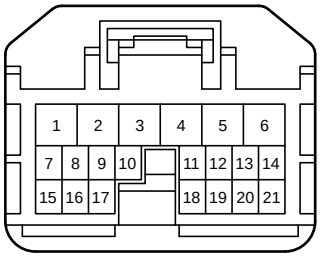

4C
White

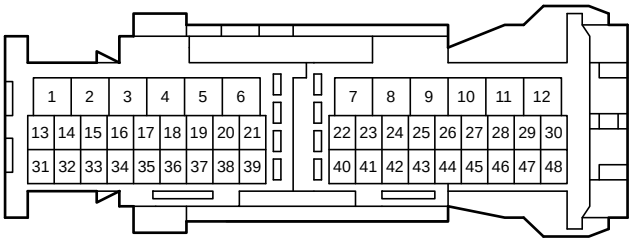

5A
White

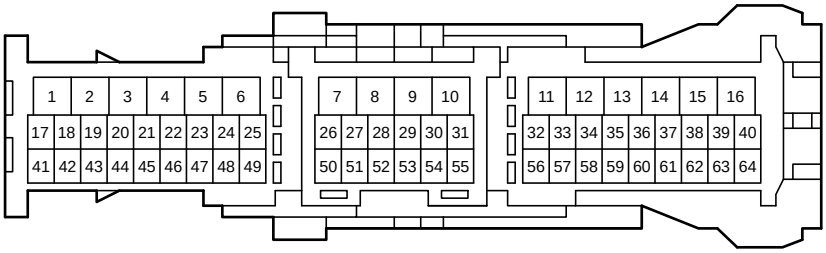

5B
White

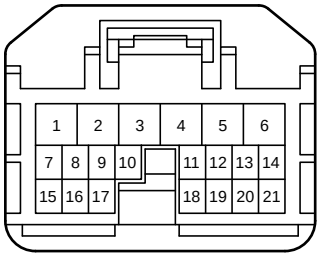

5C
White

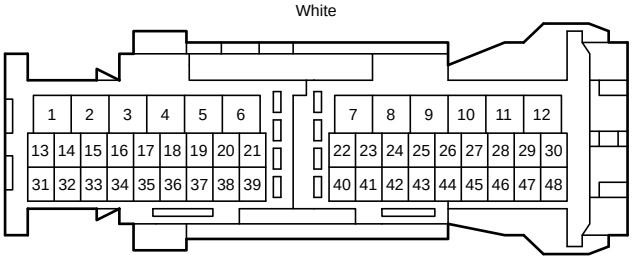

5D
White

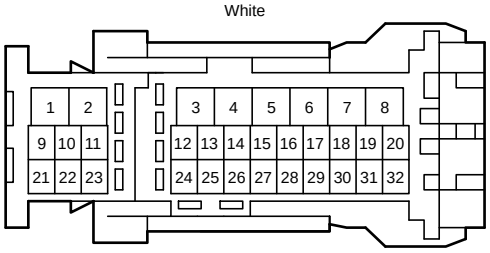

AF1
White

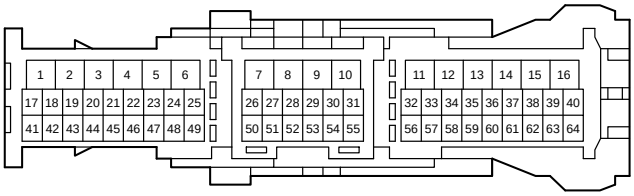

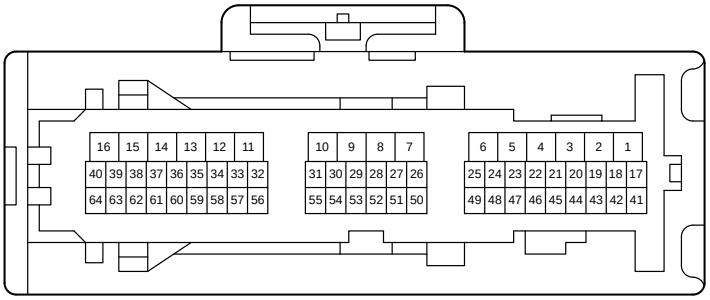

AU1
White

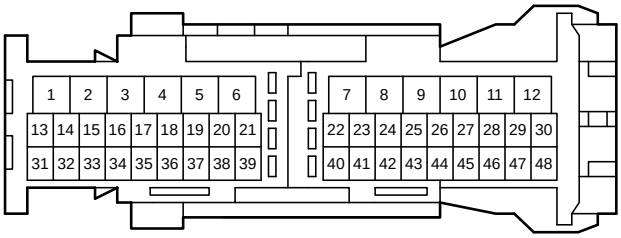

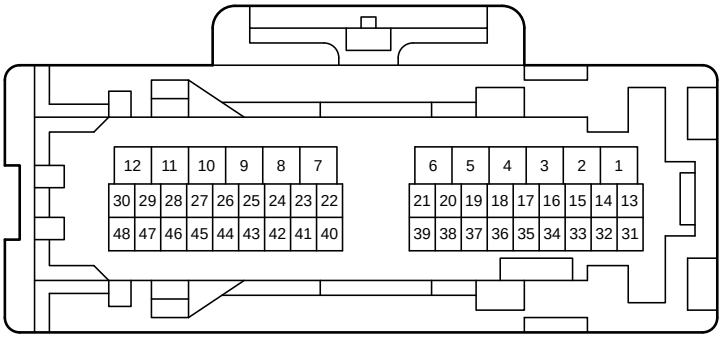

BA2
White

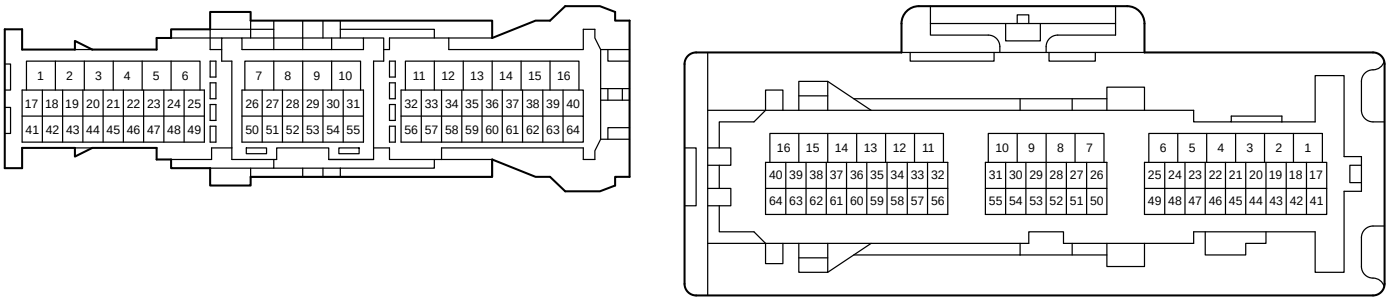

FK1
Black

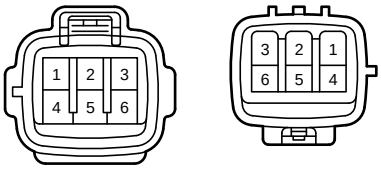

NA1
White

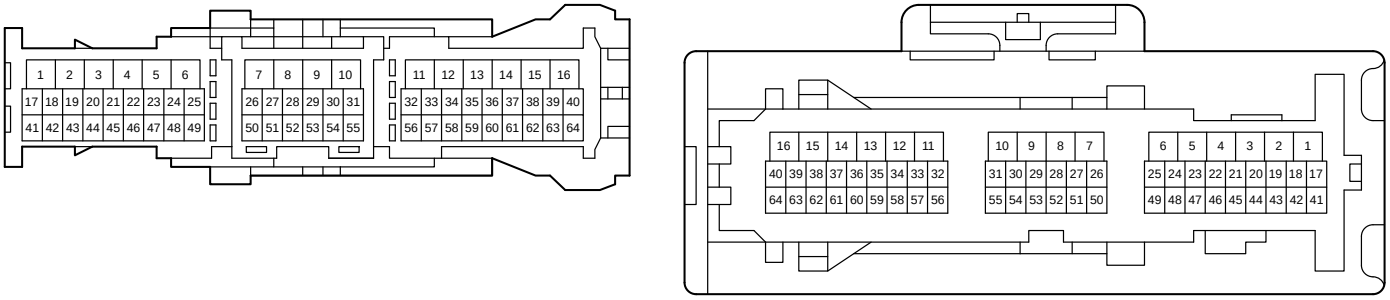

NA2
White

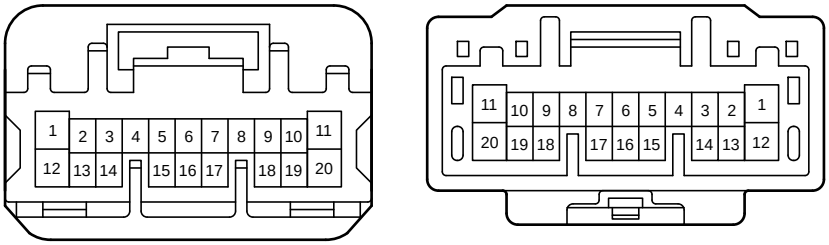

NA3
White

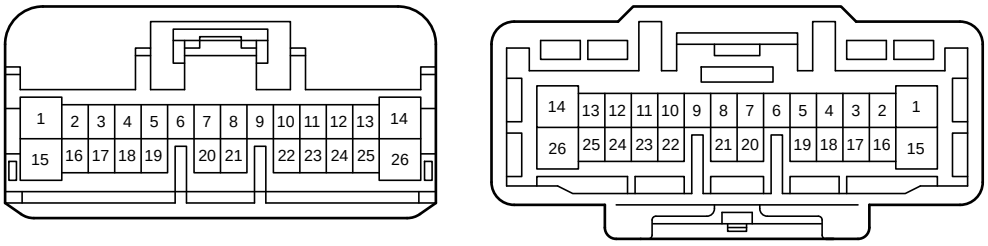

NA4
Gray

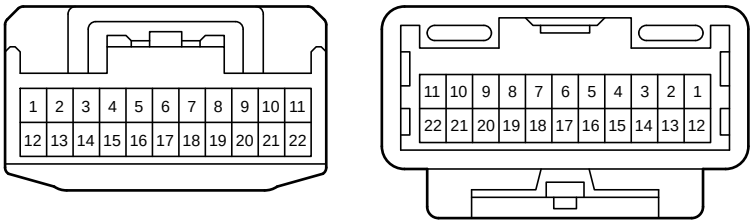

NO1
White

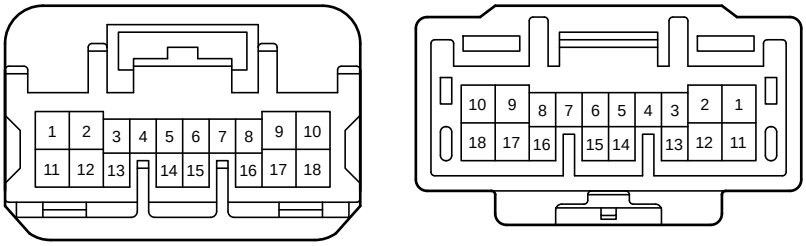

NP1
White

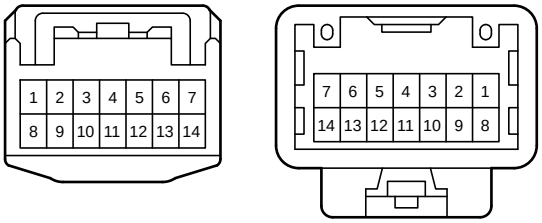

NT1
White

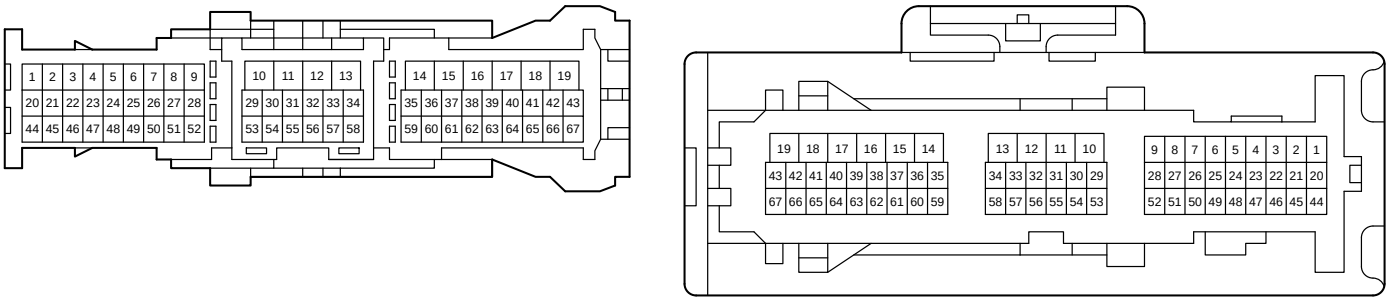

NU1
White

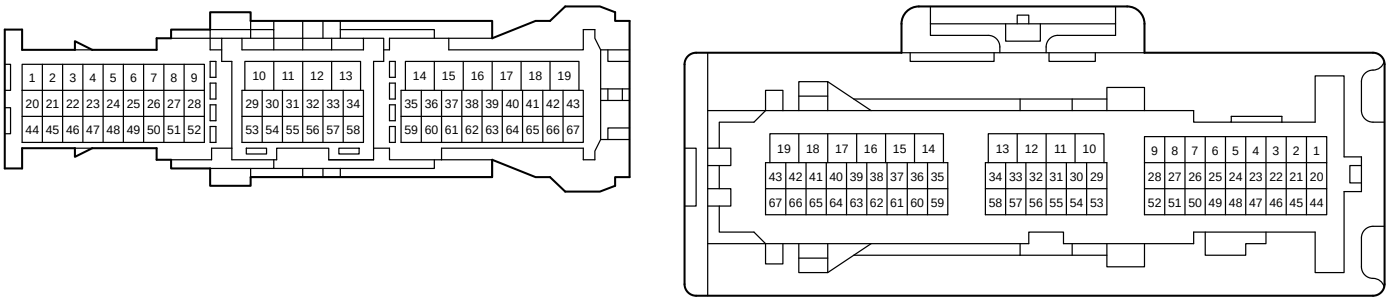

NU2
White

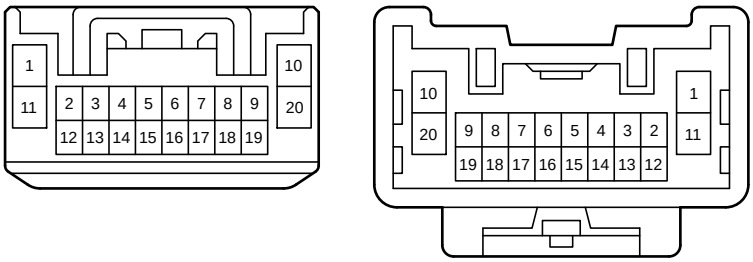

TN1
White

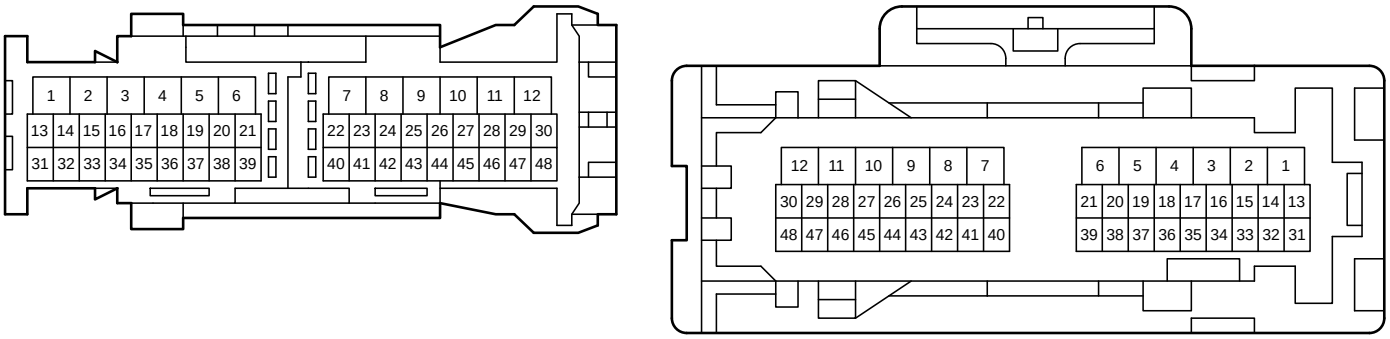

TU1
White

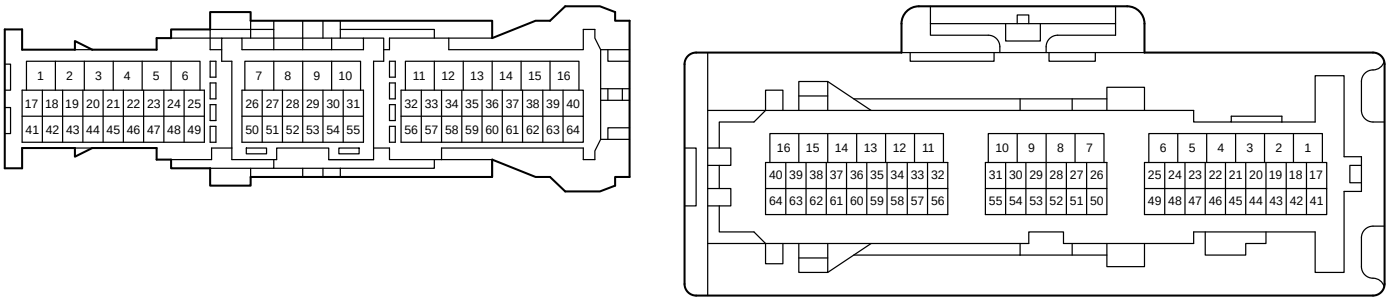

UT1
White

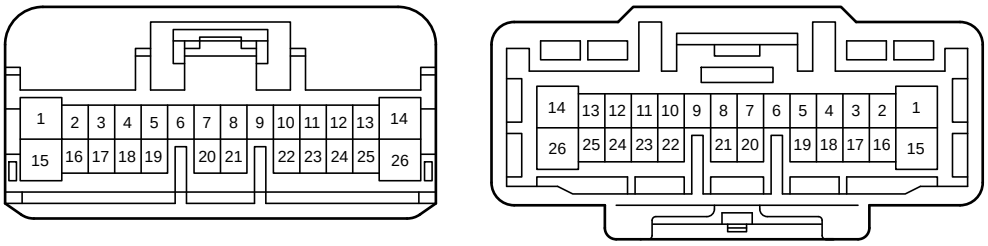
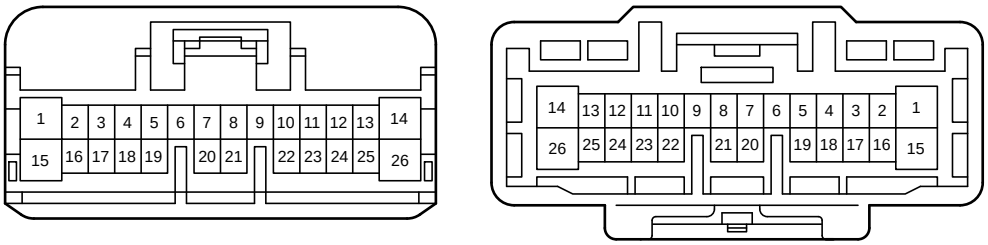
aT1
White