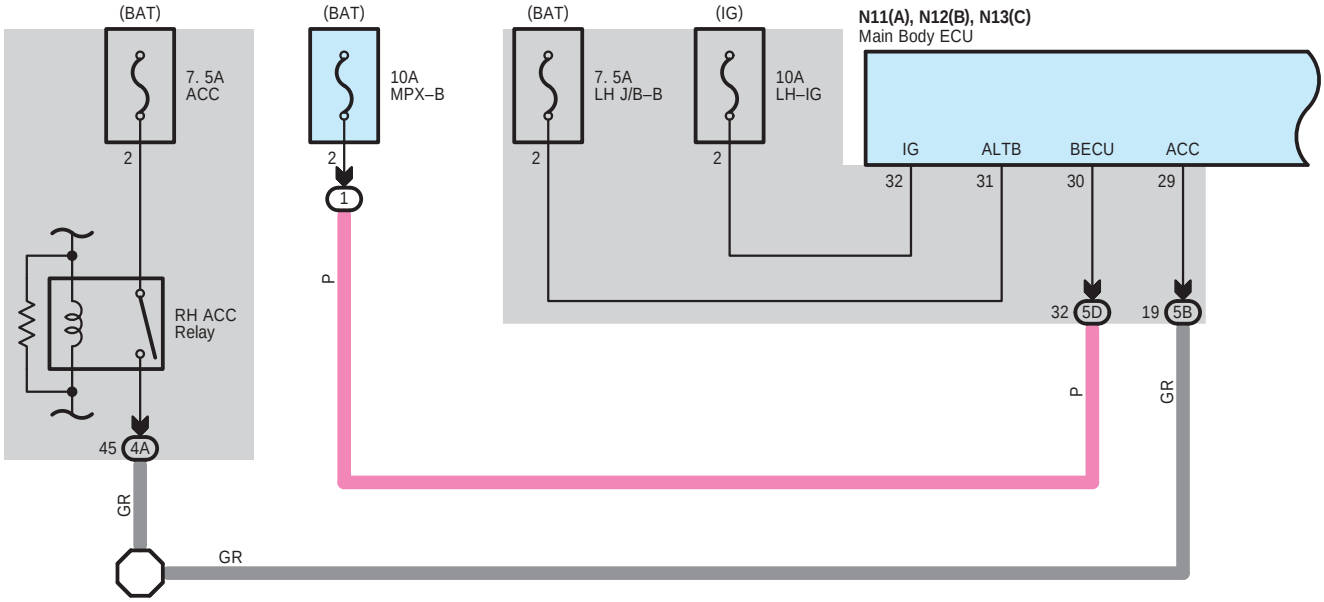
(BAT)
7. 5A
ACC
2
RH ACC
Relay
45
4A
GR
(BAT)
10A
MPX–B
2
1
P
(BAT)
7. 5A
LH J/B–B
2
(IG)
10A
LH–IG
2
N11(A), N12(B), N13(C)
Main Body ECU
IG
ALTB
BECU
ACC
32
31
30
29
32
5D
19
5B
P
GR
GR

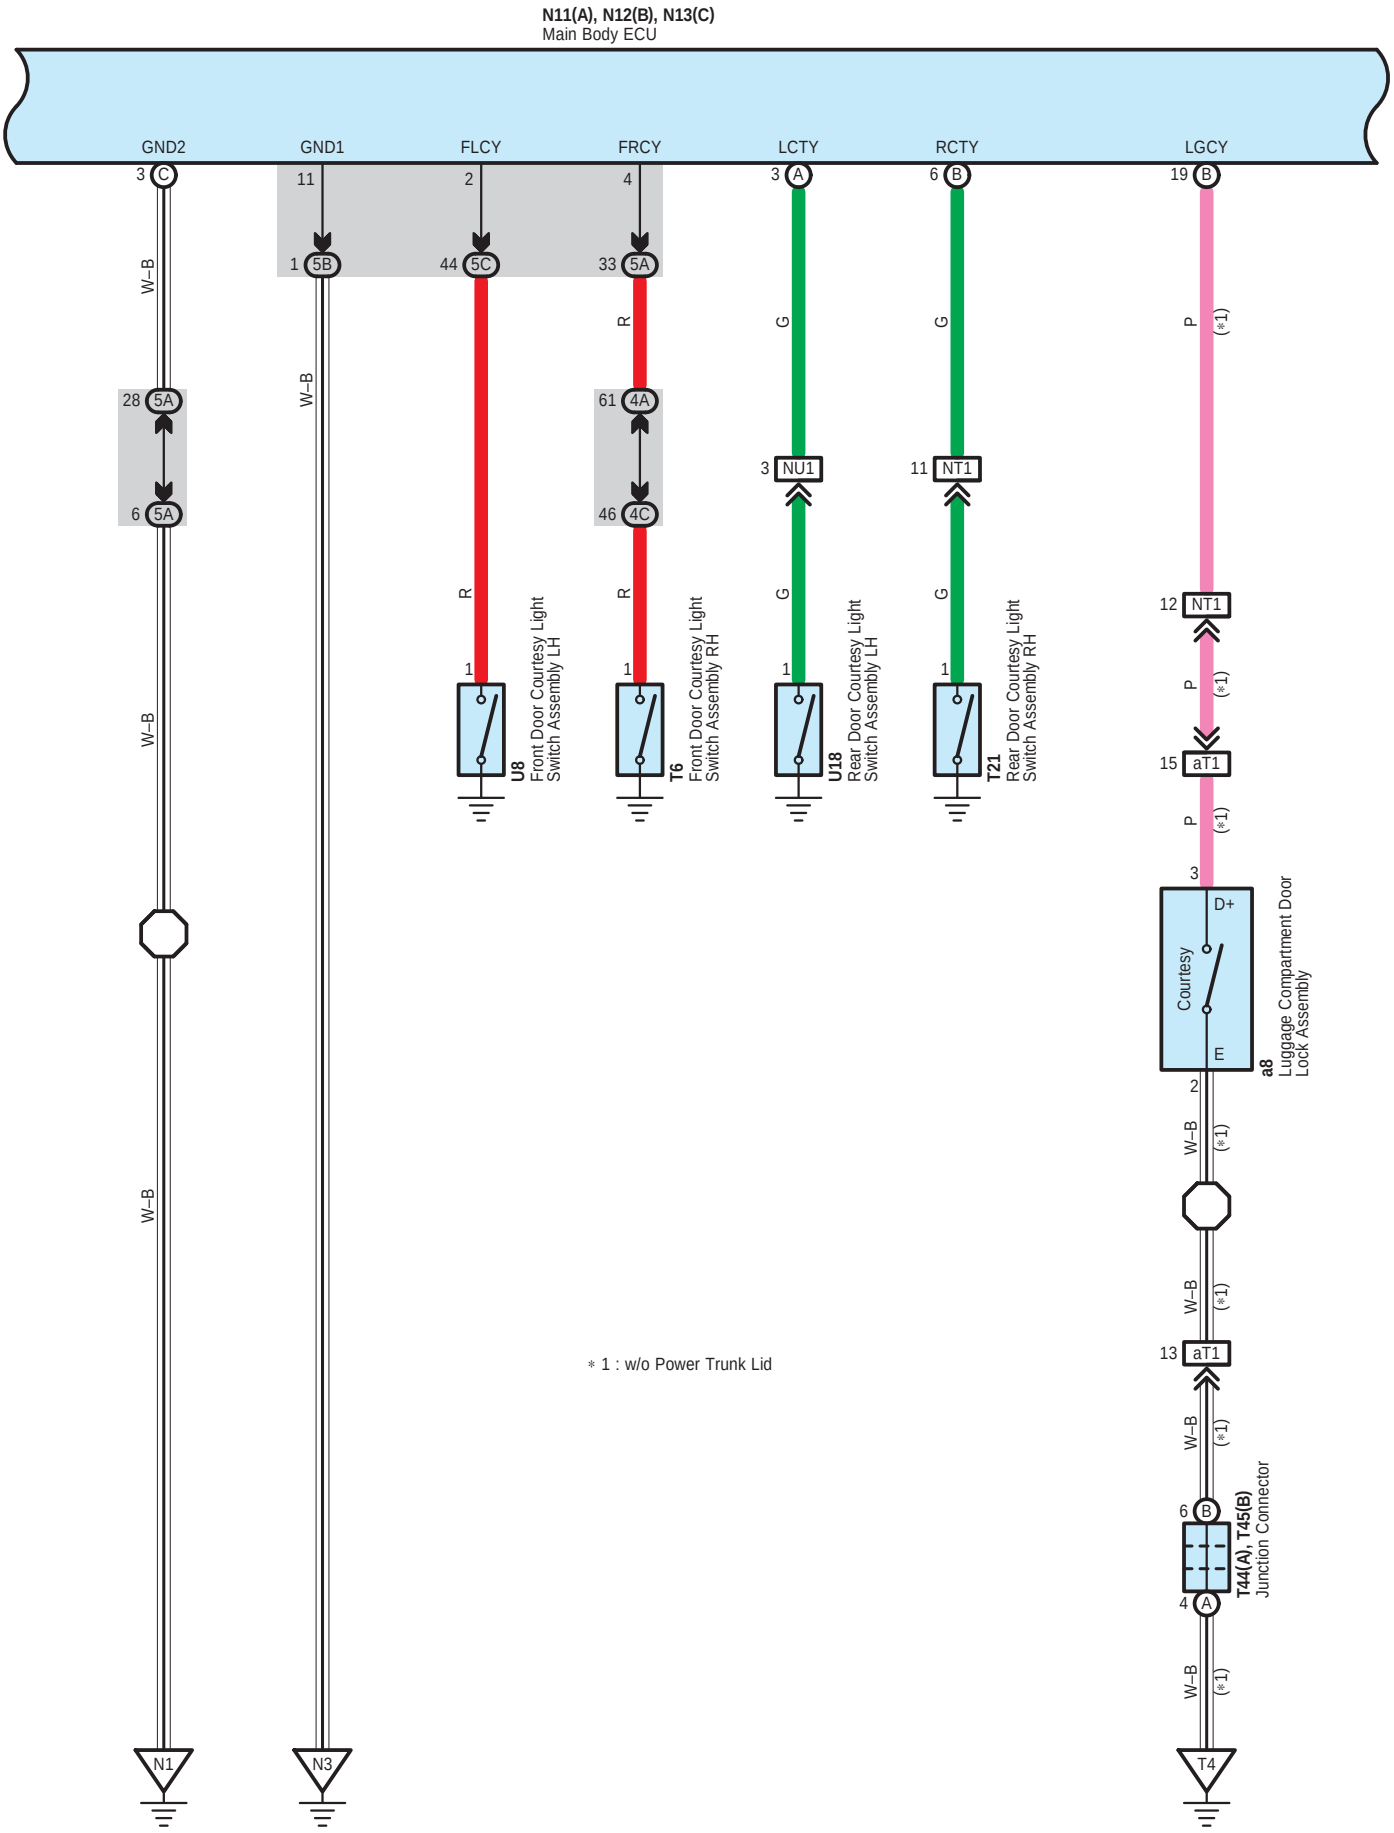
N11(A), N12(B), N13(C)
Main Body ECU
GND2
GND1
FLCY
FRCY
LCTY
RCTY
LGCY
3 C
11
2
4
3 A
6 B
19 B
1 5B
44 5C
33 5A
28 5A
6 5A
61 4A
46 4C
3 NU1
11 NT1
12 NT1
15 aT1
13 aT1
W–B
R
G
P
(*1)
U8
Front Door Courtesy Light Switch Assembly LH
T6
Front Door Courtesy Light Switch Assembly RH
U18
Rear Door Courtesy Light Switch Assembly LH
T21
Rear Door Courtesy Light Switch Assembly RH
Courtesy
D+
E
a8
Luggage Compartment Door Lock Assembly
T44(A), T45(B)
Junction Connector
N1
N3
T4
* 1 : w/o Power Trunk Lid

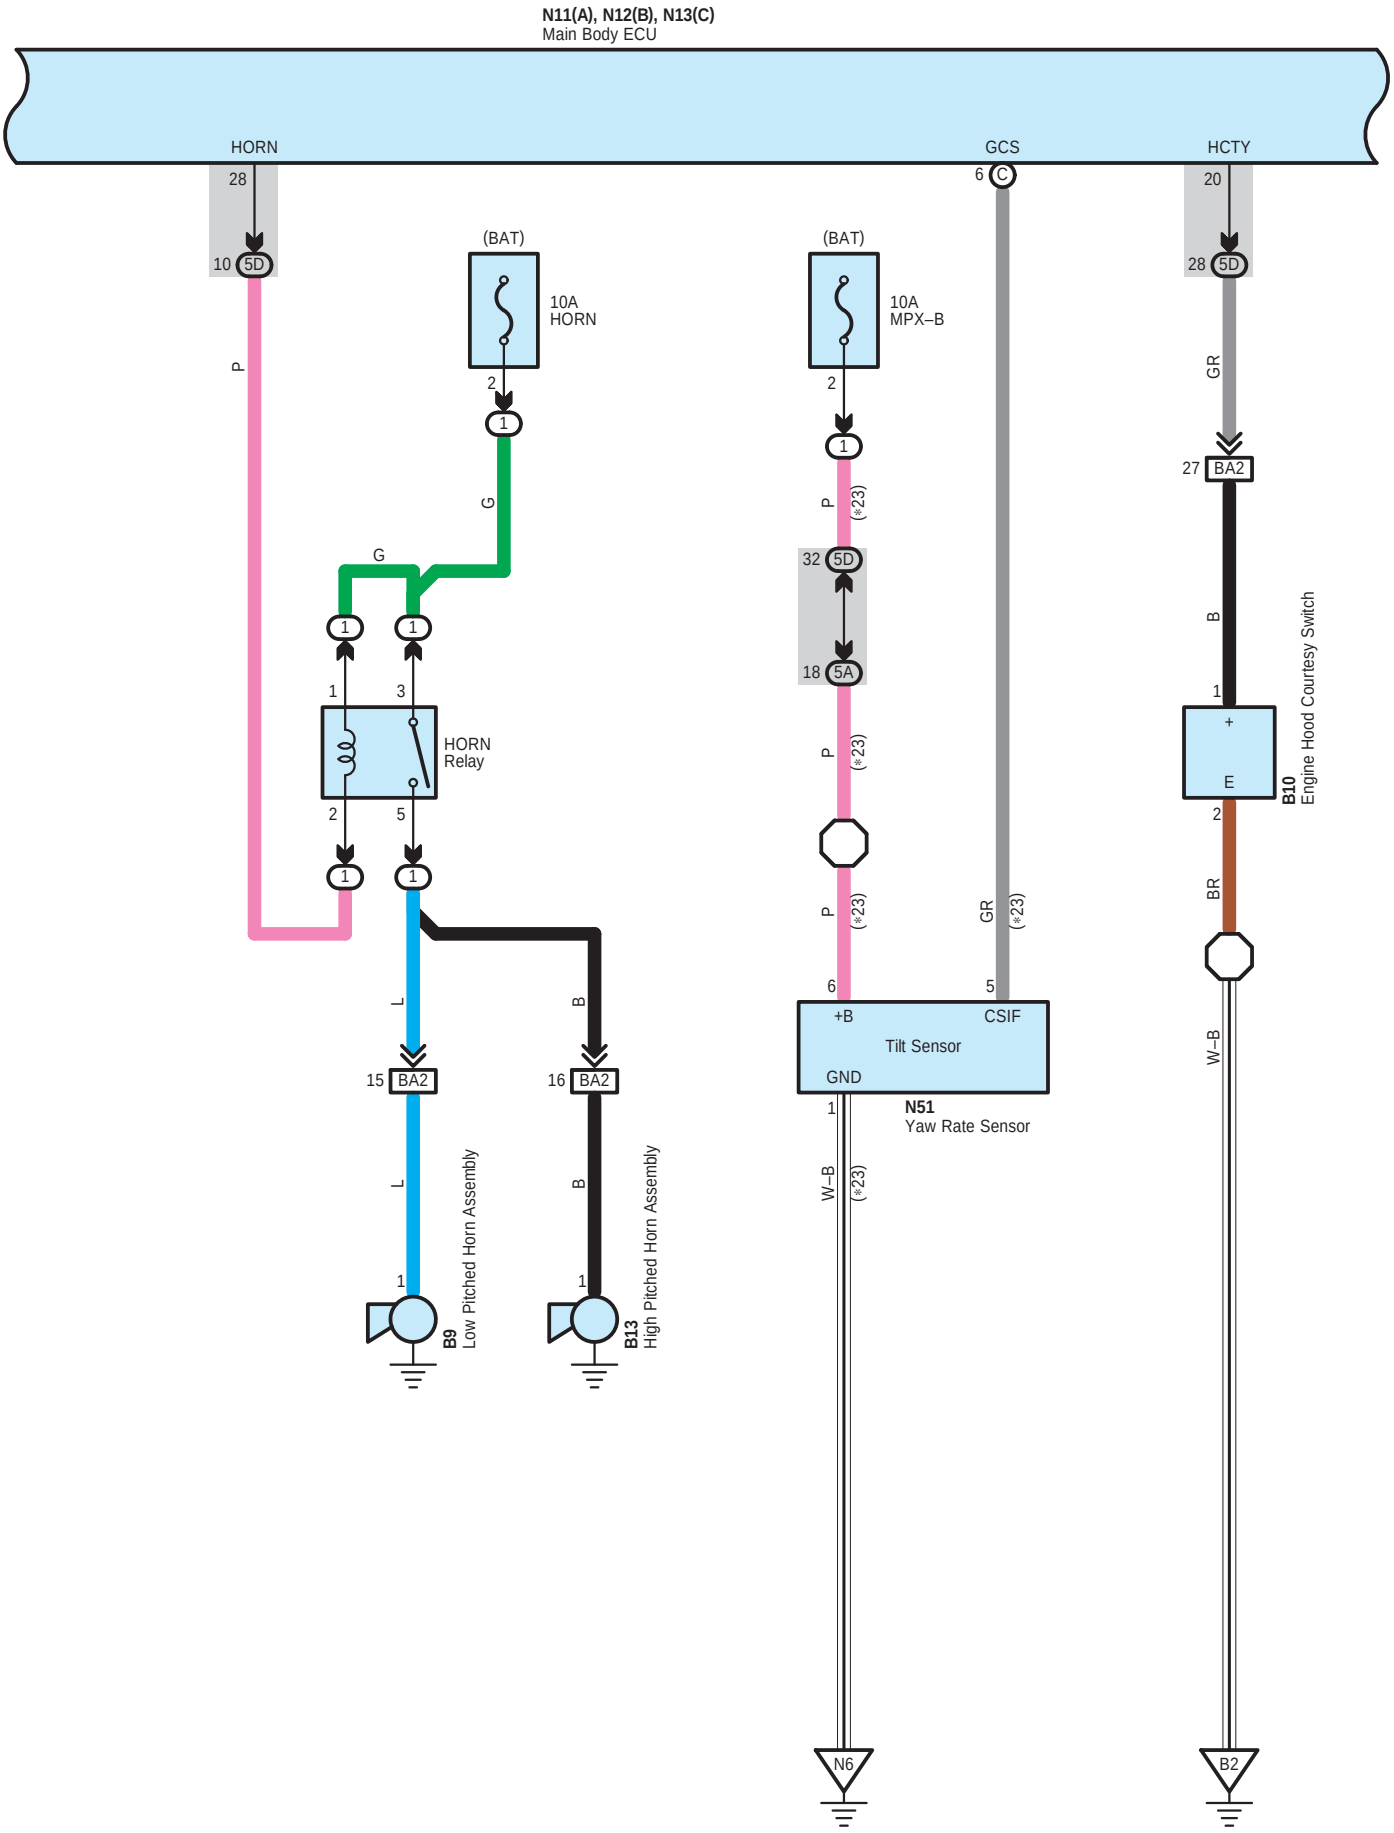
N11(A), N12(B), N13(C)
Main Body ECU
HORN
GCS
HCTY
28
10 5D
P
(BAT)
10A
HORN
2
1
G
G
1
1
1
3
HORN
Relay
2
5
1
1
L
B
15 BA2
16 BA2
L
B
1
1
B9
Low Pitched Horn Assembly
B13
High Pitched Horn Assembly
(BAT)
10A
MPX–B
2
1
P
(*23)
32 5D
18 5A
P
(*23)
P
(*23)
6
+B
CSIF
Tilt Sensor
GND
1
N51
Yaw Rate Sensor
W–B
(*23)
N6
6 C
GR
(*23)
5
20
28 5D
GR
27 BA2
B
1
+
E
B10
Engine Hood Courtesy Switch
2
BR
W–B
B2

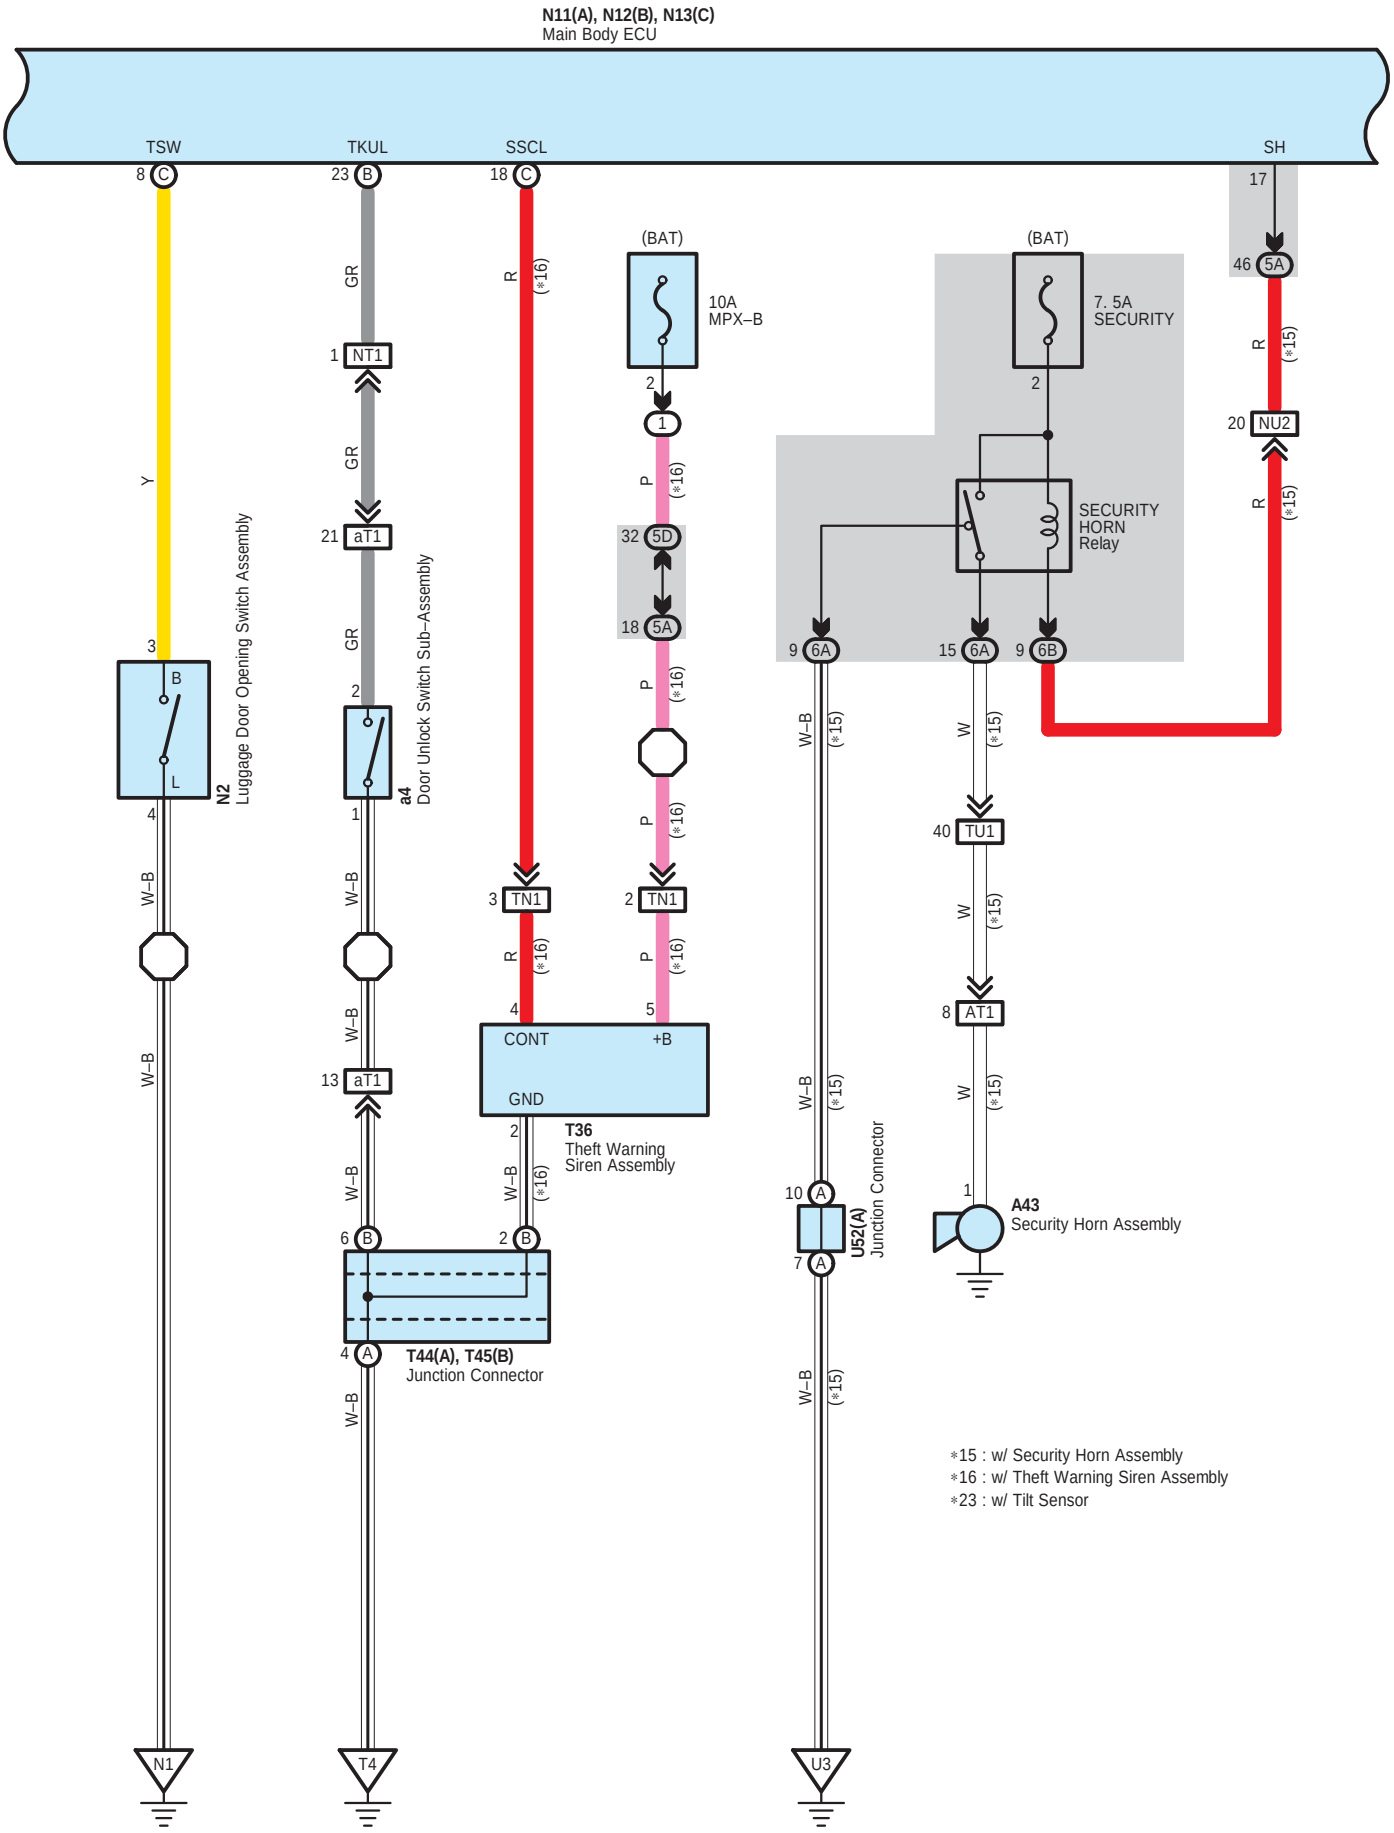
N11(A), N12(B), N13(C)
Main Body ECU
TSW
TKUL
SSCL
SH
8 C
23 B
18 C
17
46 5A
(BAT)
10A
MPX–B
(BAT)
7. 5A
SECURITY
SECURITY
HORN
Relay
20 NU2
1 NT1
21 aT1
13 aT1
3 TN1
2 TN1
32 5D
18 5A
9 6A
15 6A
9 6B
40 TU1
8 AT1
N2
Luggage Door Opening Switch Assembly
a4
Door Unlock Switch Sub–Assembly
CONT
+B
GND
T36
Theft Warning
Siren Assembly
T44(A), T45(B)
Junction Connector
U52(A)
Junction Connector
A43
Security Horn Assembly
N1
T4
U3
∗15 : w/ Security Horn Assembly
∗16 : w/ Theft Warning Siren Assembly
∗23 : w/ Tilt Sensor

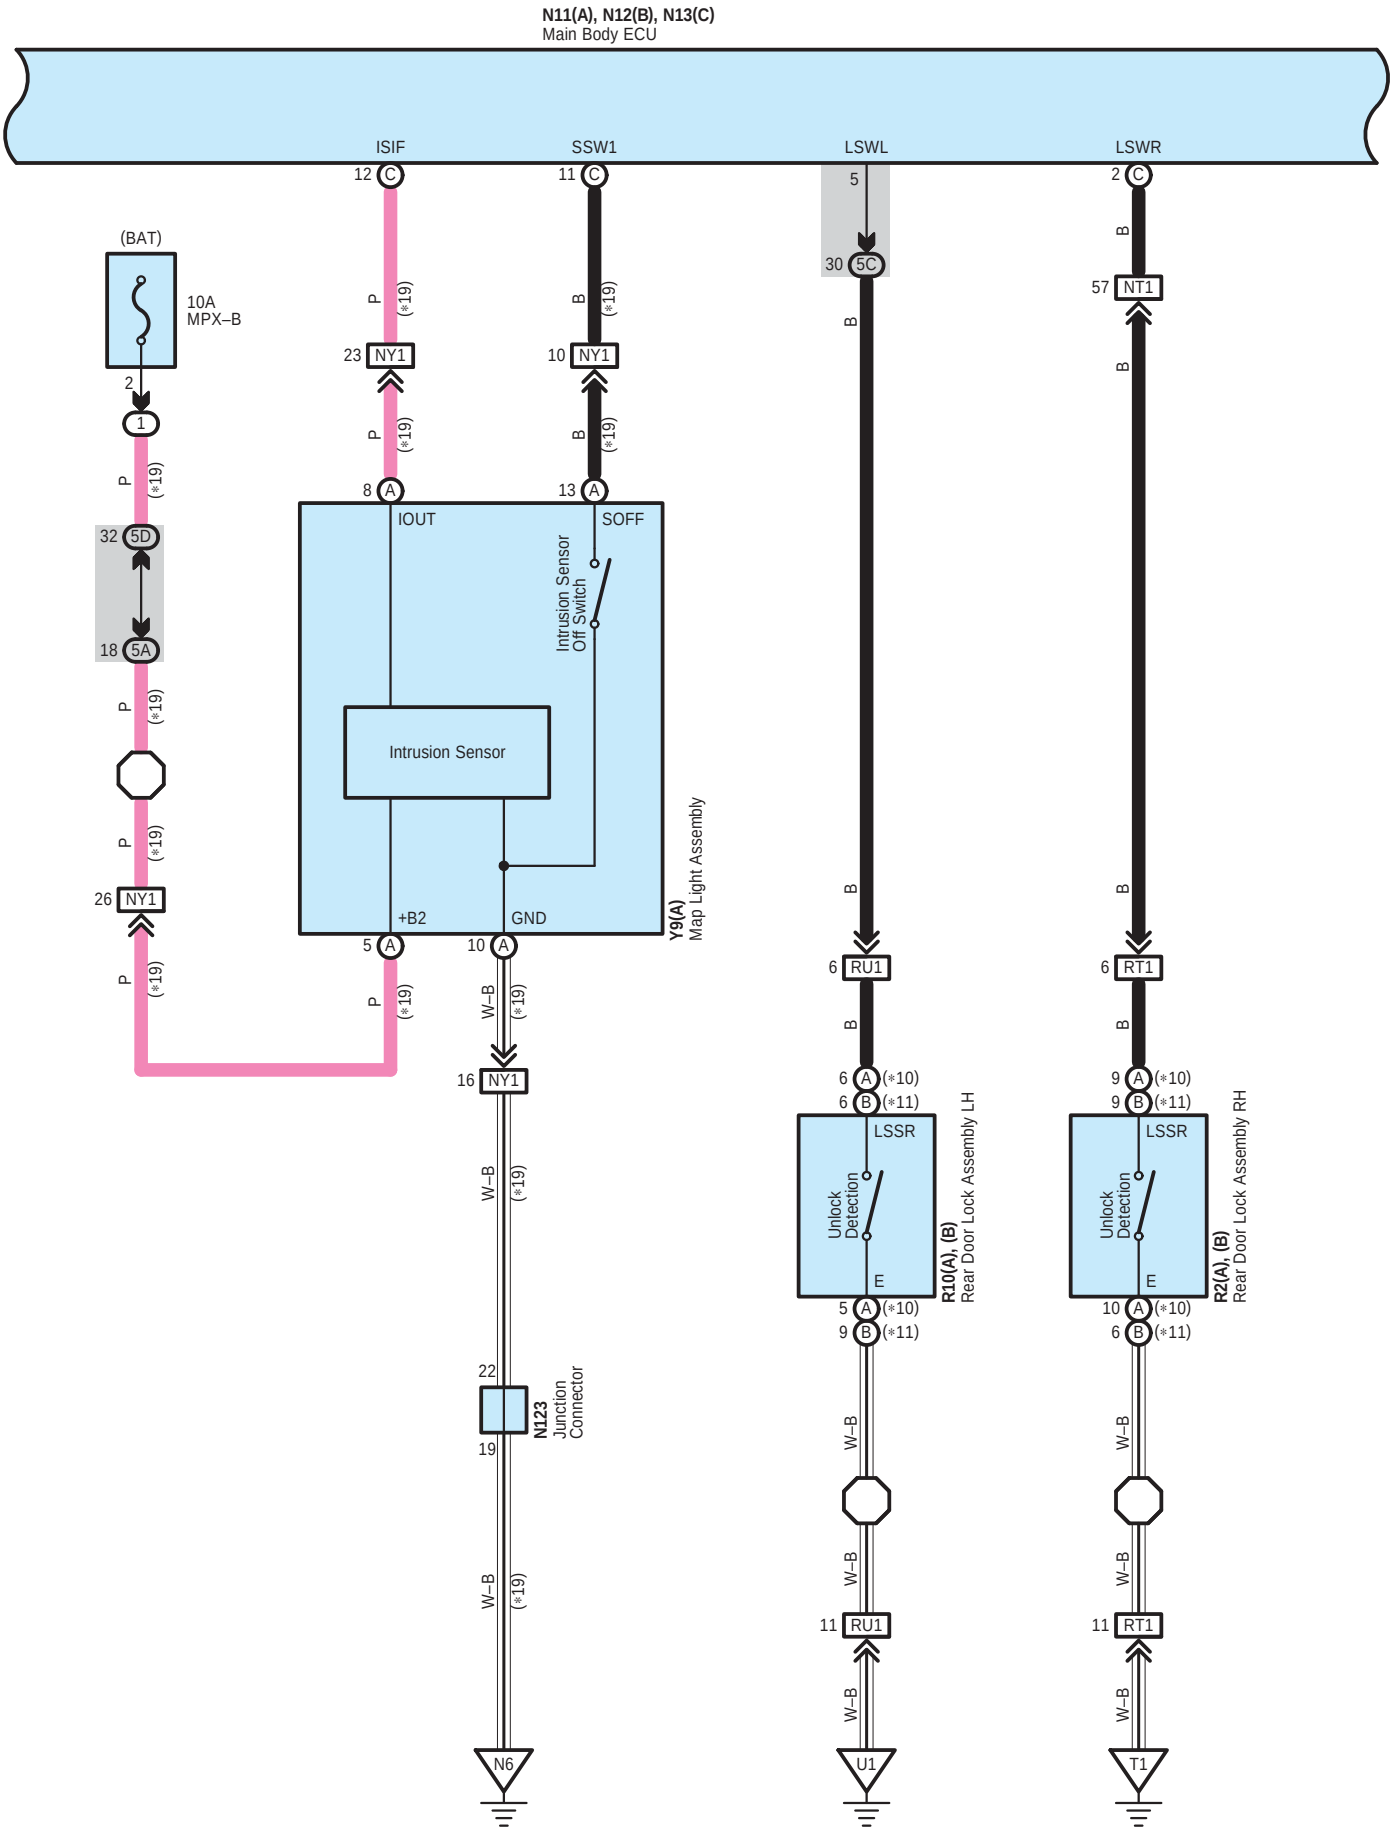
N11(A), N12(B), N13(C)
Main Body ECU
ISIF
SSW1
LSWL
LSWR
(BAT)
10A
MPX–B
IOUT
SOFF
Intrusion Sensor
Off Switch
Intrusion Sensor
+B2
GND
Y9(A)
Map Light Assembly
LSSR
Unlock
Detection
E
R10(A), (B)
Rear Door Lock Assembly LH
R2(A), (B)
Rear Door Lock Assembly RH
N123
Junction
Connector
N6
U1
T1

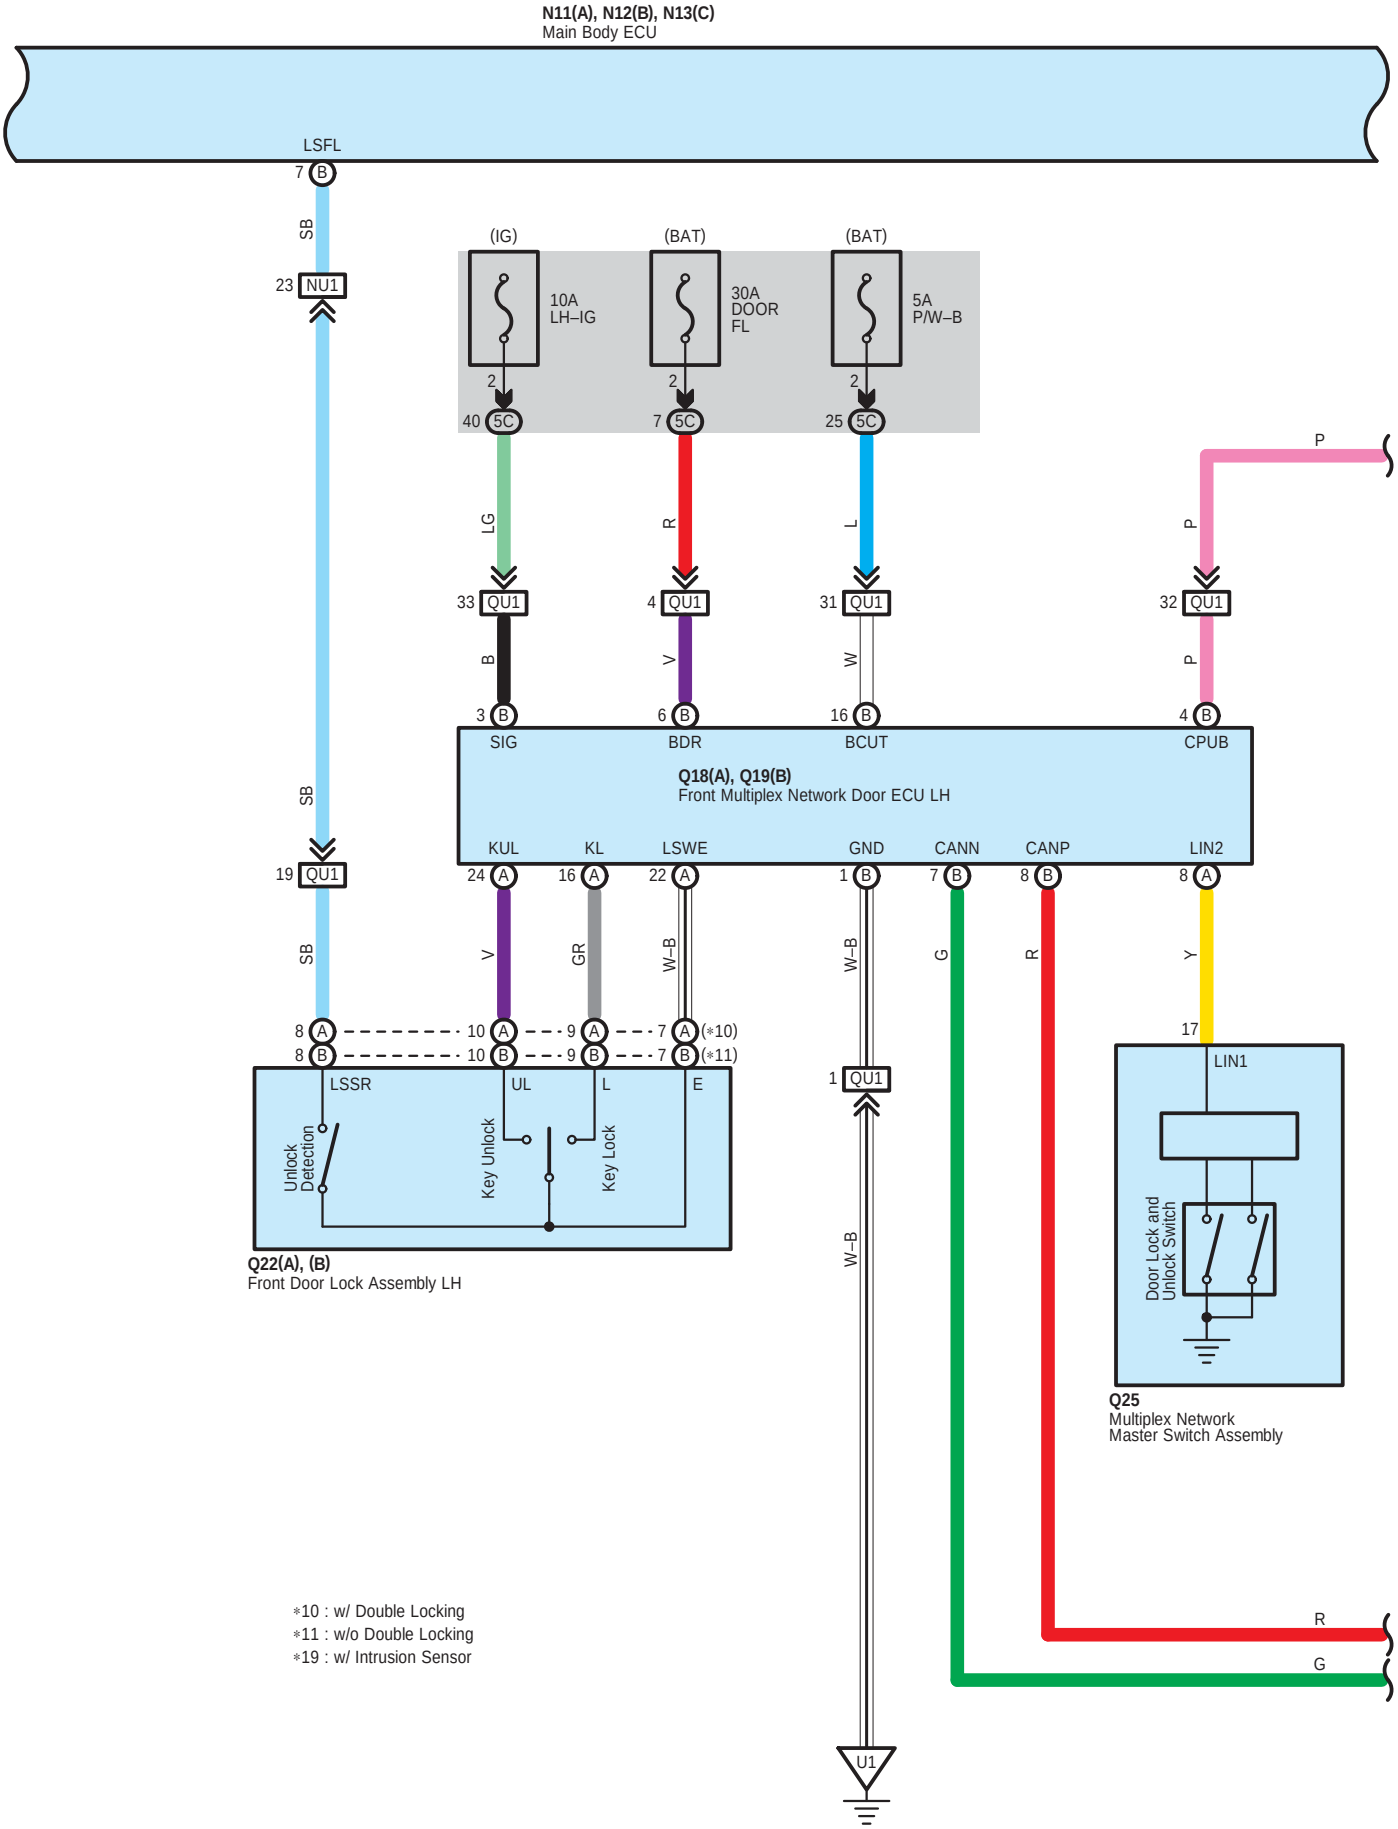

*10 : w/ Double Locking
*11 : w/o Double Locking
*19 : w/ Intrusion Sensor

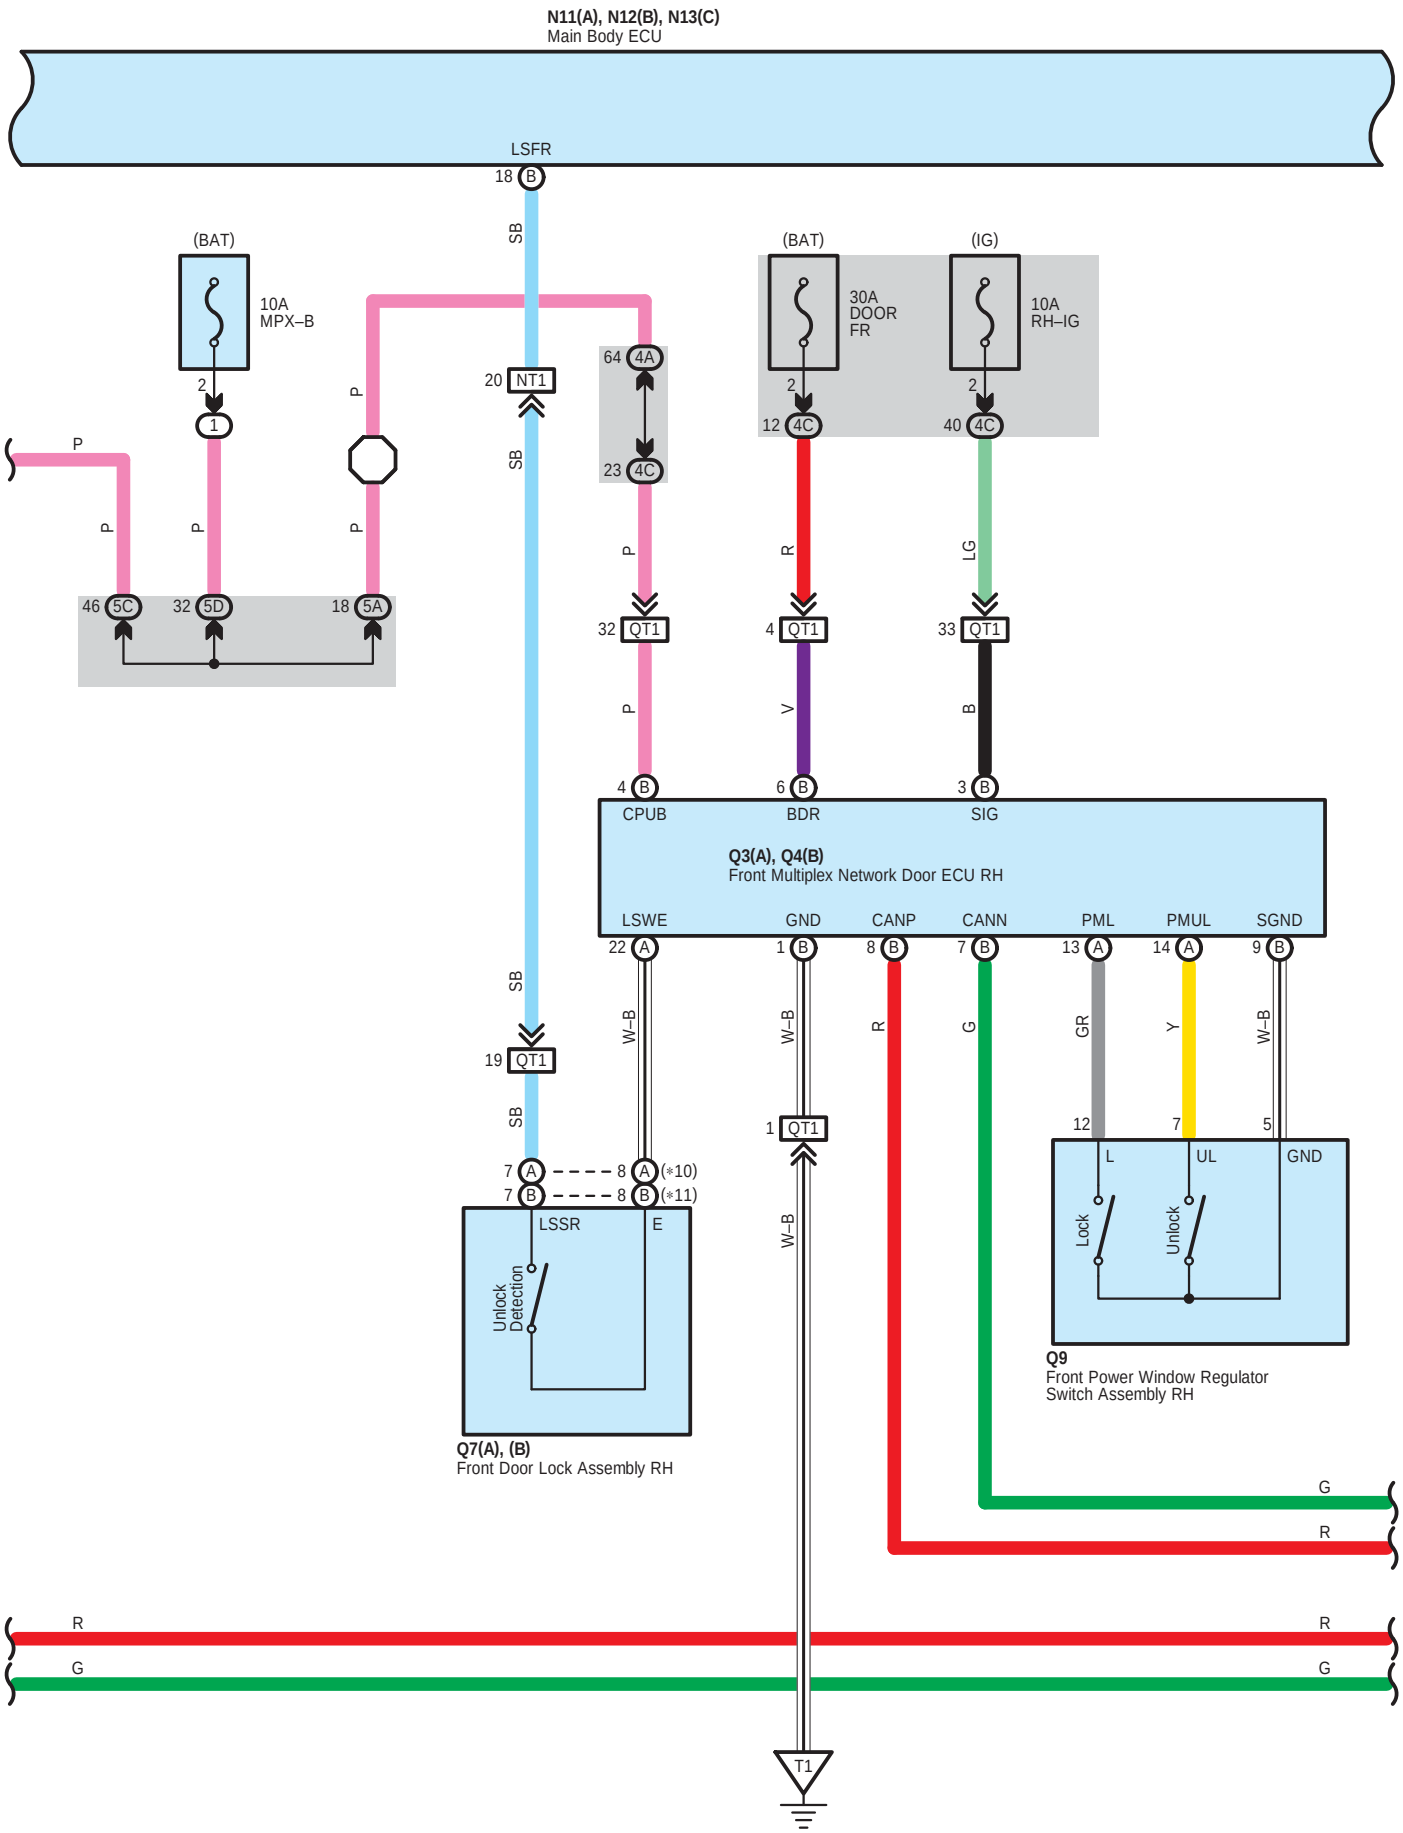
N11(A), N12(B), N13(C)
Main Body ECU
LSFR
18 B
SB
(BAT)
10A
MPX–B
2
1
P
46 5C
32 5D
18 5A
20 NT1
64 4A
23 4C
(BAT)
30A
DOOR
FR
12 4C
(IG)
10A
RH–IG
40 4C
R
LG
32 QT1
4 QT1
33 QT1
V
B
4 B
6 B
3 B
CPUB
BDR
SIG
Q3(A), Q4(B)
Front Multiplex Network Door ECU RH
LSWE
GND
CANP
CANN
PML
PMUL
SGND
22 A
1 B
8 B
7 B
13 A
14 A
9 B
W–B
G
GR
Y
19 QT1
1 QT1
12
7
5
7 A
8 A (*10)
7 B
8 B (*11)
LSSR
E
Unlock
Detection
L
UL
GND
Lock
Unlock
Q9
Front Power Window Regulator
Switch Assembly RH
Q7(A), (B)
Front Door Lock Assembly RH
T1

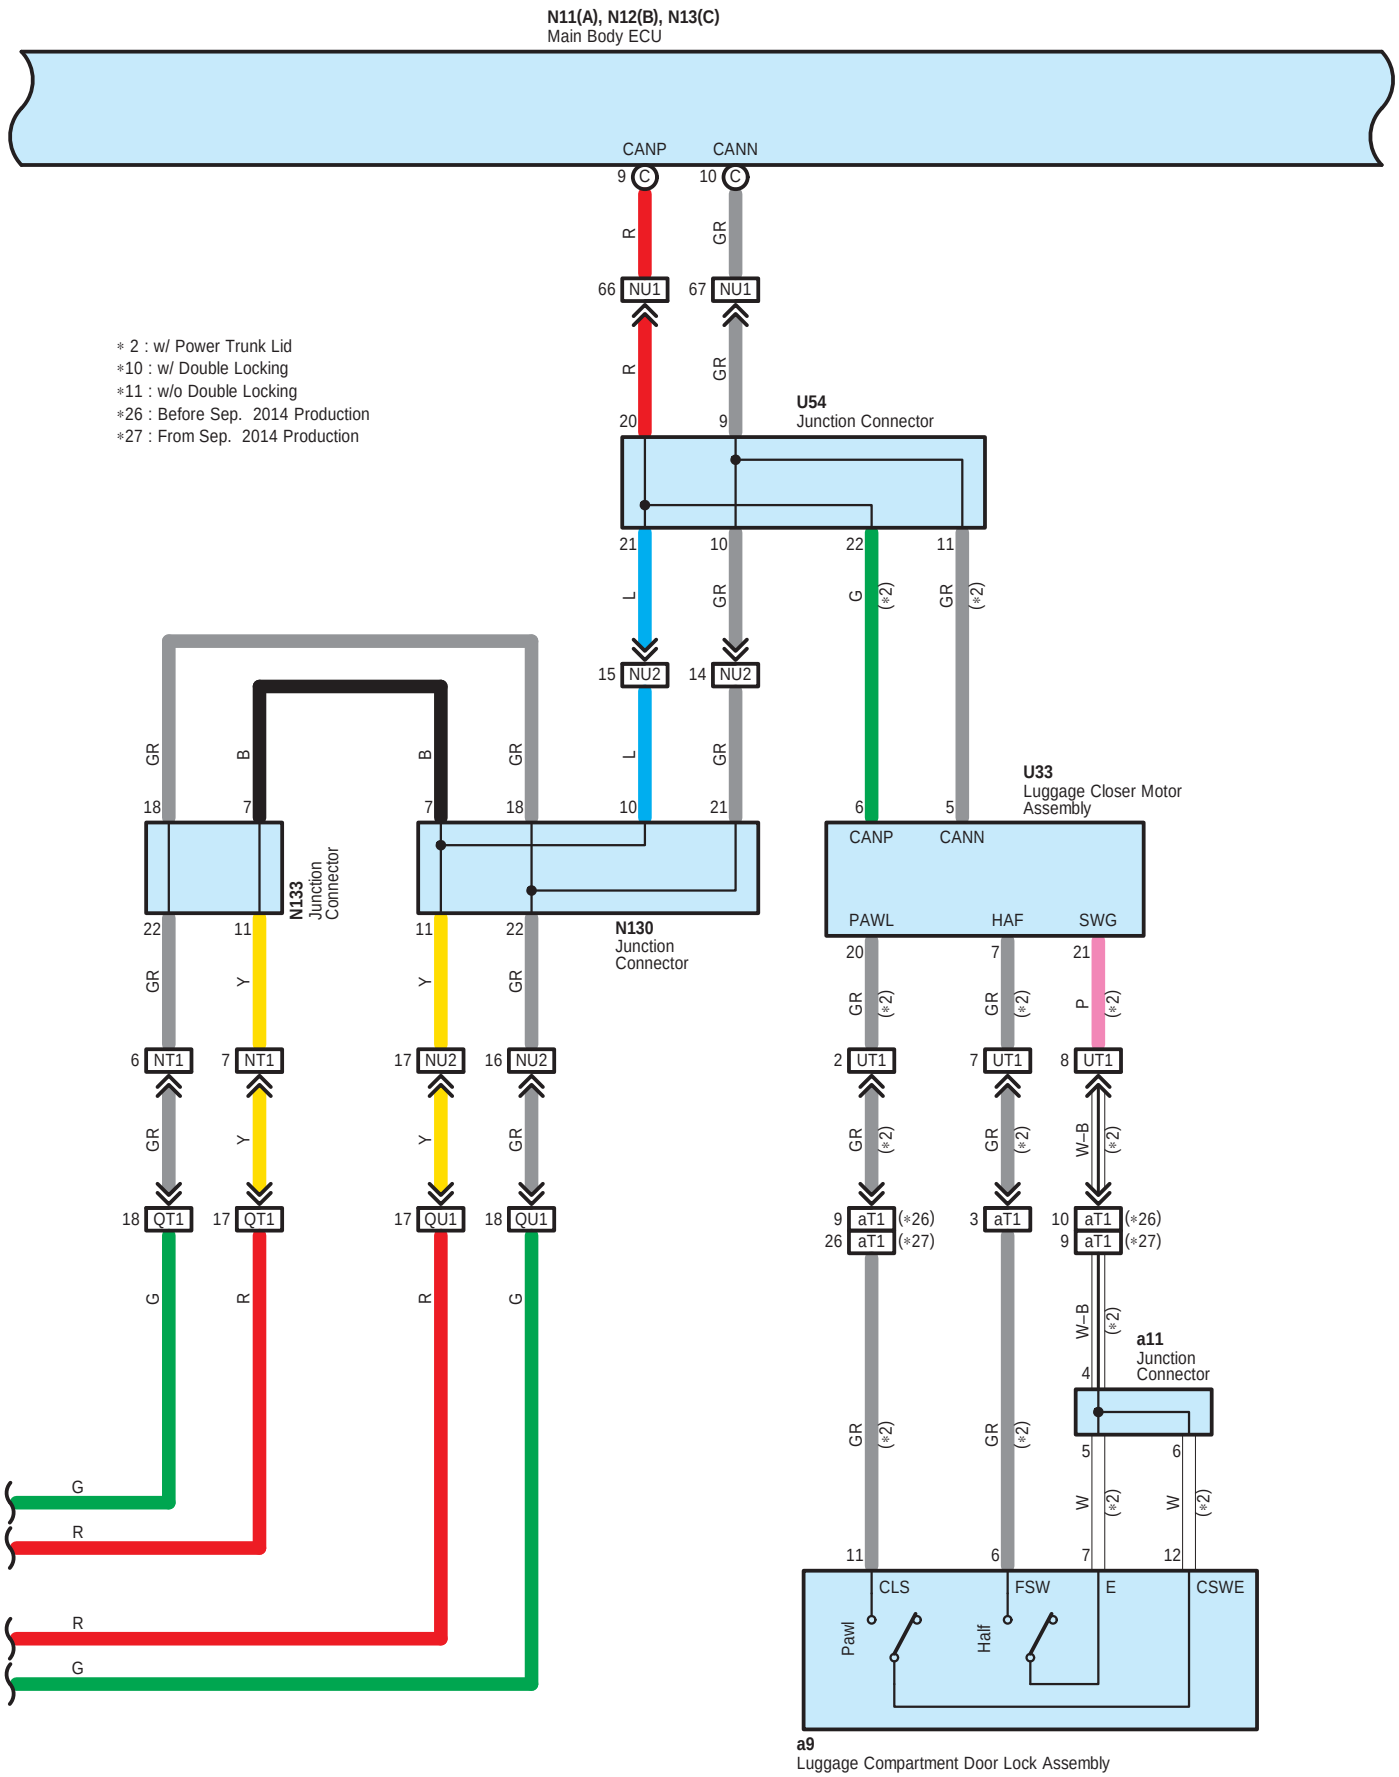
N11(A), N12(B), N13(C)
Main Body ECU
CANP
CANN
9 C
10 C
R
GR
66 NU1
67 NU1
∗ 2 : w/ Power Trunk Lid
∗10 : w/ Double Locking
∗11 : w/o Double Locking
∗26 : Before Sep. 2014 Production
∗27 : From Sep. 2014 Production
U54
Junction Connector
20
9
21
10
22
11
L
G
(∗2)
15 NU2
14 NU2
B
18
7
N133
Junction
Connector
N130
Junction
Connector
U33
Luggage Closer Motor
Assembly
6
5
PAWL
HAF
SWG
20
7
21
P
2 UT1
7 UT1
8 UT1
W–B
9 aT1 (∗26)
26 aT1 (∗27)
3 aT1
10 aT1 (∗26)
9 aT1 (∗27)
a11
Junction
Connector
4
W
12
6 NT1
7 NT1
17 NU2
16 NU2
Y
18 QT1
17 QT1
17 QU1
18 QU1
CLS
FSW
E
CSWE
Pawl
Half
a9
Luggage Compartment Door Lock Assembly

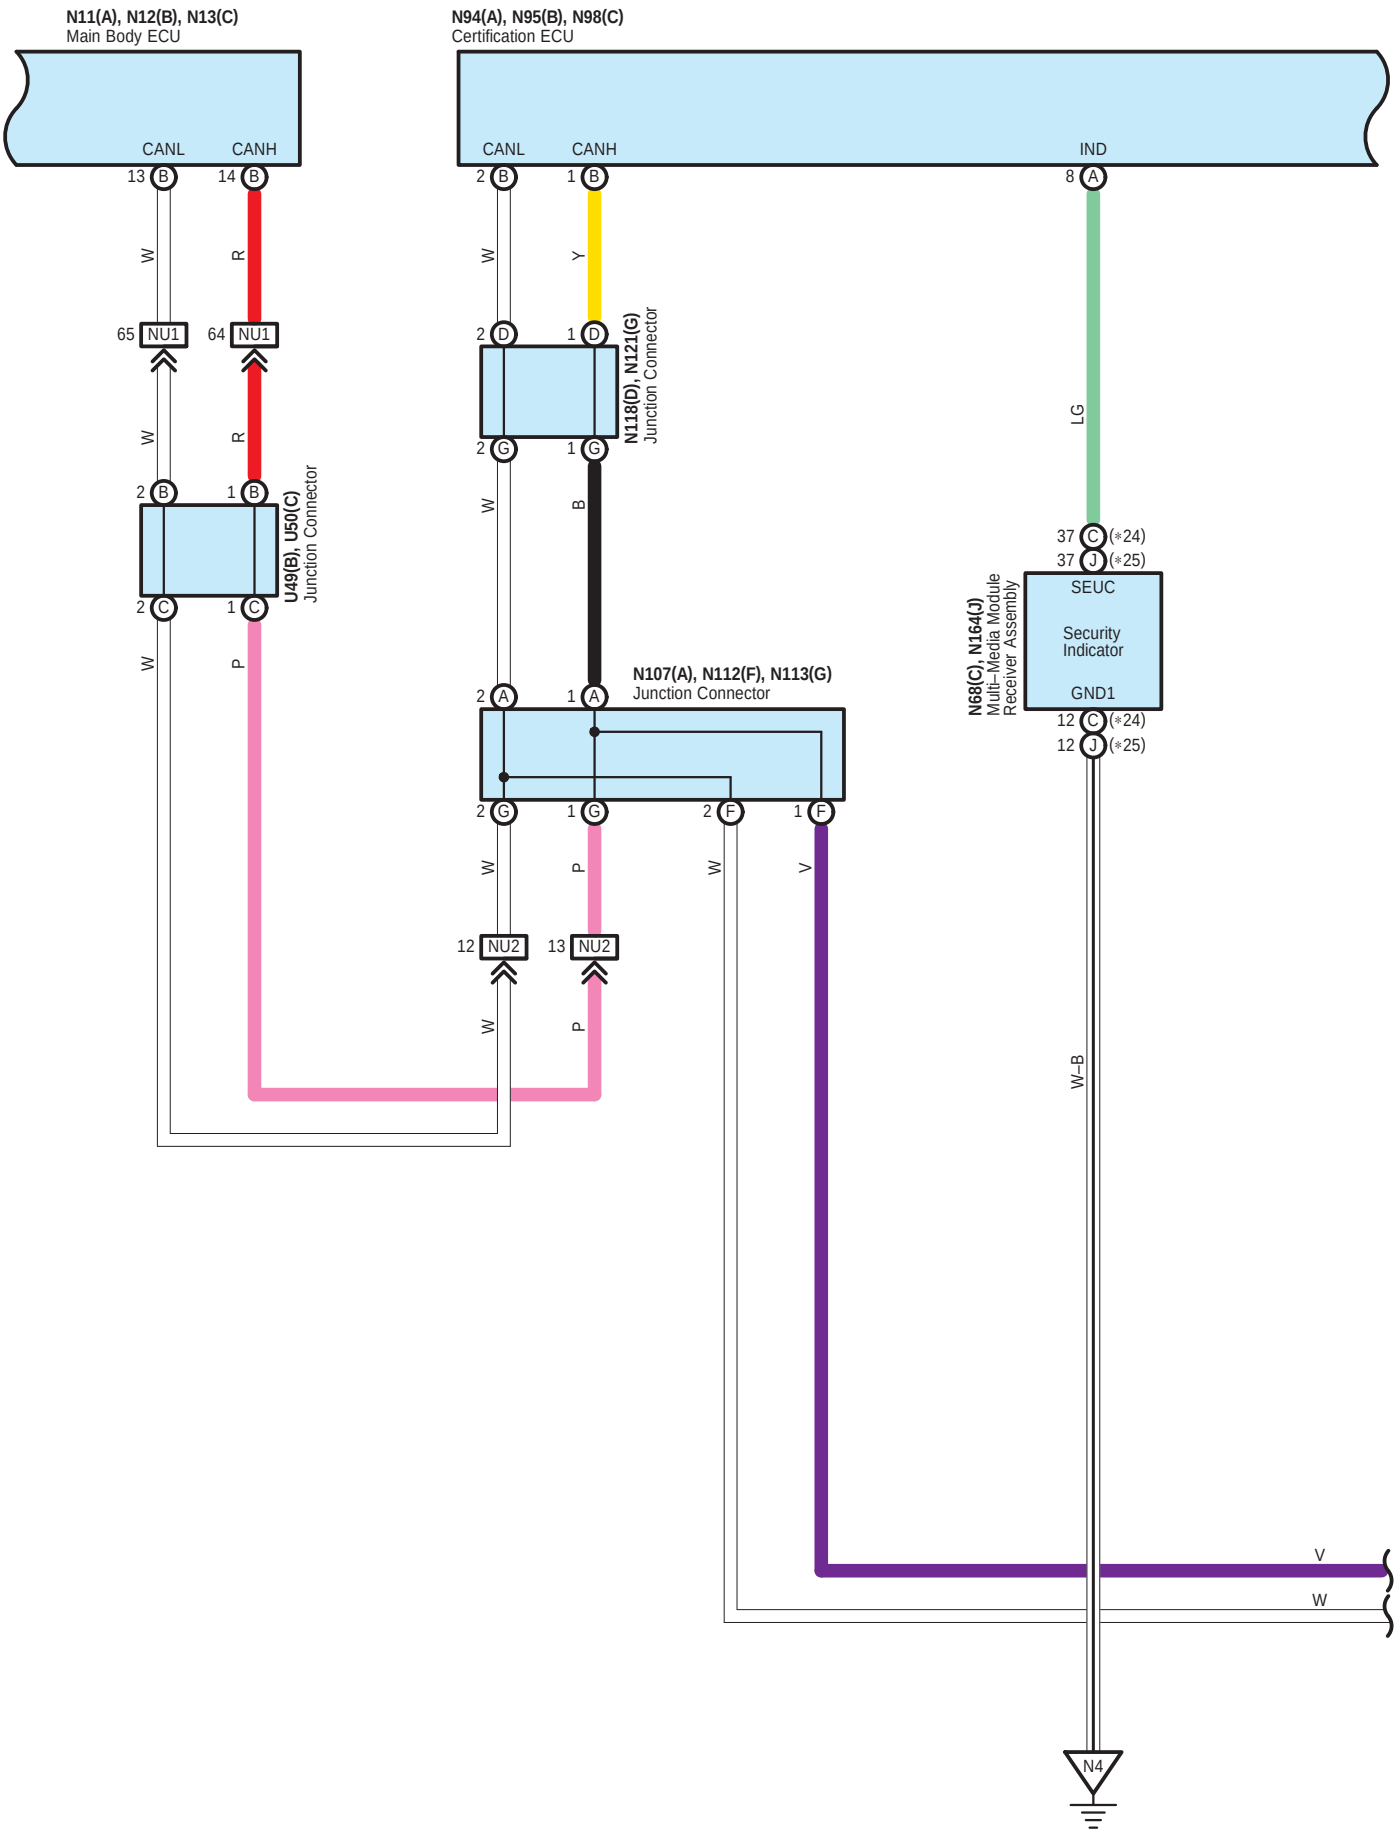
N11(A), N12(B), N13(C)
Main Body ECU
CANL
CANH
13 B
14 B
W
R
65 NU1
64 NU1
W
R
2 B
1 B
U49(B), U50(C)
Junction Connector
2 C
1 C
W
P
N94(A), N95(B), N98(C)
Certification ECU
CANL
CANH
IND
2 B
1 B
8 A
W
Y
2 D
1 D
N118(D), N121(G)
Junction Connector
2 G
1 G
W
B
LG
37 C (*24)
37 J (*25)
SEUC
Security Indicator
GND1
N68(C), N164(J)
Multi-Media Module Receiver Assembly
12 C (*24)
12 J (*25)
N107(A), N112(F), N113(G)
Junction Connector
2 A
1 A
2 G
1 G
2 F
1 F
W
P
W
V
12 NU2
13 NU2
W
P
W–B
V
W
N4

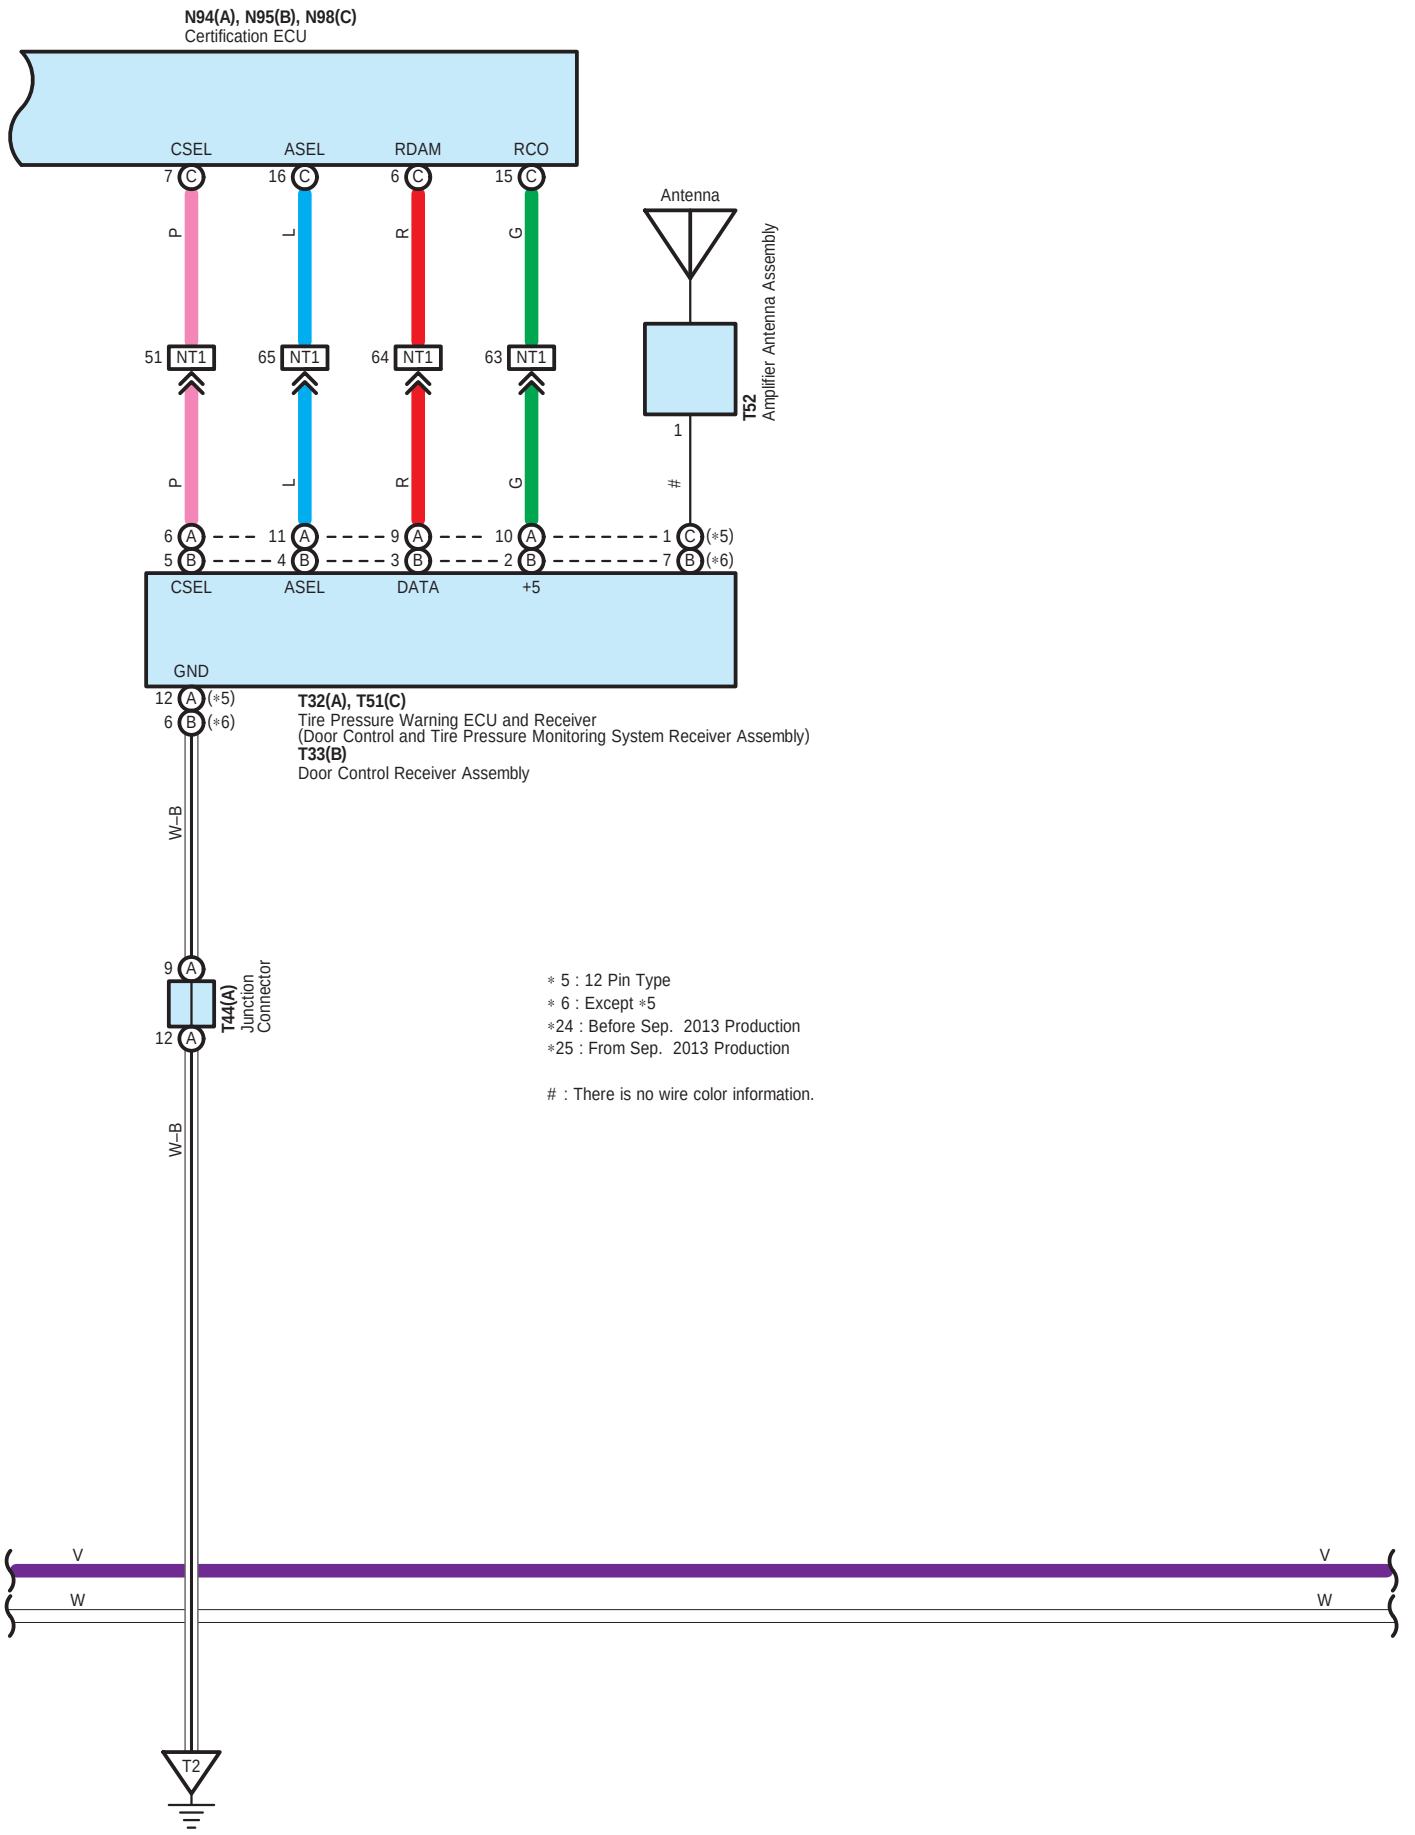

* 5 : 12 Pin Type
* 6 : Except *5
*24 : Before Sep. 2013 Production
*25 : From Sep. 2013 Production

: There is no wire color information.

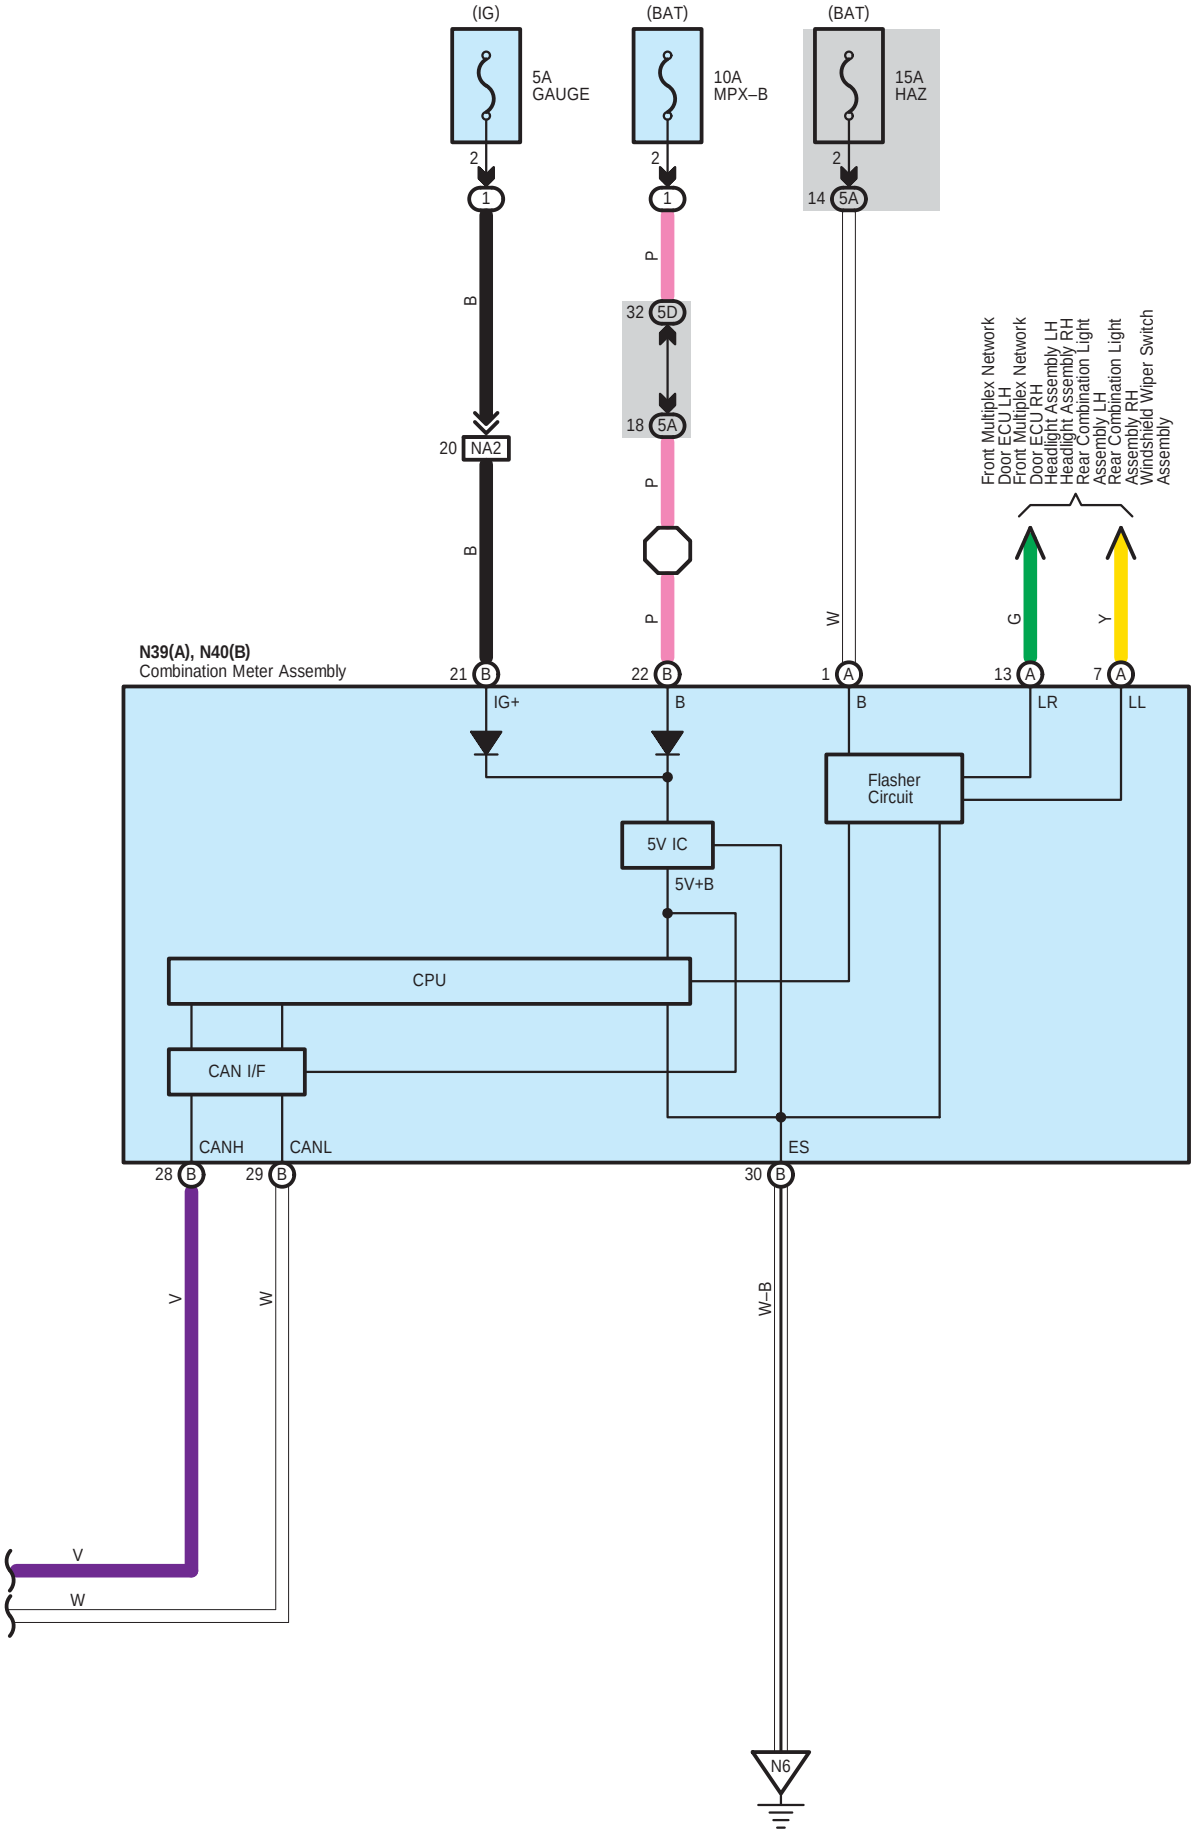
(IG)
5A
GAUGE
(BAT)
10A
MPX–B
(BAT)
15A
HAZ
2
1
14 5A
32 5D
18 5A
20 NA2
B
P
W
G
Y
Front Multiplex Network
Door ECU LH
Front Multiplex Network
Door ECU RH
Headlight Assembly LH
Headlight Assembly RH
Rear Combination Light
Assembly LH
Rear Combination Light
Assembly RH
Windshield Wiper Switch
Assembly
N39(A), N40(B)
Combination Meter Assembly
21 B
22 B
1 A
13 A
7 A
IG+
B
LR
LL
Flasher
Circuit
5V IC
5V+B
CPU
CAN I/F
CANH
CANL
ES
28 B
29 B
30 B
V
W
W–B
N6

A 43
Black

B 9
Black

B 10
Black

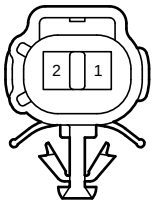

B 13
Gray

N 2
Black

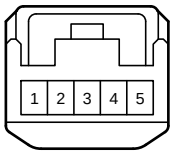

N 11
White

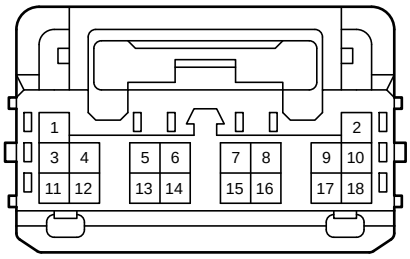

N 12
White

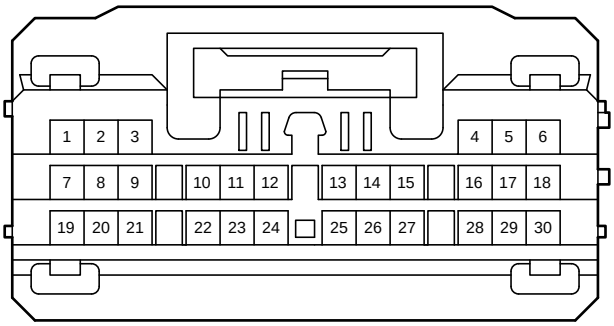

N 13
White

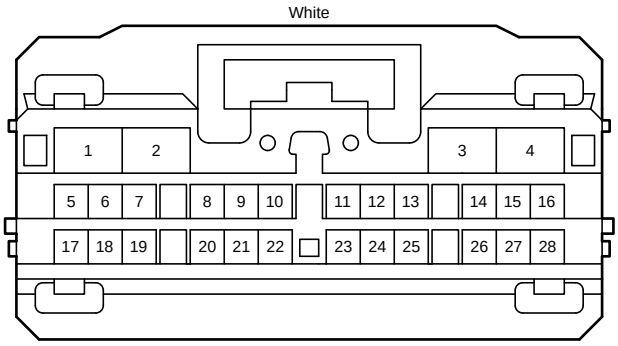

N 39
Black

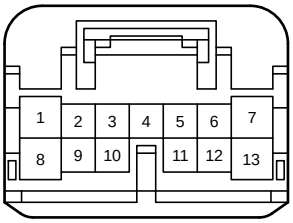

N 40
Black

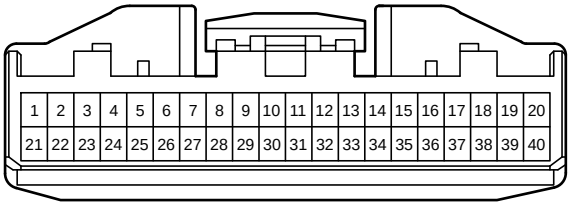

N 51
Black

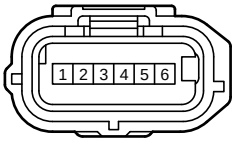

N 68
White

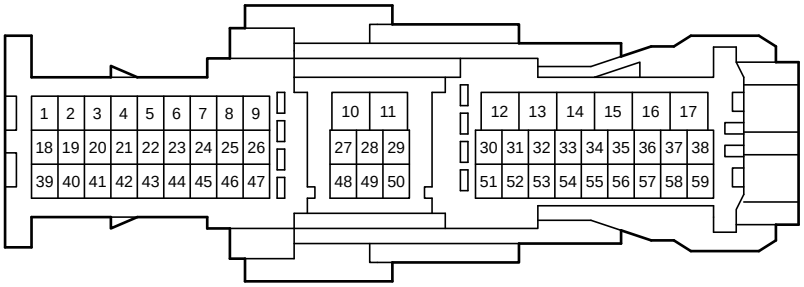

N 94
White

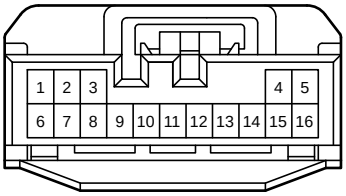

N 95
White

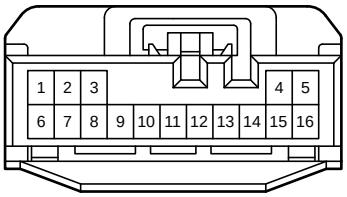

N 98
White

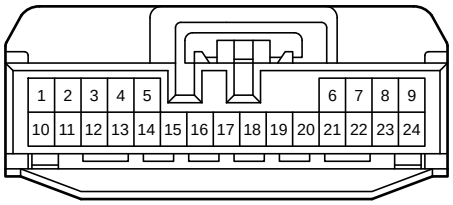

N107
White



N112
White



N113
White



N118
White



N121
White



N123
Blue

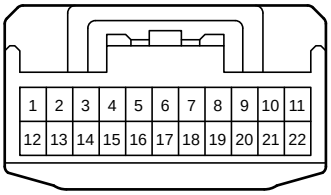

N130
Black

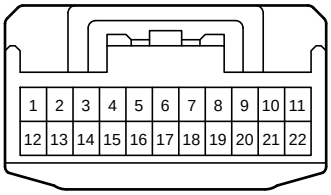

N133
Black

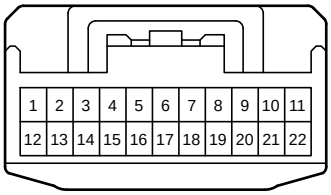

N164
White

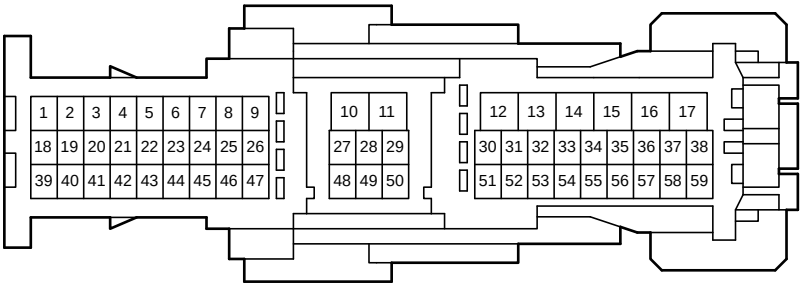

Q 3
White

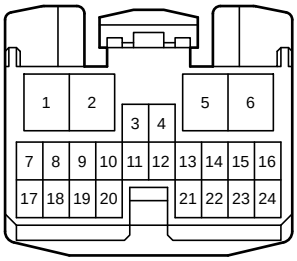

Q 4
White

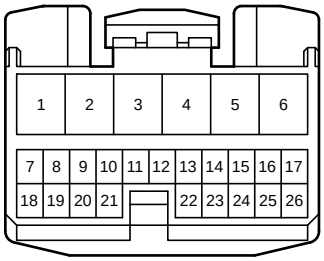

Q 7
White

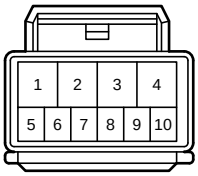

Q 9
White

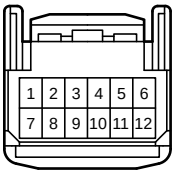

Q 18
White

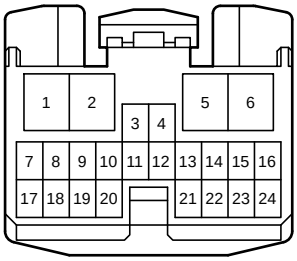

Q 19
White

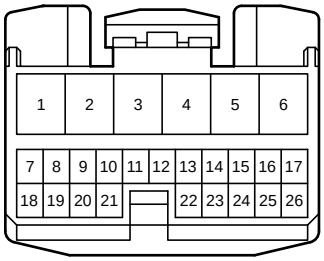

Q 22
White

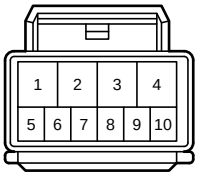

Q 25
White

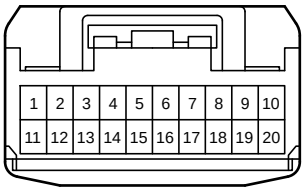

R 2
White

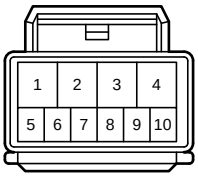

R 10
White

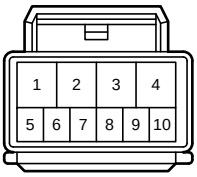

T 6
Black

T 21
Black

T 32
White

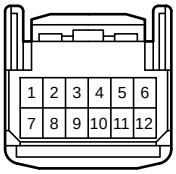

T 33
White

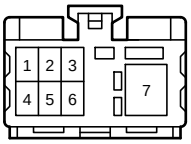

T 36
Black

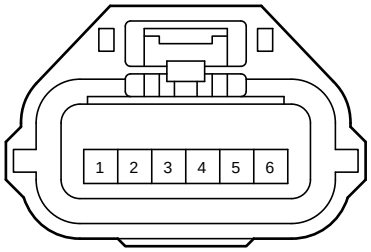

T 44
Blue

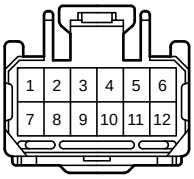

T 45
Blue

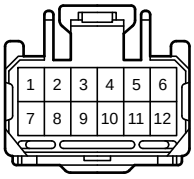

T 51
Gray



T 52
Gray



U 8
Black

U 18
Black

U 33
White

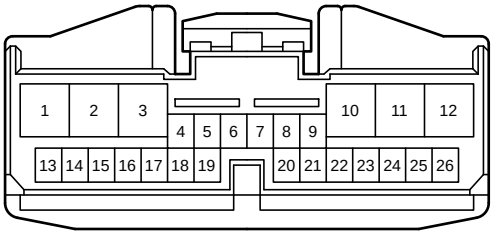

U 49
White



U 50
White



U 52
Blue

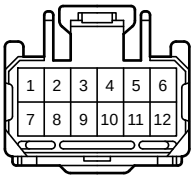

U 54
Blue

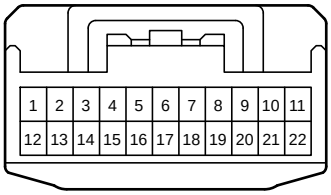

Y 9
White

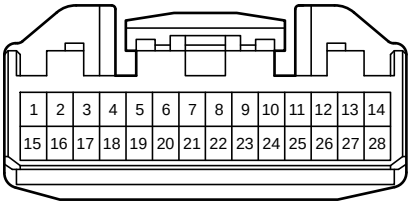

a 4
White

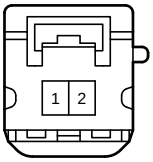

a 8
Black

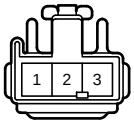

a 9
White

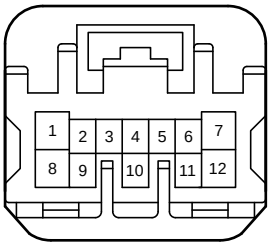

a 11
White

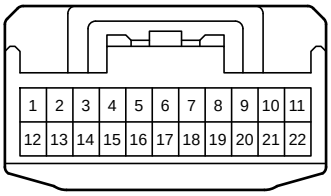

4A
White

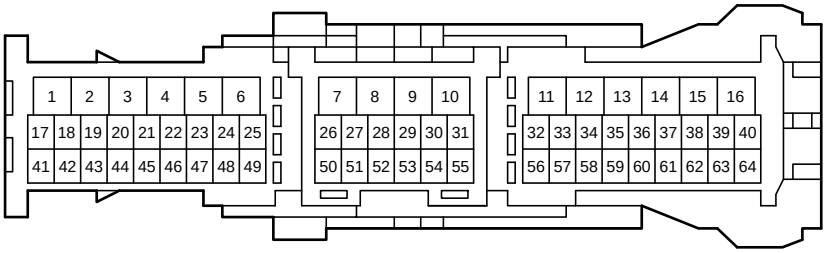

4C
White

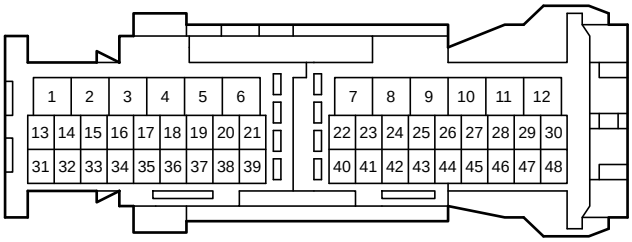

5A
White

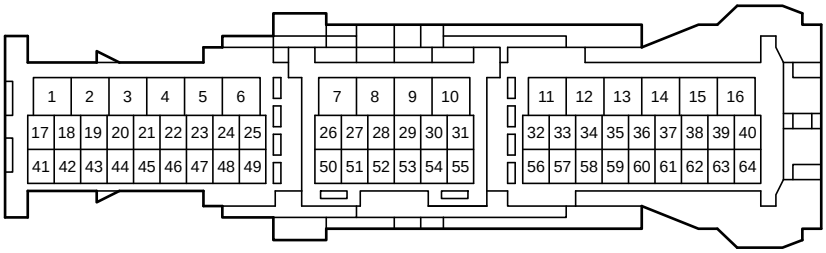

5B
White

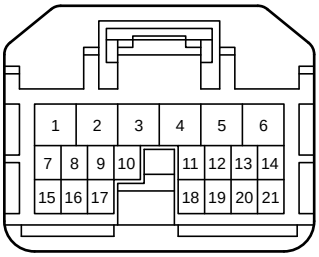

5C
White

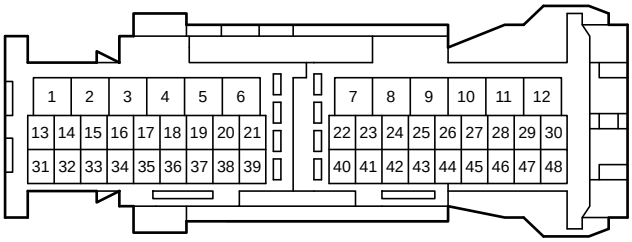

5D
White

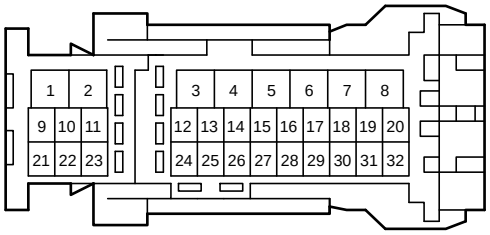

6A
White

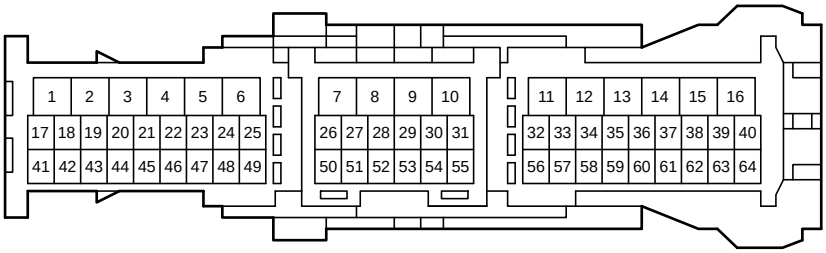

6B
White

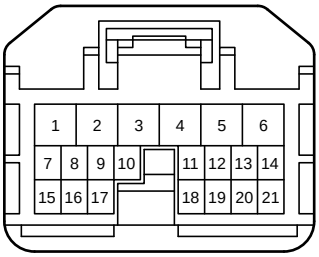

AT1
White

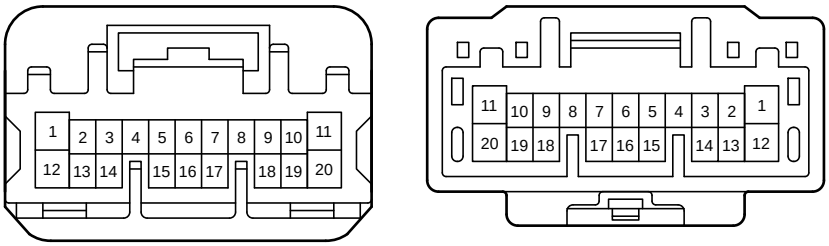

BA2
White

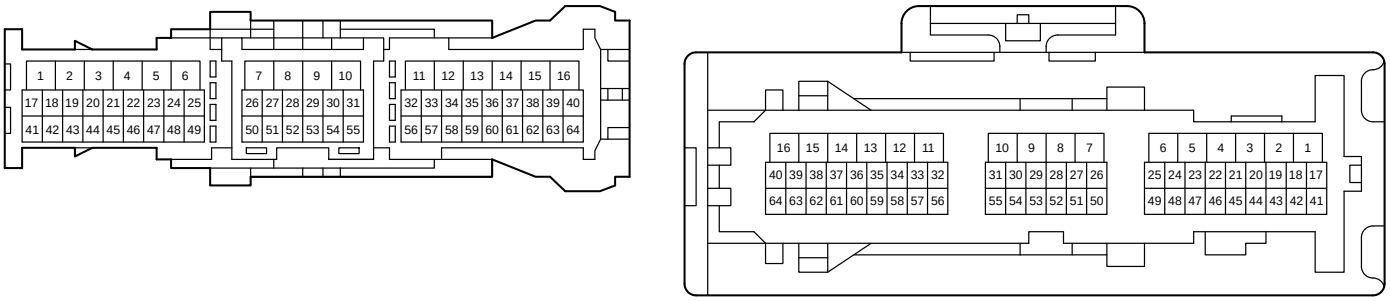

NA2
White

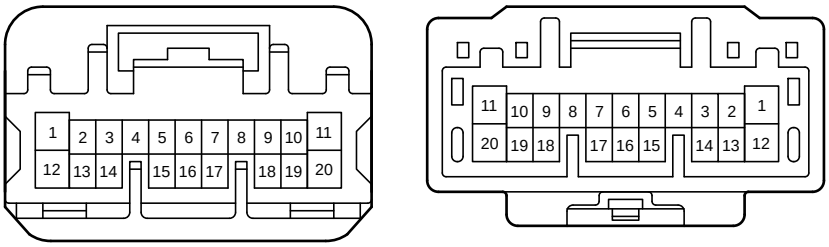

NT1
White

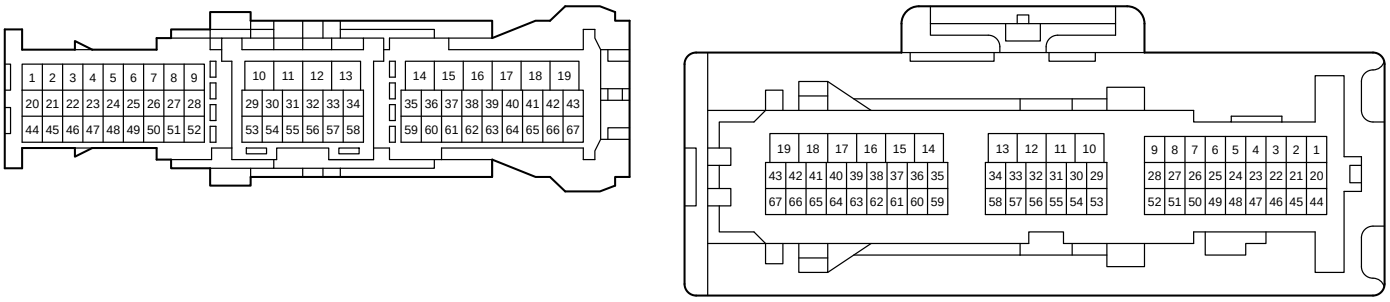

NU1
White

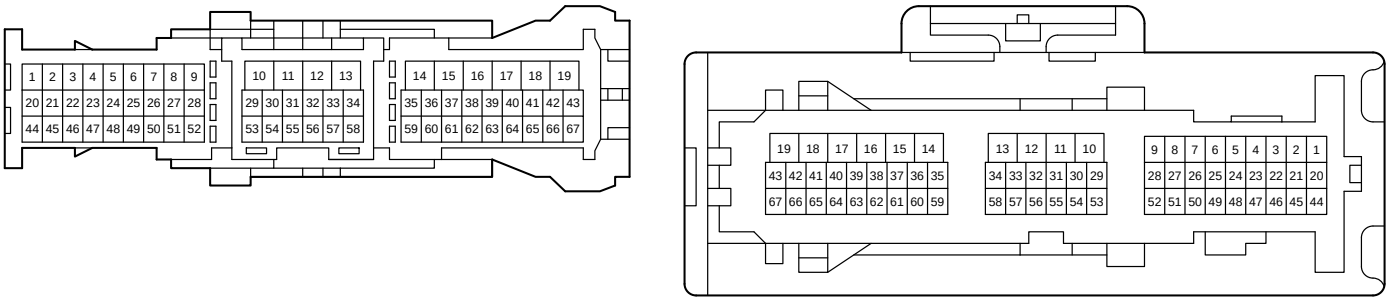

NU2
White

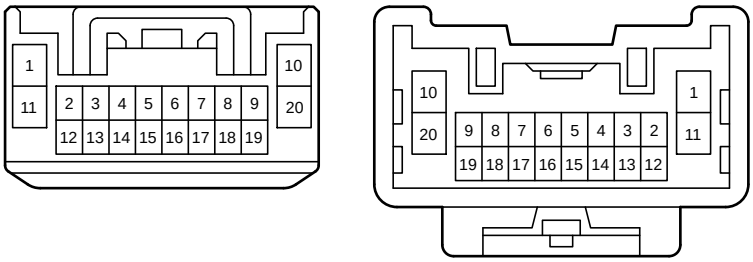

NY1
White

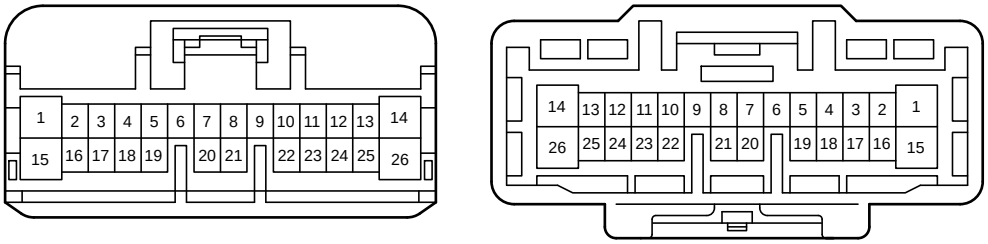

QT1
White

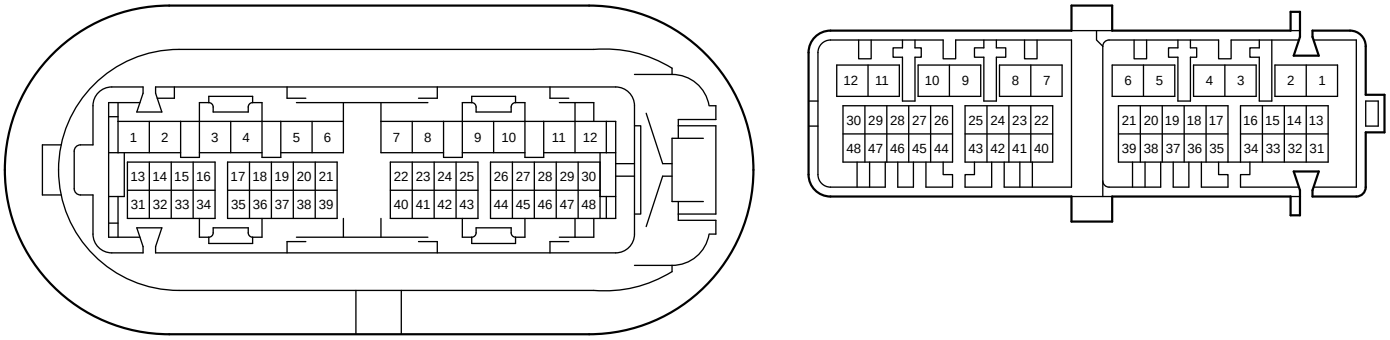

QU1
White

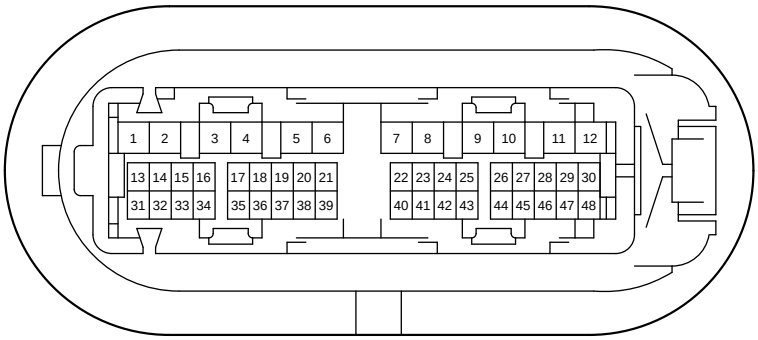

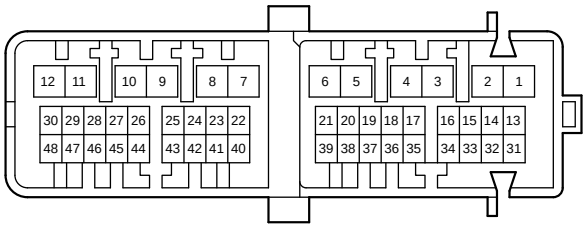

RT1
White

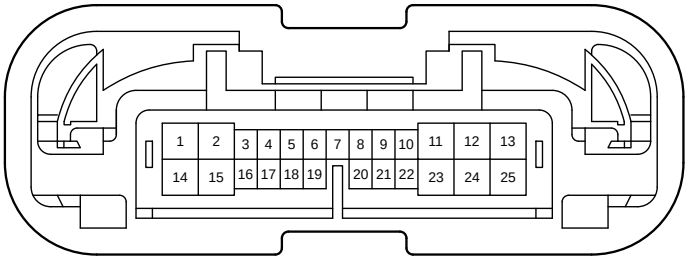

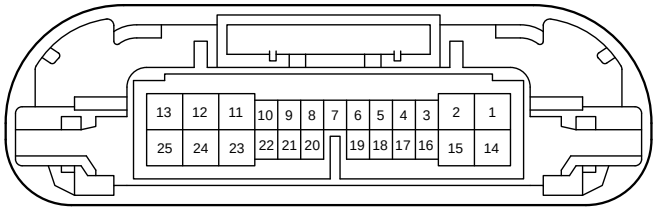

RU1
White

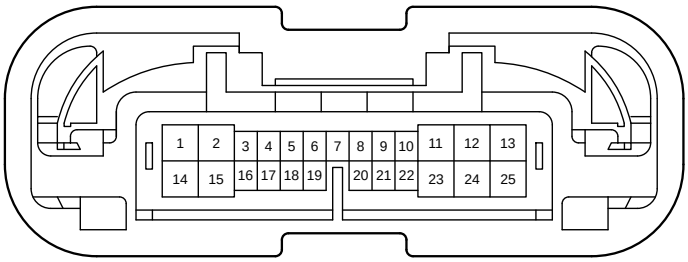

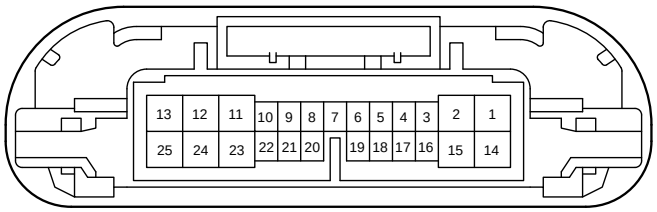

TN1
White

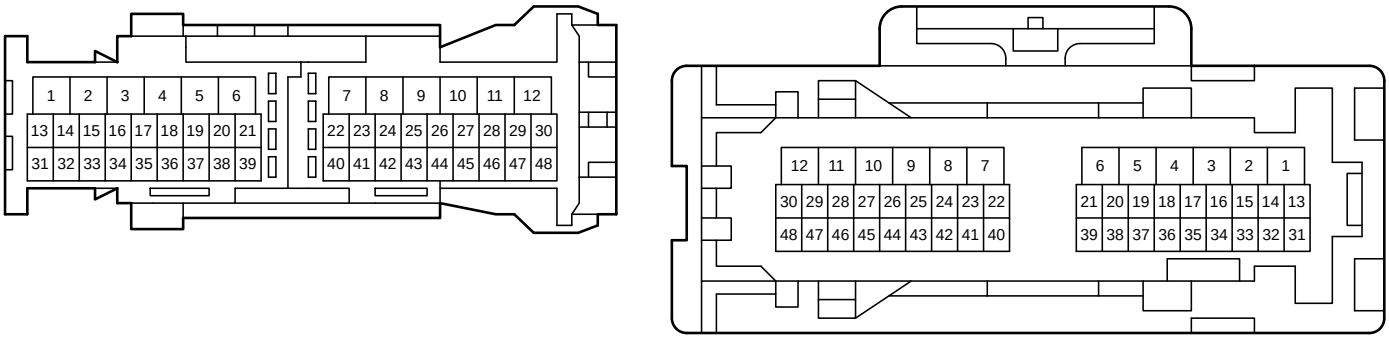

TU1
White

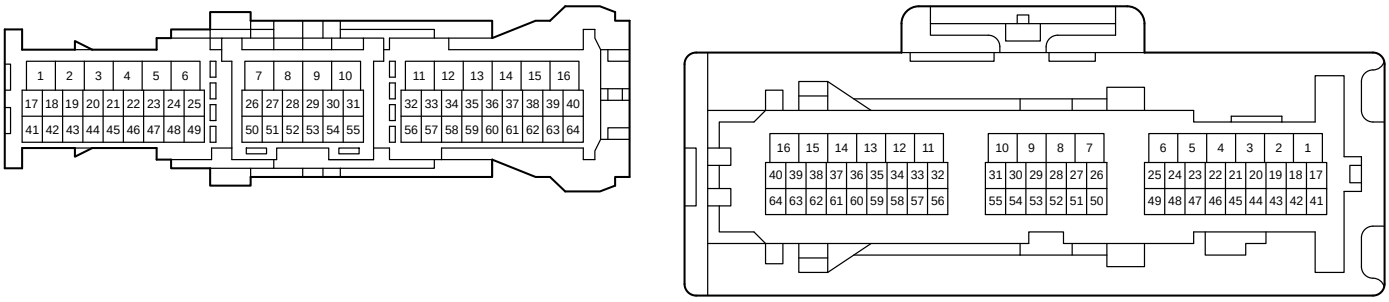

UT1
White

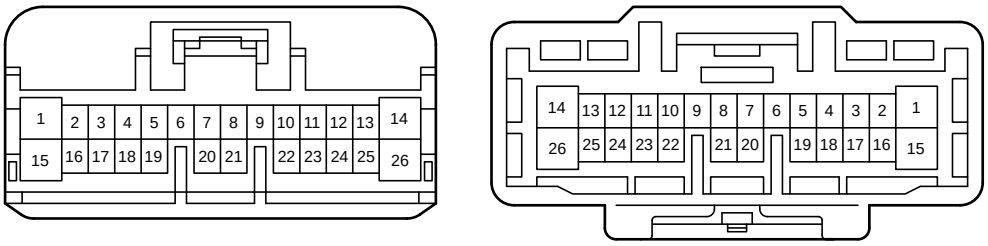
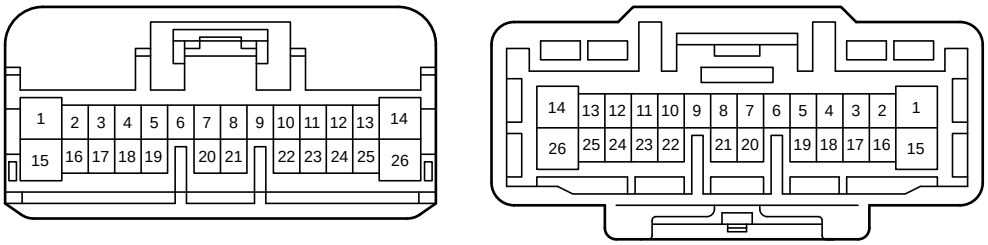
aT1
White