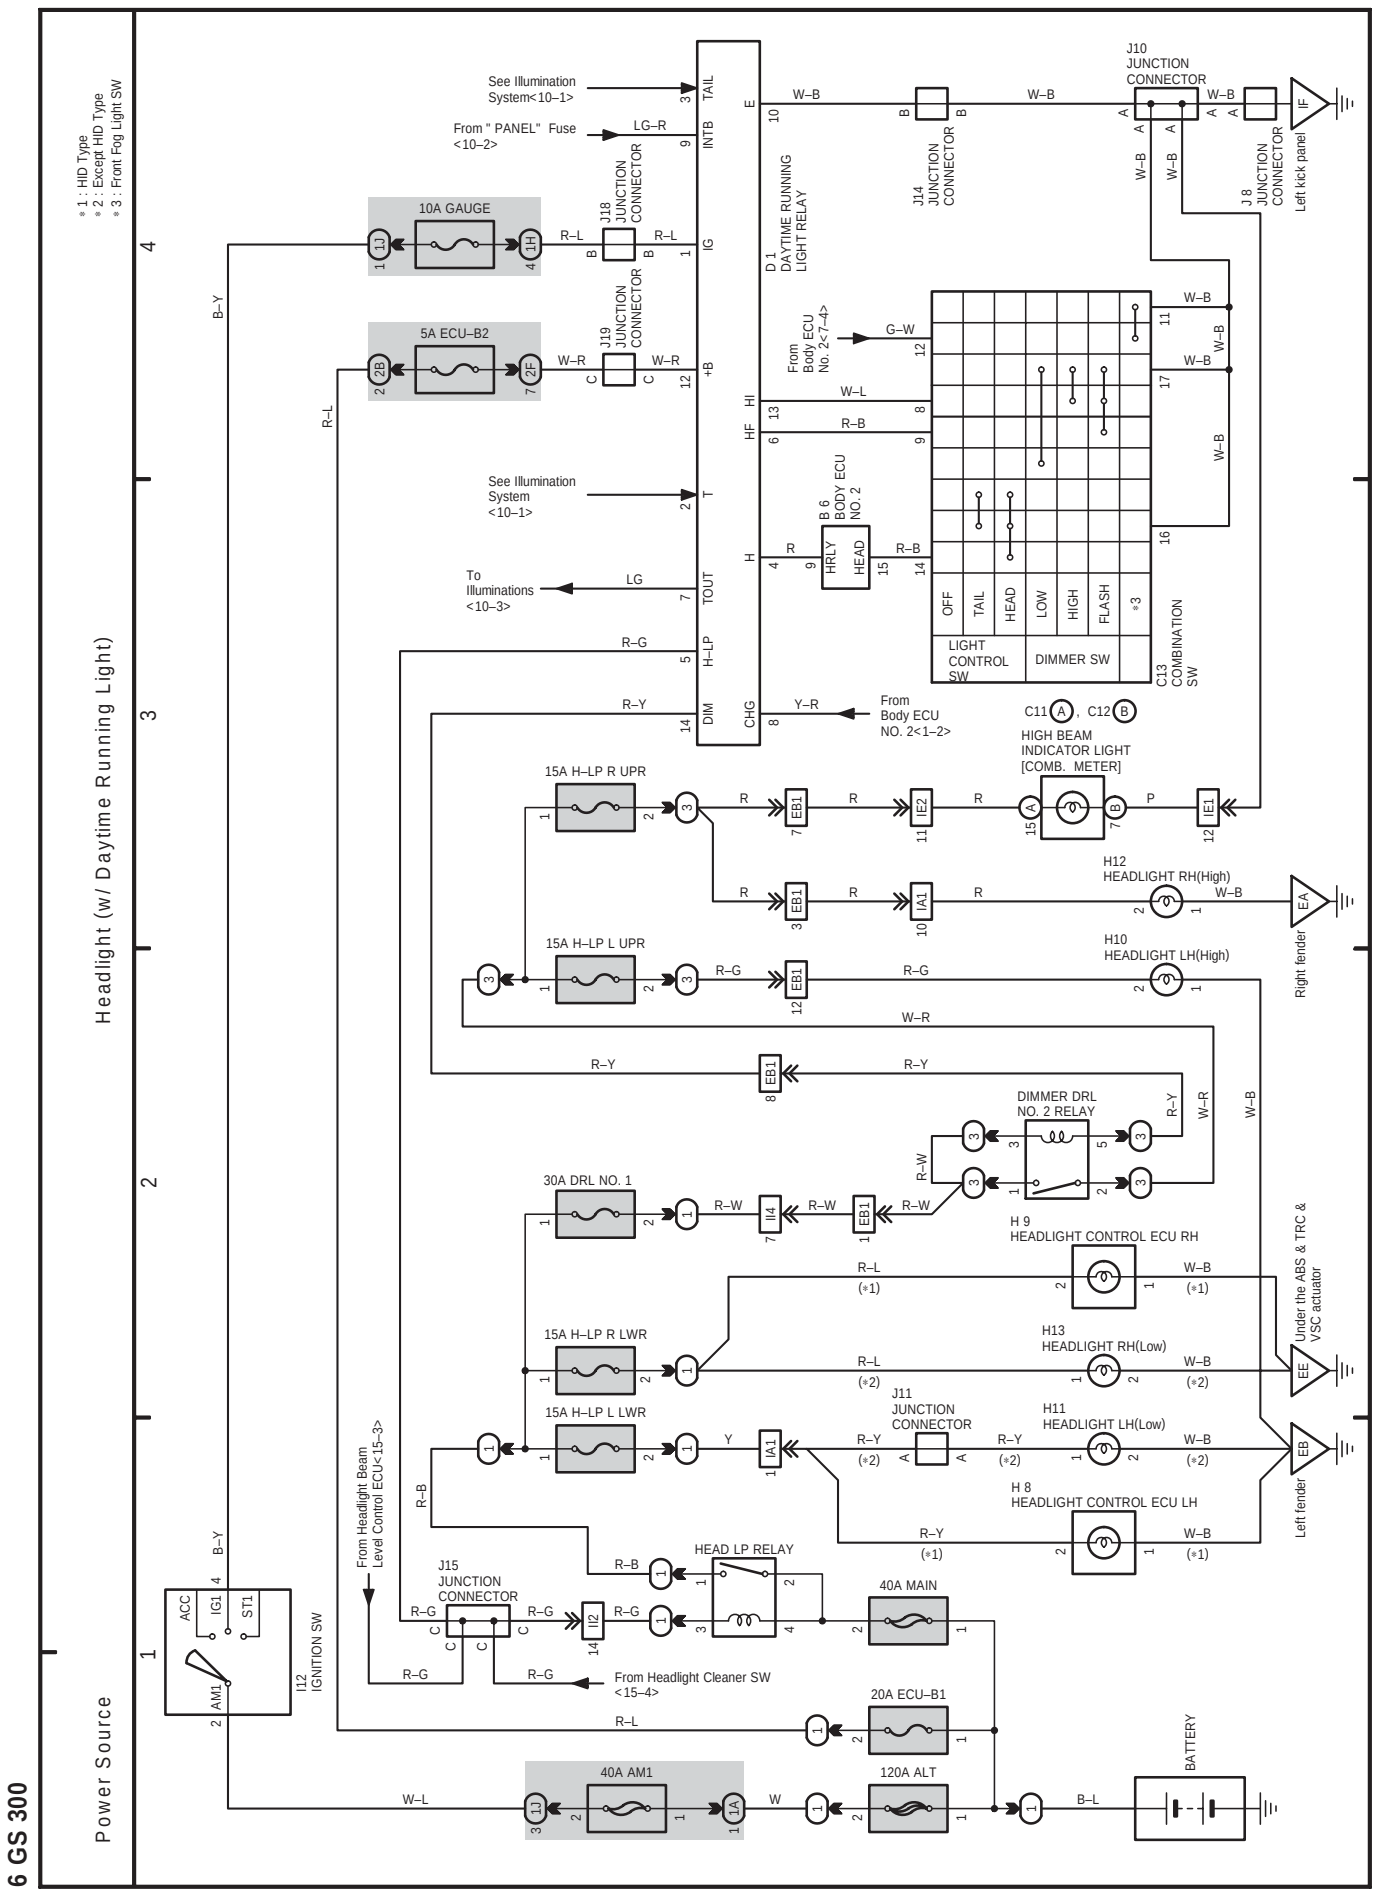
Headlight (w/ Daytime Running Light)
Power Source
* 1 : HID Type
* 2 : Except HID Type
* 3 : Front Fog Light SW
See Illumination System<10–1>
From " PANEL" Fuse <10–2>
10A GAUGE
5A ECU–B2
J18 JUNCTION CONNECTOR
J19 JUNCTION CONNECTOR
See Illumination System <10–1>
To Illuminations <10–3>
TAIL
INTB
IG
+B
HI
HF
H
T
TOUT
H–LP
DIM
CHG
D 1 DAYTIME RUNNING LIGHT RELAY
J14 JUNCTION CONNECTOR
J10 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
Left kick panel
From Body ECU No. 2<7–4>
B 6 BODY ECU NO. 2
HRLY
HEAD
OFF
TAIL
HEAD
LOW
HIGH
FLASH
*3
LIGHT CONTROL SW
DIMMER SW
C13 COMBINATION SW
From Body ECU NO. 2<1–2>
C11 A , C12 B
HIGH BEAM INDICATOR LIGHT [COMB. METER]
15A H–LP R UPR
15A H–LP L UPR
H12 HEADLIGHT RH(High)
H10 HEADLIGHT LH(High)
Right fender
DIMMER DRL NO. 2 RELAY
30A DRL NO. 1
H 9 HEADLIGHT CONTROL ECU RH
15A H–LP R LWR
15A H–LP L LWR
H13 HEADLIGHT RH(Low)
J11 JUNCTION CONNECTOR
H11 HEADLIGHT LH(Low)
H 8 HEADLIGHT CONTROL ECU LH
Under the ABS & TRC & VSC actuator
Left fender
From Headlight Beam Level Control ECU<15–3>
J15 JUNCTION CONNECTOR
HEAD LP RELAY
40A MAIN
From Headlight Cleaner SW <15–4>
20A ECU–B1
40A AM1
120A ALT
BATTERY
I12 IGNITION SW
ACC
IG1
ST1
AM1