7 GS 300

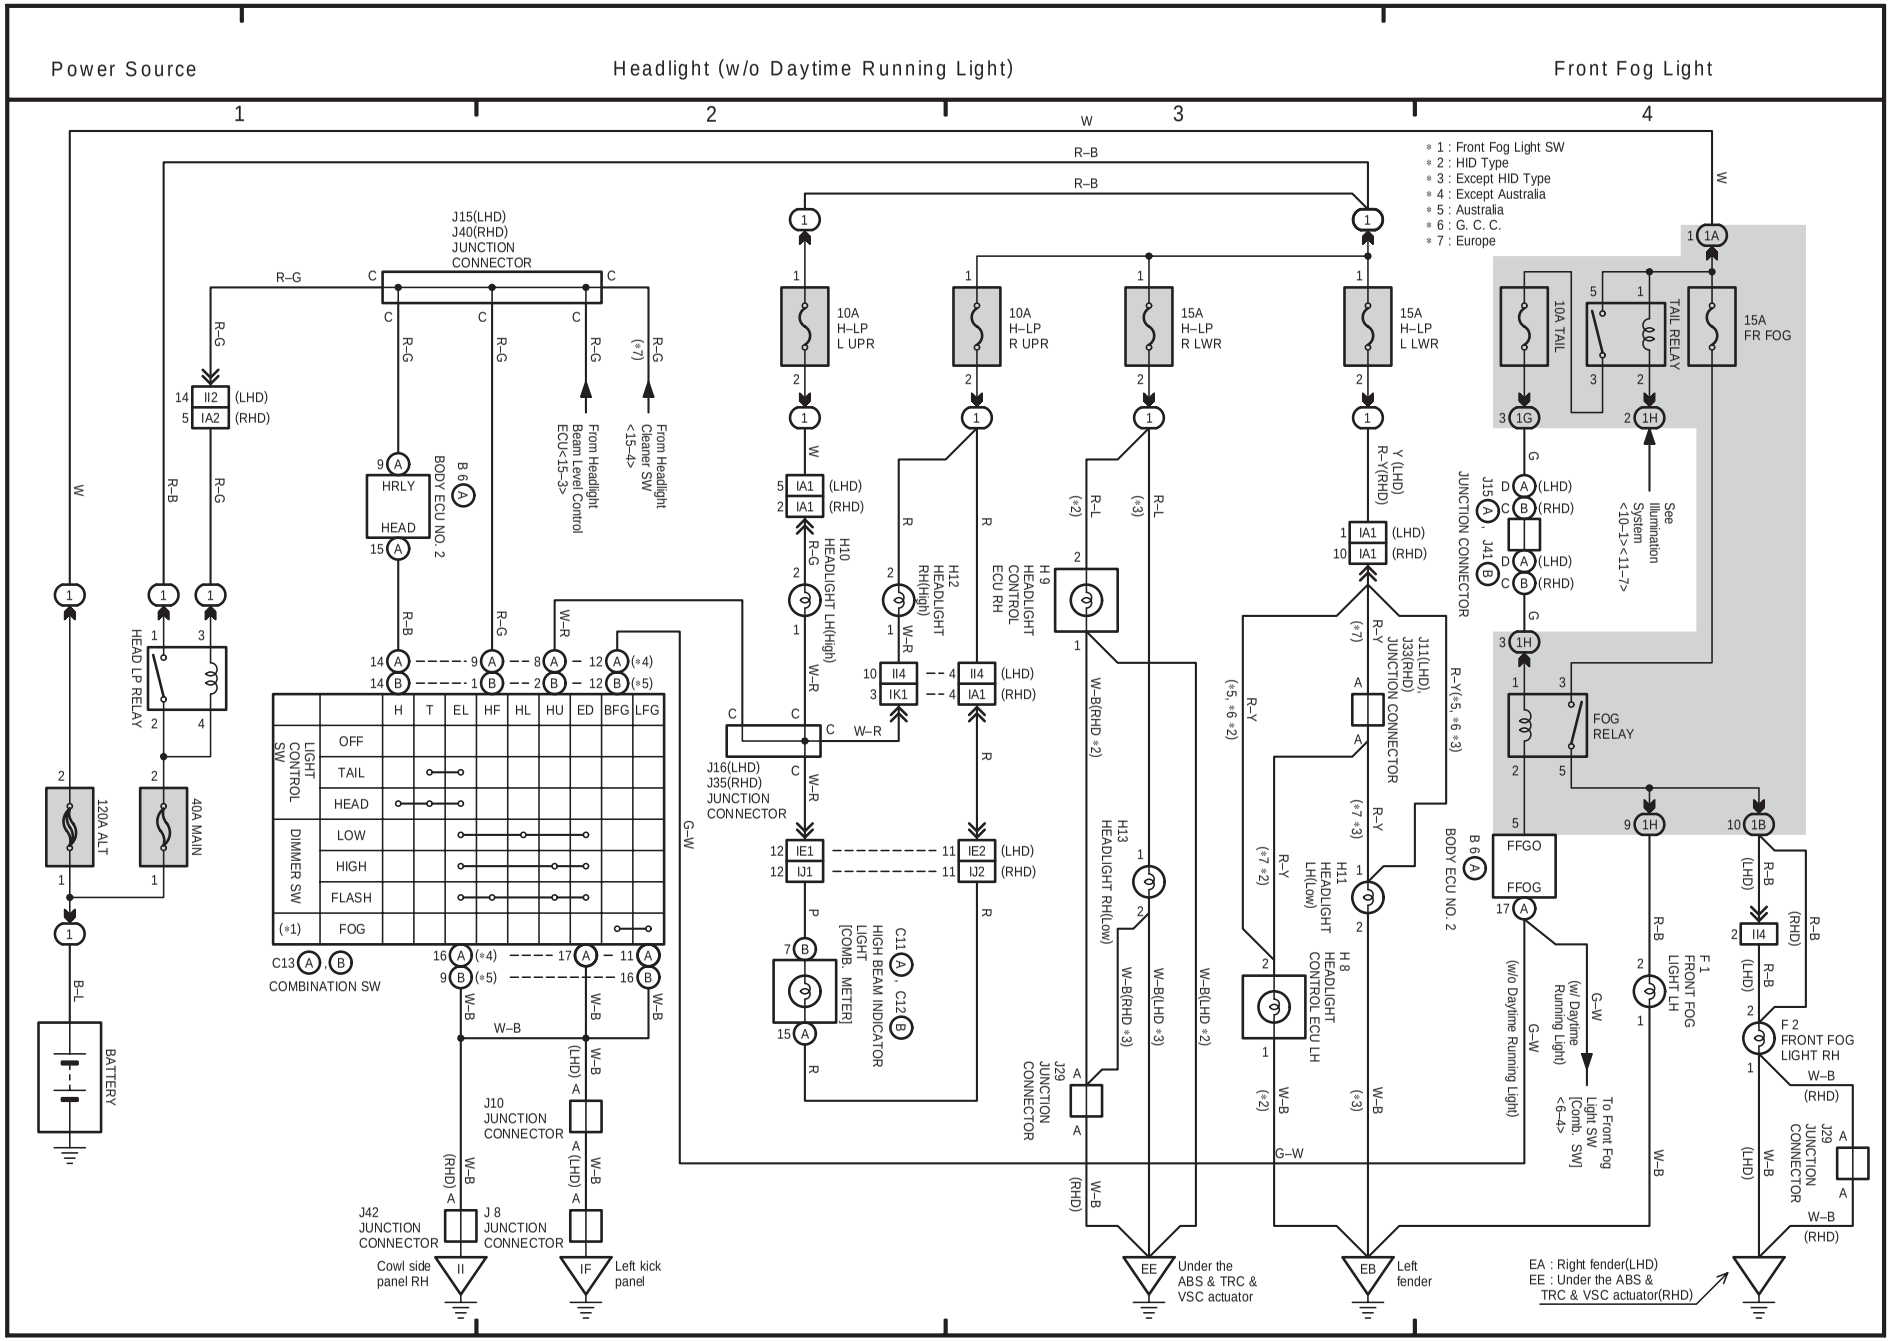
Power Source
Headlight (w/o Daytime Running Light)
Front Fog Light
1
2
3
4
* 1 : Front Fog Light SW
* 2 : HID Type
* 3 : Except HID Type
* 4 : Except Australia
* 5 : Australia
* 6 : G. C. C.
* 7 : Europe
J15(LHD)
J40(RHD)
JUNCTION
CONNECTOR
10A
H–LP
L UPR
10A
H–LP
R UPR
15A
H–LP
R LWR
15A
H–LP
L LWR
10A TAIL
TAIL RELAY
15A
FR FOG
HRLY
HEAD
B 6 A
BODY ECU NO. 2
From Headlight
Beam Level Control
ECU<15–3>
From Headlight
Cleaner SW
<15–4>
H10
HEADLIGHT LH(High)
H12
HEADLIGHT
RH(High)
H 9
HEADLIGHT
CONTROL
ECU RH
J15 A , J41 B
JUNCTION CONNECTOR
See
Illumination
System
<10–1><11–7>
FOG
RELAY
HEAD LP RELAY
120A ALT
40A MAIN
BATTERY
LIGHT
CONTROL
SW
OFF
TAIL
HEAD
DIMMER SW
LOW
HIGH
FLASH
FOG
H
T
EL
HF
HL
HU
ED
BFG
LFG
C13 A , B
COMBINATION SW
J16(LHD)
J35(RHD)
JUNCTION
CONNECTOR
C11 A , C12 B
HIGH BEAM INDICATOR
LIGHT
[COMB. METER]
H13
HEADLIGHT RH(Low)
J29
JUNCTION
CONNECTOR
J11(LHD),
J33(RHD)
JUNCTION CONNECTOR
H 8
HEADLIGHT
CONTROL ECU LH
H11
HEADLIGHT
LH(Low)
B 6 A
BODY ECU NO. 2
FFGO
FFOG
(w/o Daytime Running Light)
To Front Fog
Light SW
[Comb. SW]
<6–4>
F 1
FRONT FOG
LIGHT LH
F 2
FRONT FOG
LIGHT RH
J10
JUNCTION
CONNECTOR
J42
JUNCTION
CONNECTOR
J 8
JUNCTION
CONNECTOR
Cowl side
panel RH
Left kick
panel
Under the
ABS & TRC &
VSC actuator
Left
fender
EA : Right fender(LHD)
EE : Under the ABS &
TRC & VSC actuator(RHD)