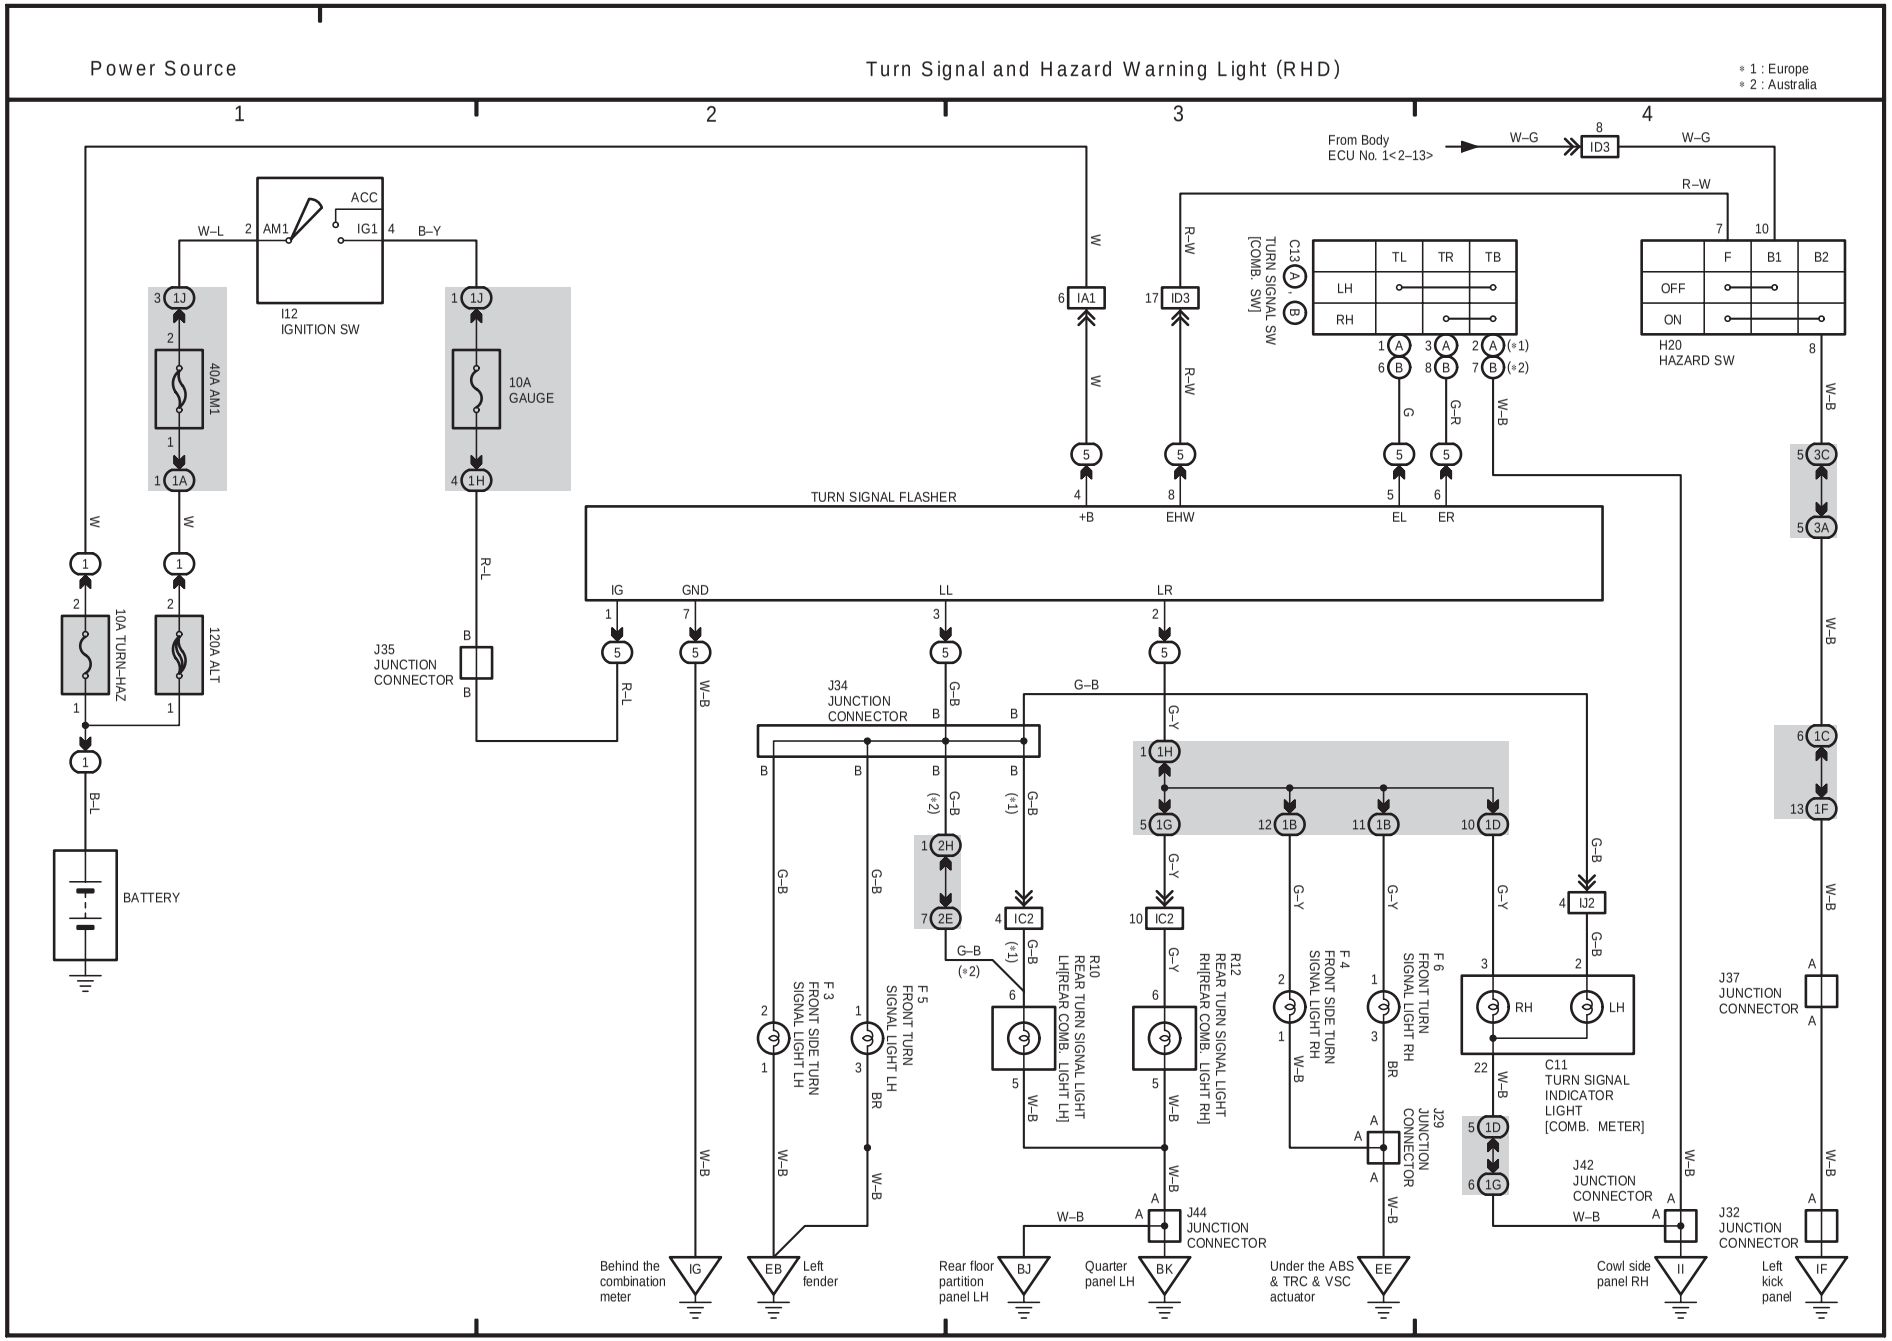
Power Source
Turn Signal and Hazard Warning Light (RHD)
* 1 : Europe
* 2 : Australia
1
2
3
4
From Body ECU No. 1<2–13>
W–G
ID3
R–W
ACC
AM1
IG1
W–L
B–Y
I12 IGNITION SW
1J
40A AM1
1A
10A GAUGE
1H
R–L
10A TURN–HAZ
120A ALT
B–L
BATTERY
J35 JUNCTION CONNECTOR
IA1
W
C13
TURN SIGNAL SW [COMB. SW]
TL
TR
TB
LH
RH
G
G–R
W–B
H20 HAZARD SW
F
B1
B2
OFF
ON
3C
3A
1C
1F
TURN SIGNAL FLASHER
+B
EHW
EL
ER
IG
GND
LL
LR
J34 JUNCTION CONNECTOR
G–B
G–Y
1G
1B
1D
2H
2E
IC2
IJ2
F 3 FRONT SIDE TURN SIGNAL LIGHT LH
F 5 FRONT TURN SIGNAL LIGHT LH
R10 REAR TURN SIGNAL LIGHT LH[REAR COMB. LIGHT LH]
R12 REAR TURN SIGNAL LIGHT RH[REAR COMB. LIGHT RH]
F 4 FRONT SIDE TURN SIGNAL LIGHT RH
F 6 FRONT TURN SIGNAL LIGHT RH
RH
LH
C11 TURN SIGNAL INDICATOR LIGHT [COMB. METER]
J29 JUNCTION CONNECTOR
J42 JUNCTION CONNECTOR
J44 JUNCTION CONNECTOR
J37 JUNCTION CONNECTOR
J32 JUNCTION CONNECTOR
BR
Behind the combination meter
IG
EB
Left fender
Rear floor partition panel LH
BJ
Quarter panel LH
BK
Under the ABS & TRC & VSC actuator
EE
Cowl side panel RH
II
Left kick panel
IF