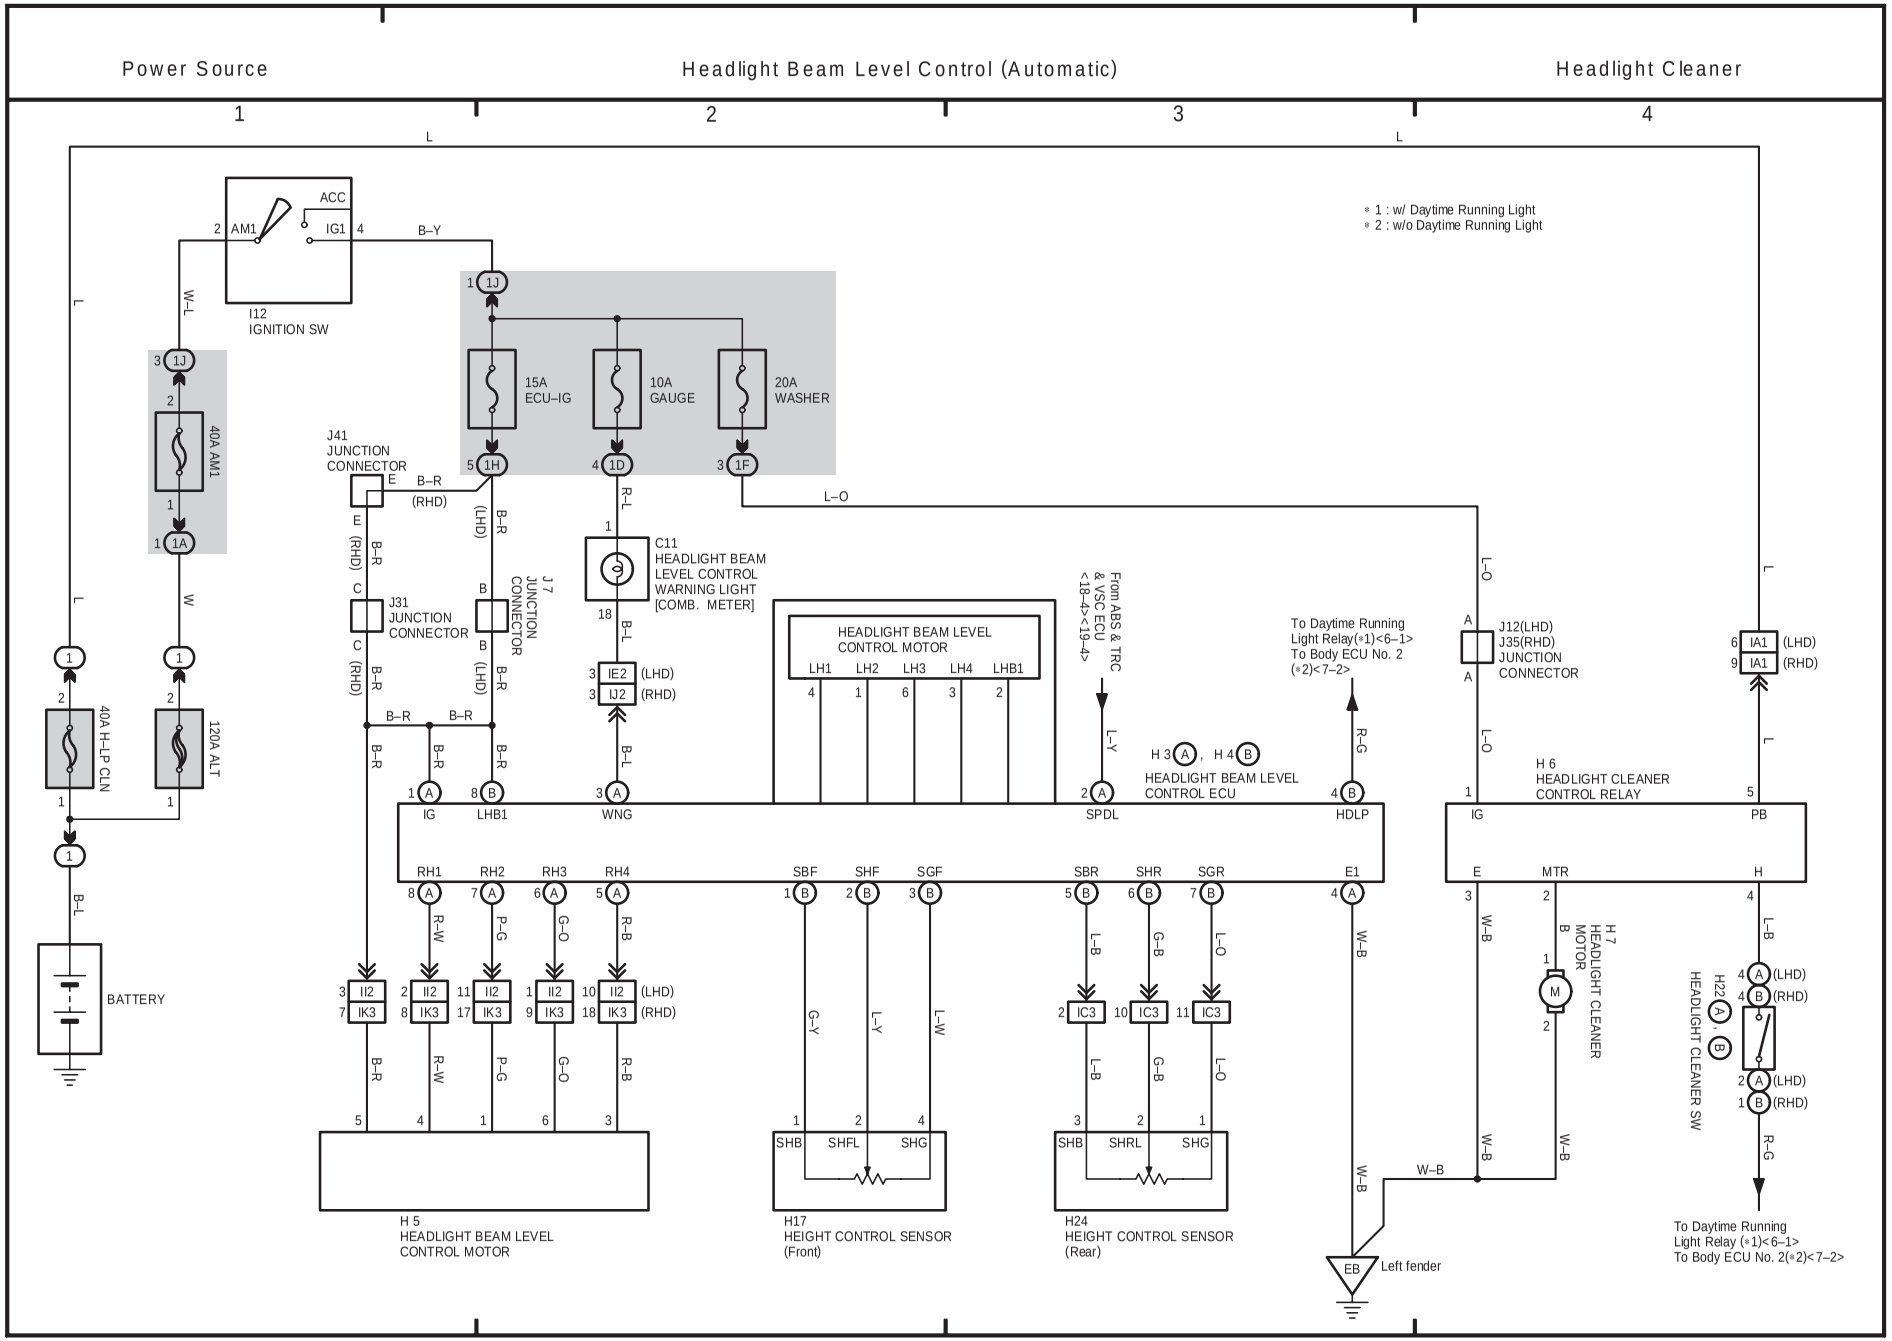
Power Source
Headlight Beam Level Control (Automatic)
Headlight Cleaner
1
2
3
4
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
I12
IGNITION SW
ACC
AM1
IG1
B–Y
W–L
40A AM1
40A H–LP CLN
120A ALT
BATTERY
15A
ECU–IG
10A
GAUGE
20A
WASHER
J41
JUNCTION
CONNECTOR
J31
JUNCTION
CONNECTOR
J7
JUNCTION
CONNECTOR
C11
HEADLIGHT BEAM
LEVEL CONTROL
WARNING LIGHT
[COMB. METER]
HEADLIGHT BEAM LEVEL
CONTROL MOTOR
LH1
LH2
LH3
LH4
LHB1
From ABS & TRC
& VSC ECU
<18–4><19–4>
To Daytime Running
Light Relay(*1)<6–1>
To Body ECU No. 2
(*2)<7–2>
H 3 A , H 4 B
HEADLIGHT BEAM LEVEL
CONTROL ECU
J12(LHD)
J35(RHD)
JUNCTION
CONNECTOR
H 6
HEADLIGHT CLEANER
CONTROL RELAY
IG
PB
E
MTR
H
H 7
HEADLIGHT CLEANER
MOTOR
H22
HEADLIGHT CLEANER SW
To Daytime Running
Light Relay (*1)<6–1>
To Body ECU No. 2(*2)<7–2>
IG
LHB1
WNG
SPDL
HDLP
RH1
RH2
RH3
RH4
SBF
SHF
SGF
SBR
SHR
SGR
E1
H 5
HEADLIGHT BEAM LEVEL
CONTROL MOTOR
H17
HEIGHT CONTROL SENSOR
(Front)
H24
HEIGHT CONTROL SENSOR
(Rear)
SHB
SHFL
SHG
SHRL
EB
Left fender

K