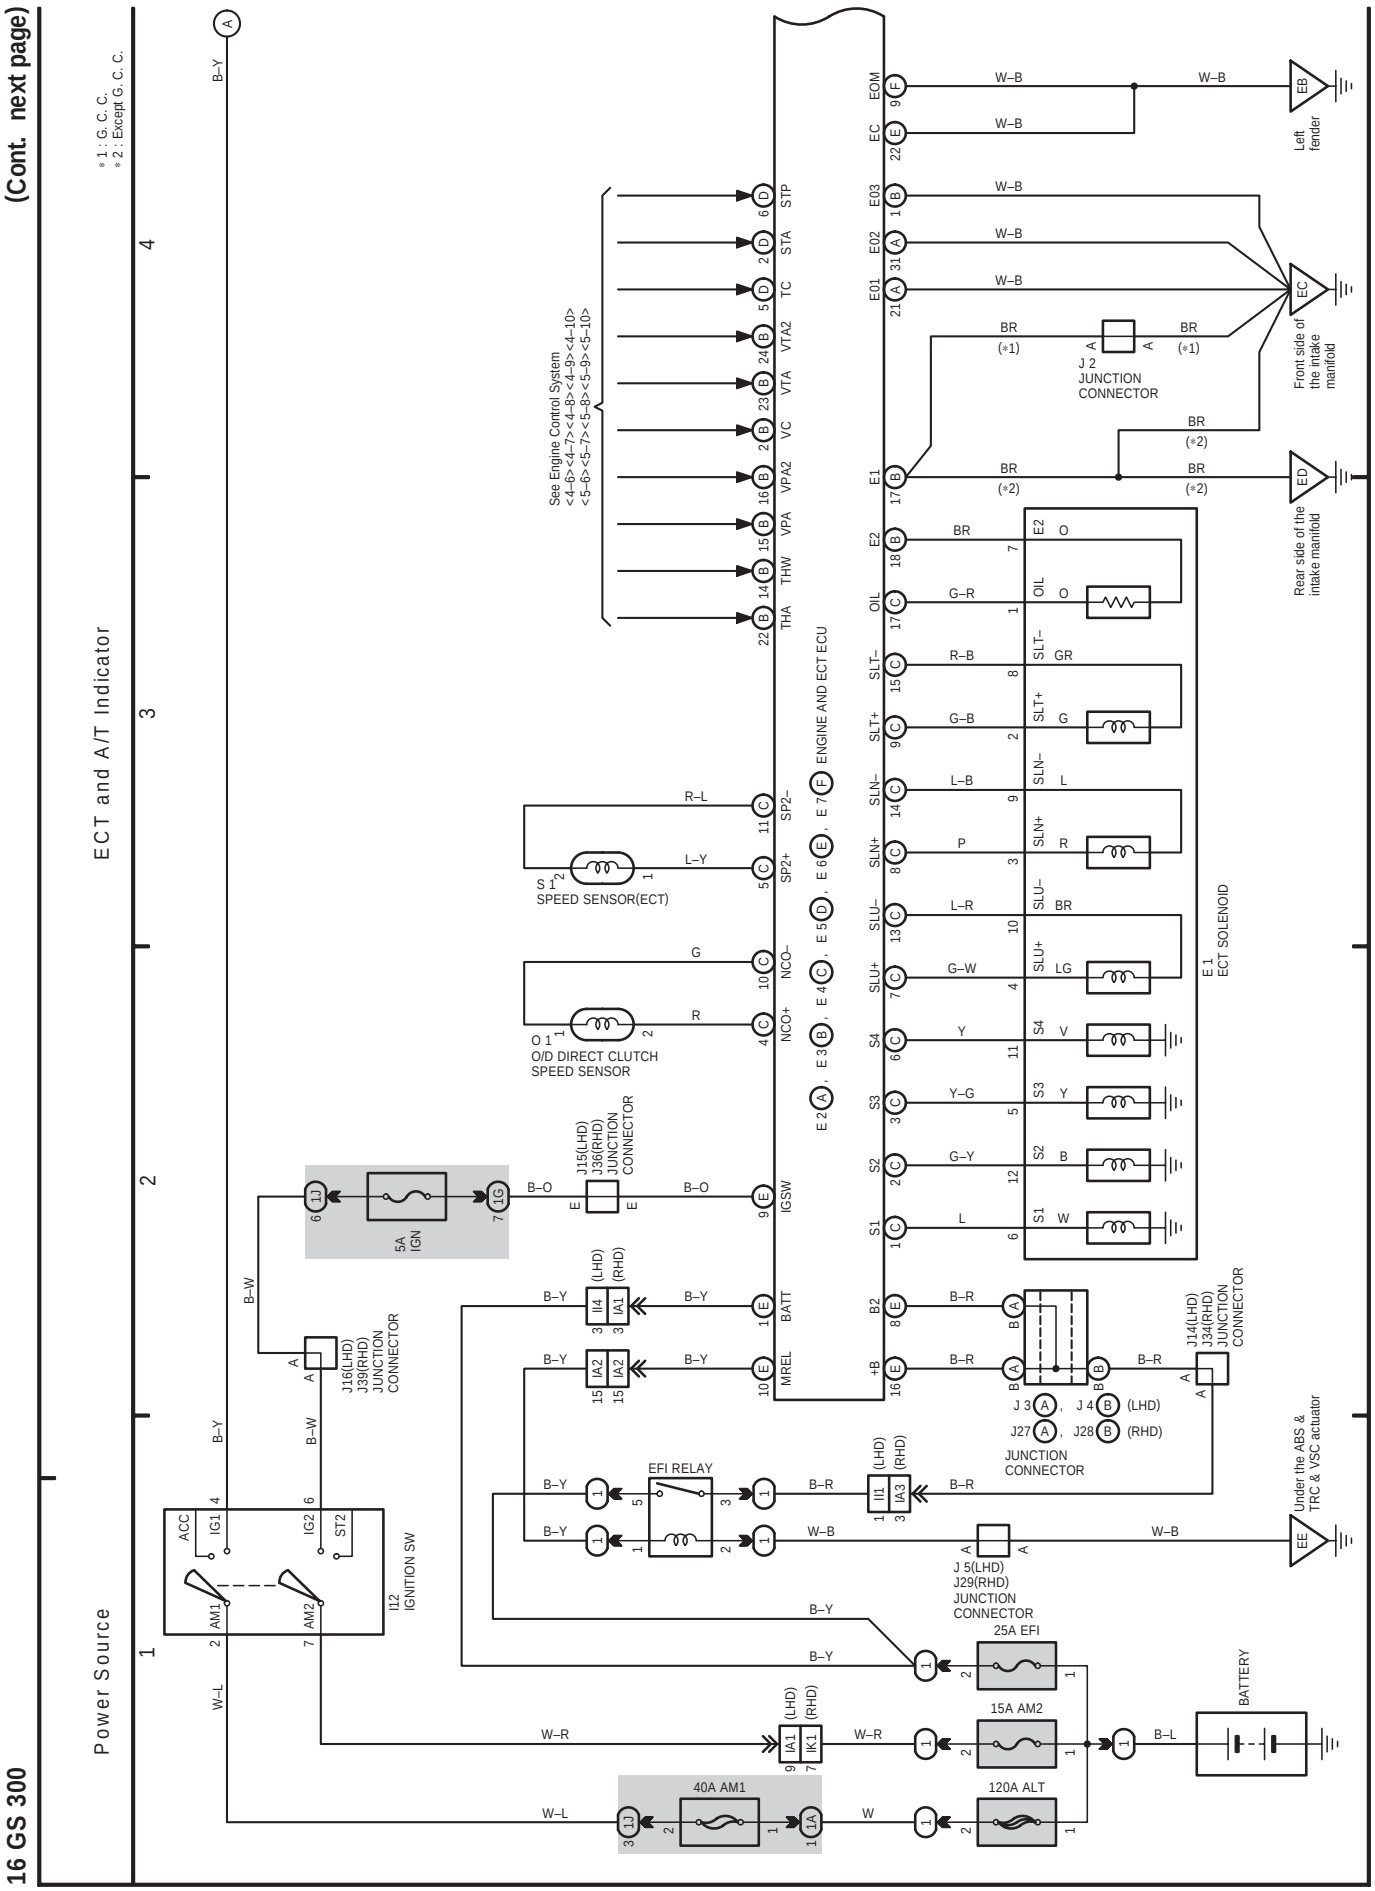
(Cont. next page)
16 GS 300
Power Source
ECT and A/T Indicator
* 1 : G. C. C.
* 2 : Except G. C. C.
See Engine Control System
<4–6><4–7><4–8><4–9><4–10>
<5–6><5–7><5–8><5–9><5–10>
ENGINE AND ECT ECU
SPEED SENSOR(ECT)
O/D DIRECT CLUTCH SPEED SENSOR
J15(LHD) J36(RHD) JUNCTION CONNECTOR
5A IGN
J16(LHD) J39(RHD) JUNCTION CONNECTOR
IGNITION SW
EFI RELAY
J 5(LHD) J29(RHD) JUNCTION CONNECTOR
25A EFI
15A AM2
40A AM1
120A ALT
BATTERY
J 2 JUNCTION CONNECTOR
E 1 ECT SOLENOID
J14(LHD) J34(RHD) JUNCTION CONNECTOR
JUNCTION CONNECTOR
Left fender
Front side of the intake manifold
Rear side of the intake manifold
Under the ABS & TRC & VSC actuator

16 GS 300 (Cont' d)

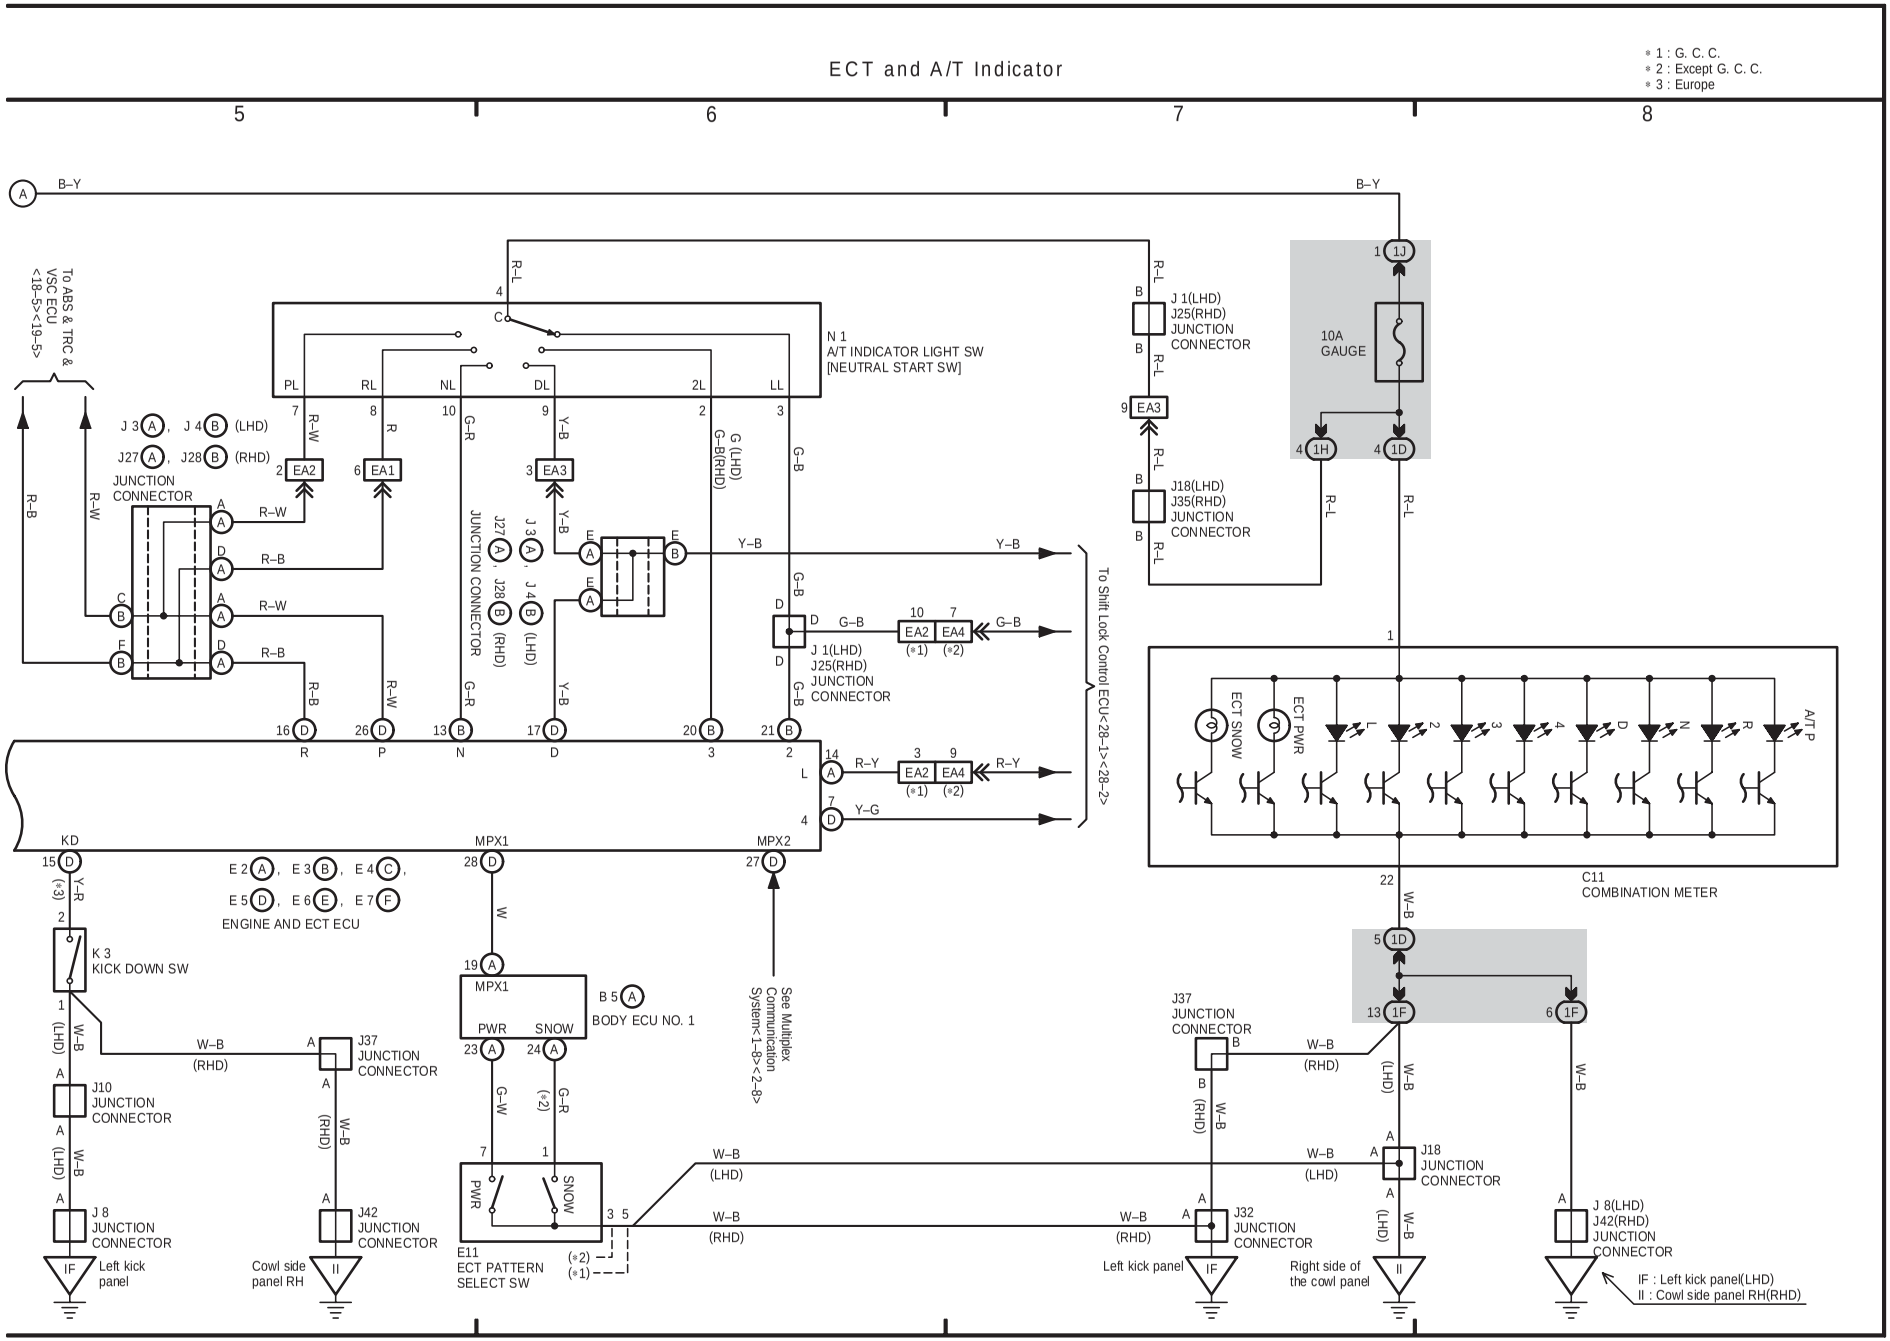

K