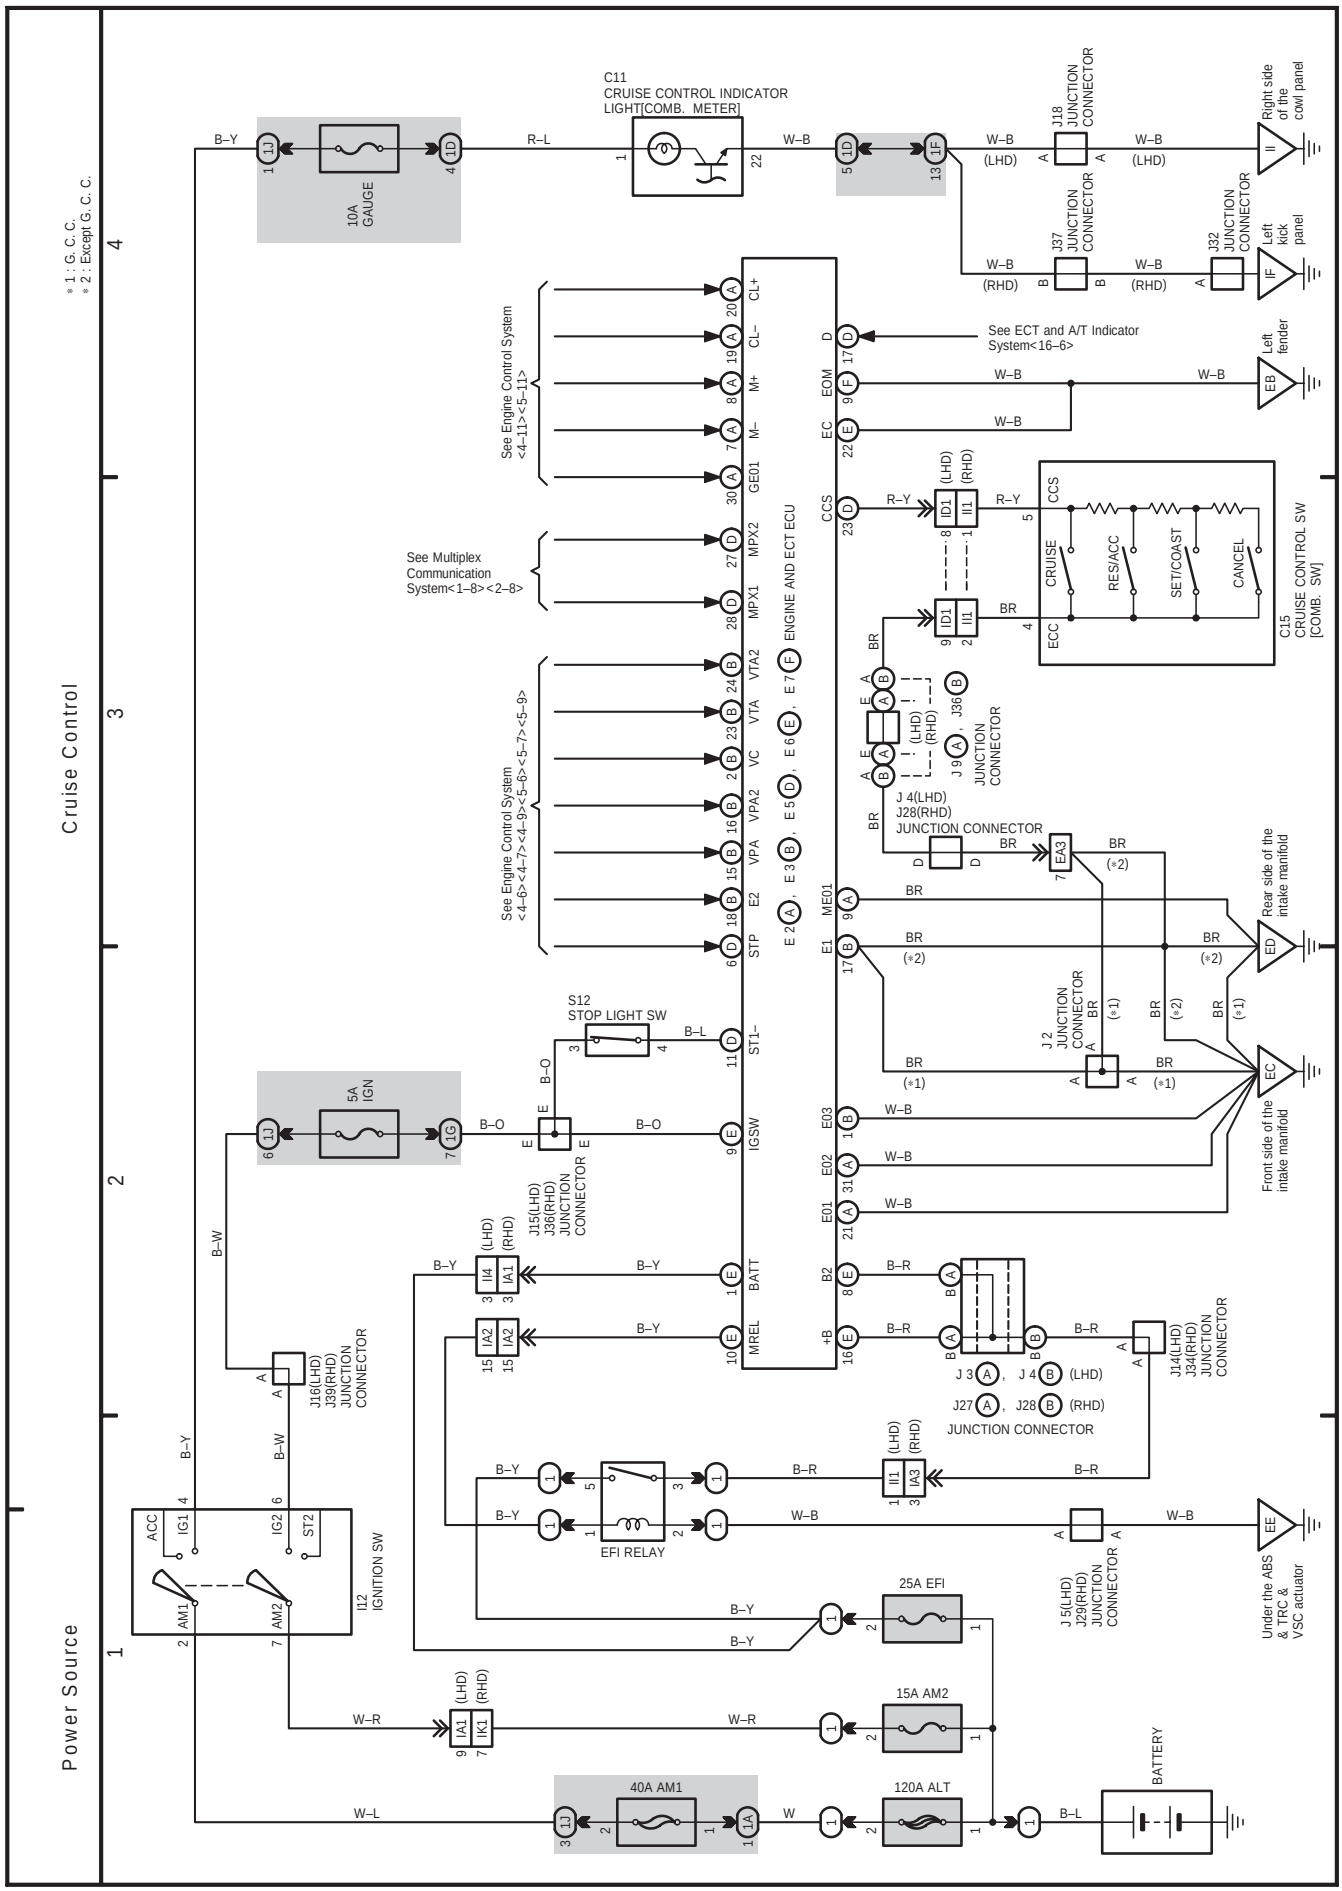
Cruise Control
Power Source
* 1 : G. C. C.
* 2 : Except G. C. C.
C11
CRUISE CONTROL INDICATOR LIGHT[COMB. METER]
10A GAUGE
5A IGN
S12
STOP LIGHT SW
See Engine Control System <4–11><5–11>
See Multiplex Communication System<1–8><2–8>
See Engine Control System <4–6><4–7><4–9><5–6><5–7><5–9>
ENGINE AND ECT ECU
See ECT and A/T Indicator System<16–6>
C15
CRUISE CONTROL SW [COMB. SW]
CRUISE
RES/ACC
SET/COAST
CANCEL
J18 JUNCTION CONNECTOR
J37 JUNCTION CONNECTOR
J32 JUNCTION CONNECTOR
Right side of the cowl panel
Left kick panel
Left fender
Rear side of the intake manifold
Front side of the intake manifold
Under the ABS & TRC & VSC actuator
J 4(LHD)
J28(RHD)
JUNCTION CONNECTOR
J15(LHD)
J36(RHD)
JUNCTION CONNECTOR
J16(LHD)
J39(RHD)
JUNCTION CONNECTOR
J14(LHD)
J34(RHD)
JUNCTION CONNECTOR
J 5(LHD)
J29(RHD)
JUNCTION CONNECTOR
J 2
JUNCTION CONNECTOR
J 3 J 4 (LHD)
J27 J28 (RHD)
JUNCTION CONNECTOR
EFI RELAY
I12
IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
25A EFI
15A AM2
40A AM1
120A ALT
BATTERY