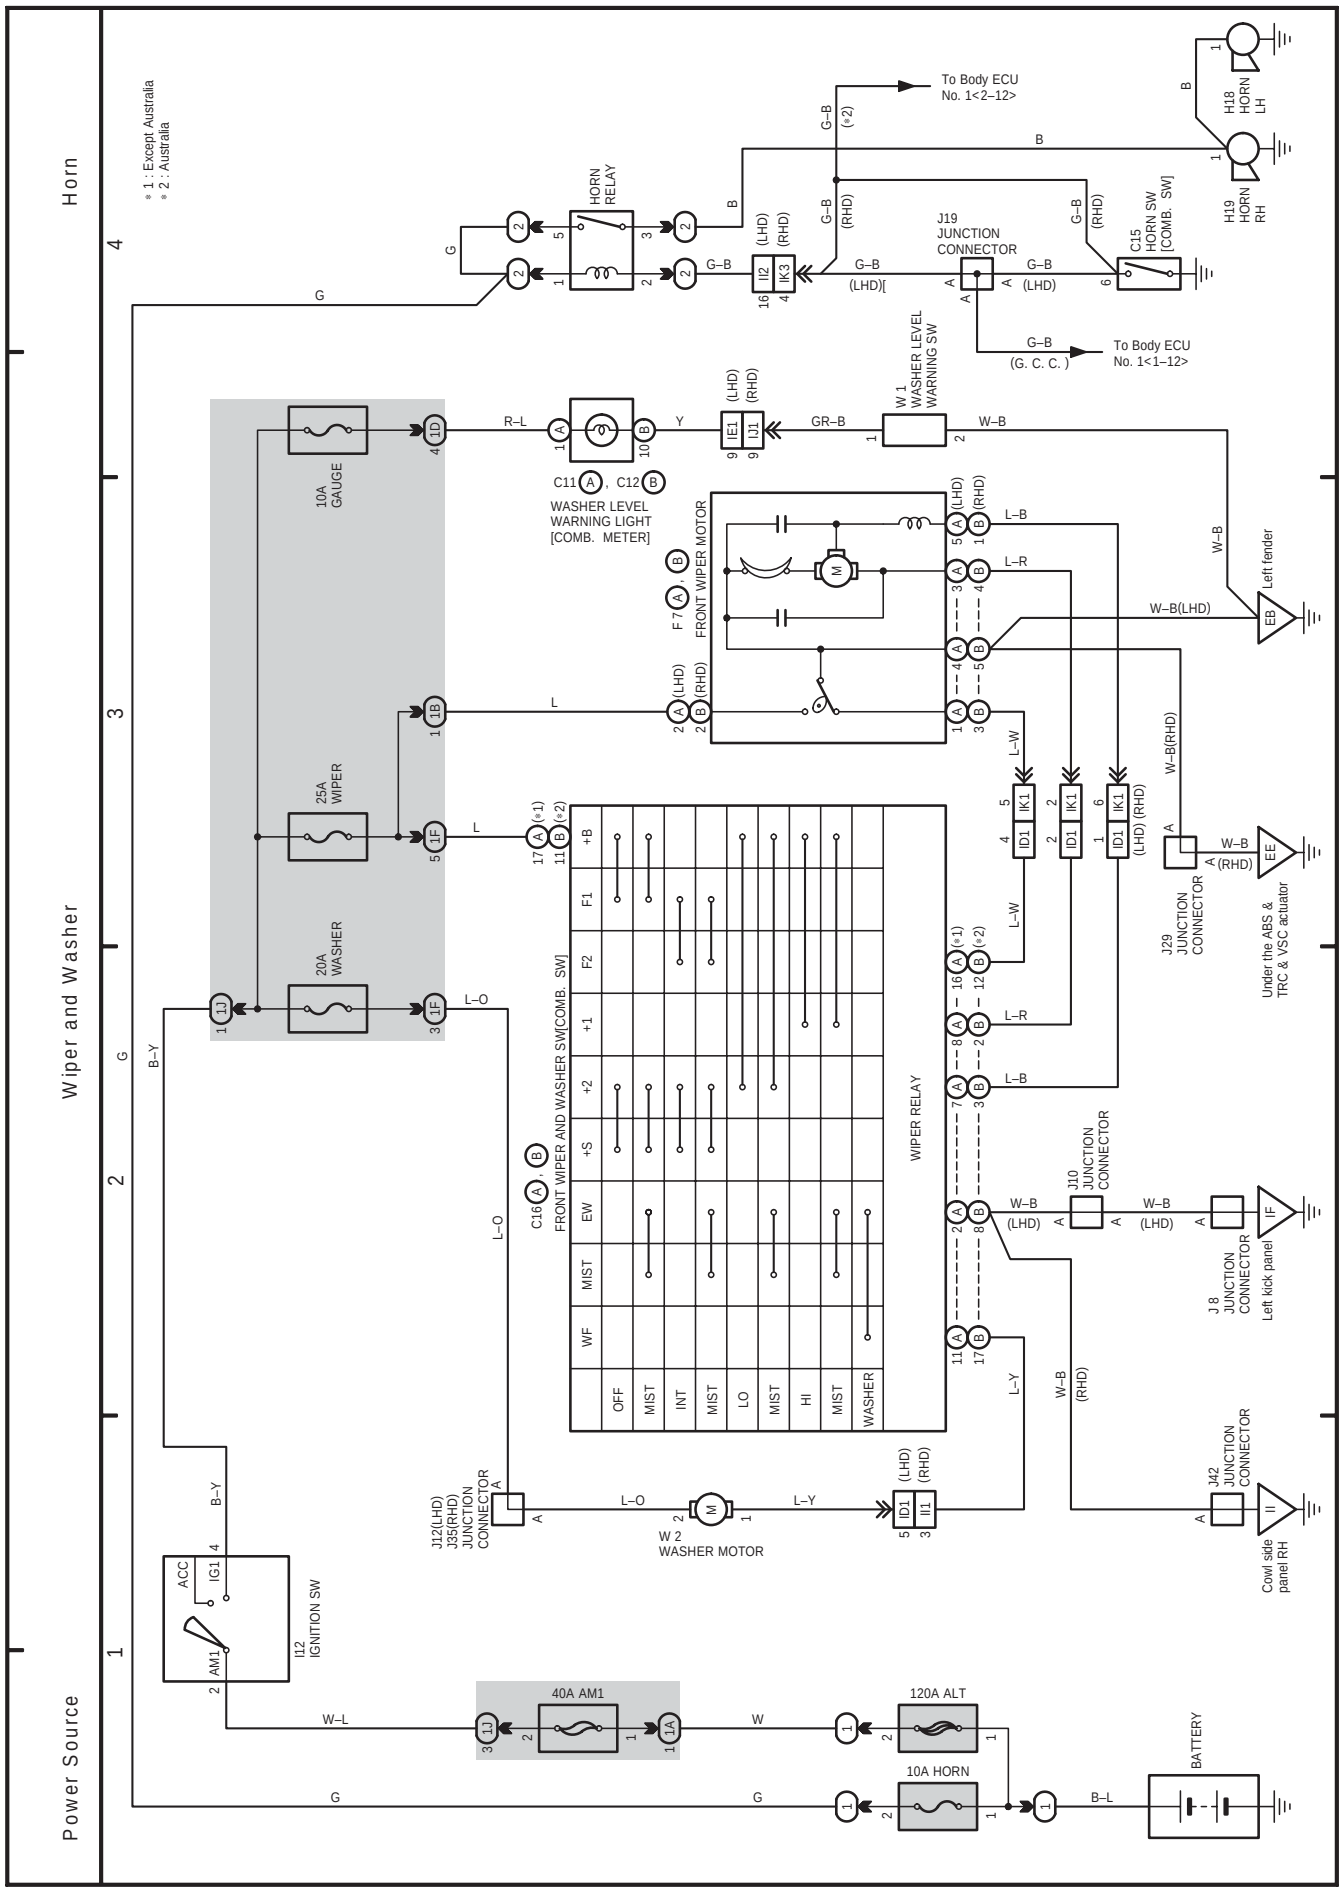
Horn
Wiper and Washer
Power Source
* 1 : Except Australia
* 2 : Australia
HORN RELAY
To Body ECU No. 1<2–12>
H18 HORN LH
H19 HORN RH
J19 JUNCTION CONNECTOR
C15 HORN SW [COMB. SW]
To Body ECU No. 1<1–12>
(G. C. C.)
W 1 WASHER LEVEL WARNING SW
C11, C12
WASHER LEVEL WARNING LIGHT [COMB. METER]
10A GAUGE
25A WIPER
20A WASHER
FRONT WIPER MOTOR
F 7
Left fender
EB
J29 JUNCTION CONNECTOR
Under the ABS & TRC & VSC actuator
EE
C16
FRONT WIPER AND WASHER SW[COMB. SW]
WIPER RELAY
J10 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
Left kick panel
IF
J42 JUNCTION CONNECTOR
Cowl side panel RH
II
J12(LHD) J35(RHD) JUNCTION CONNECTOR
W 2 WASHER MOTOR
I12 IGNITION SW
ACC
IG1
AM1
40A AM1
120A ALT
10A HORN
BATTERY