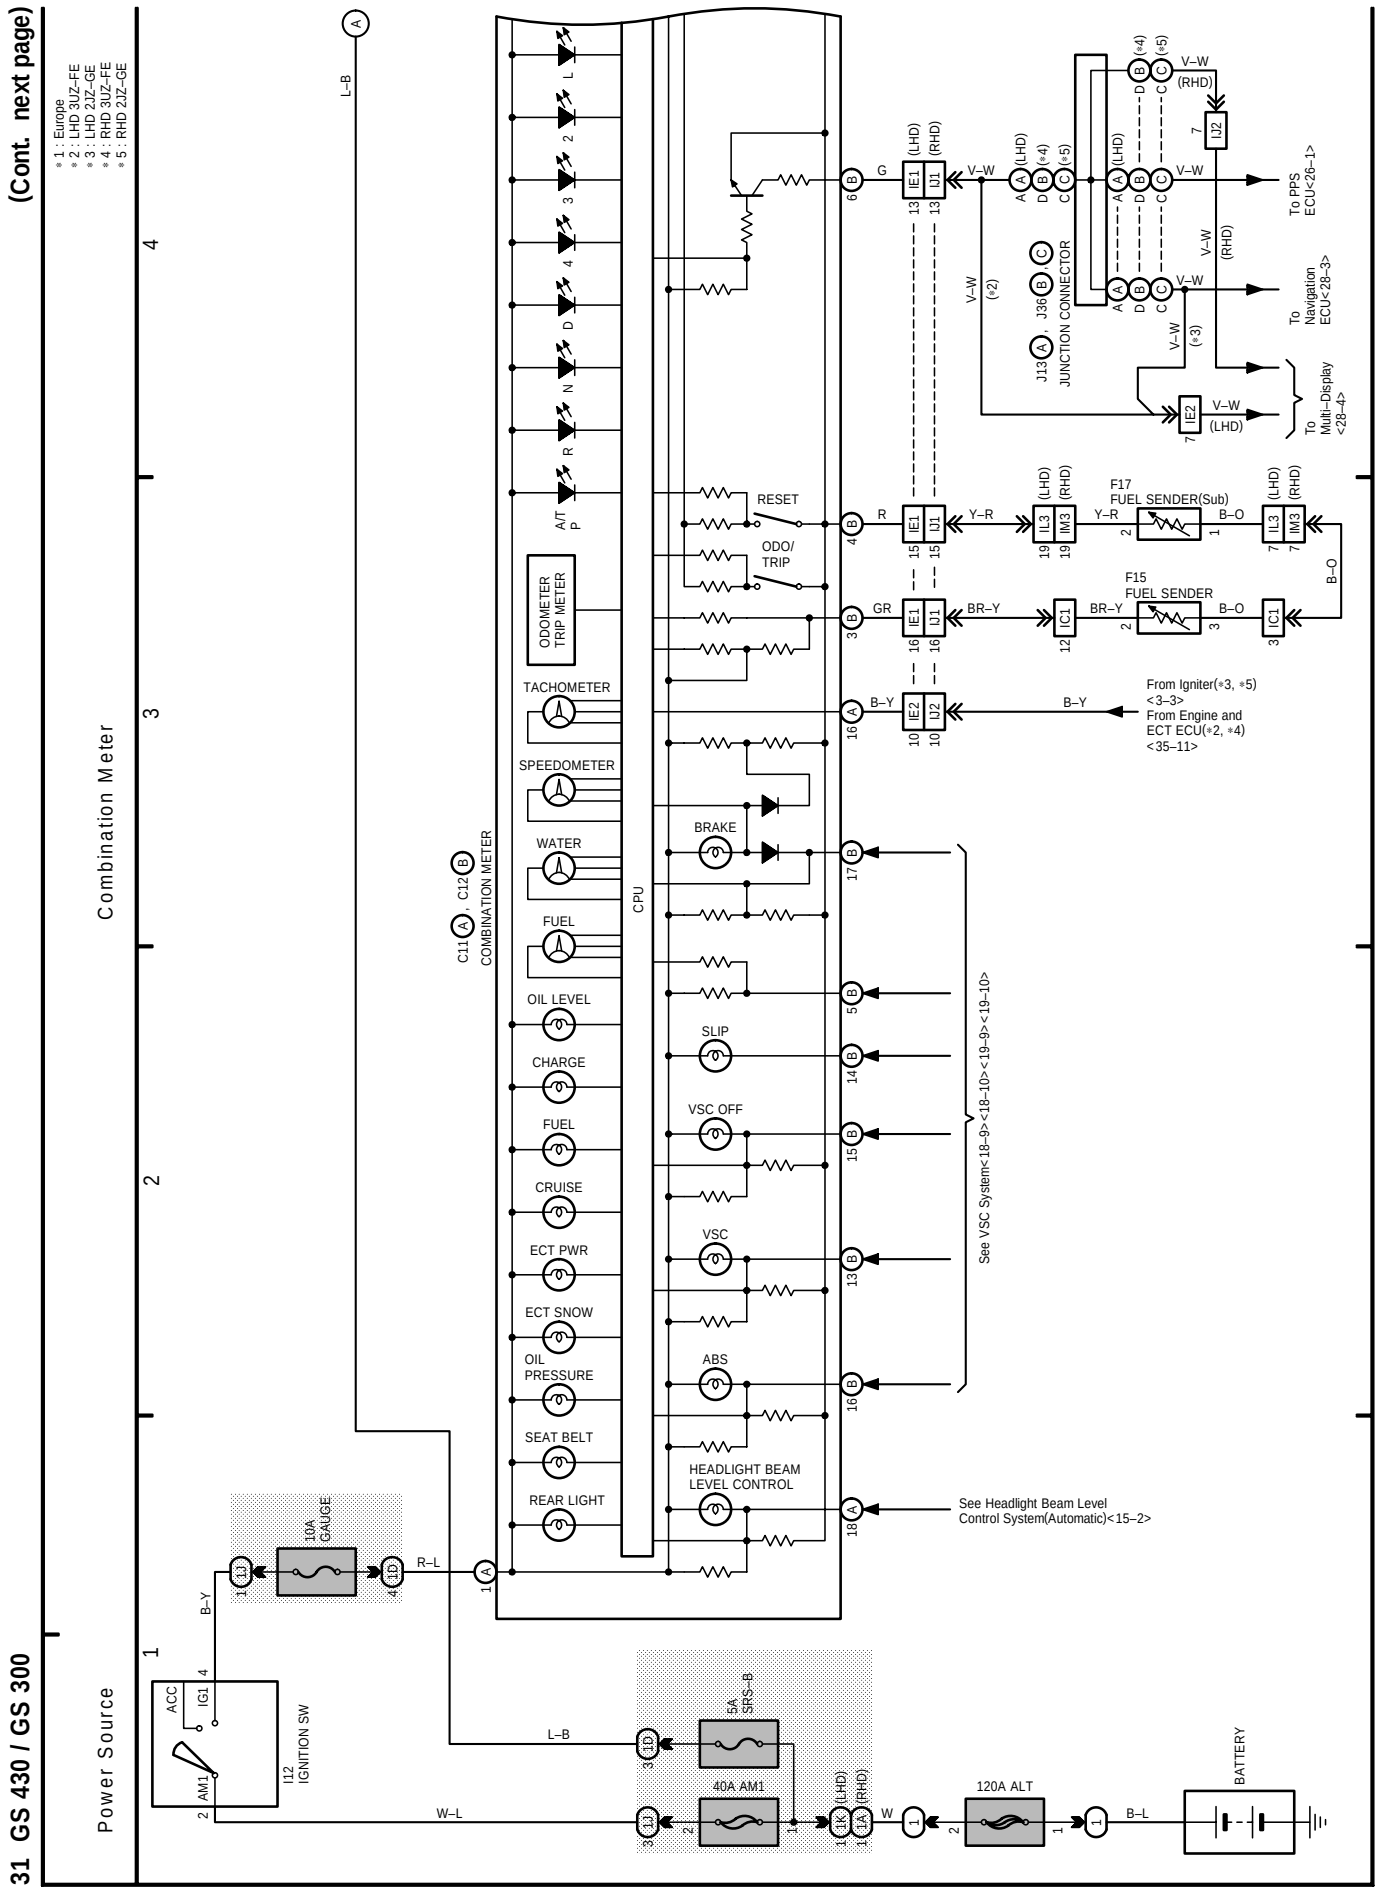
(Cont. next page)
* 1 : Europe
* 2 : LHD 3UZ–FE
* 3 : LHD 2JZ–GE
* 4 : RHD 3UZ–FE
* 5 : RHD 2JZ–GE
Combination Meter
Power Source
31 GS 430 / GS 300
COMBINATION METER
CPU
ODOMETER TRIP METER
TACHOMETER
SPEEDOMETER
WATER
FUEL
OIL LEVEL
CHARGE
FUEL
CRUISE
ECT PWR
ECT SNOW
OIL PRESSURE
SEAT BELT
REAR LIGHT
A/T P
RESET
ODO/ TRIP
BRAKE
SLIP
VSC OFF
VSC
ABS
HEADLIGHT BEAM LEVEL CONTROL
See VSC System<18–9><18–10><19–9><19–10>
See Headlight Beam Level Control System(Automatic)<15–2>
F17 FUEL SENDER(Sub)
F15 FUEL SENDER
From Igniter(*3, *5) <3–3>
From Engine and ECT ECU(*2, *4) <35–11>
JUNCTION CONNECTOR
To PPS ECU<26–1>
To Navigation ECU<28–3>
To Multi–Display <28–4>
10A GAUGE
IGNITION SW
5A SRS–B
40A AM1
120A ALT
BATTERY
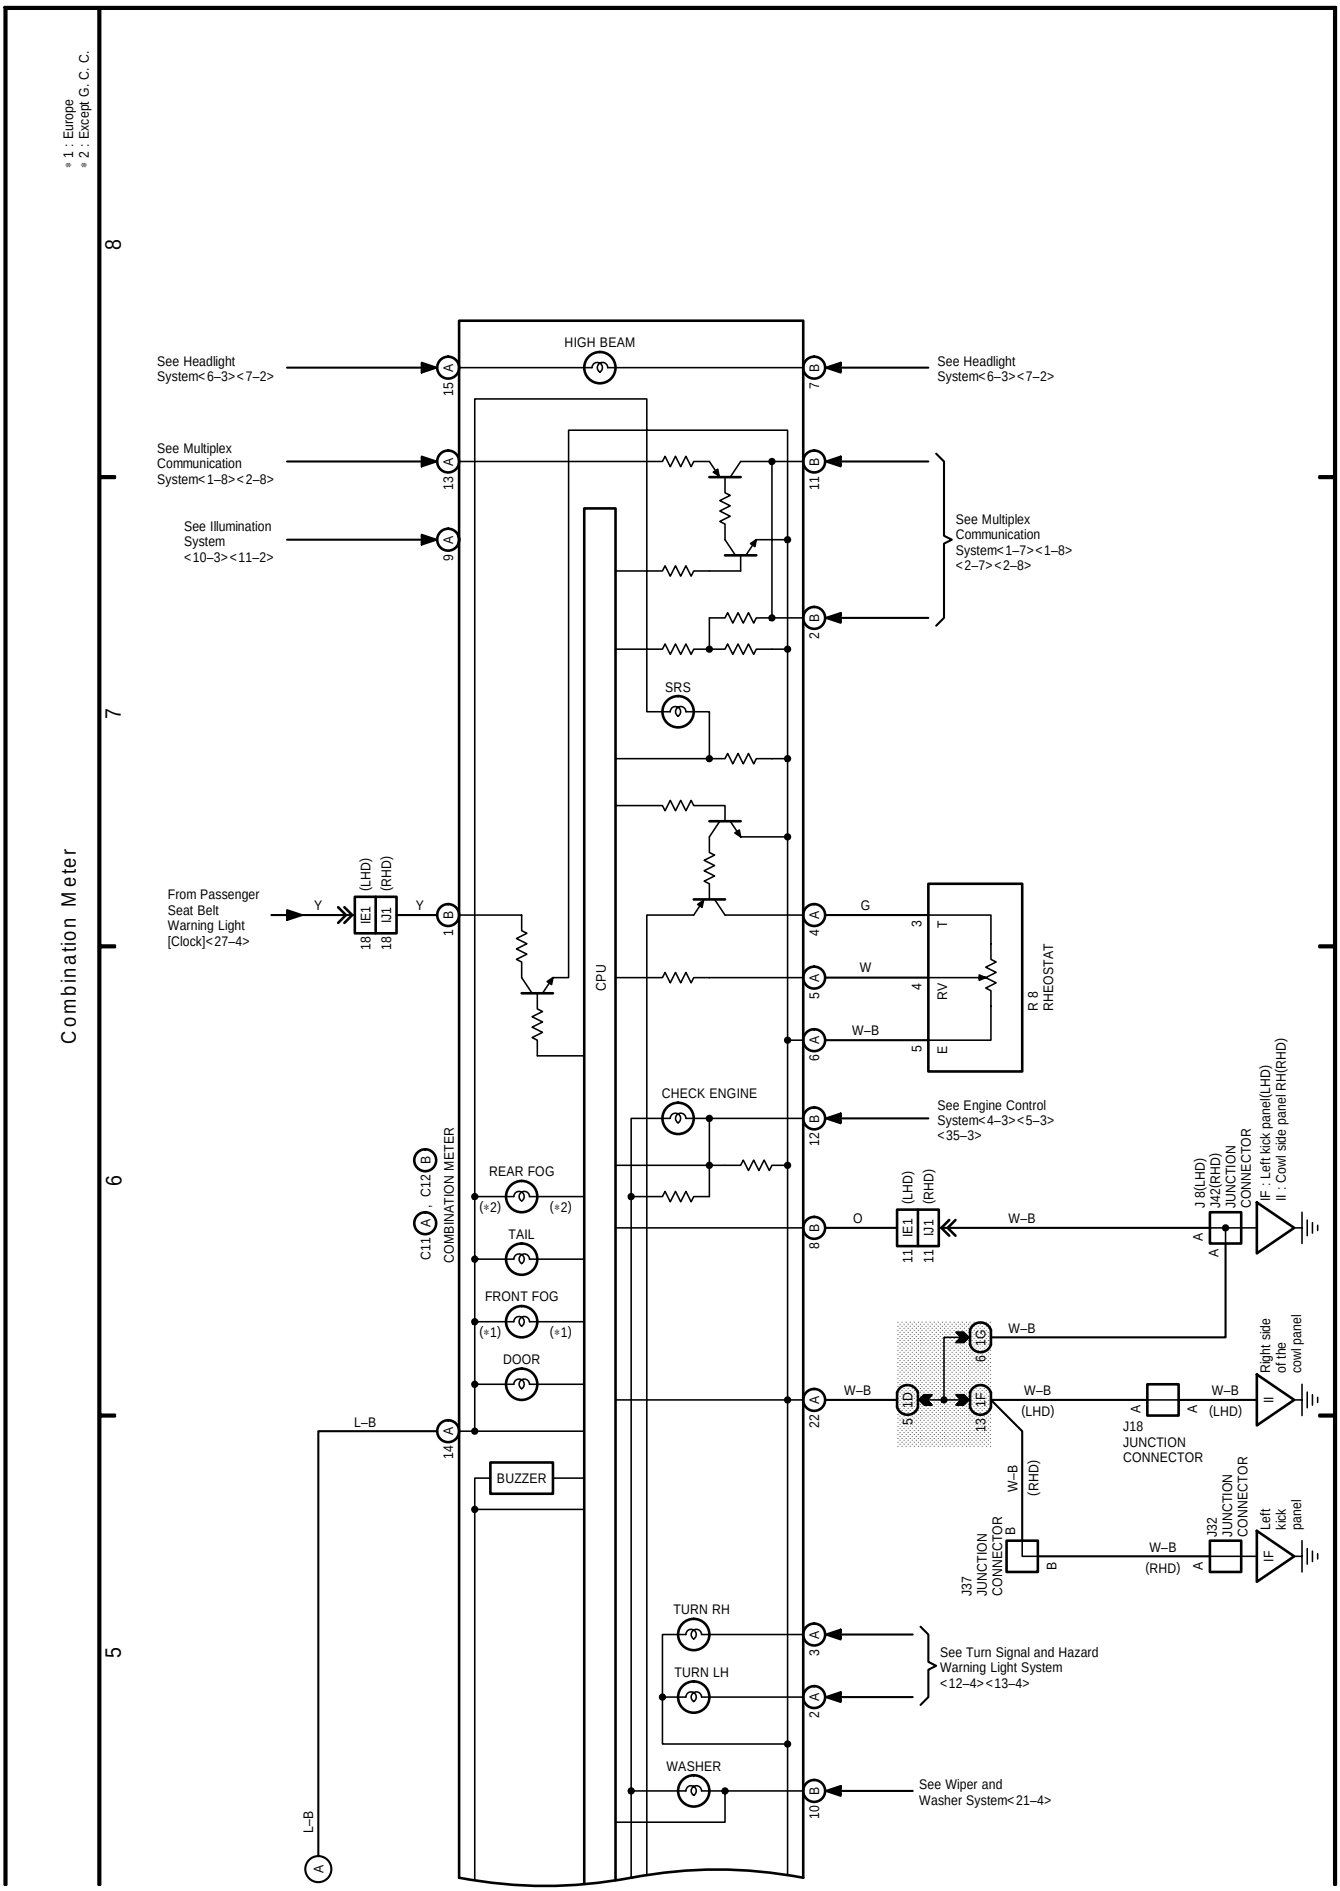
31 GS 430 / GS 300 (Cont' d)