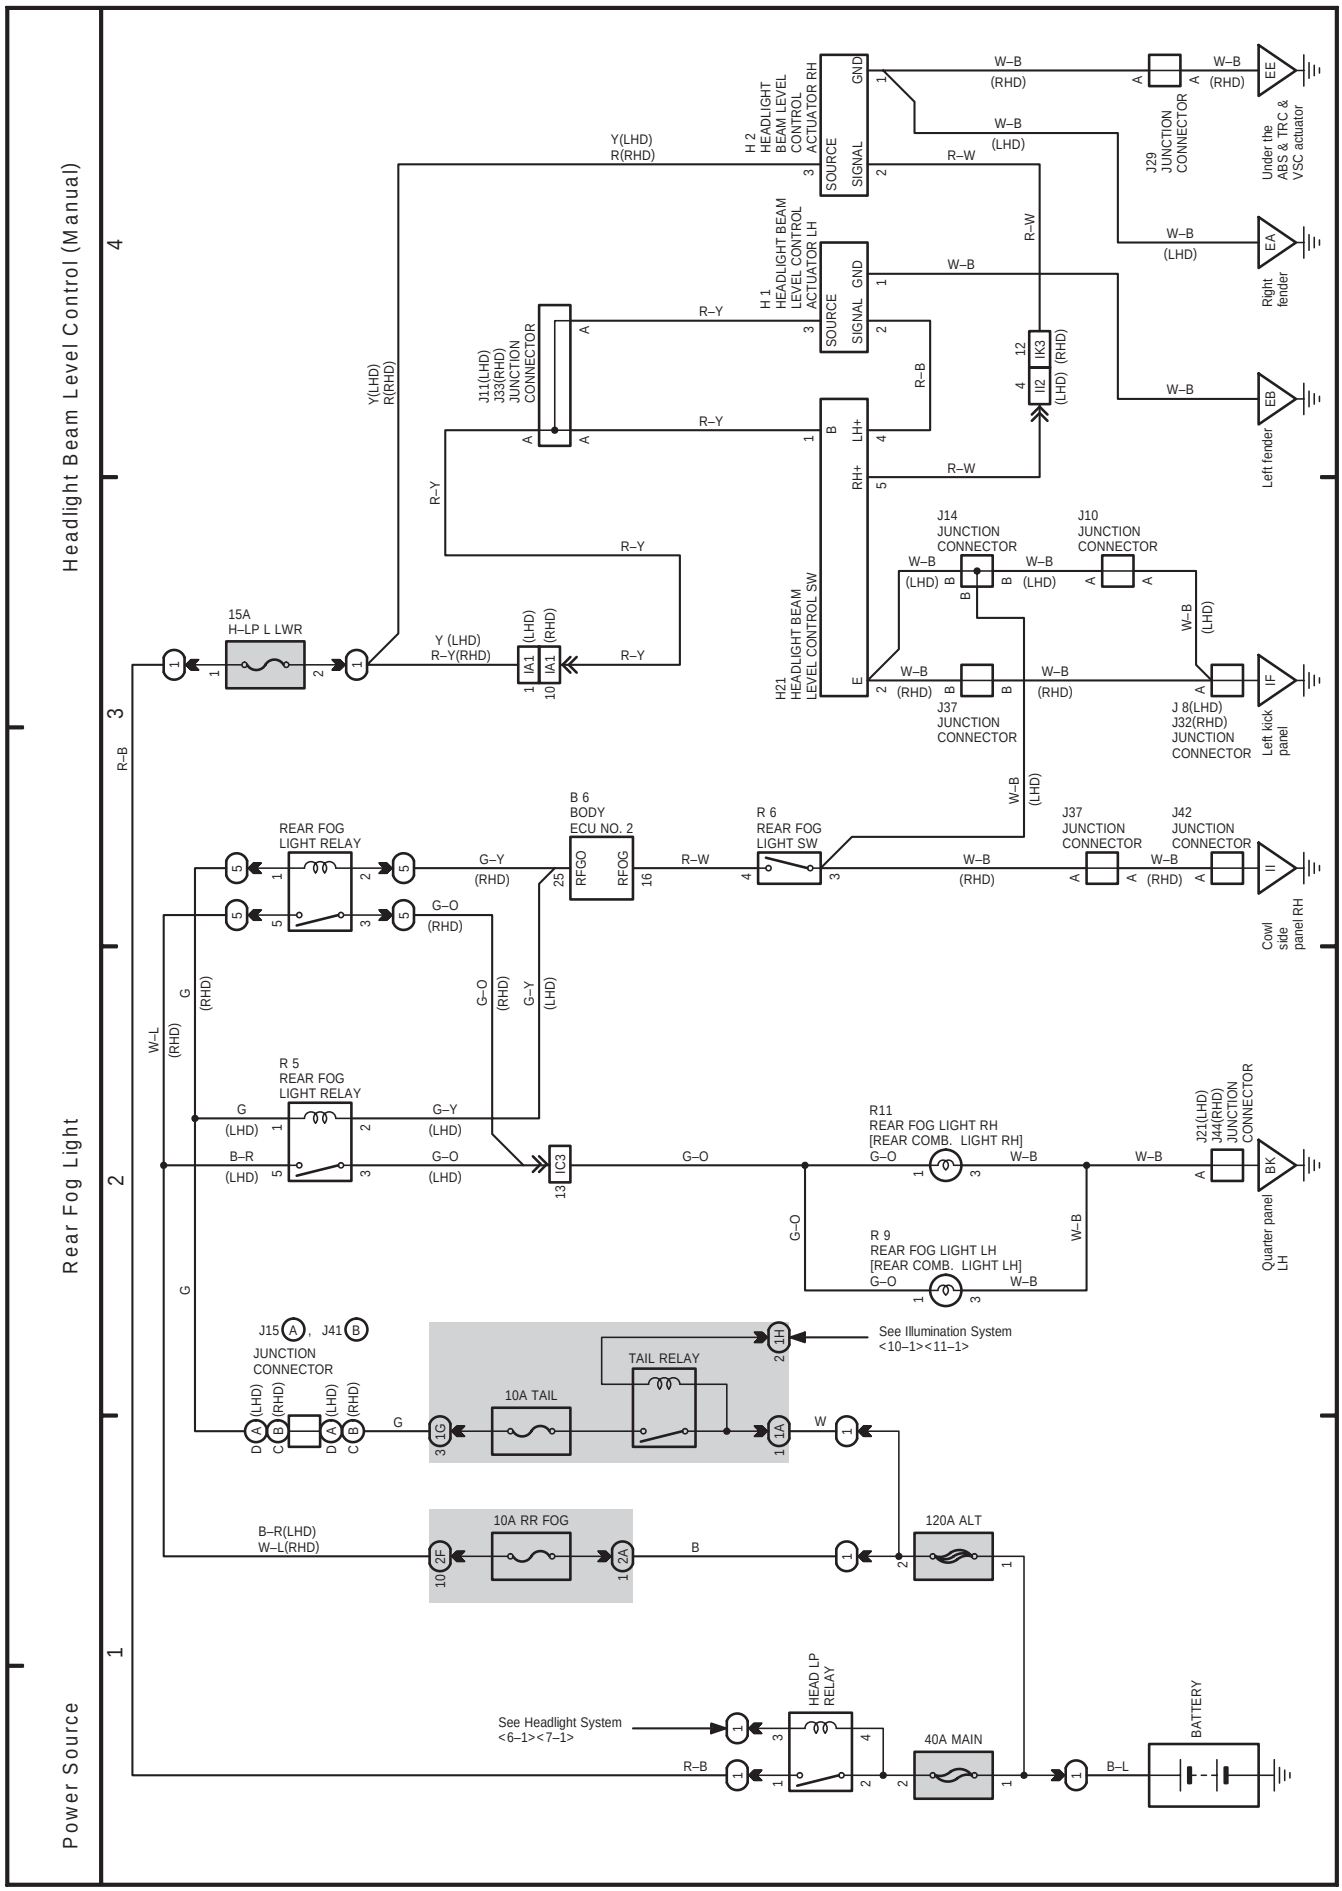
Headlight Beam Level Control (Manual)
Rear Fog Light
Power Source
H 2 HEADLIGHT BEAM LEVEL CONTROL ACTUATOR RH
H 1 HEADLIGHT BEAM LEVEL CONTROL ACTUATOR LH
H21 HEADLIGHT BEAM LEVEL CONTROL SW
J29 JUNCTION CONNECTOR
Under the ABS & TRC & VSC actuator
Right fender
Left fender
J11(LHD) J33(RHD) JUNCTION CONNECTOR
J14 JUNCTION CONNECTOR
J10 JUNCTION CONNECTOR
J37 JUNCTION CONNECTOR
J 8(LHD) J32(RHD) JUNCTION CONNECTOR
Left kick panel
15A H–LP L LWR
B 6 BODY ECU NO. 2
R 6 REAR FOG LIGHT SW
J42 JUNCTION CONNECTOR
Cowl side panel RH
REAR FOG LIGHT RELAY
R 5 REAR FOG LIGHT RELAY
R11 REAR FOG LIGHT RH [REAR COMB. LIGHT RH]
R 9 REAR FOG LIGHT LH [REAR COMB. LIGHT LH]
J21(LHD) J44(RHD) JUNCTION CONNECTOR
Quarter panel LH
J15 A, J41 B JUNCTION CONNECTOR
See Illumination System <10–1><11–1>
TAIL RELAY
10A TAIL
10A RR FOG
120A ALT
HEAD LP RELAY
See Headlight System <6–1><7–1>
40A MAIN
BATTERY