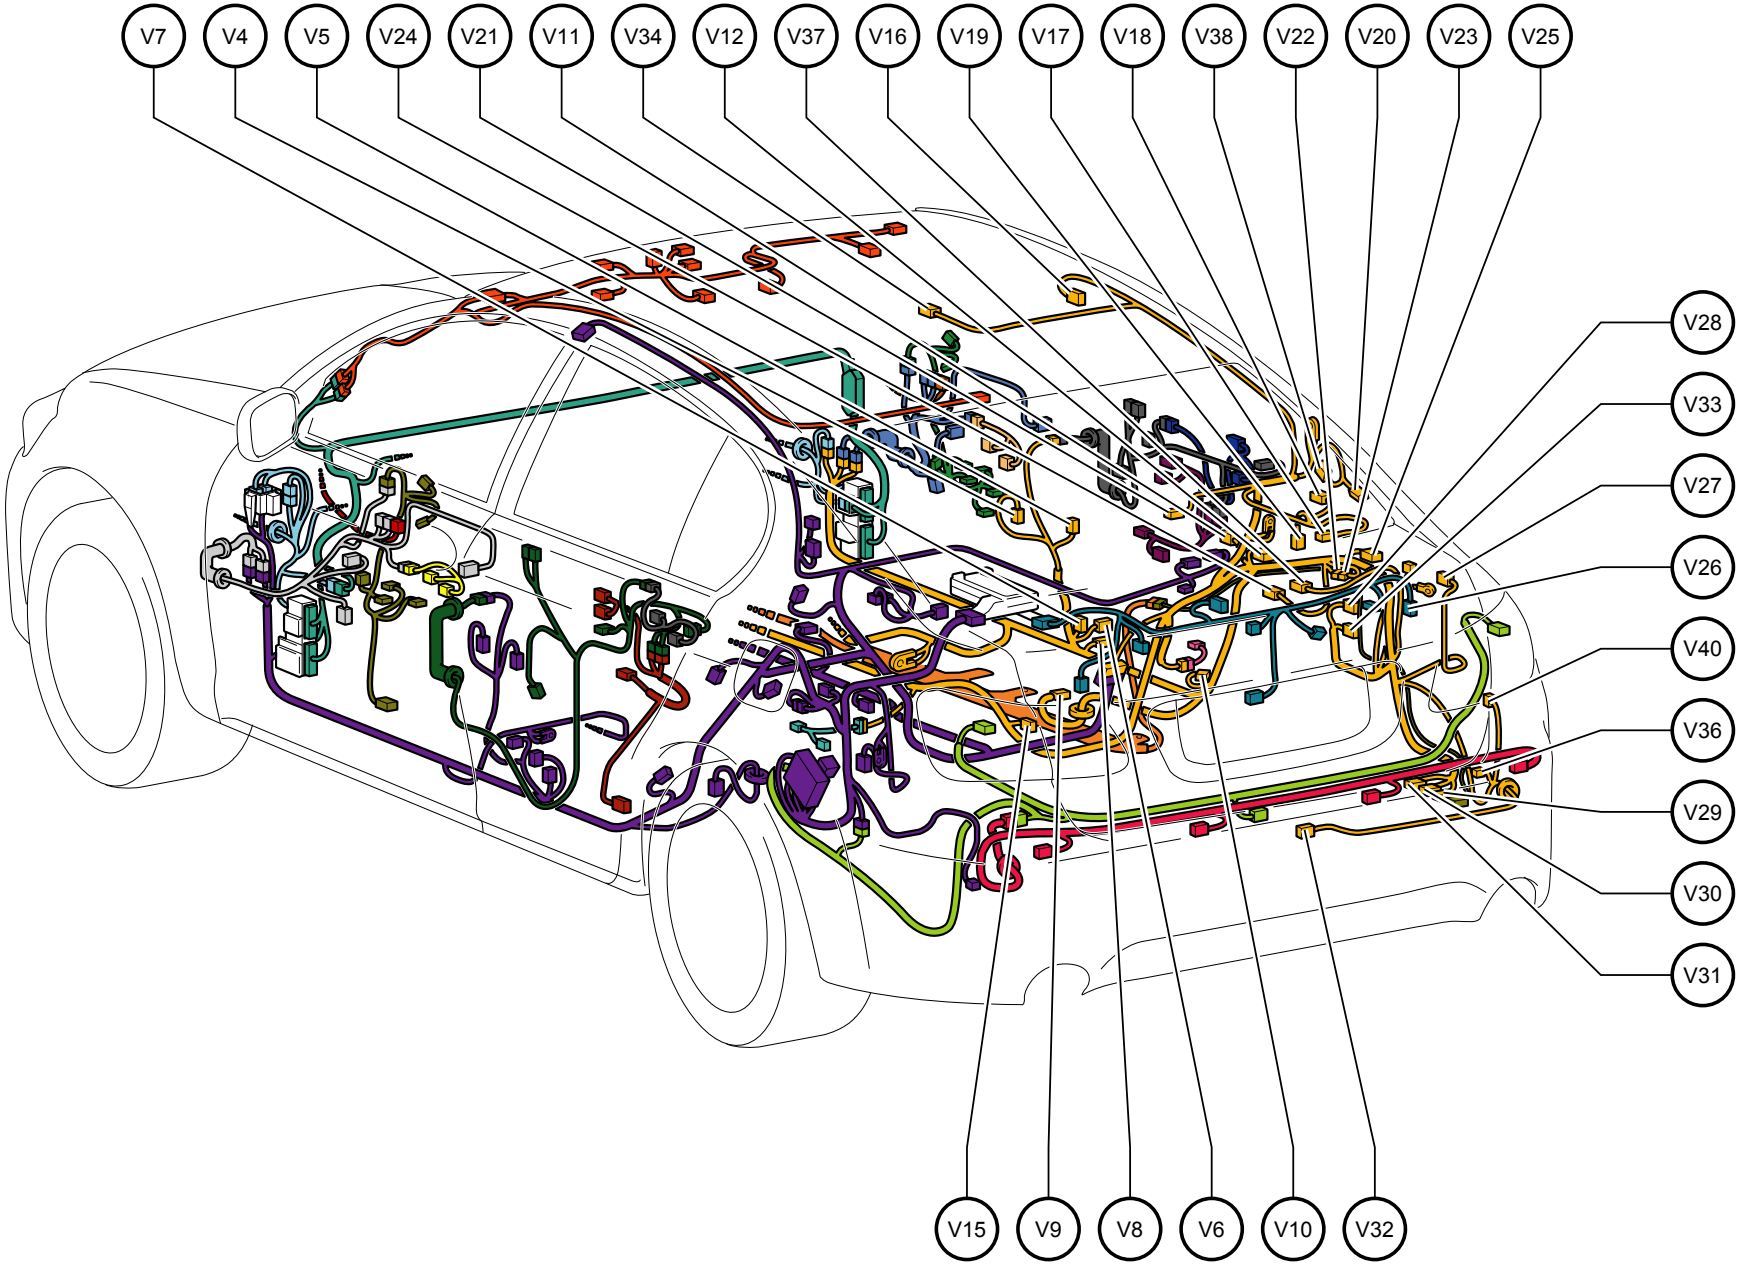
V7
V4
V5
V24
V21
V11
V34
V12
V37
V16
V19
V17
V18
V38
V22
V20
V23
V25
V28
V33
V27
V26
V40
V36
V29
V30
V31
V15
V9
V8
V6
V10
V32

V	4	Door Courtesy SW (Front RH)
V	5	Side Airbag Sensor (RH)
V	6	Front Seat Outer Belt (RH)
V	7	Pretensioner (Front RH)
V	8	Front Seat Outer Belt Motor (RH)
V	9	Fuel Sender Gage
V	10	Airbag Sensor (Rear RH)
V	11	Door Courtesy SW (Rear RH)
V	12	Side Airbag Squib (Rear RH)
V	15	Rear Seat Inner Belt (RH)
V	16	Curtain Shield Airbag Squib (RH)
V	17	Speaker (Rear RH)
V	18	Pretensioner (Rear RH)
V	19	Rear Seat Outer Belt (RH)
V	20	Rear Window Defogger
V	21	Speaker (Woofer)
V	22	Junction Connector
V	23	Junction Connector
V	24	Absorber Control Actuator (Rear RH)
V	25	Junction Connector
V	26	Acceleration Sensor (Rear)
V	27	Brake Control Power Supply Assembly
V	28	Certification ECU
V	29	Stereo Component Amplifier
V	30	Stereo Component Amplifier
V	31	Stereo Component Amplifier
V	32	Electrical Key Oscillator (Outside Luggage Room)
V	33	Certification ECU
V	34	Tire Pressure Warning Antenna and Receiver
V	36	Door Control Receiver
V	37	Theft Warning Siren
V	38	Electrical Key Antenna (Glass)
V	40	Room Lamp (Luggage)

V 4
White

V 5
Yellow

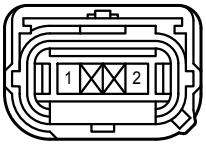

V 6
White



V 7
Yellow

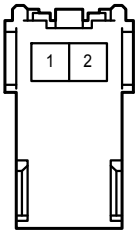

V 8
White



V 9
White

V 10
Yellow

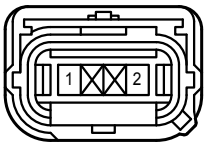

V 11
White

V 12
Yellow

V 15
White

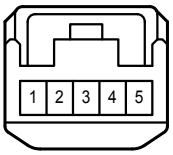

V 16
Black



V 17
White



V 18
Yellow

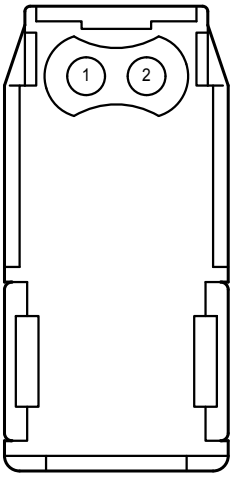

V 19
White



V 20
Black

V 21
White

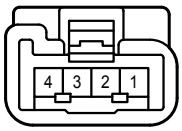

V 22
White

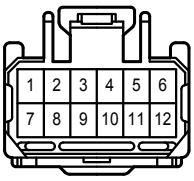

V 23
White

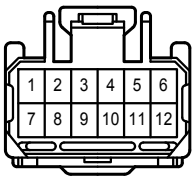

V 24
Black

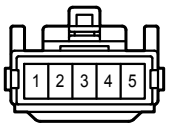

V 25
Orange

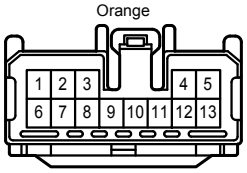

V 26
Black

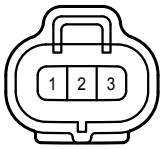

V 27
White

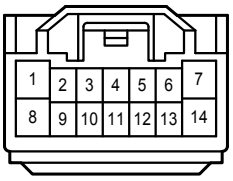

V 28
White

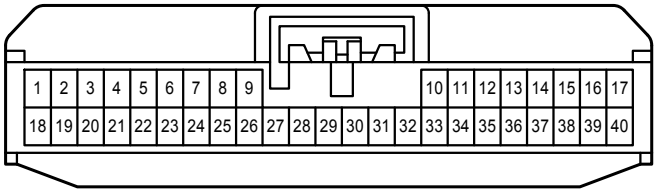

V 29
White

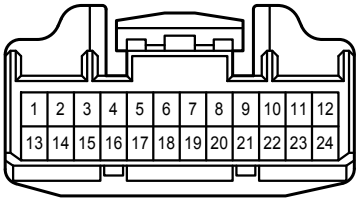

V 30
White

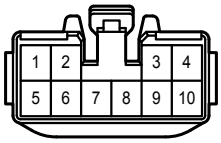

V 31
White

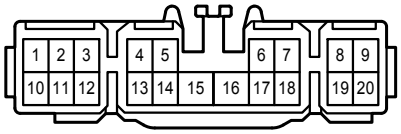

V 32
White



V 33
White

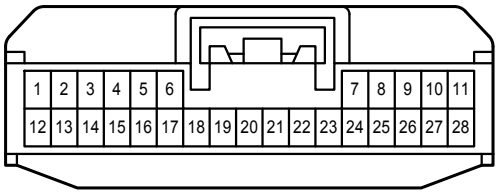

V 34
White

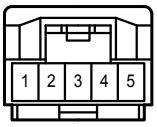

V 36
White

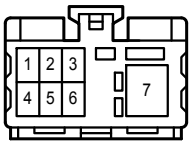

V 37
Black

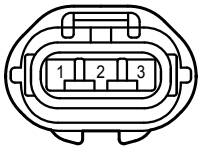

V 38
Gray



V 40
Gray