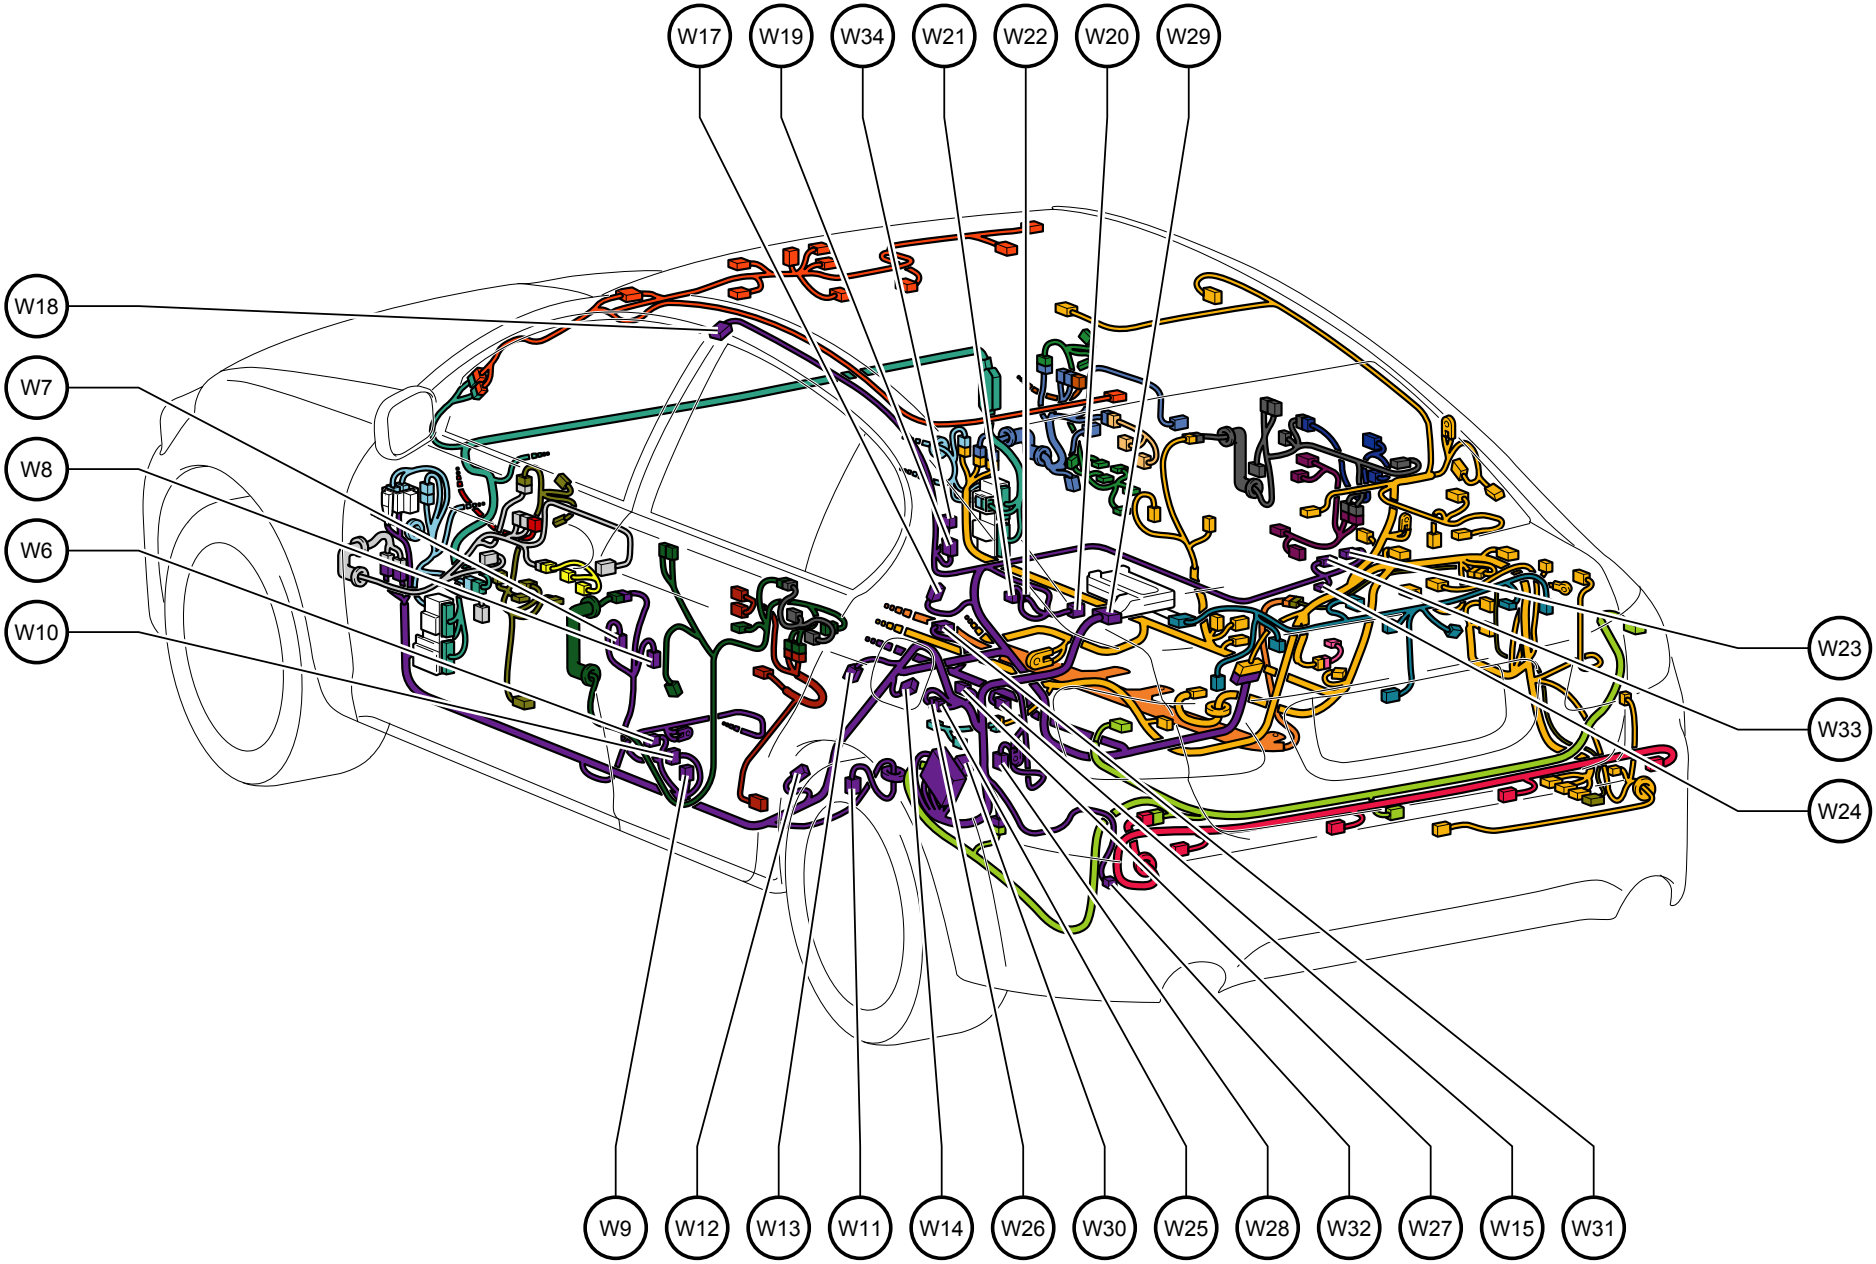
W17
W19
W34
W21
W22
W20
W29
W18
W7
W8
W6
W10
W23
W33
W24
W9
W12
W13
W11
W14
W26
W30
W25
W28
W32
W27
W15
W31

W 6 Front Seat Outer Belt Motor (LH)
W 7 Door Courtesy SW (Front LH)
W 8 Side Airbag Sensor (LH)
W 9 Pretensioner (Front LH)
W 10 Front Seat Outer Belt (LH)
W 11 Fuel Suction Pump and Gage Assembly
W 12 Airbag Sensor (Rear LH)
W 13 Door Courtesy SW (Rear LH)
W 14 Side Airbag Squib (Rear LH)
W 15 Rear Seat Inner Belt (LH)
W 17 Noise Filter (Center Stop Lamp)
W 18 Curtain Shield Airbag Squib (LH)
W 19 Rear Window Defogger
W 20 Speaker (Rear LH)
W 21 Rear Seat Outer Belt (LH)
W 22 Pretensioner (Rear LH)
W 23 Center Stop Lamp
W 24 Rear Sunshade Relay
W 25 Junction Connector
W 26 Junction Connector
W 27 Absorber Control Actuator (Rear LH)
W 28 Fuel Lid Opener Motor
W 29 Wiring Harness Spool
W 30 Seat Belt Control ECU
W 31 Electrical Key Oscillator (Rear Seat)
W 32 Electrical Key Oscillator (Inside Luggage Room)
W 33 Sun Beam Sensor
W 34 Junction Connector

W 6
White



W 7
White

W 8
Yellow

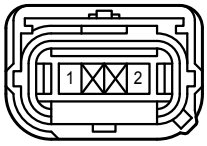

W 9
Yellow

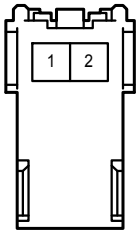

W 10
White



W 11
White

W 12
Yellow

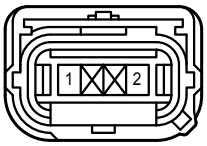

W 13
White

W 14
Yellow

W 15
White

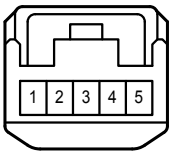

W 17
Gray

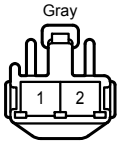

W 18
Black



W 19
White

W 20
White



W 21
White



W 22
Yellow

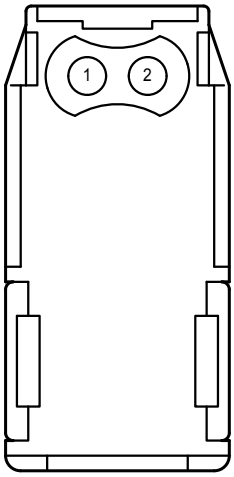

W 23
White

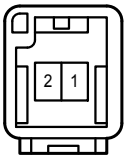

W 24
Black

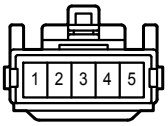

W 25
Gray

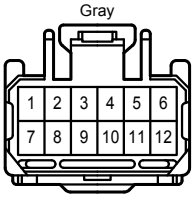

W 26
Gray

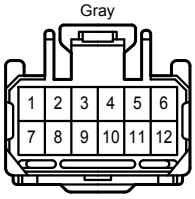

W 27
Black

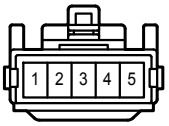

W 28
Black

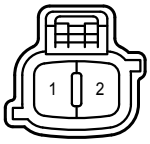

W 29
White

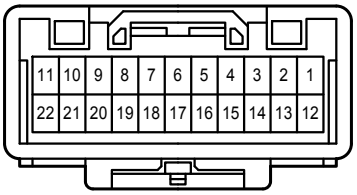

W 30
White

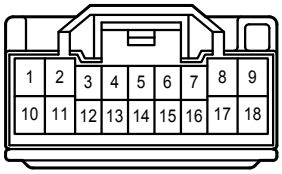

W 31
White

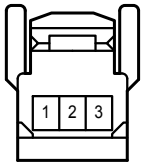

W 32
White

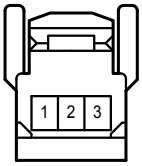

W 33
Gray

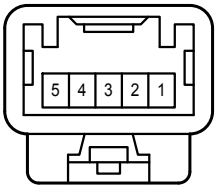

(LHD)
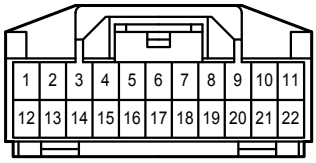
W 34
White