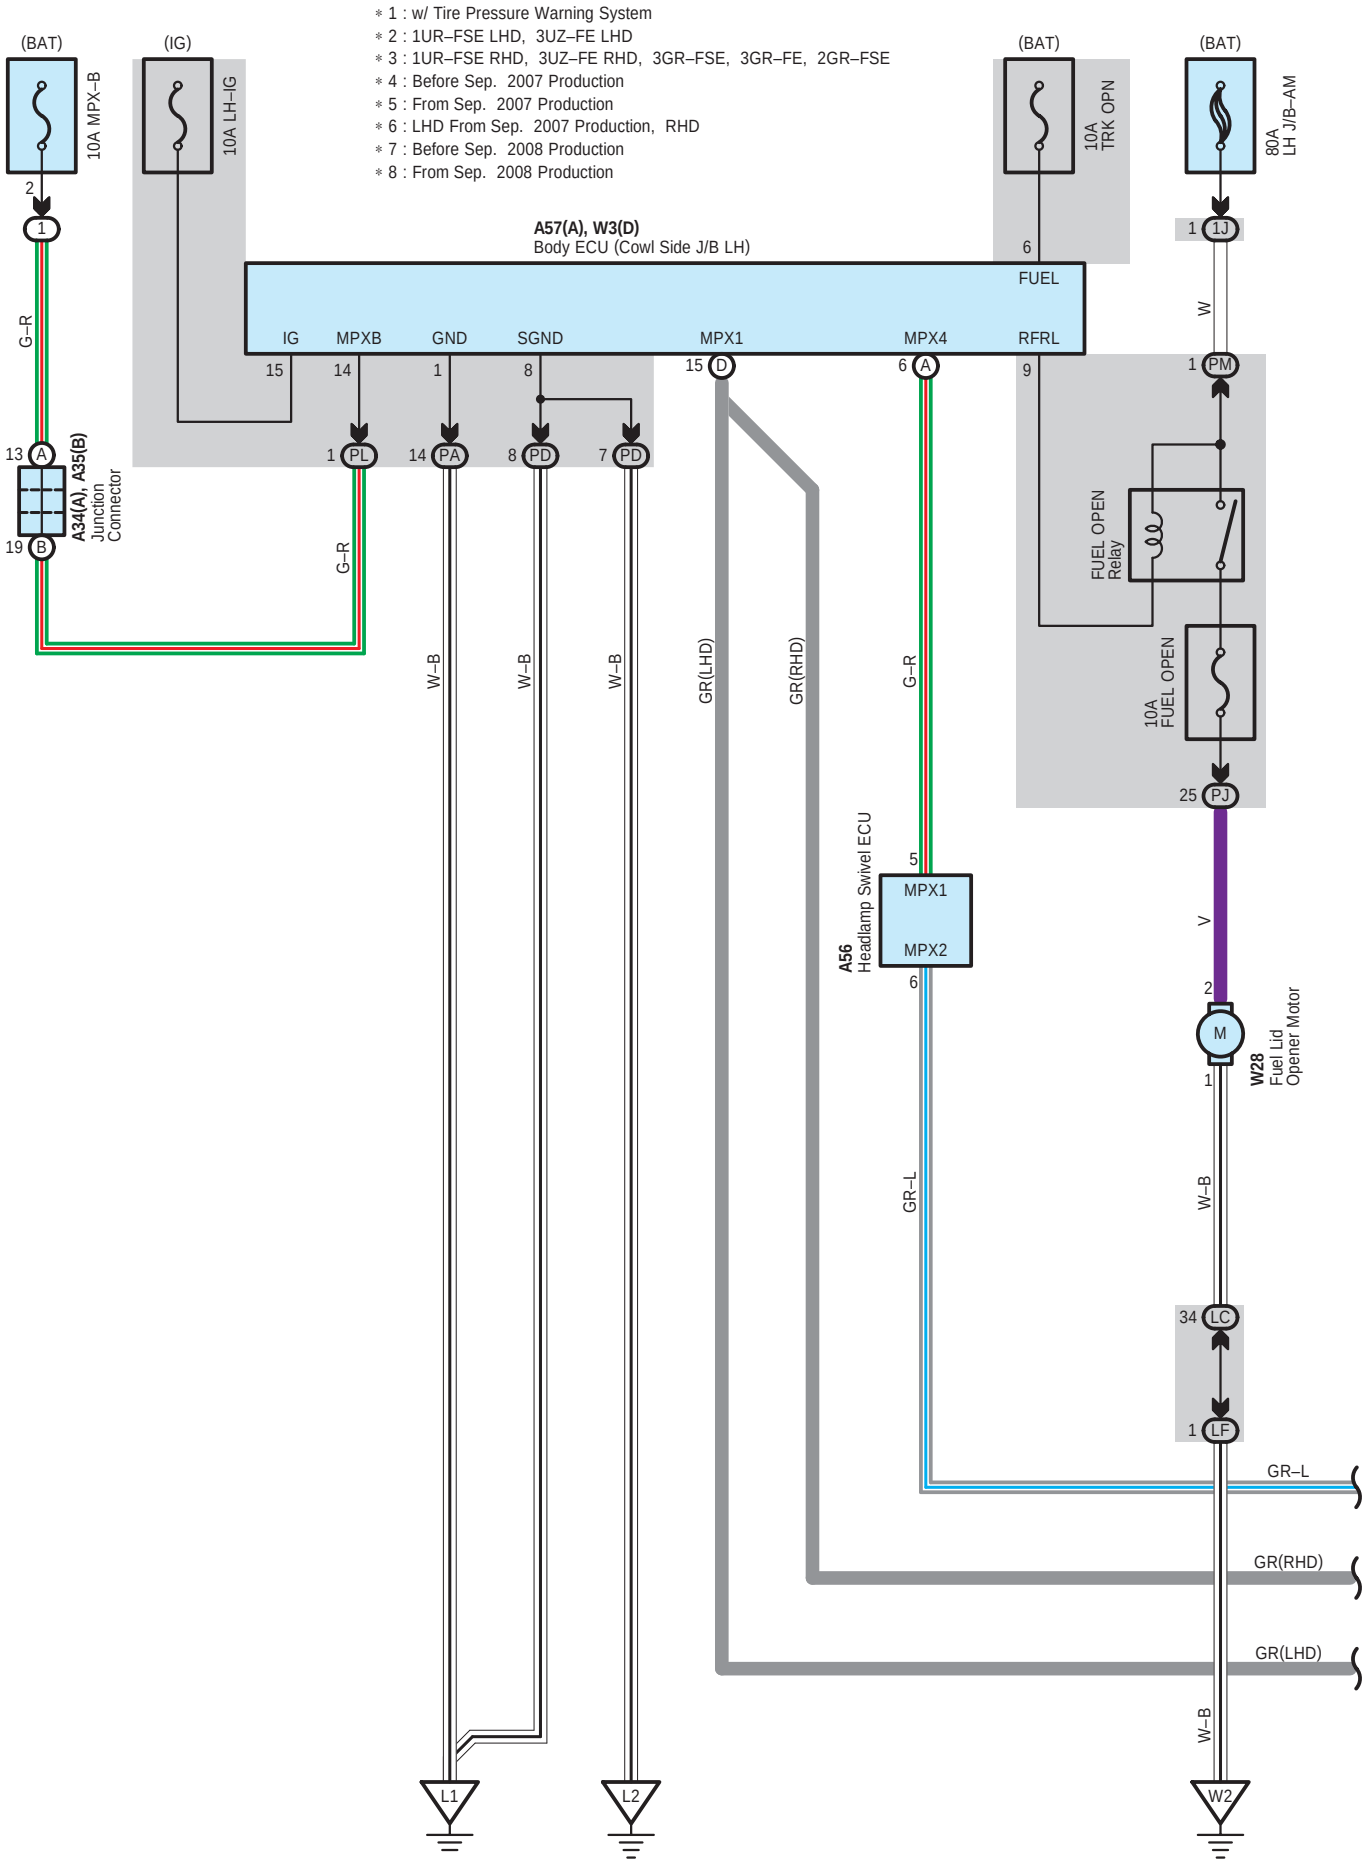
* 1 : w/ Tire Pressure Warning System
* 2 : 1UR–FSE LHD, 3UZ–FE LHD
* 3 : 1UR–FSE RHD, 3UZ–FE RHD, 3GR–FSE, 3GR–FE, 2GR–FSE
* 4 : Before Sep. 2007 Production
* 5 : From Sep. 2007 Production
* 6 : LHD From Sep. 2007 Production, RHD
* 7 : Before Sep. 2008 Production
* 8 : From Sep. 2008 Production
(BAT)
10A MPX–B
(IG)
10A LH–IG
(BAT)
10A TRK OPN
(BAT)
80A LH J/B–AM
A57(A), W3(D)
Body ECU (Cowl Side J/B LH)
IG
MPXB
GND
SGND
MPX1
MPX4
RFRL
FUEL
G–R
W
A34(A), A35(B)
Junction Connector
FUEL OPEN Relay
10A FUEL OPEN
W–B
GR(LHD)
GR(RHD)
A56
Headlamp Swivel ECU
MPX1
MPX2
V
W28
Fuel Lid Opener Motor
GR–L
L1
L2
W2

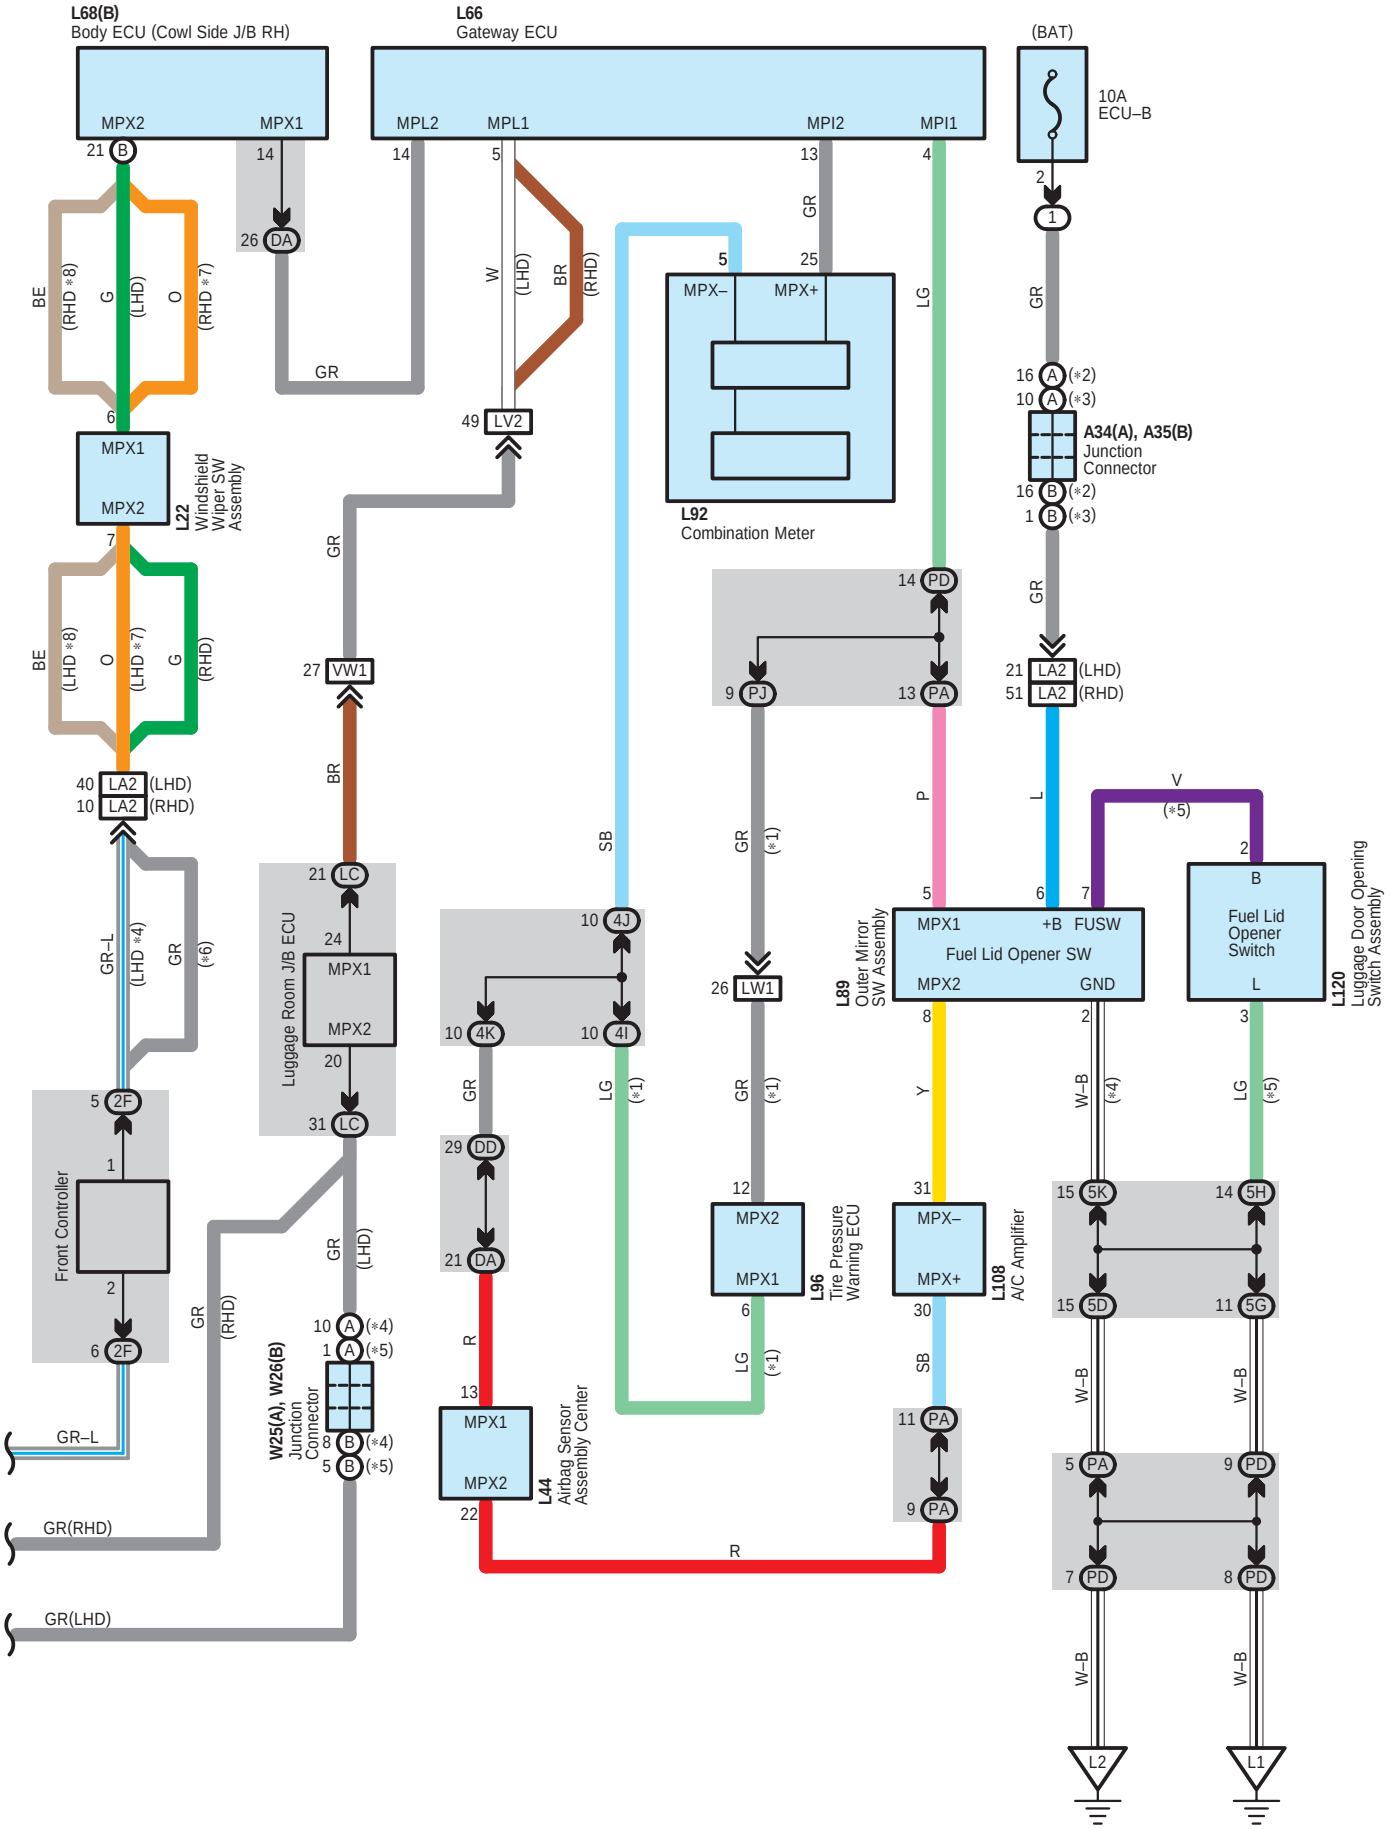
L68(B)
Body ECU (Cowl Side J/B RH)
MPX2
MPX1
L66
Gateway ECU
MPL2
MPL1
MPI2
MPI1
(BAT)
10A
ECU–B
L22
Windshield Wiper SW Assembly
L92
Combination Meter
MPX–
MPX+
A34(A), A35(B)
Junction Connector
Luggage Room J/B ECU
Front Controller
W25(A), W26(B)
Junction Connector
L44
Airbag Sensor Assembly Center
L96
Tire Pressure Warning ECU
L108
A/C Amplifier
L89
Outer Mirror SW Assembly
Fuel Lid Opener SW
+B
FUSW
GND
Fuel Lid Opener Switch
L120
Luggage Door Opening Switch Assembly
GR–L
GR(RHD)
GR(LHD)
L2
L1

A 34
Blue

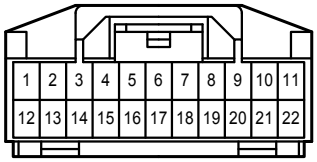

A 35
Blue

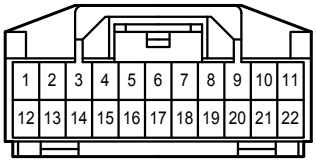

A 56
White

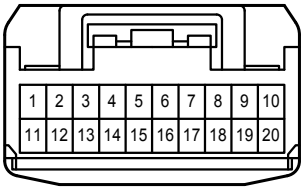

A 57
White

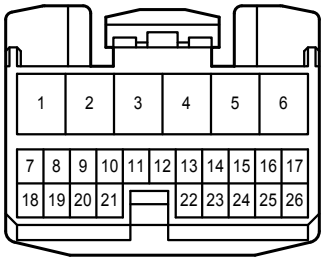

L 22
White

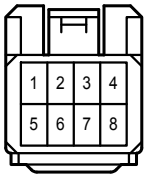

L 44
Yellow

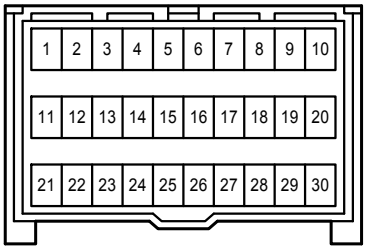

L 66
White

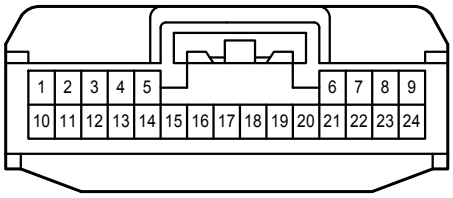

L 68
White

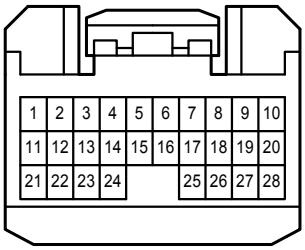

L 89
White

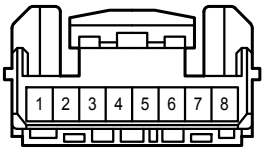

L 92
White

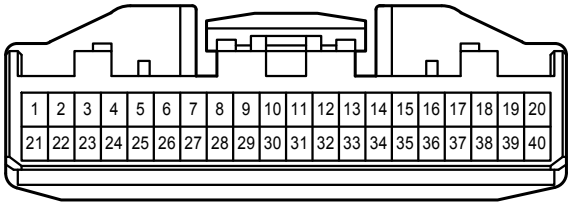

L 96
Black

L108
White

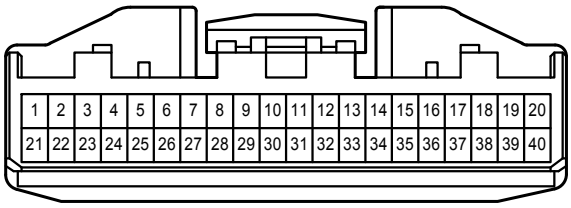

L120
Black

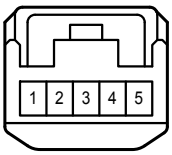

W 3
White

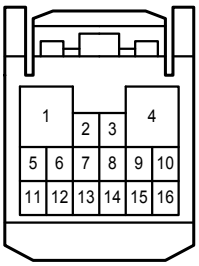

W 25
Gray

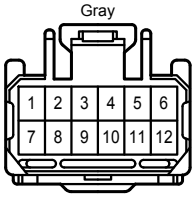

W 26
Gray

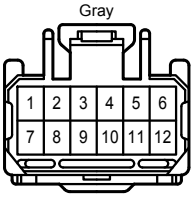

W 28
Black

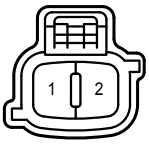

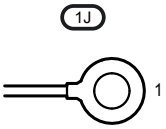

2F
Black

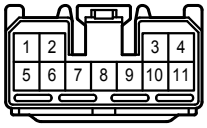

4I
White



4J
White



4K
White



5D
White



5G
White



5H
White



5K
White



DA
White

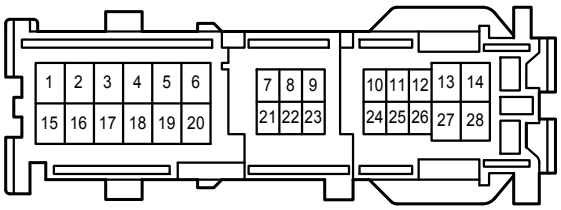

DD
White

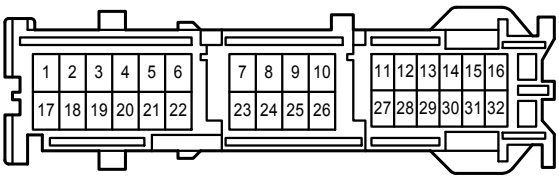

LC
White

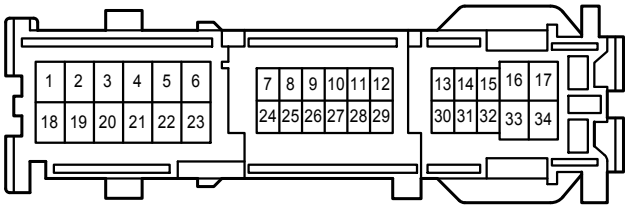

LF
White



PA
White

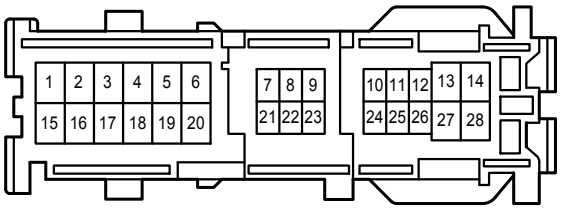

PD
White

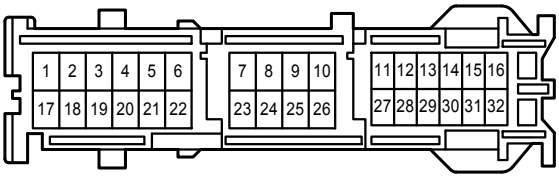

PJ
Gray

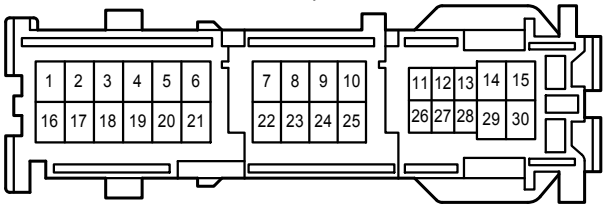

PL
Gray

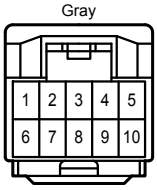

PM
White



LA2
White

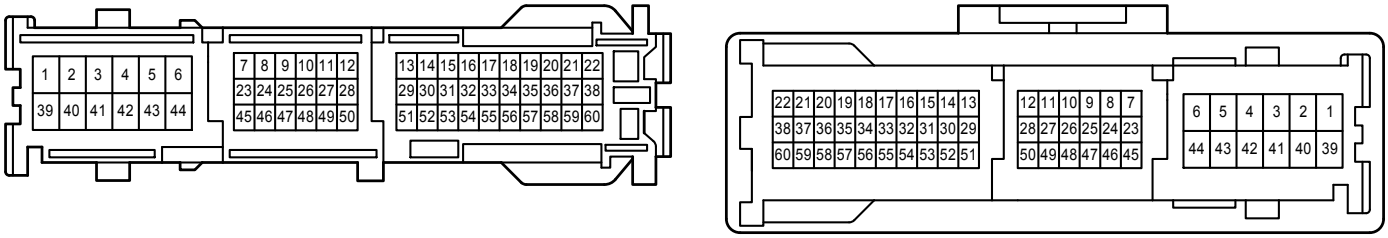

LV2
White

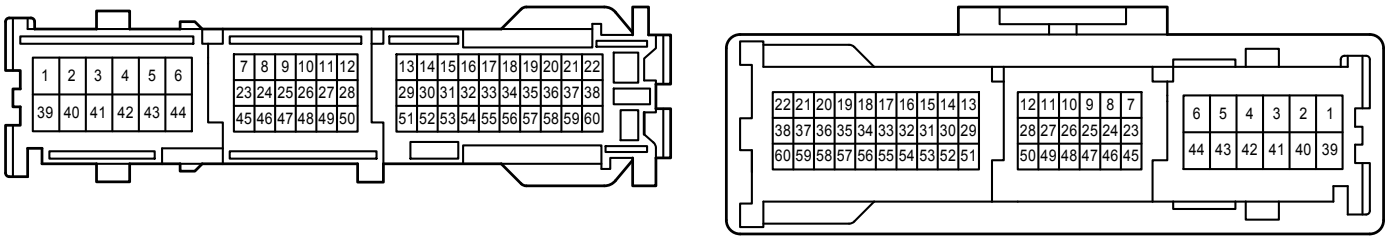

LW1
White

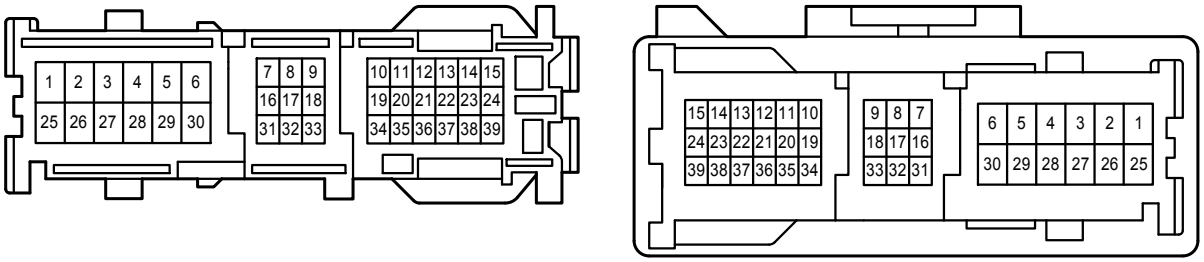
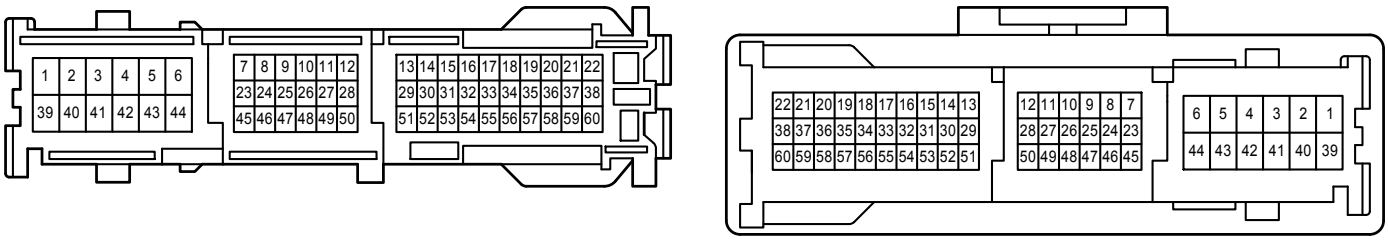
VW1
White