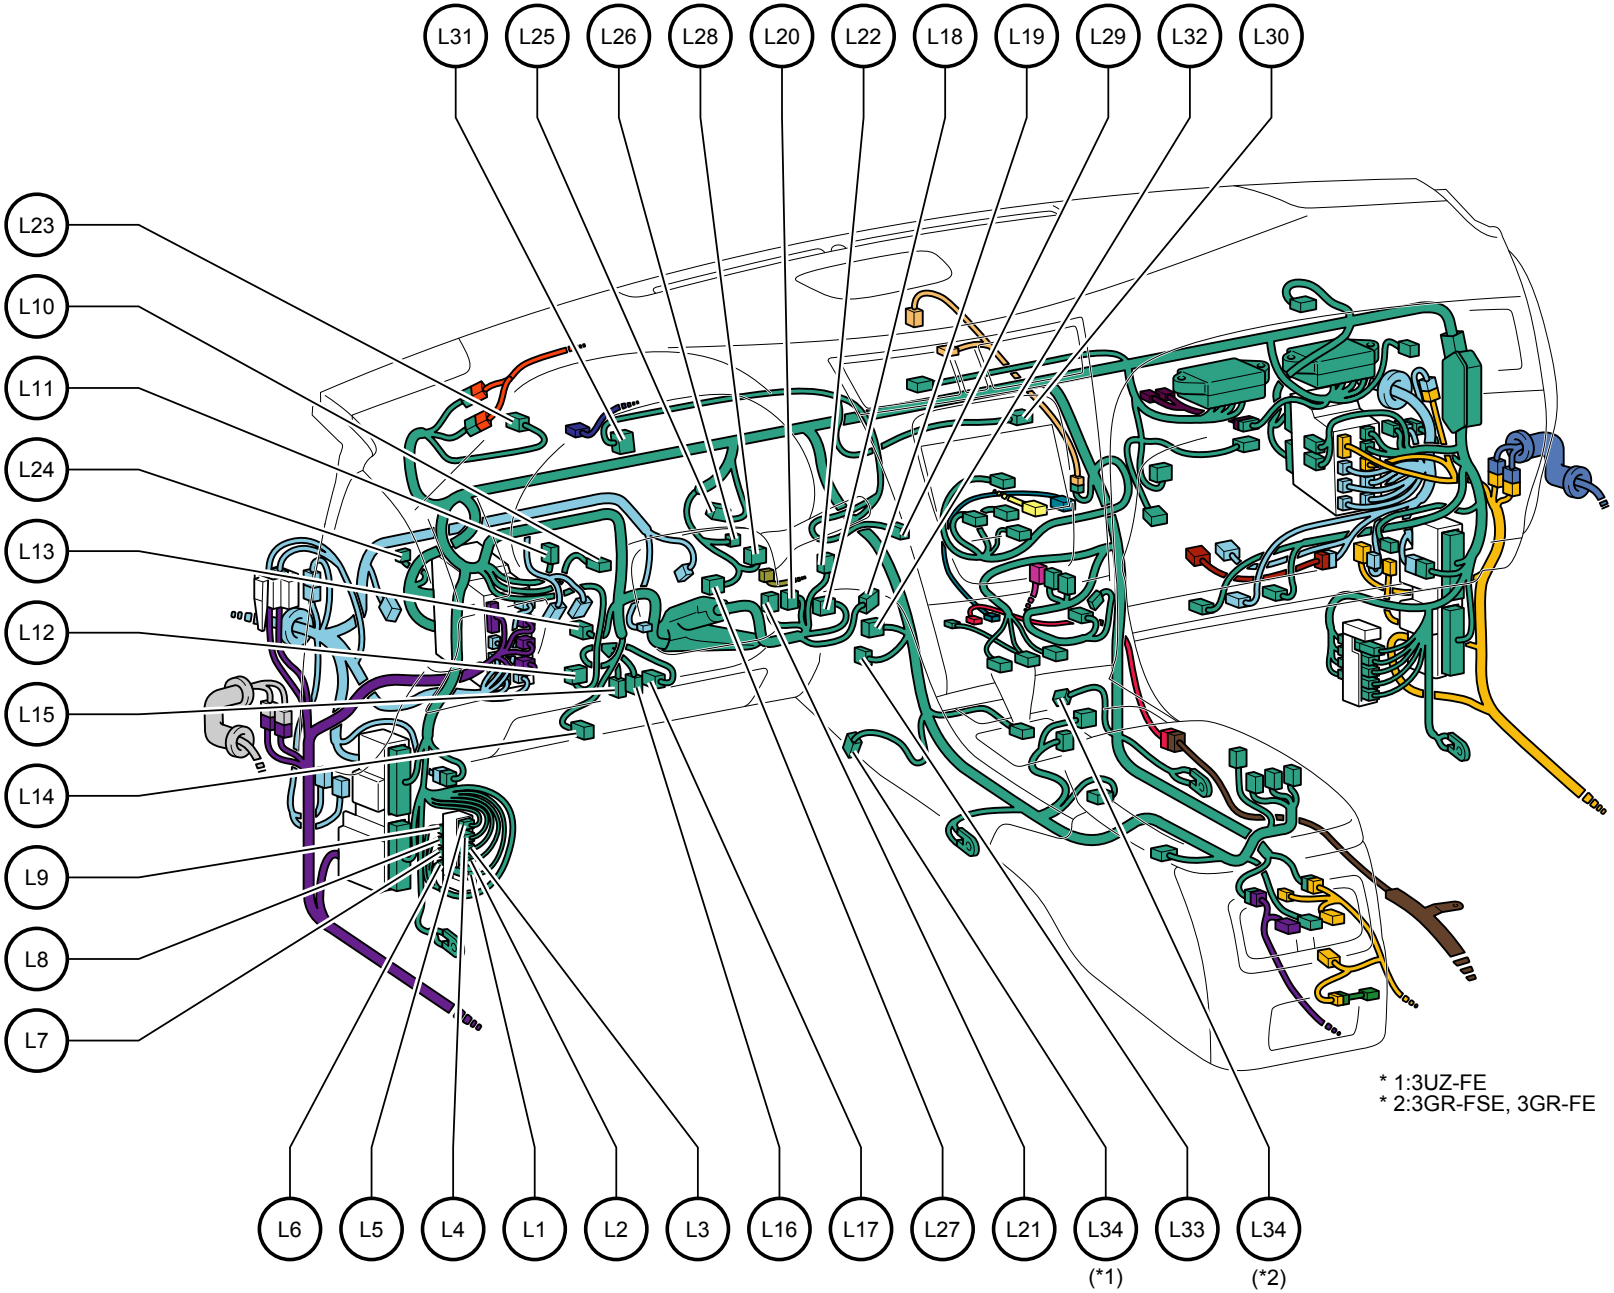
L31
L25
L26
L28
L20
L22
L18
L19
L29
L32
L30
L23
L10
L11
L24
L13
L12
L15
L14
L9
L8
L7
L6
L5
L4
L1
L2
L3
L16
L17
L27
L21
L34
(*1)
L33
L34
(*2)
* 1:3UZ-FE
* 2:3GR-FSE, 3GR-FE

L 1 Junction Connector
L 2 Junction Connector
L 3 Junction Connector
L 4 Junction Connector
L 5 Junction Connector
L 6 Junction Connector
L 7 Junction Connector
L 8 Junction Connector
L 9 Junction Connector
L 10 Register Illumination (Driver's Side)
L 11 VSC Warning Buzzer
L 12 Outer Mirror SW Assembly
L 13 Distance Control ECU
L 14 Airbag Squib (Driver's Side Knee Airbag)
L 15 Tire Pressure Warning Reset SW
L 16 DLC3
L 17 Foot Lamp (LH)
L 18 Tilt Motor
L 19 Steering Sensor
L 20 Spiral Cable
L 21 Airbag Squib (Steering Wheel Pad)
L 22 Windshield Wiper SW Assembly
L 23 Tweeter (Front LH)
L 24 Acceleration Sensor (Front)
L 25 Turn Signal Flasher
L 26 Steering Actuator
L 27 Tilt and Telescopic ECU
L 28 Steering Lock ECU
L 29 Power SW
L 30 Register Illumination (Center)
L 31 Combination Meter
L 32 Clearance Warning Buzzer
L 33 A/C Room Temp. Sensor
L 34 Heated Oxygen Sensor (Bank 1 Sensor 2)

L 1
White

L 2
White



L 3
White



L 4
White



L 5
White



L 6
White



L 7
White



L 8
White



L 9
White



L 10
White

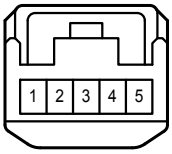

L 11
Black



(Before Sep. 2007 Production)

L 11
Black



(From Sep. 2007 Production)

L 12
White

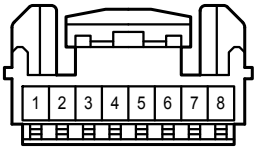

L 13
White

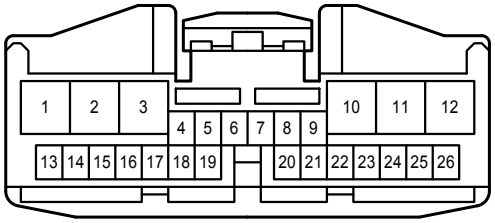

L 14
Black



L 15
Black



L 16
White

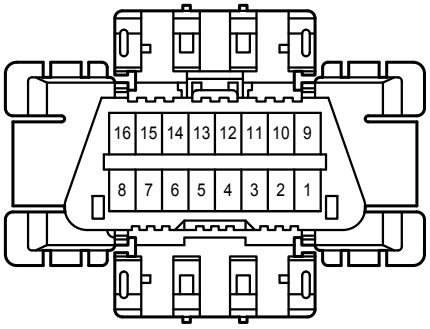

L 17
White



L 18
White

L 19
Gray

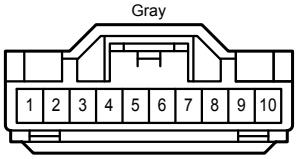

L 20
Black

L 21
Yellow

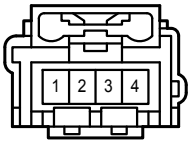

L 22
White

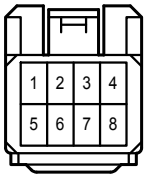

L 23
White

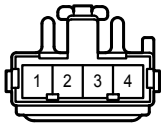

L 24
Black

L 25
Black

L 26
White

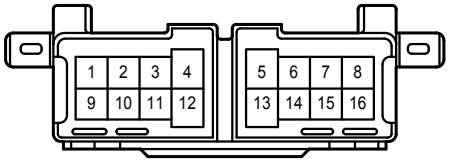

L 27
White

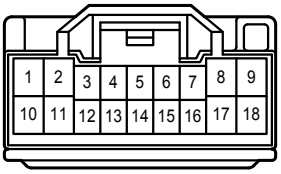

L 28
Black

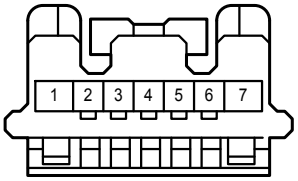

L 29
Black

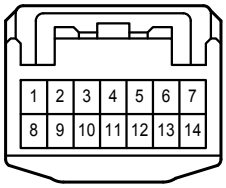

L 30
White



L 31
White

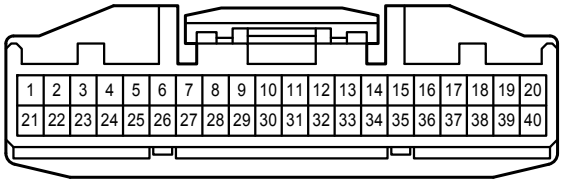

L 32
Black



L 33
Black



L 34
Dark Gray