15 GS 430 / GS 300

(Cont. next page)

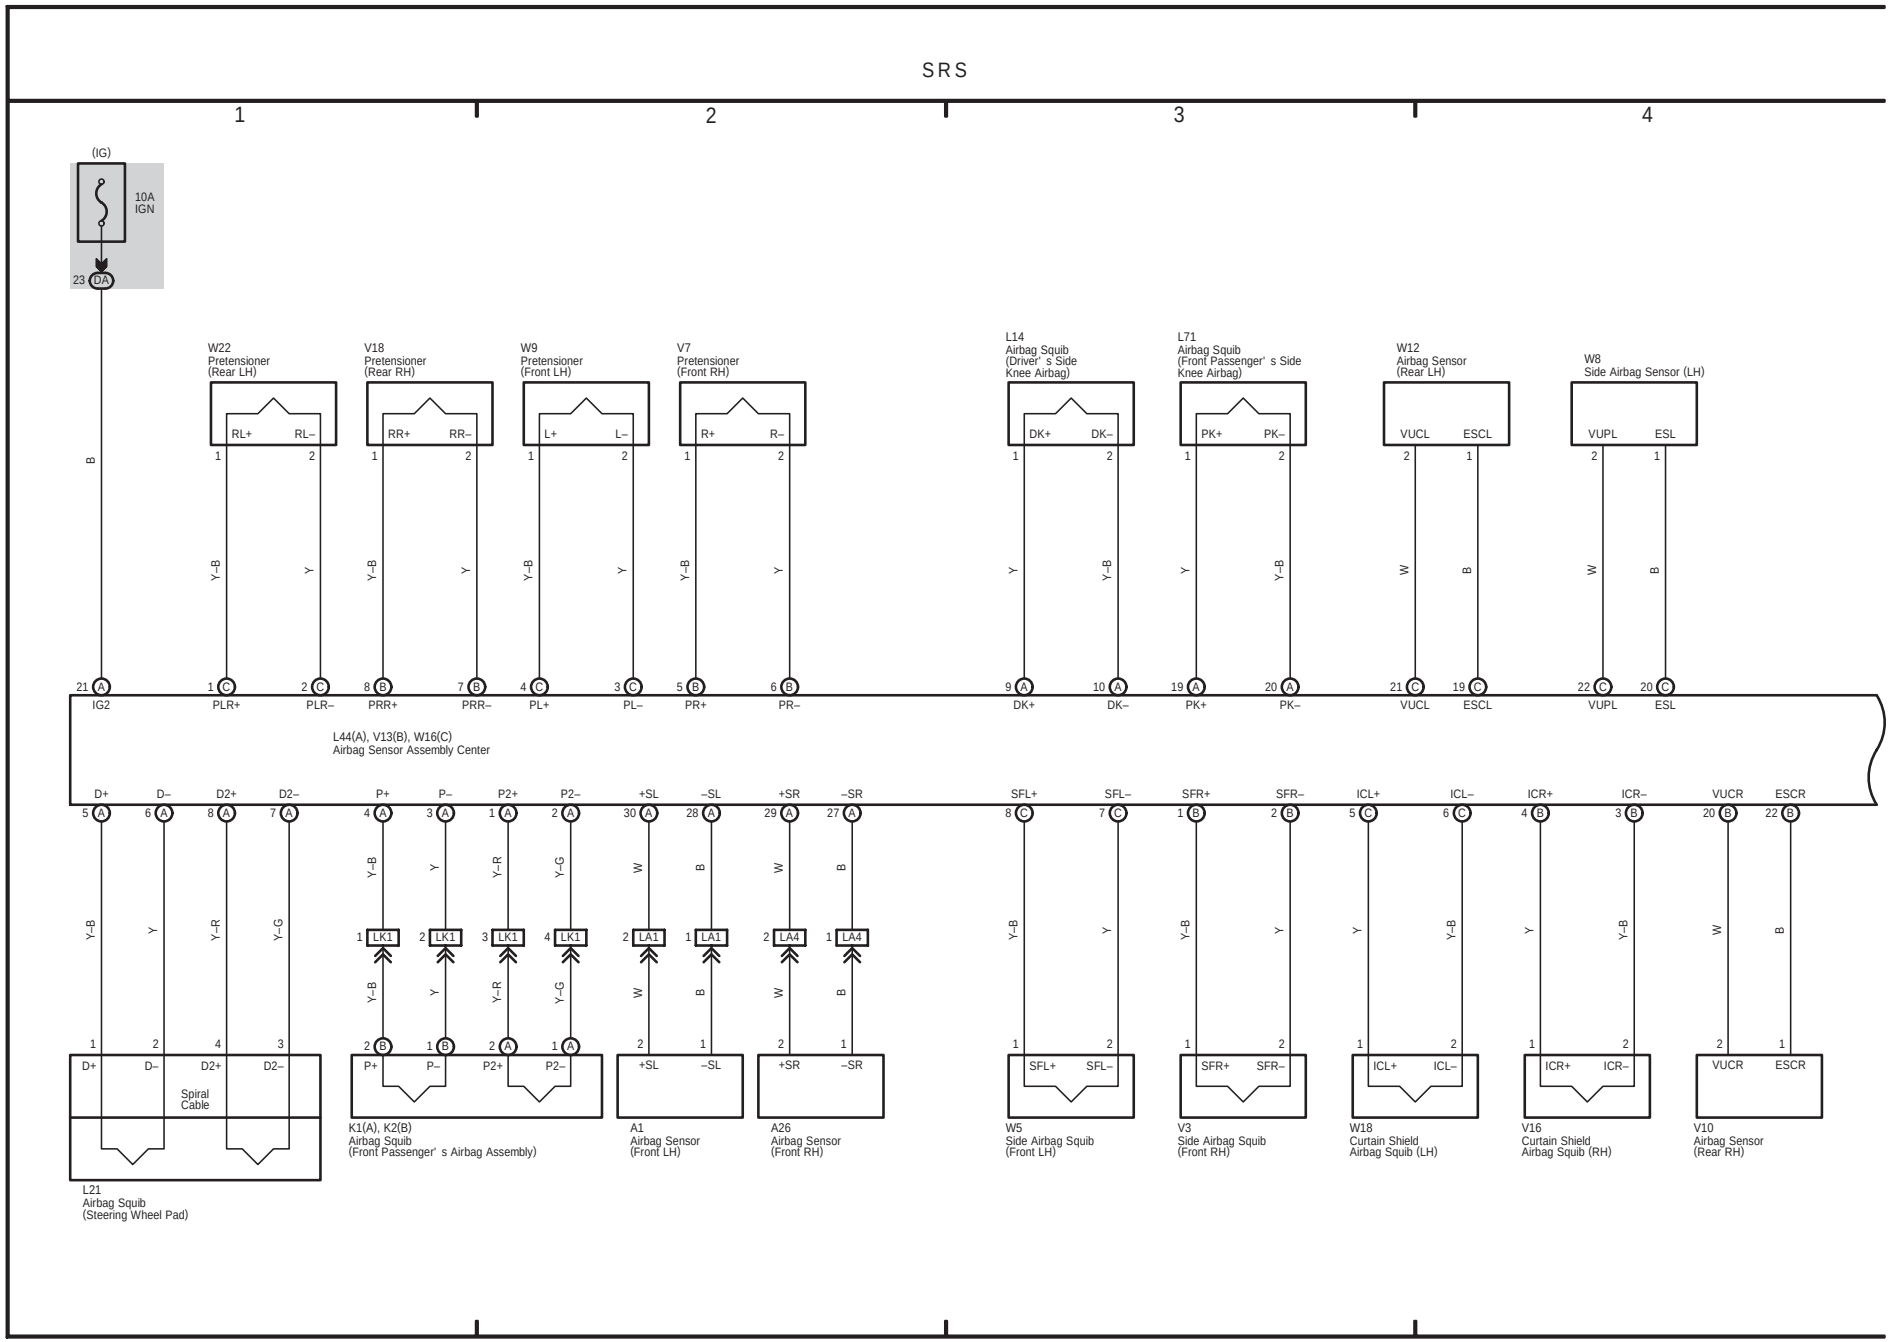

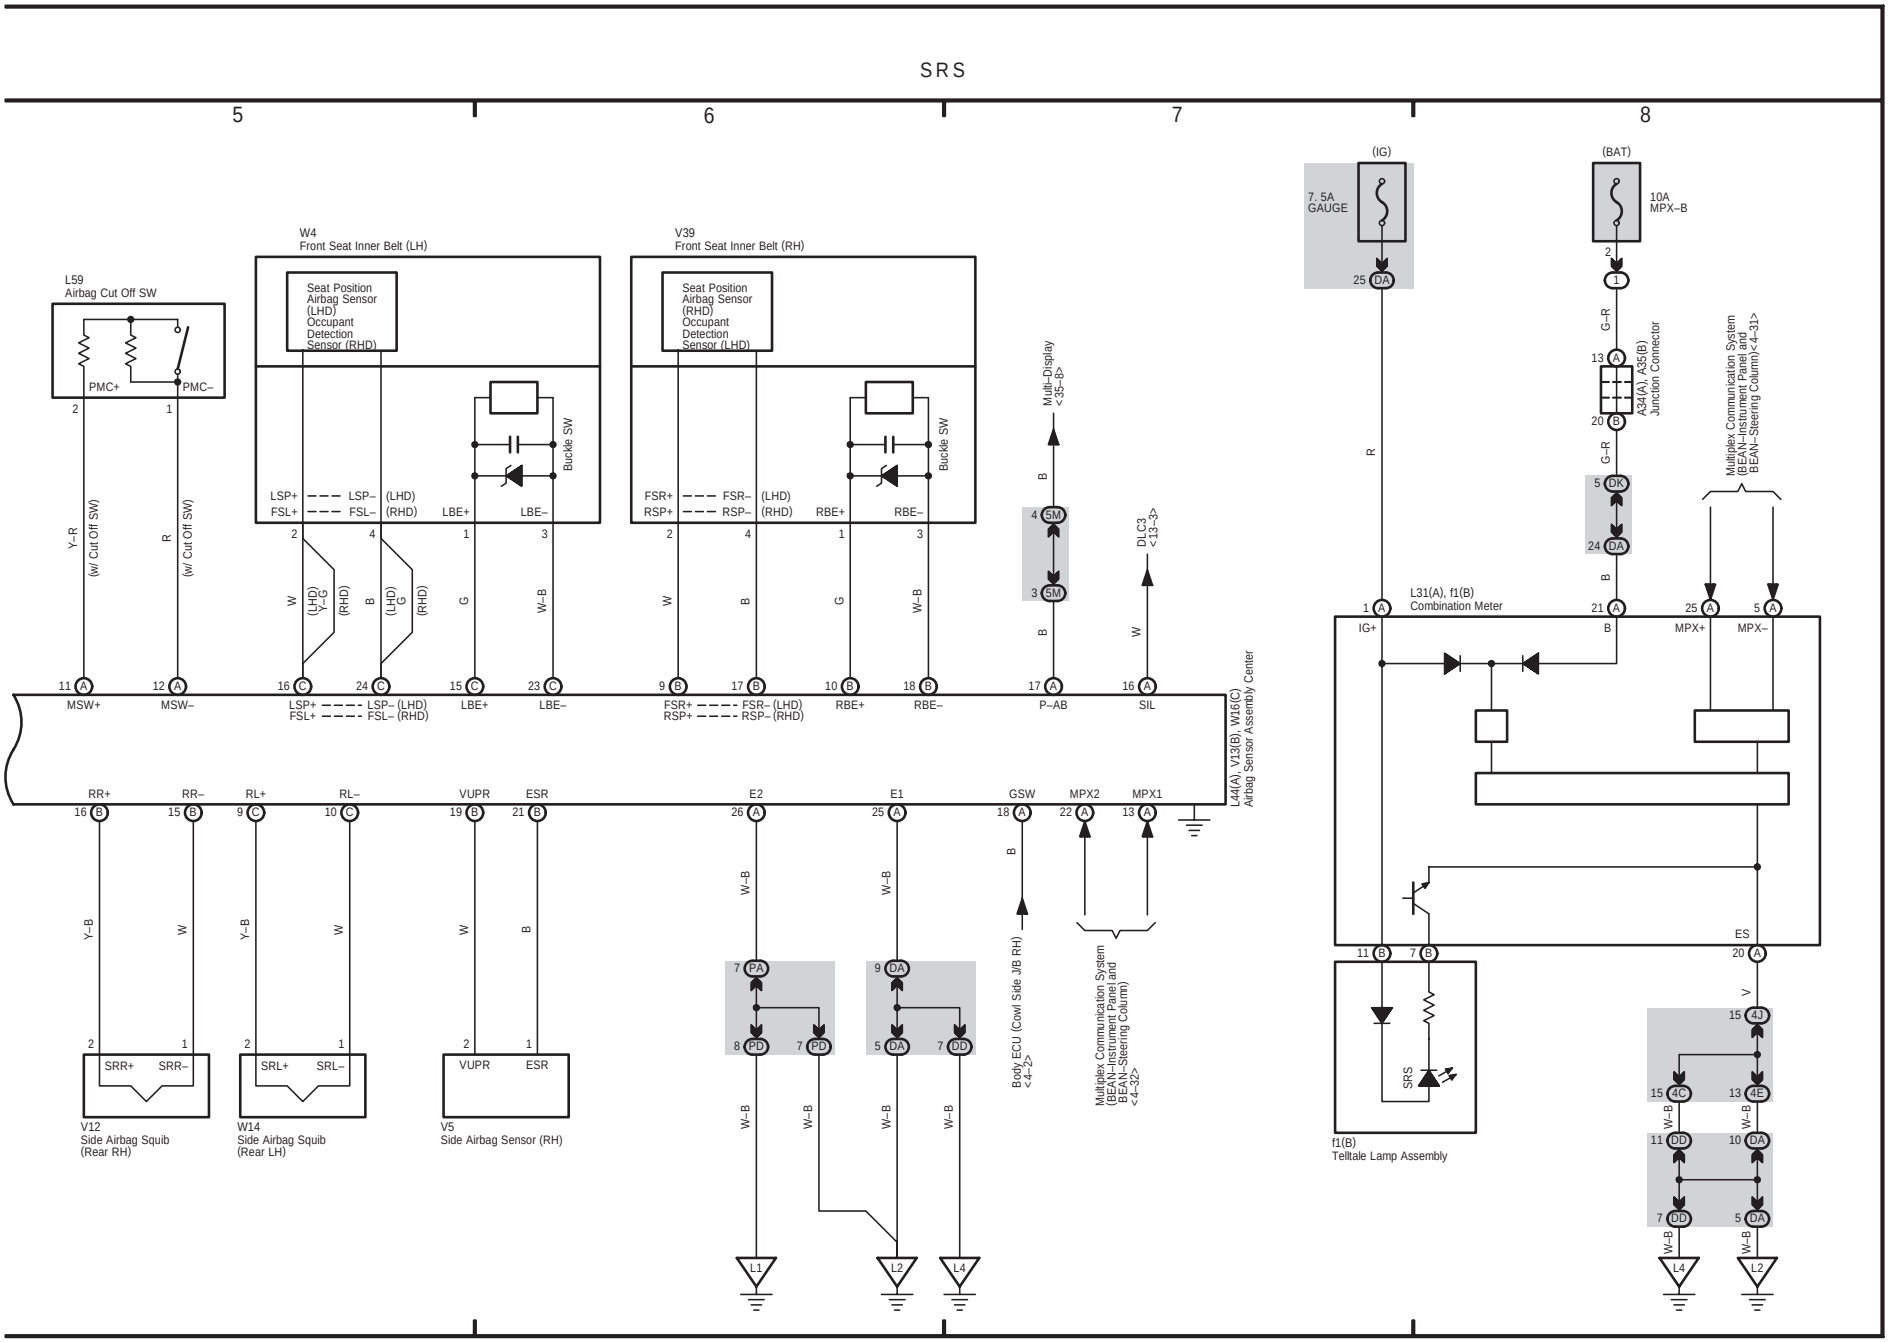
SRS
5
6
7
8
L59
Airbag Cut Off SW
PMC+
PMC–
W4
Front Seat Inner Belt (LH)
Seat Position Airbag Sensor (LHD) Occupant Detection Sensor (RHD)
Buckle SW
V39
Front Seat Inner Belt (RH)
Seat Position Airbag Sensor (RHD) Occupant Detection Sensor (LHD)
Multi–Display <35–8>
DLC3 <13–3>
(IG)
7. 5A GAUGE
(BAT)
10A MPX–B
A34(A), A35(B) Junction Connector
Multiplex Communication System (BEAN–Instrument Panel and BEAN–Steering Column)<4–31>
L31(A), f1(B) Combination Meter
IG+
MPX+
MPX–
ES
f1(B) Telltale Lamp Assembly
SRS
MSW+
MSW–
LSP+
FSL+
LSP–
FSL–
(LHD)
(RHD)
LBE+
LBE–
FSR+
RSP+
FSR–
RSP–
RBE+
RBE–
P–AB
SIL
L44(A), V13(B), W16(C) Airbag Sensor Assembly Center
RR+
RR–
RL+
RL–
VUPR
ESR
E2
E1
GSW
MPX2
MPX1
Body ECU (Cowl Side J/B RH) <4–2>
Multiplex Communication System (BEAN–Instrument Panel and BEAN–Steering Column) <4–32>
SRR+
SRR–
SRL+
SRL–
V12
Side Airbag Squib (Rear RH)
W14
Side Airbag Squib (Rear LH)
V5
Side Airbag Sensor (RH)
L1
L2
L4