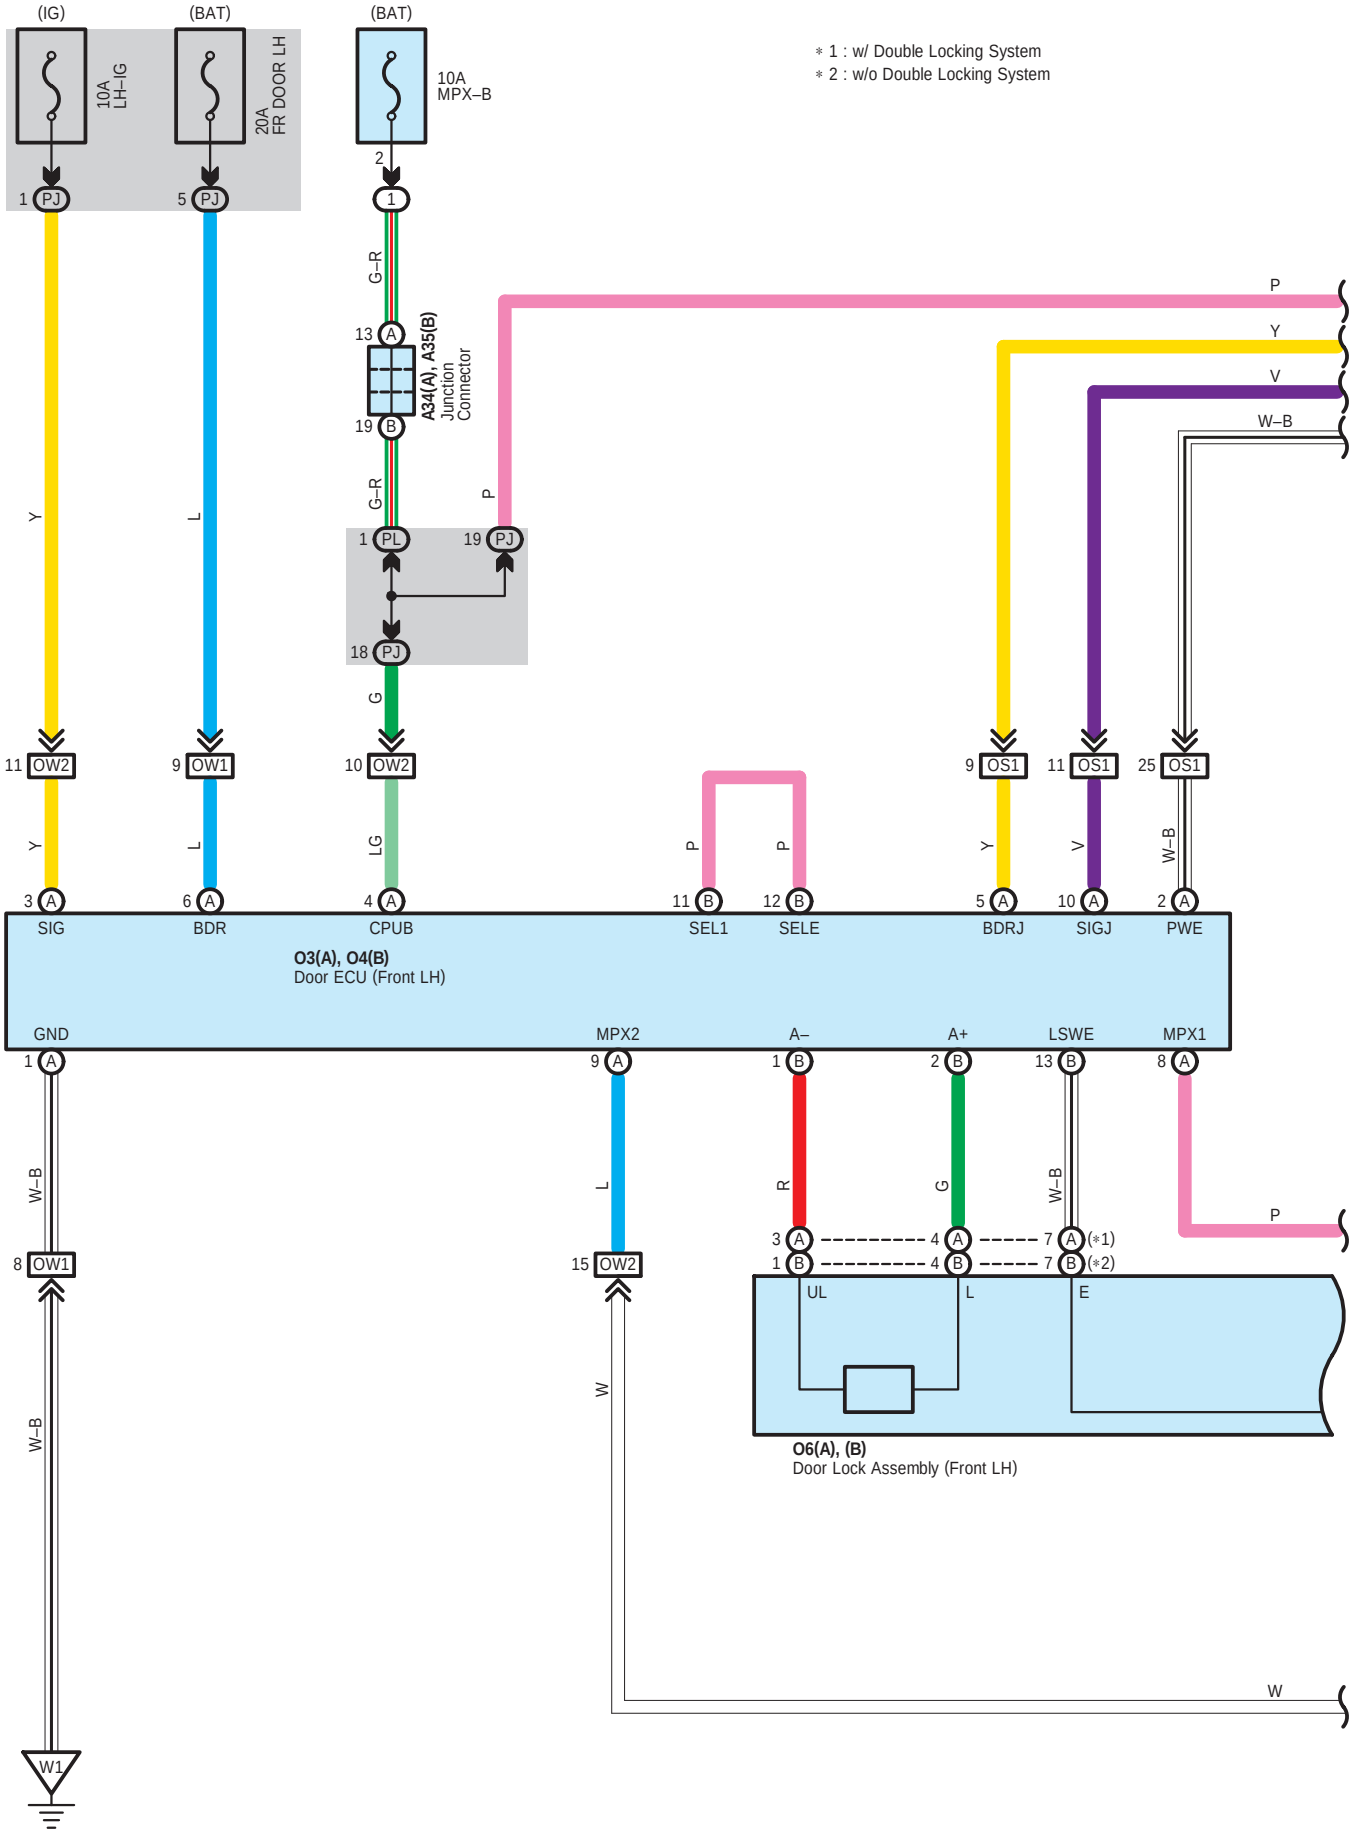
(IG)
(BAT)
(BAT)
10A LH–IG
20A FR DOOR LH
10A MPX–B
∗1 : w/ Double Locking System
∗2 : w/o Double Locking System
A34(A), A35(B) Junction Connector
O3(A), O4(B) Door ECU (Front LH)
SIG
BDR
CPUB
SEL1
SELE
BDRJ
SIGJ
PWE
GND
MPX2
A–
A+
LSWE
MPX1
O6(A), (B) Door Lock Assembly (Front LH)
UL
L
E
W1

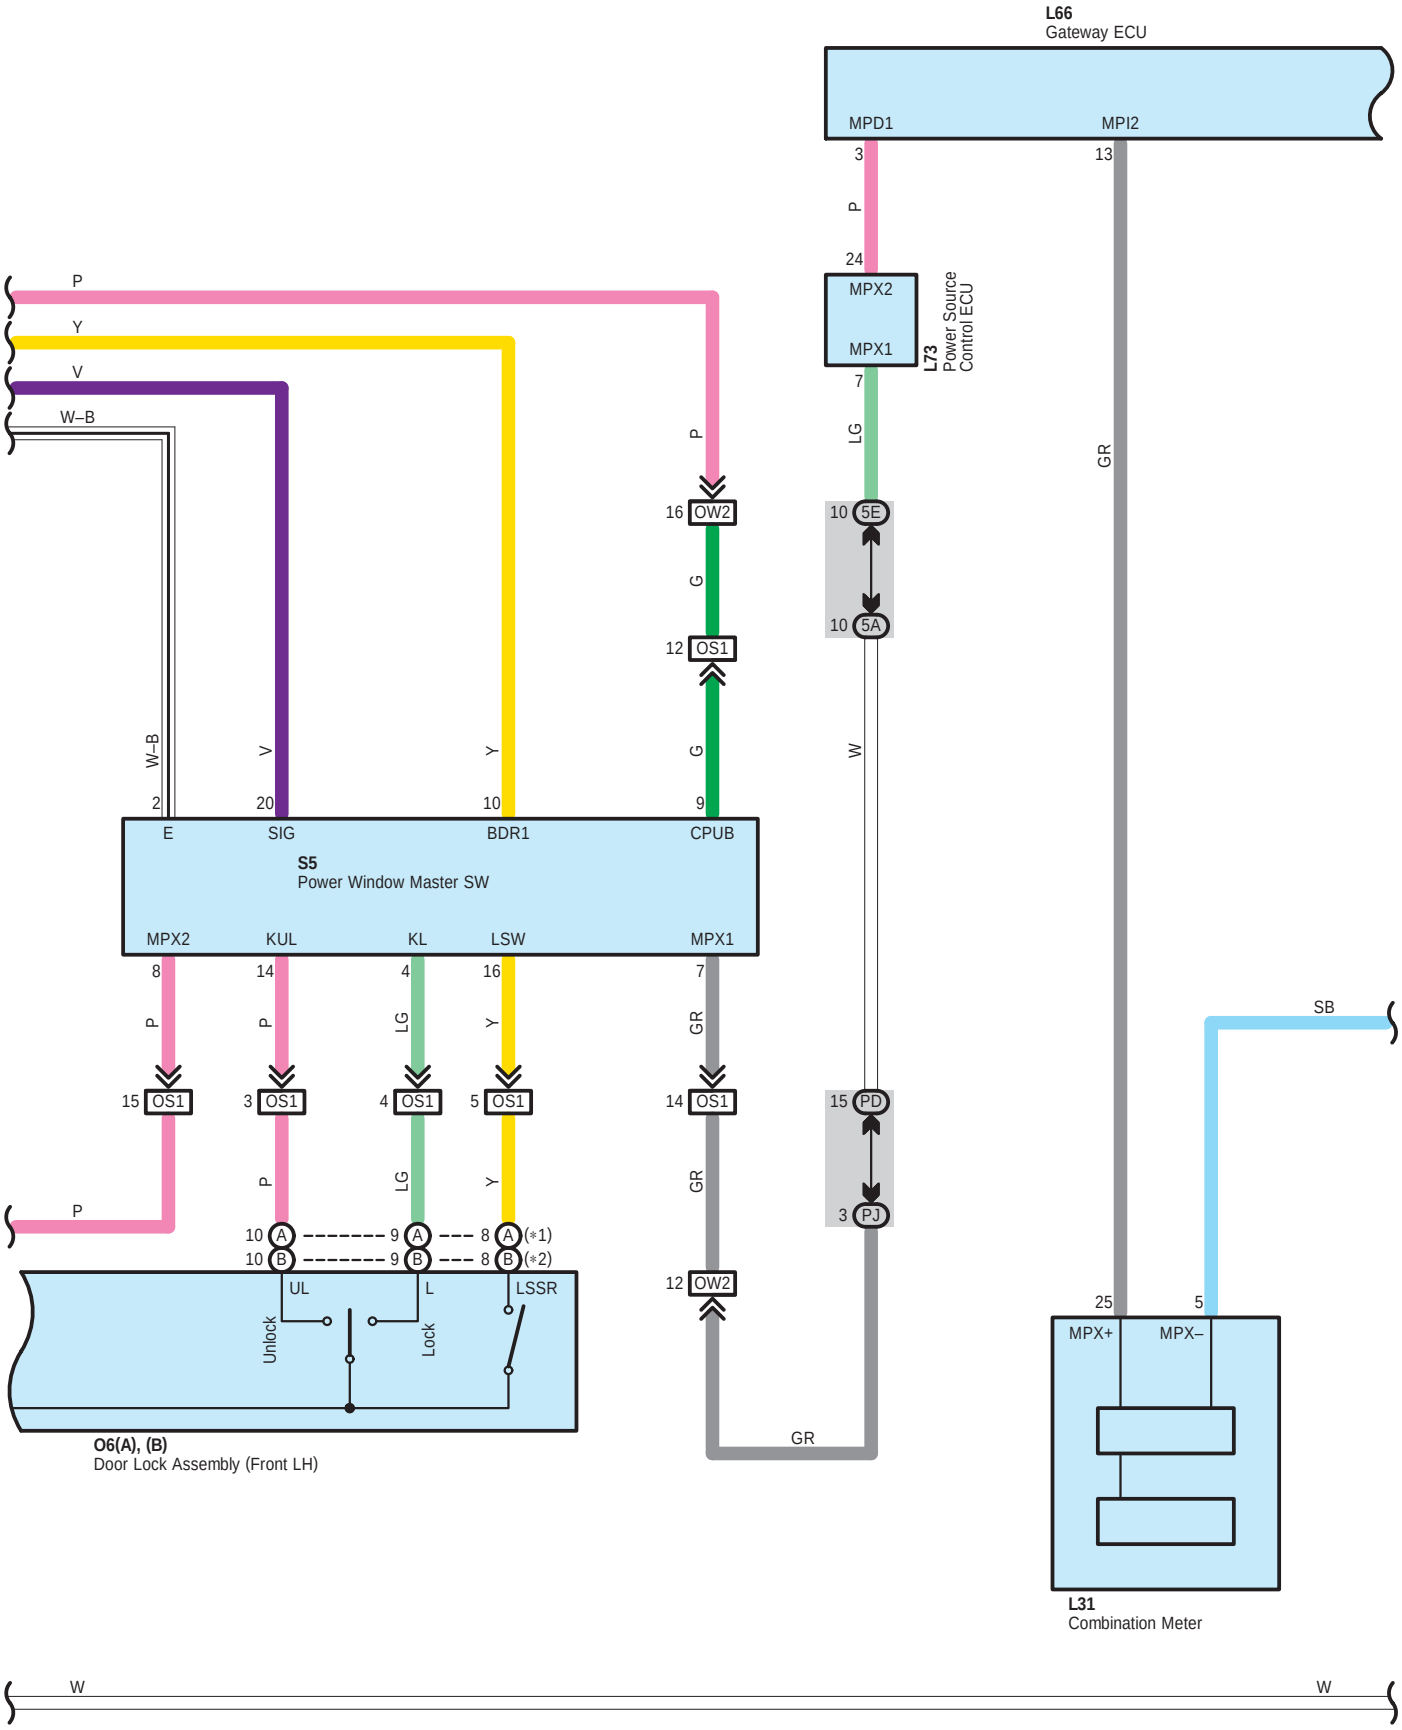
L66
Gateway ECU
MPD1
MPI2
3
13
P
24
MPX2
MPX1
L73
Power Source
Control ECU
7
LG
GR
P
Y
V
W–B
16 OW2
G
12 OS1
10 5E
10 5A
W
W–B
V
Y
G
2
20
10
9
E
SIG
BDR1
CPUB
S5
Power Window Master SW
MPX2
KUL
KL
LSW
MPX1
8
14
4
16
7
P
P
LG
Y
GR
15 OS1
3 OS1
4 OS1
5 OS1
14 OS1
15 PD
3 PJ
P
LG
Y
GR
P
10 A
10 B
9 A
9 B
8 A (*1)
8 B (*2)
UL
L
LSSR
Unlock
Lock
12 OW2
GR
O6(A), (B)
Door Lock Assembly (Front LH)
SB
25
5
MPX+
MPX–
L31
Combination Meter
W
W

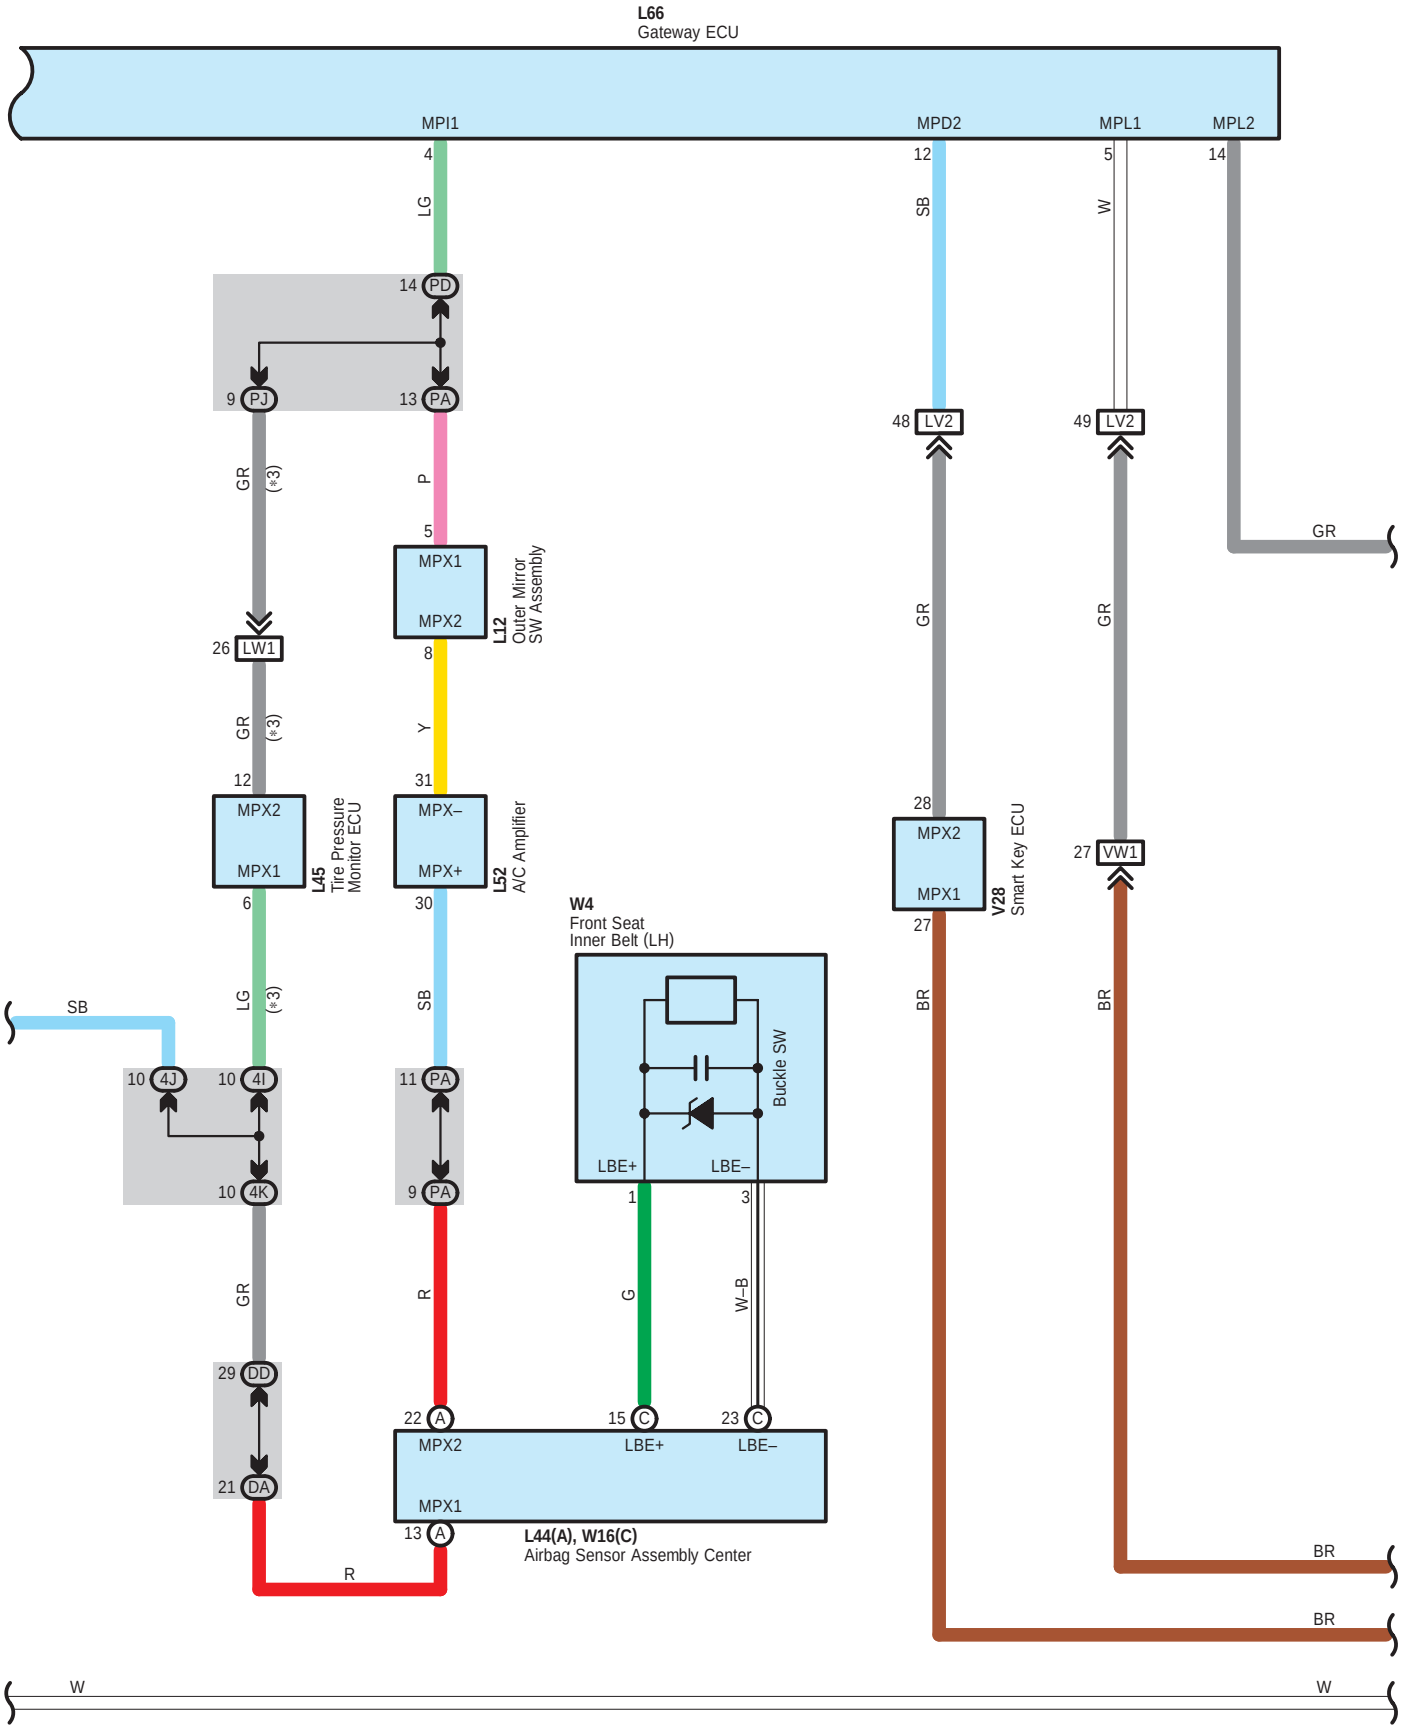
L66
Gateway ECU
MPI1
MPD2
MPL1
MPL2
4
12
5
14
LG
SB
W
14 PD
9 PJ
13 PA
48 LV2
49 LV2
GR
(*3)
P
5
MPX1
MPX2
L12
Outer Mirror
SW Assembly
GR
GR
26 LW1
8
GR
(*3)
Y
12
31
28
MPX2
MPX1
L45
Tire Pressure
Monitor ECU
MPX–
MPX+
L52
A/C Amplifier
MPX2
MPX1
V28
Smart Key ECU
27 VW1
6
30
27
W4
Front Seat
Inner Belt (LH)
SB
LG
(*3)
SB
BR
BR
Buckle SW
10 4J
10 4I
11 PA
LBE+
LBE–
10 4K
9 PA
1
3
GR
R
G
W–B
29 DD
22 A
15 C
23 C
MPX2
LBE+
LBE–
21 DA
MPX1
13 A
L44(A), W16(C)
Airbag Sensor Assembly Center
R
BR
BR
W
W

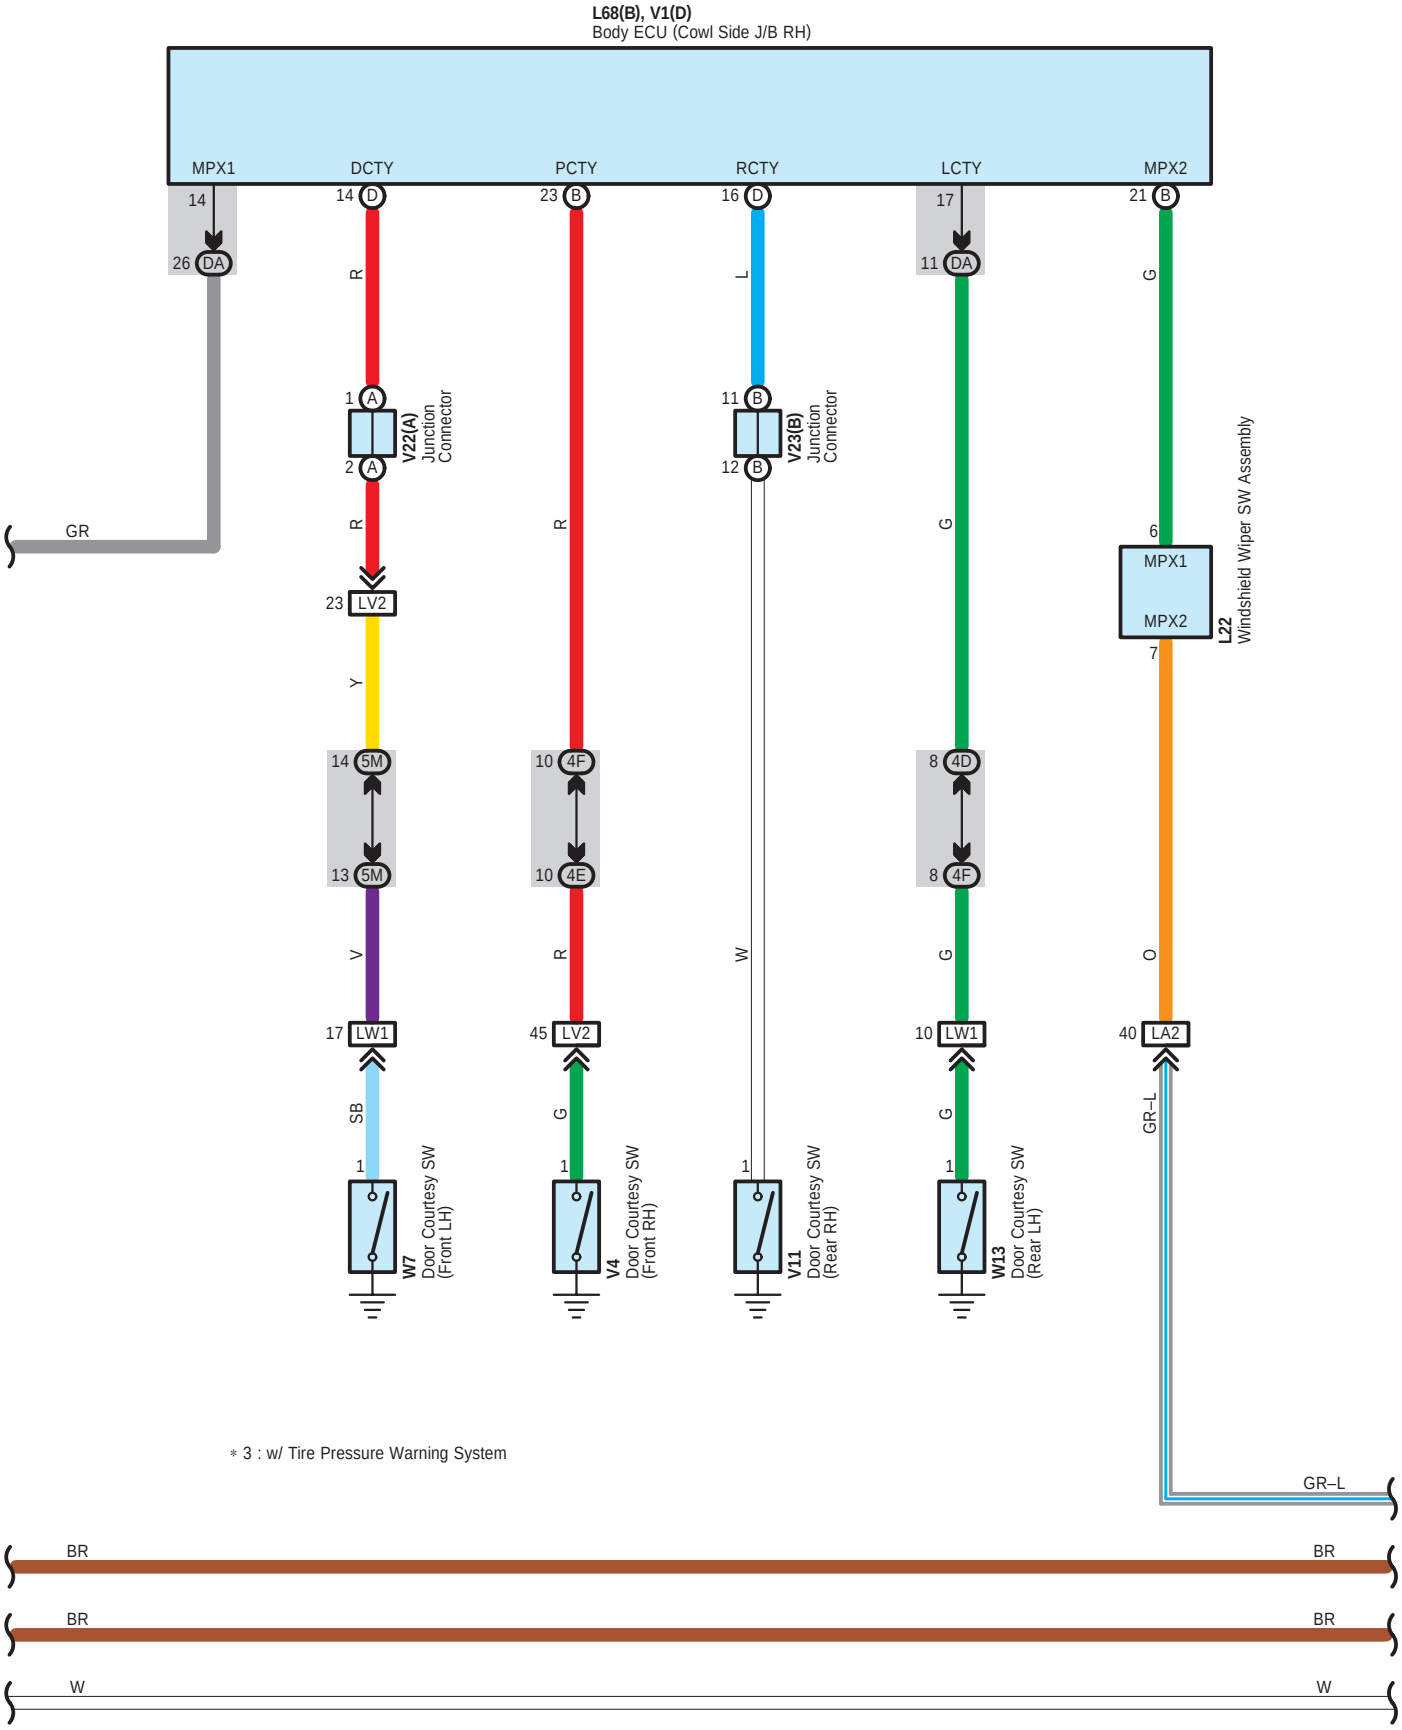
L68(B), V1(D)
Body ECU (Cowl Side J/B RH)
MPX1
DCTY
PCTY
RCTY
LCTY
MPX2
14
26 DA
14 D
23 B
16 D
17
11 DA
21 B
R
L
G
1 A
2 A
V22(A)
Junction
Connector
11 B
12 B
V23(B)
Junction
Connector
GR
R
R
G
6
MPX1
MPX2
7
L22
Windshield Wiper SW Assembly
23 LV2
Y
14 5M
13 5M
10 4F
10 4E
8 4D
8 4F
V
R
W
G
O
17 LW1
45 LV2
10 LW1
40 LA2
SB
G
G
GR–L
1
W7
Door Courtesy SW
(Front LH)
V4
Door Courtesy SW
(Front RH)
V11
Door Courtesy SW
(Rear RH)
W13
Door Courtesy SW
(Rear LH)
∗ 3 : w/ Tire Pressure Warning System
GR–L
BR
BR
BR
BR
W
W

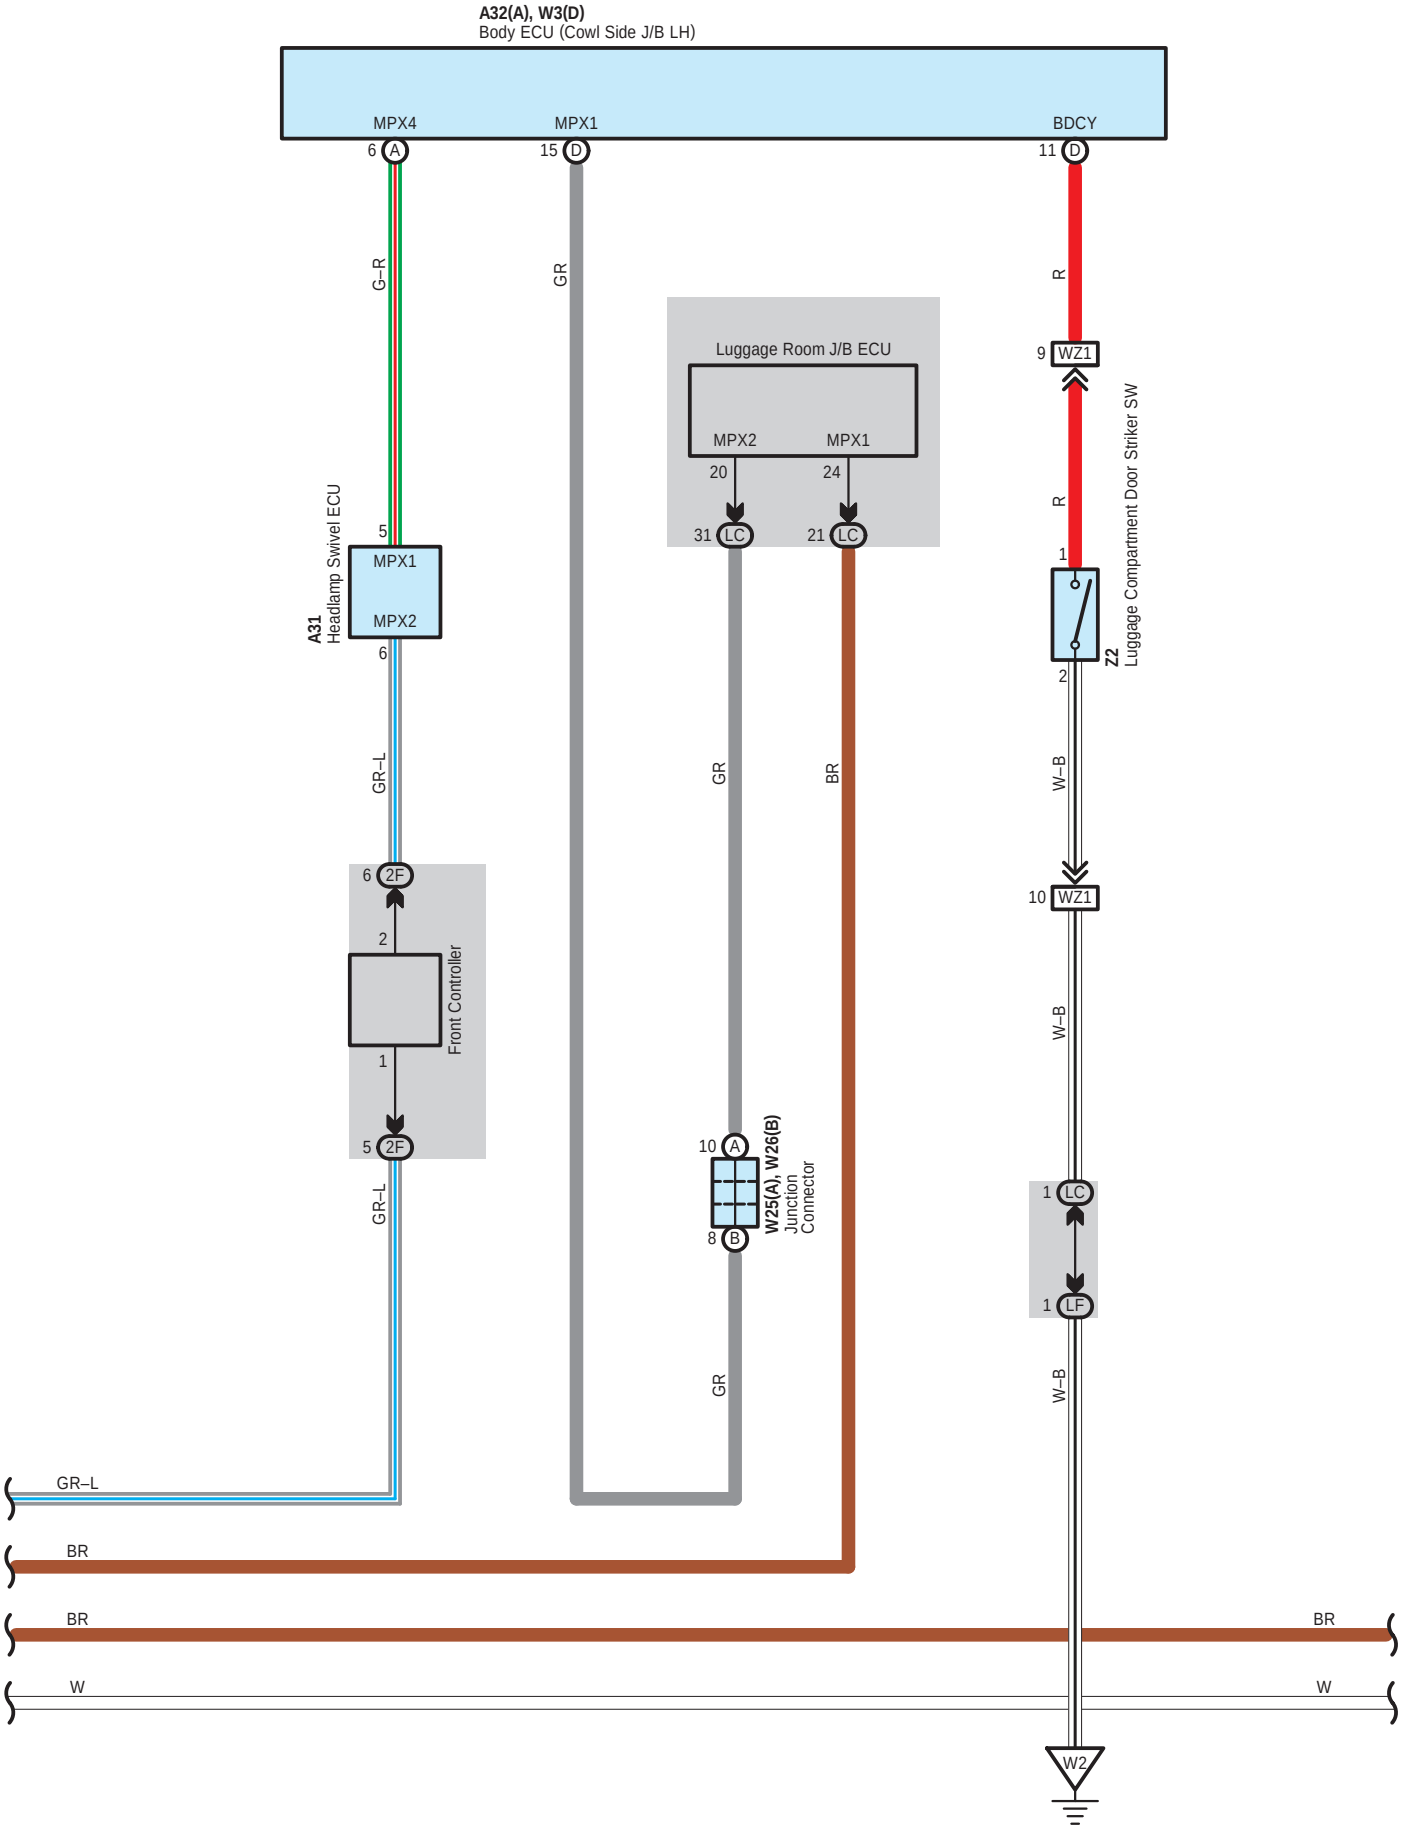
A32(A), W3(D)
Body ECU (Cowl Side J/B LH)
MPX4
MPX1
BDCY
6 A
15 D
11 D
G–R
GR
R
Luggage Room J/B ECU
MPX2
MPX1
20
24
31 LC
21 LC
9 WZ1
R
1
2
Z2
Luggage Compartment Door Striker SW
A31
Headlamp Swivel ECU
5
MPX1
MPX2
6
GR–L
GR
BR
W–B
10 WZ1
6 2F
2
Front Controller
1
5 2F
GR–L
10 A
8 B
W25(A), W26(B)
Junction Connector
W–B
1 LC
1 LF
GR
W–B
GR–L
BR
BR
BR
W
W
W2

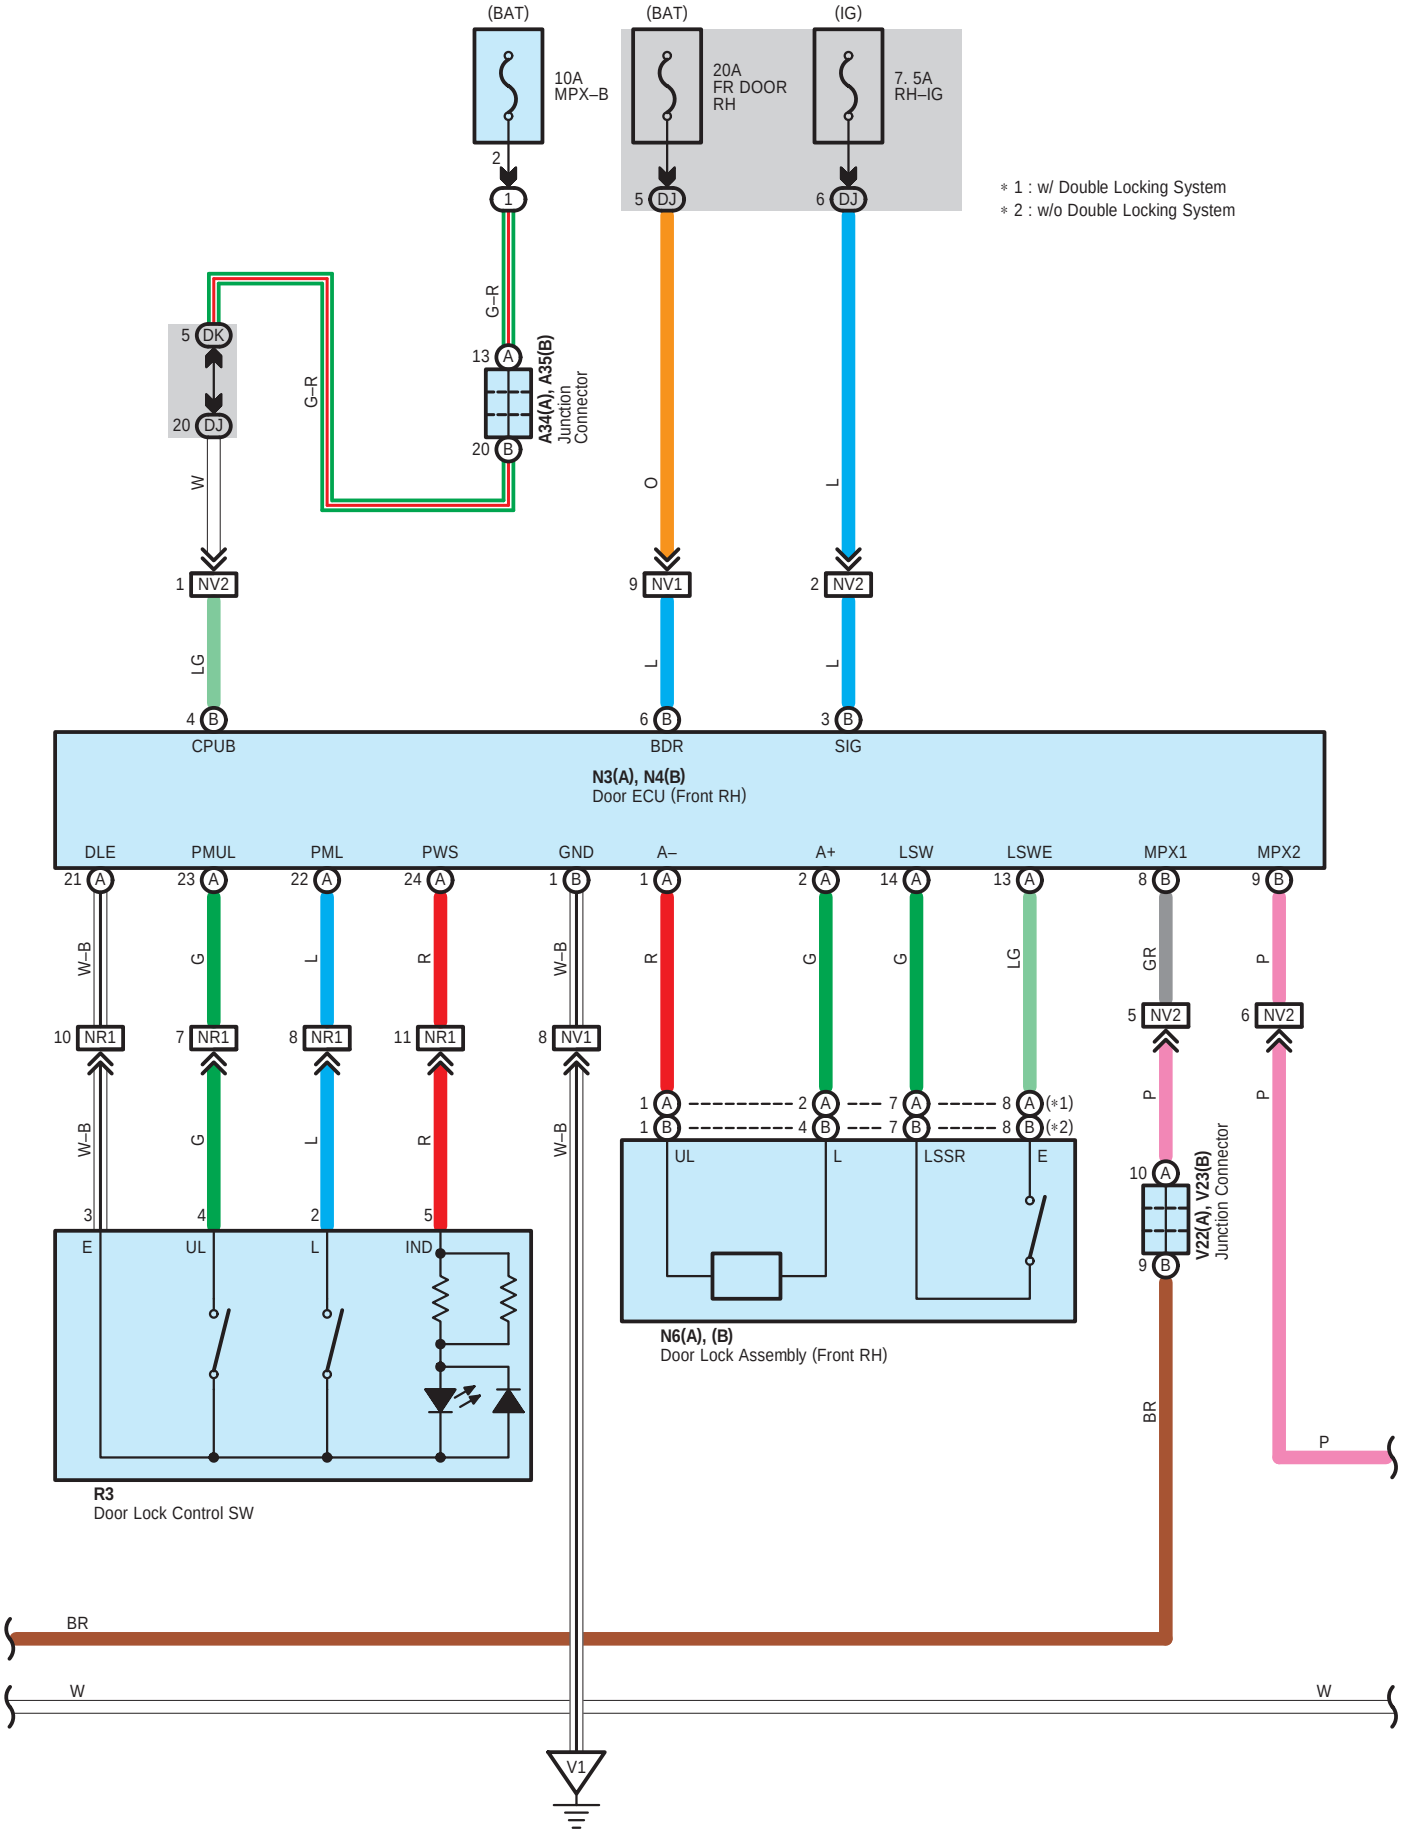
(BAT)
10A
MPX–B
(BAT)
20A
FR DOOR
RH
(IG)
7. 5A
RH–IG
∗ 1 : w/ Double Locking System
∗ 2 : w/o Double Locking System
G–R
A34(A), A35(B)
Junction
Connector
W
LG
O
L
NV2
NV1
CPUB
BDR
SIG
N3(A), N4(B)
Door ECU (Front RH)
DLE
PMUL
PML
PWS
GND
A–
A+
LSW
LSWE
MPX1
MPX2
W–B
G
R
GR
P
NR1
NV1
UL
LSSR
E
IND
N6(A), (B)
Door Lock Assembly (Front RH)
V22(A), V23(B)
Junction Connector
R3
Door Lock Control SW
BR
V1

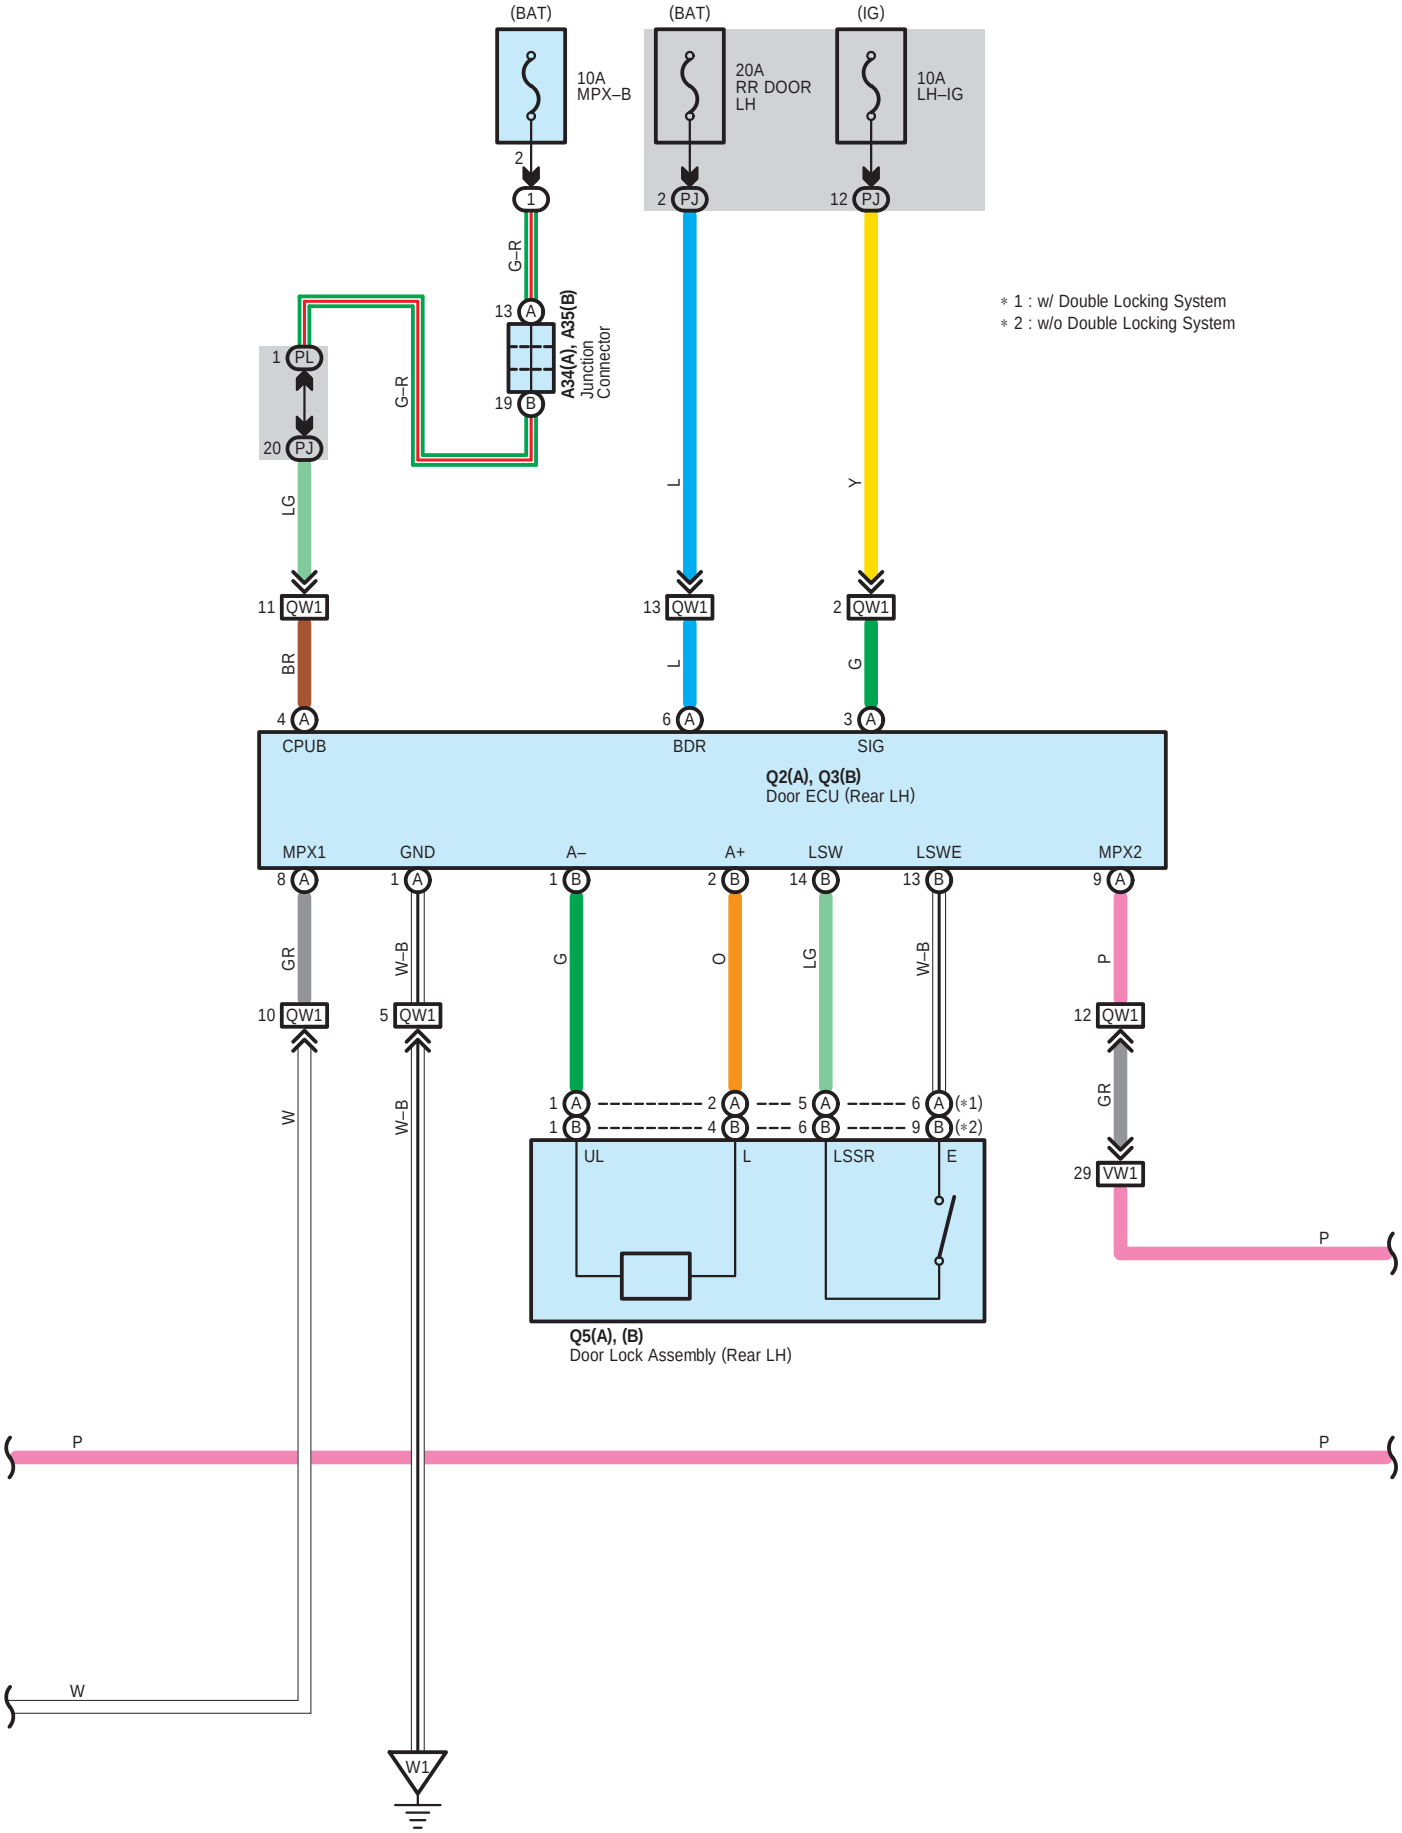
(BAT)
10A
MPX–B
(BAT)
20A
RR DOOR
LH
(IG)
10A
LH–IG
2
1
G–R
13 A
19 B
A34(A), A35(B)
Junction
Connector
1 PL
20 PJ
G–R
LG
2 PJ
12 PJ
L
Y
∗ 1 : w/ Double Locking System
∗ 2 : w/o Double Locking System
11 QW1
BR
4 A
CPUB
13 QW1
L
6 A
BDR
2 QW1
G
3 A
SIG
Q2(A), Q3(B)
Door ECU (Rear LH)
MPX1
GND
A–
A+
LSW
LSWE
MPX2
8 A
1 A
1 B
2 B
14 B
13 B
9 A
GR
W–B
G
O
LG
W–B
P
10 QW1
5 QW1
12 QW1
W
W–B
GR
1 A
1 B
2 A
4 B
5 A
6 B
6 A (∗1)
9 B (∗2)
UL
L
LSSR
E
29 VW1
P
Q5(A), (B)
Door Lock Assembly (Rear LH)
P
P
W
W1

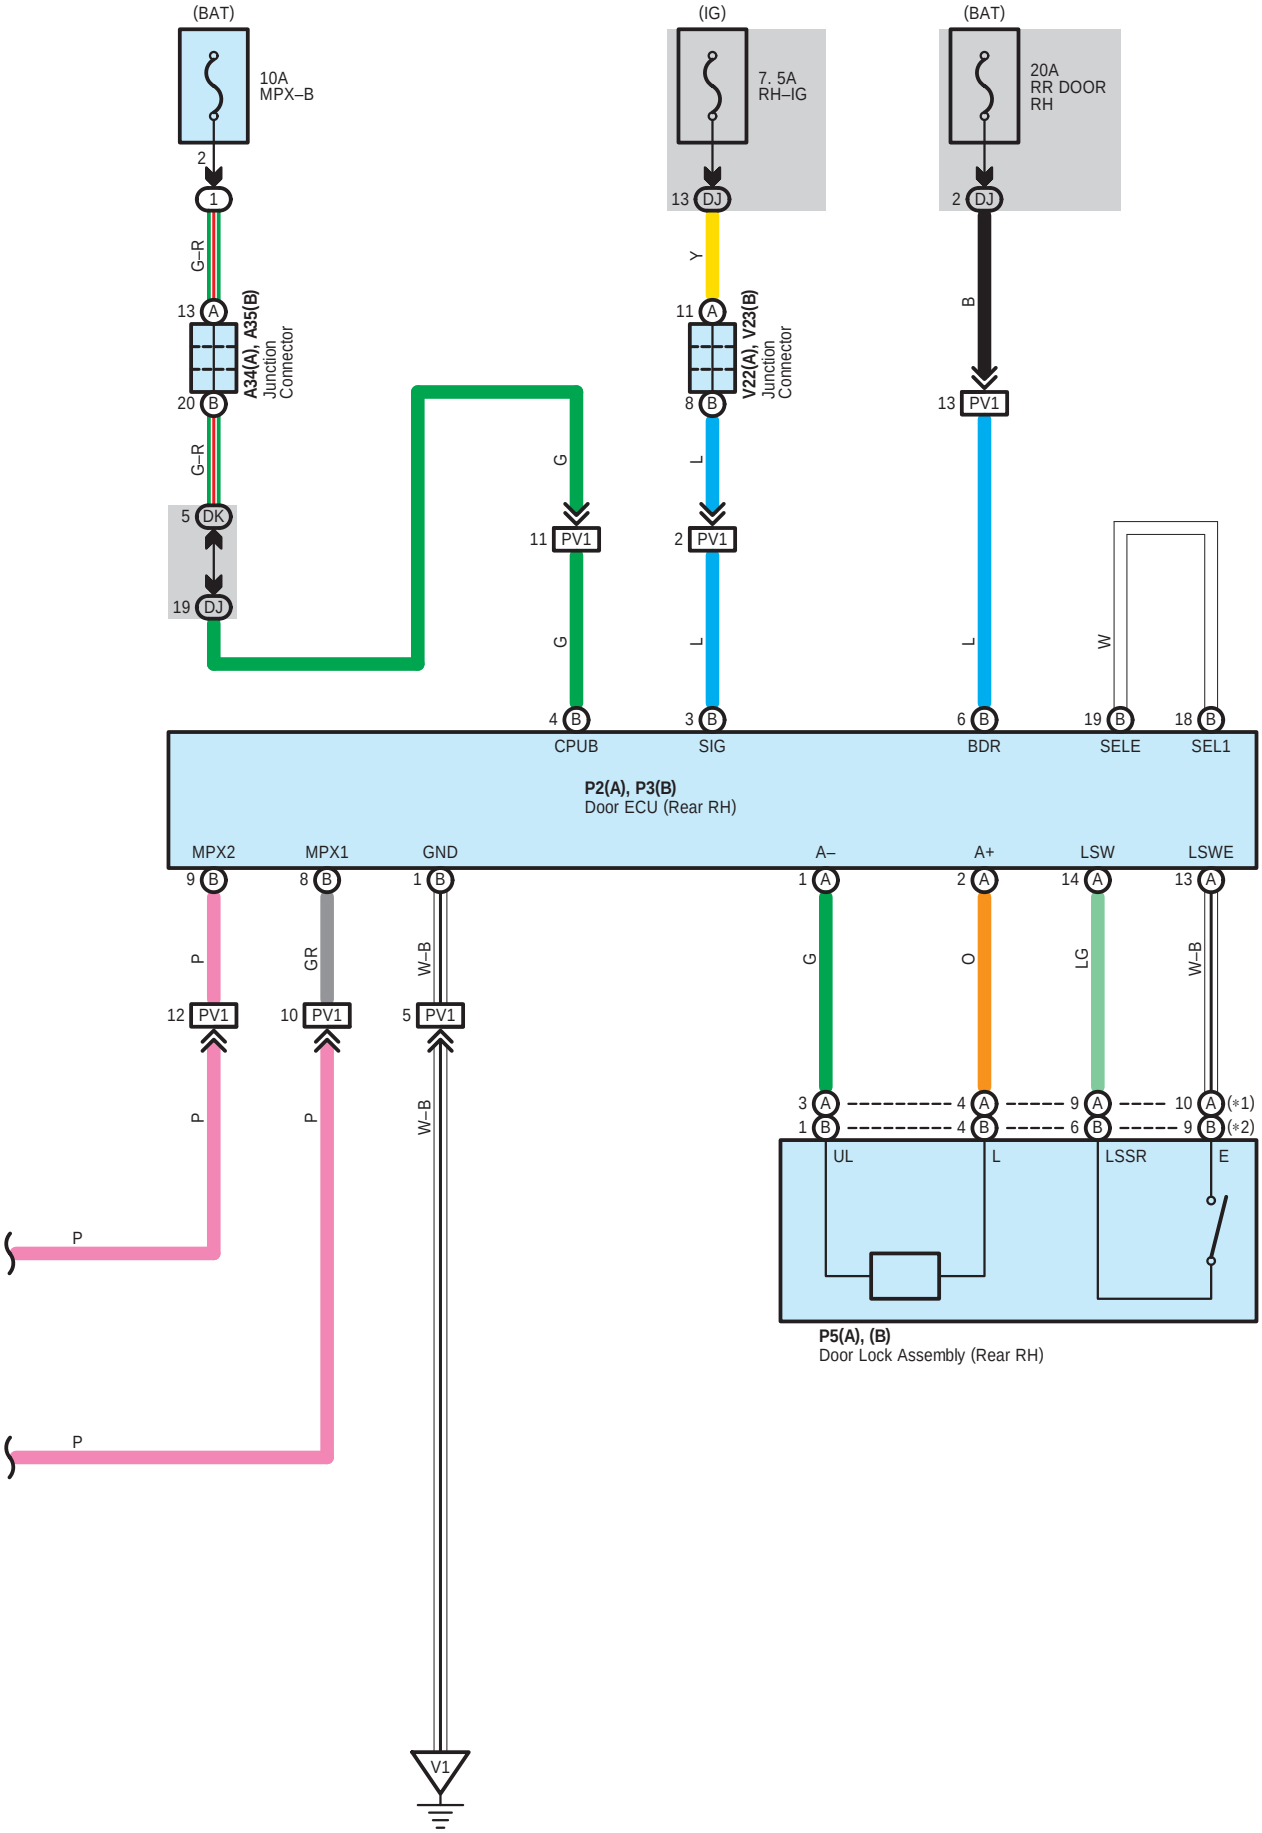
(BAT)
10A
MPX–B
2
1
G–R
13 A
A34(A), A35(B)
Junction
Connector
20 B
G–R
5 DK
19 DJ
(IG)
7. 5A
RH–IG
13 DJ
Y
11 A
V22(A), V23(B)
Junction
Connector
8 B
L
2 PV1
(BAT)
20A
RR DOOR
RH
2 DJ
B
13 PV1
G
11 PV1
G
4 B
CPUB
L
3 B
SIG
L
6 B
BDR
W
19 B
SELE
18 B
SEL1
P2(A), P3(B)
Door ECU (Rear RH)
MPX2
MPX1
GND
A–
A+
LSW
LSWE
9 B
8 B
1 B
1 A
2 A
14 A
13 A
P
GR
W–B
G
O
LG
W–B
12 PV1
10 PV1
5 PV1
P
P
W–B
3 A
1 B
4 A
4 B
9 A
6 B
10 A (*1)
9 B (*2)
UL
L
LSSR
E
P
P
P5(A), (B)
Door Lock Assembly (Rear RH)
V1

A 31
White

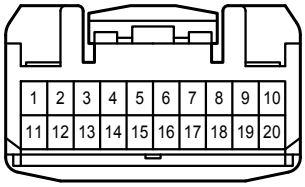

A 32
White

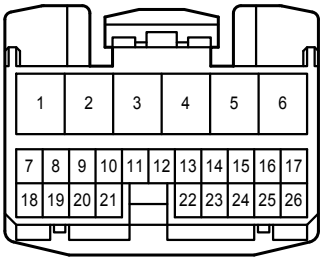

A 34
Blue

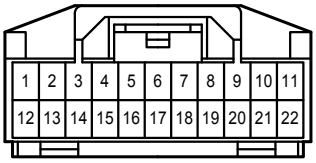

A 35
Blue

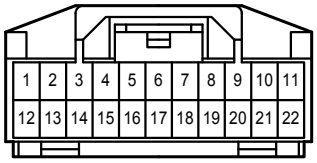

L 12
White

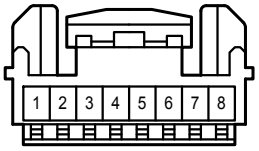

L 22
White

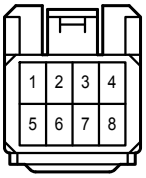

L 31
White

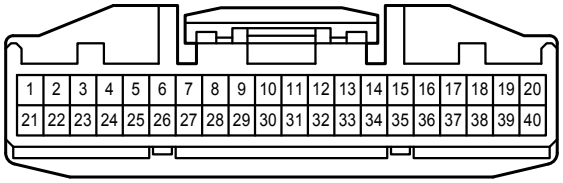

L 44
Yellow

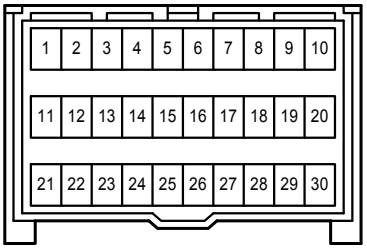

L 45
Black

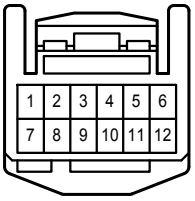

L 52
White

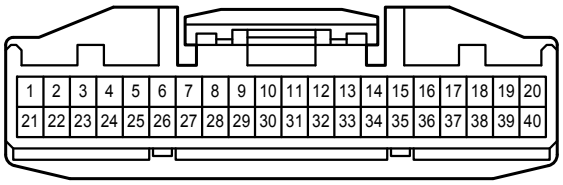

L 66
White

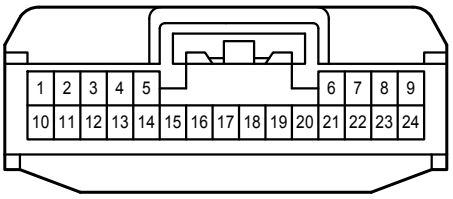

L 68
White

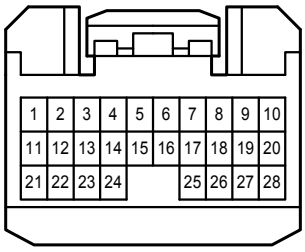

L 73
White

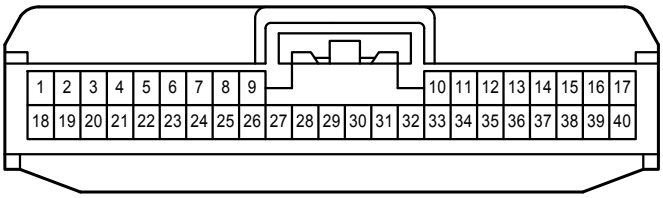

N 3
White

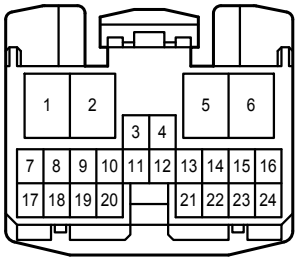

N 4
White

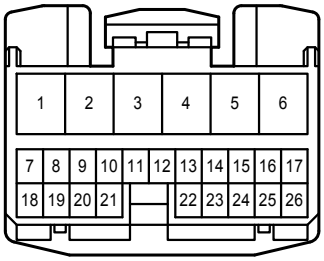

N 6
White

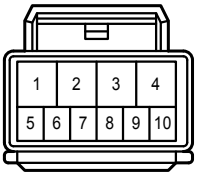

O 3
White

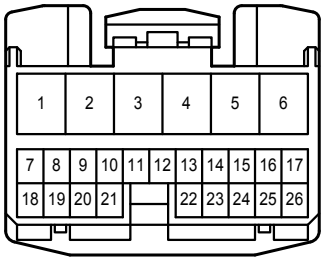

O 4
White

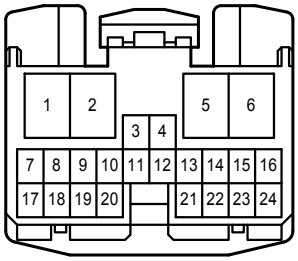

O 6
White

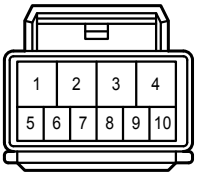

P 2
White

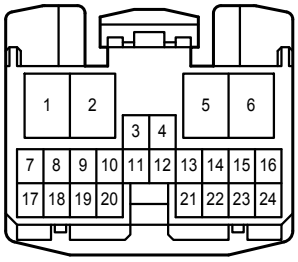

P 3
White

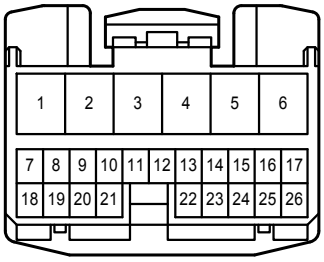

P 5
White

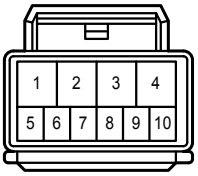

Q 2
White

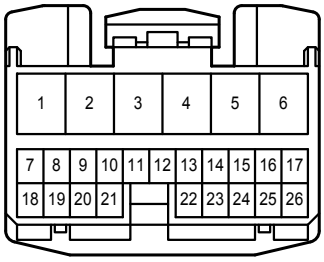

Q 3
White

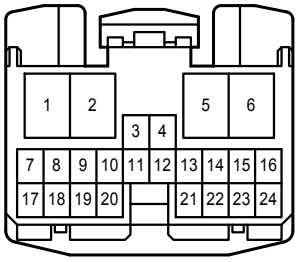

Q 5
White

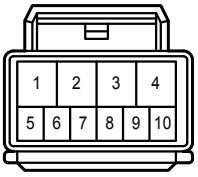

R 3
White

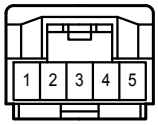

S 5
White

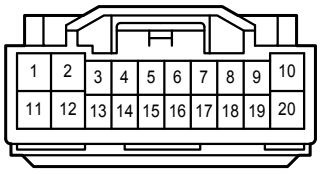

V 1
White

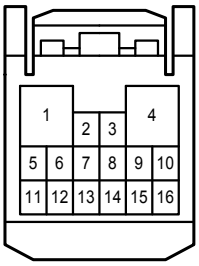

V 4
White

V 11
White

V 22
White

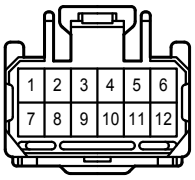

V 23
White

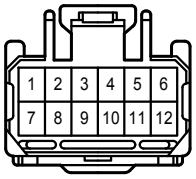

V 28
White

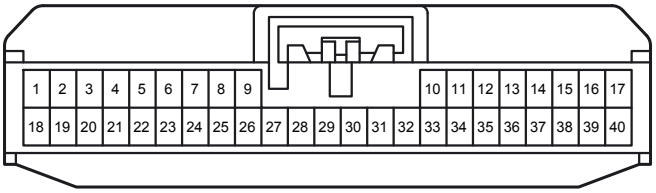

W 3
White

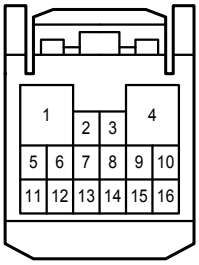

W 4
White

W 7
White

W 13
White

W 16
Yellow

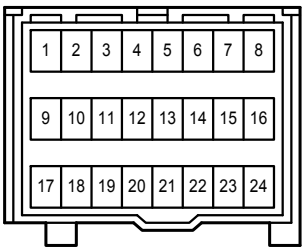

W 25
Gray

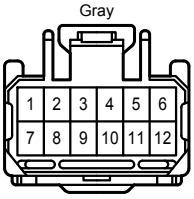

W 26
Gray

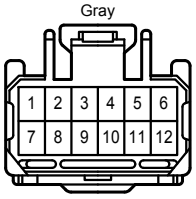

Z 2
White

2F
Black

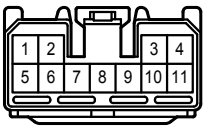

4D
White



4E
White



4F
White



4I
White



4J
White



4K
White



5A
White



5E
White



5M
White



DA
White

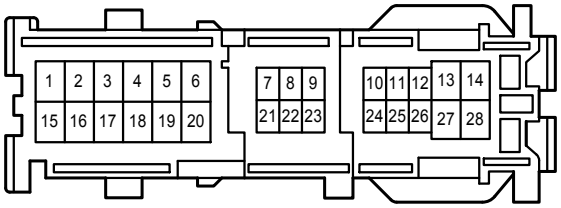

DD
White

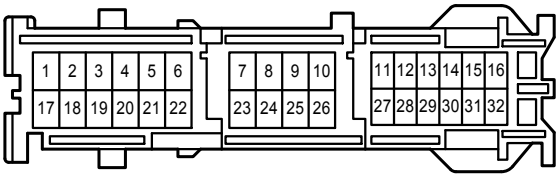

DJ
Gray

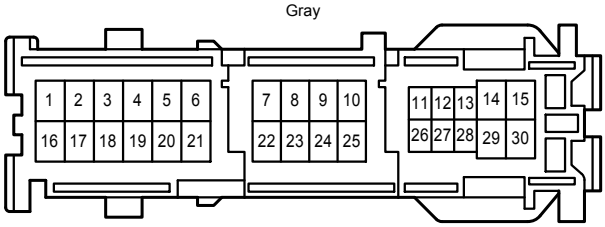

DK
Gray

LC
White

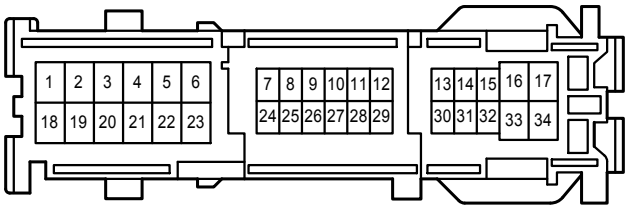

LF
White

PA
White

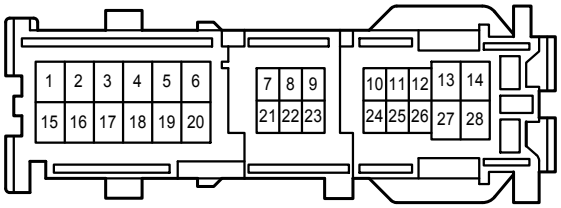

PD
White

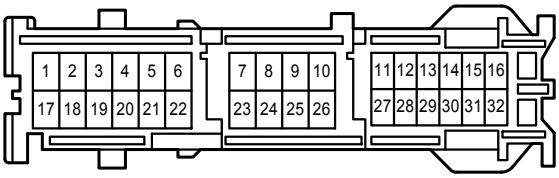

PJ
Gray

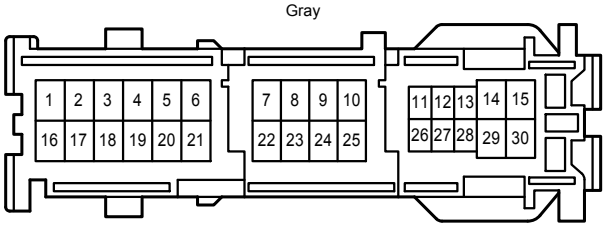

PL
Gray

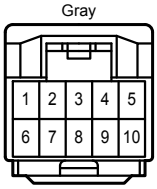

LA2
White

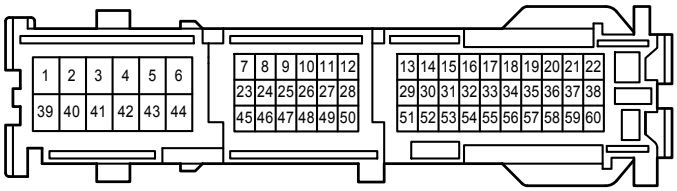

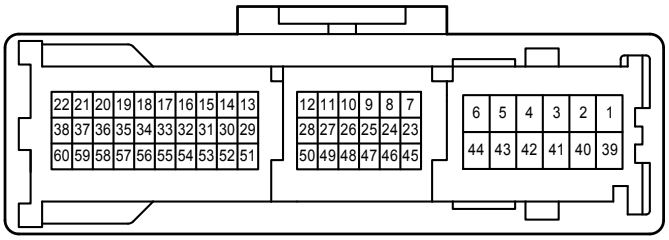

LV2
White

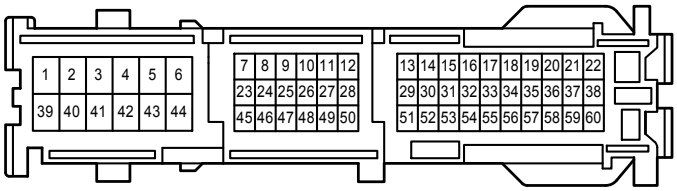

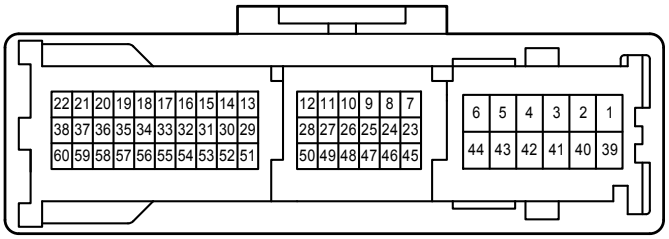

LW1
White

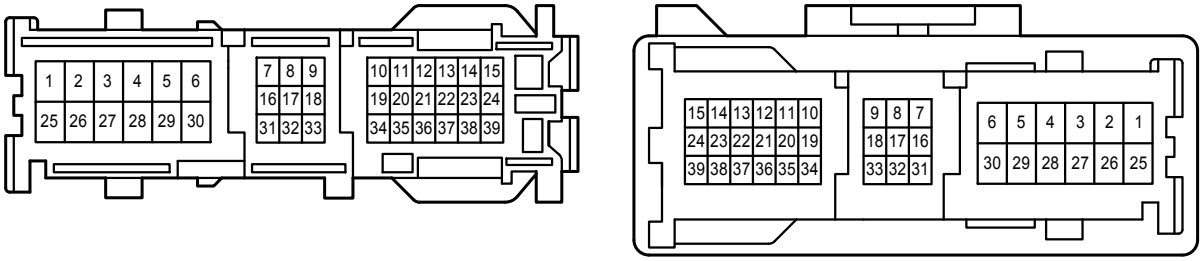

NR1
White

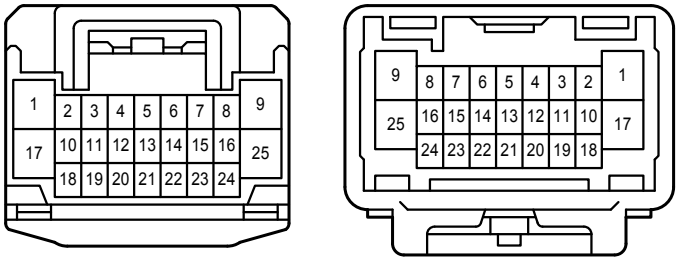

NV1
White

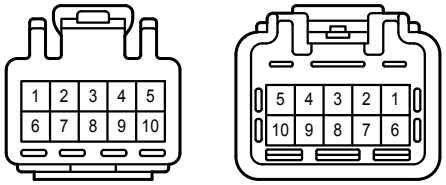

NV2
White

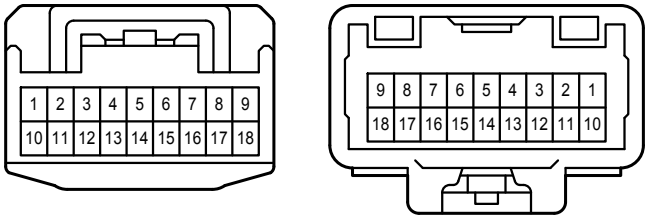

OS1
White

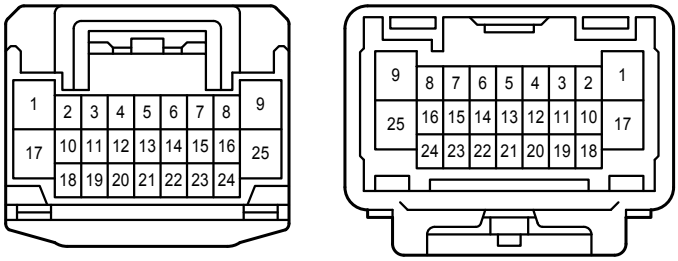

OW1
White

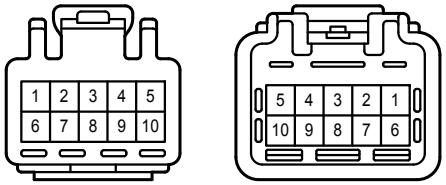

OW2
White

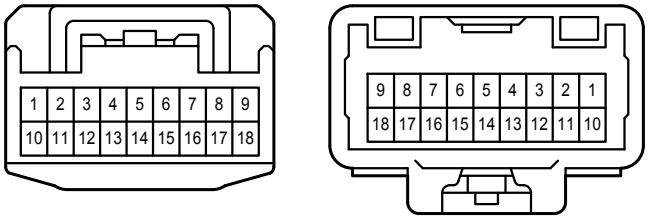

PV1
White

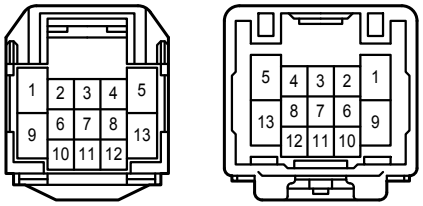

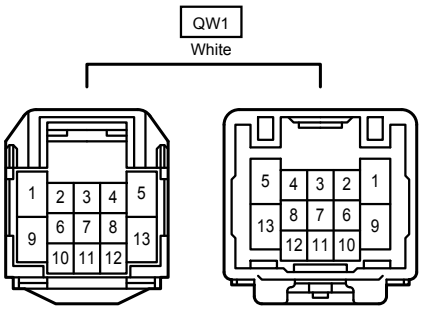
QW1
White
1 2 3 4 5
6 7 8
9 10 11 12 13
5 4 3 2 1
8 7 6
13 12 11 10 9

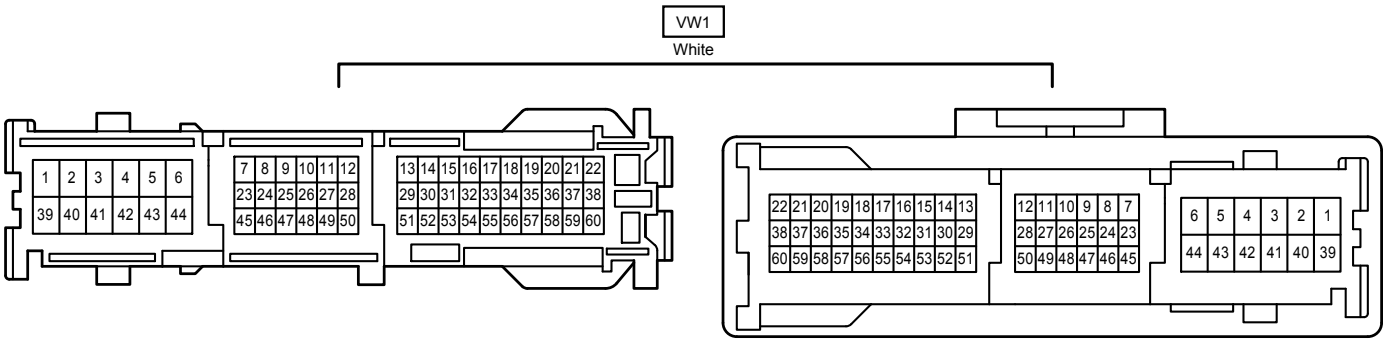
VW1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39

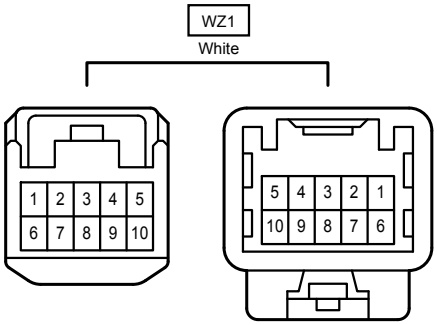
WZ1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6