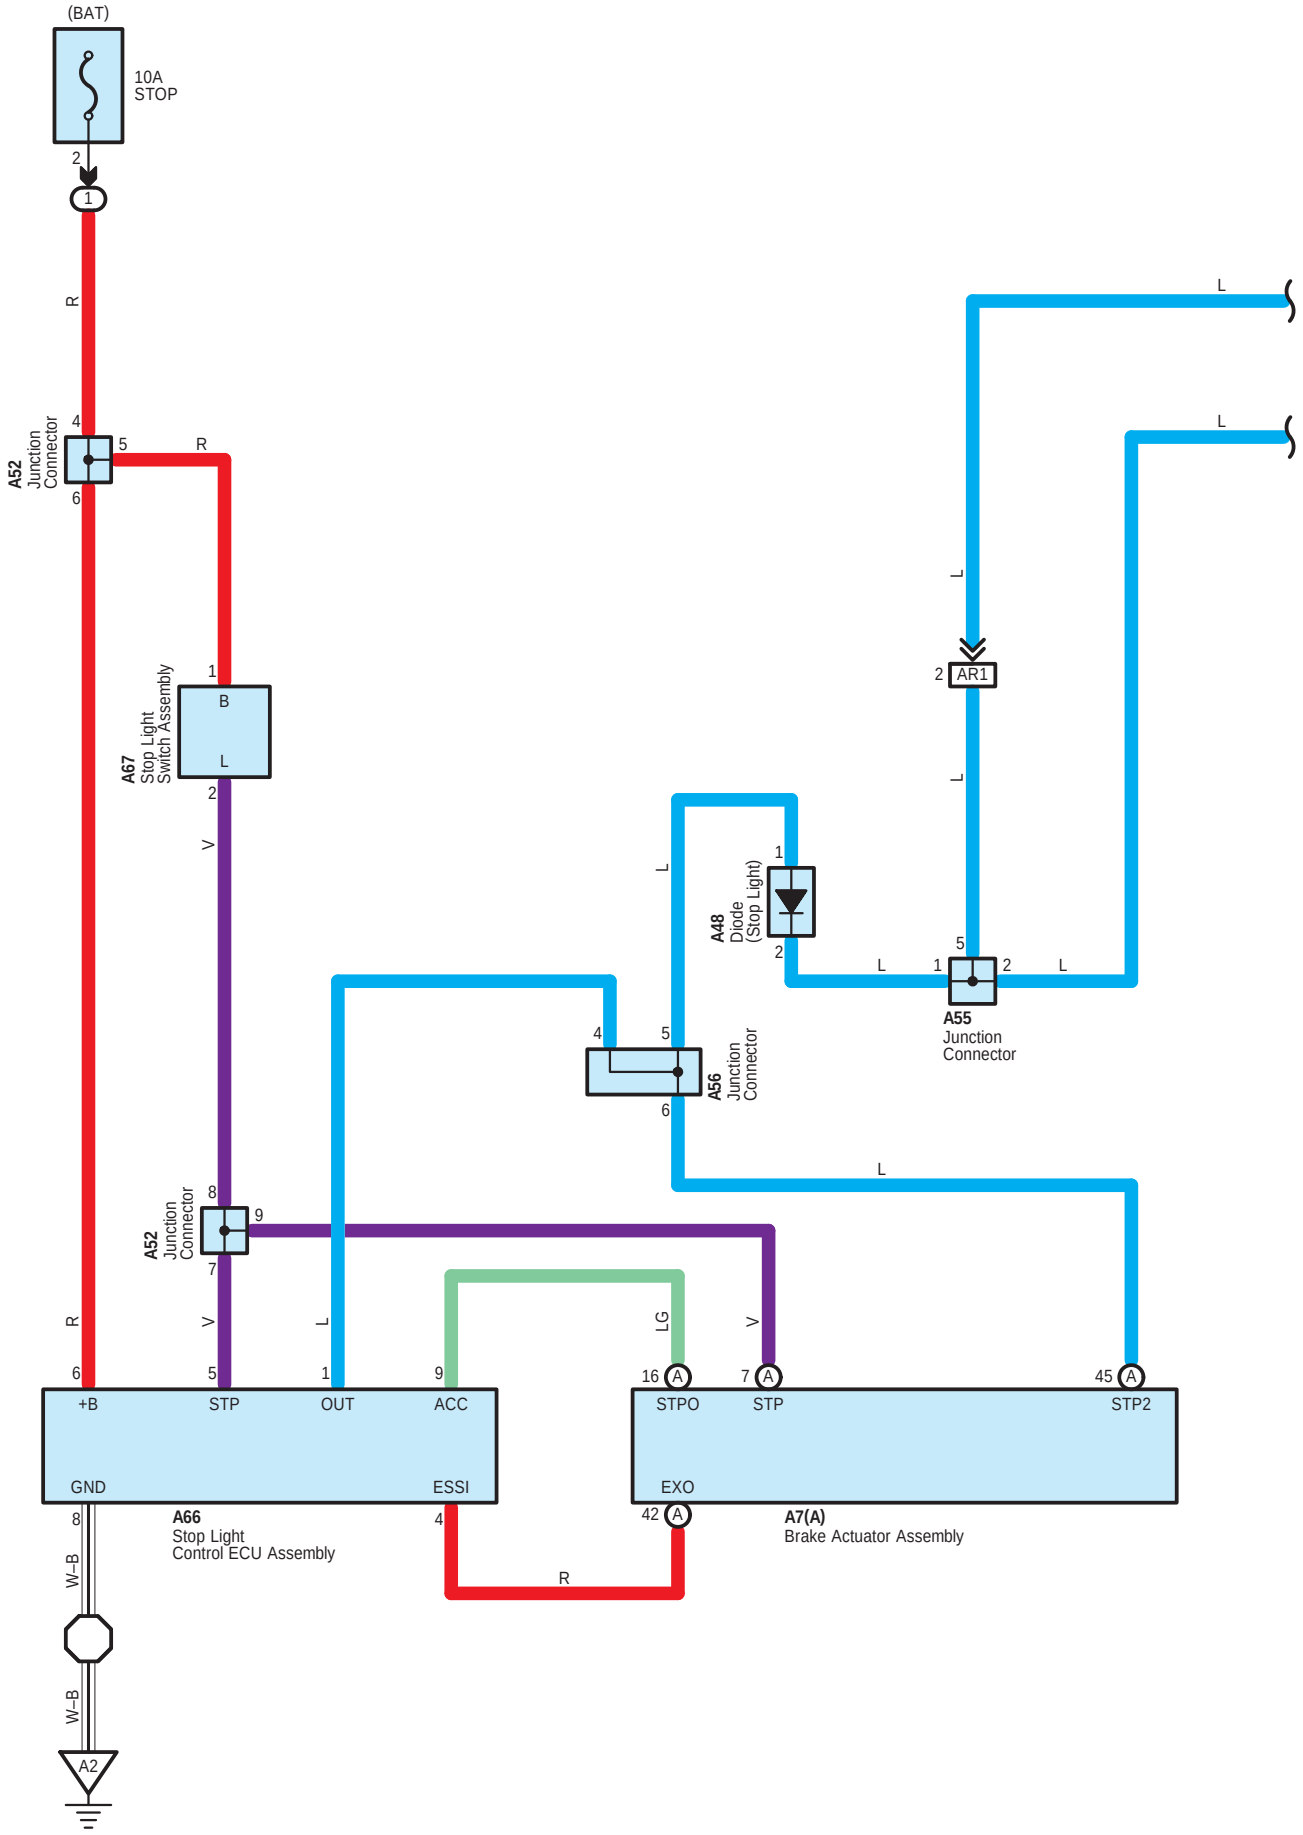
(BAT)
10A
STOP
A52
Junction
Connector
A67
Stop Light
Switch Assembly
A48
Diode
(Stop Light)
A55
Junction
Connector
A56
Junction
Connector
AR1
+B
STP
OUT
ACC
GND
ESSI
A66
Stop Light
Control ECU Assembly
STPO
STP
STP2
EXO
A7(A)
Brake Actuator Assembly
A2

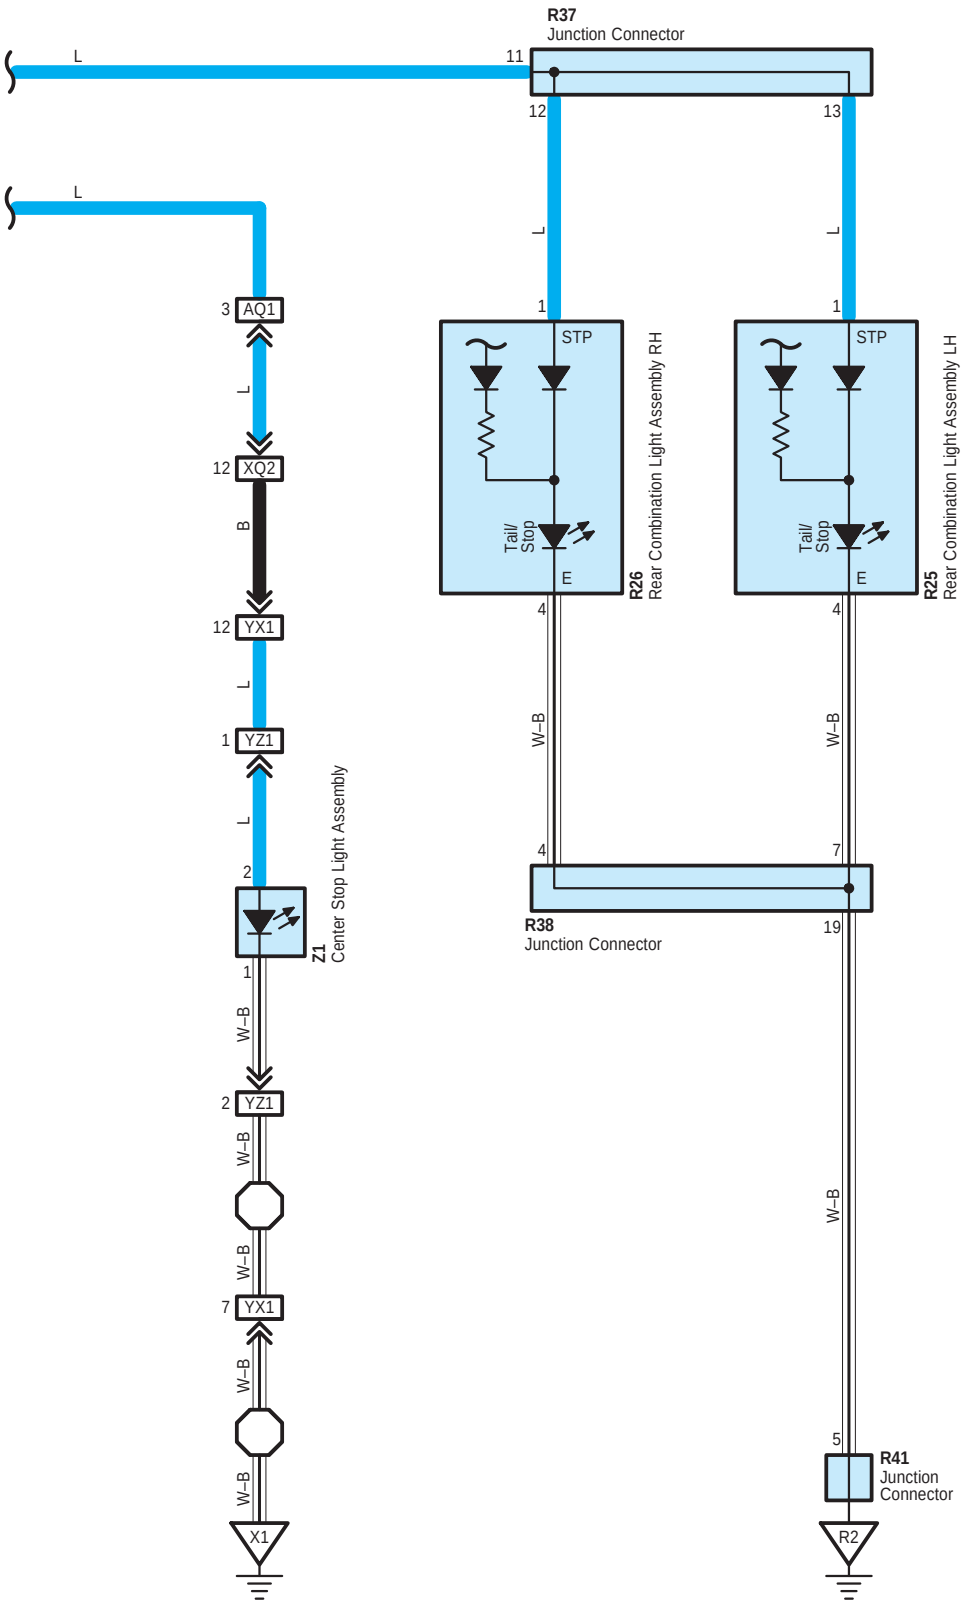
R37
Junction Connector
L
11
12
13
L
L
L
3
AQ1
1
STP
1
STP
L
12
XQ2
B
Tail/
Stop
E
R26
Rear Combination Light Assembly RH
Tail/
Stop
E
R25
Rear Combination Light Assembly LH
12
YX1
4
4
L
W–B
W–B
1
YZ1
L
4
7
2
R38
Junction Connector
19
Z1
Center Stop Light Assembly
1
W–B
2
YZ1
W–B
W–B
W–B
7
YX1
W–B
5
R41
Junction
Connector
W–B
X1
R2

A7
Black

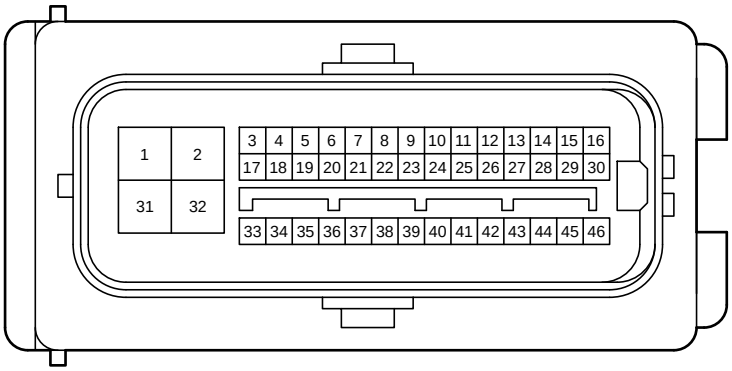

90980-12297

A48
Black

90980-10962

A52
White

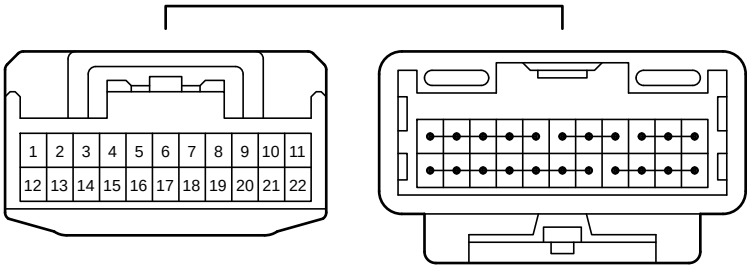

90980-12372

A55
Dark Gray

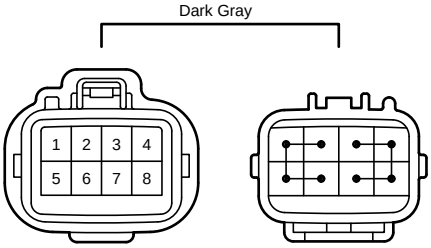

90980-10891

A56
White

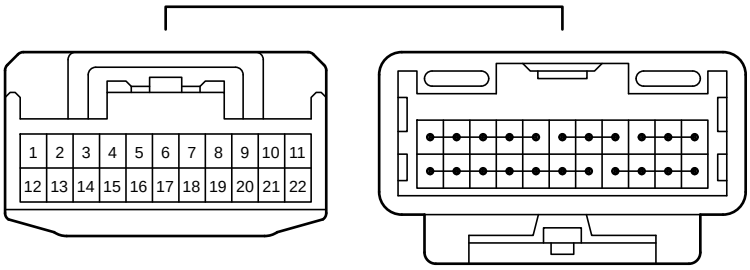

90980-12372

A66
Black

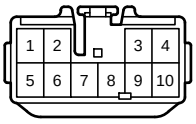

90980-10997

A67
White

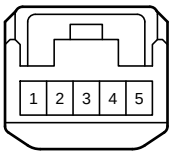

90980-12366

R25
Gray

90980-10942

R26
Black

90980-10942

R37
White

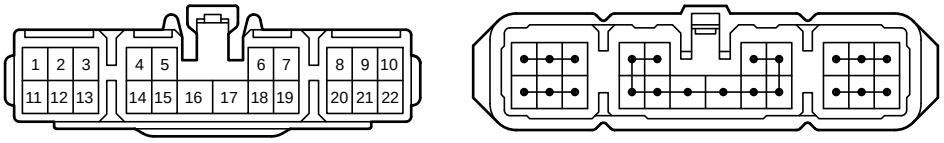

90980-11238

R38
Blue

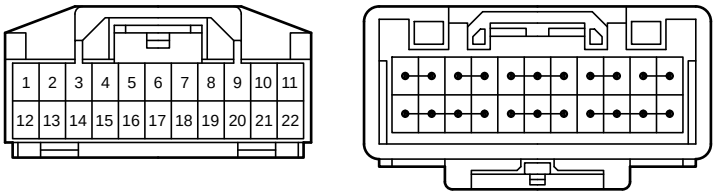

90980-10875

R41
White

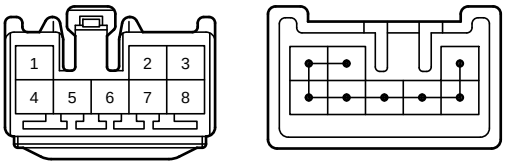

90980-11686

Z1
Blue



90980-11246

AQ1
White

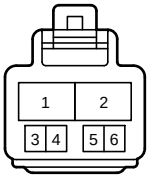

90980-10910

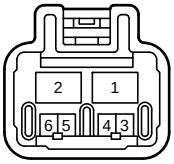

90980-10909

AR1
White

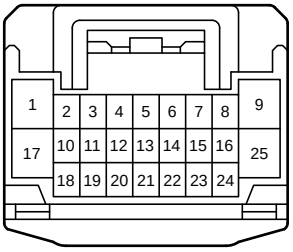

90980-12414

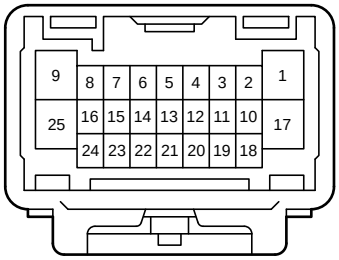

90980-12413

XQ2
White

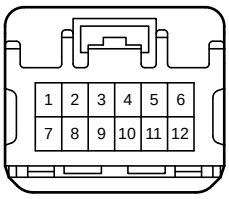

90980-12737

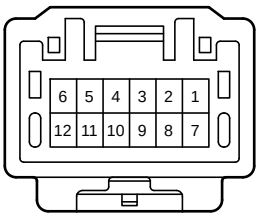

90980-12736

YX1
White

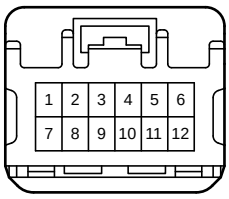

90980-12737

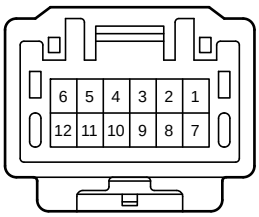

90980-12736

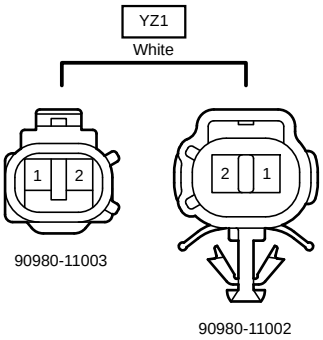
YZ1
White
1
2
90980-11003
2
1
90980-11002