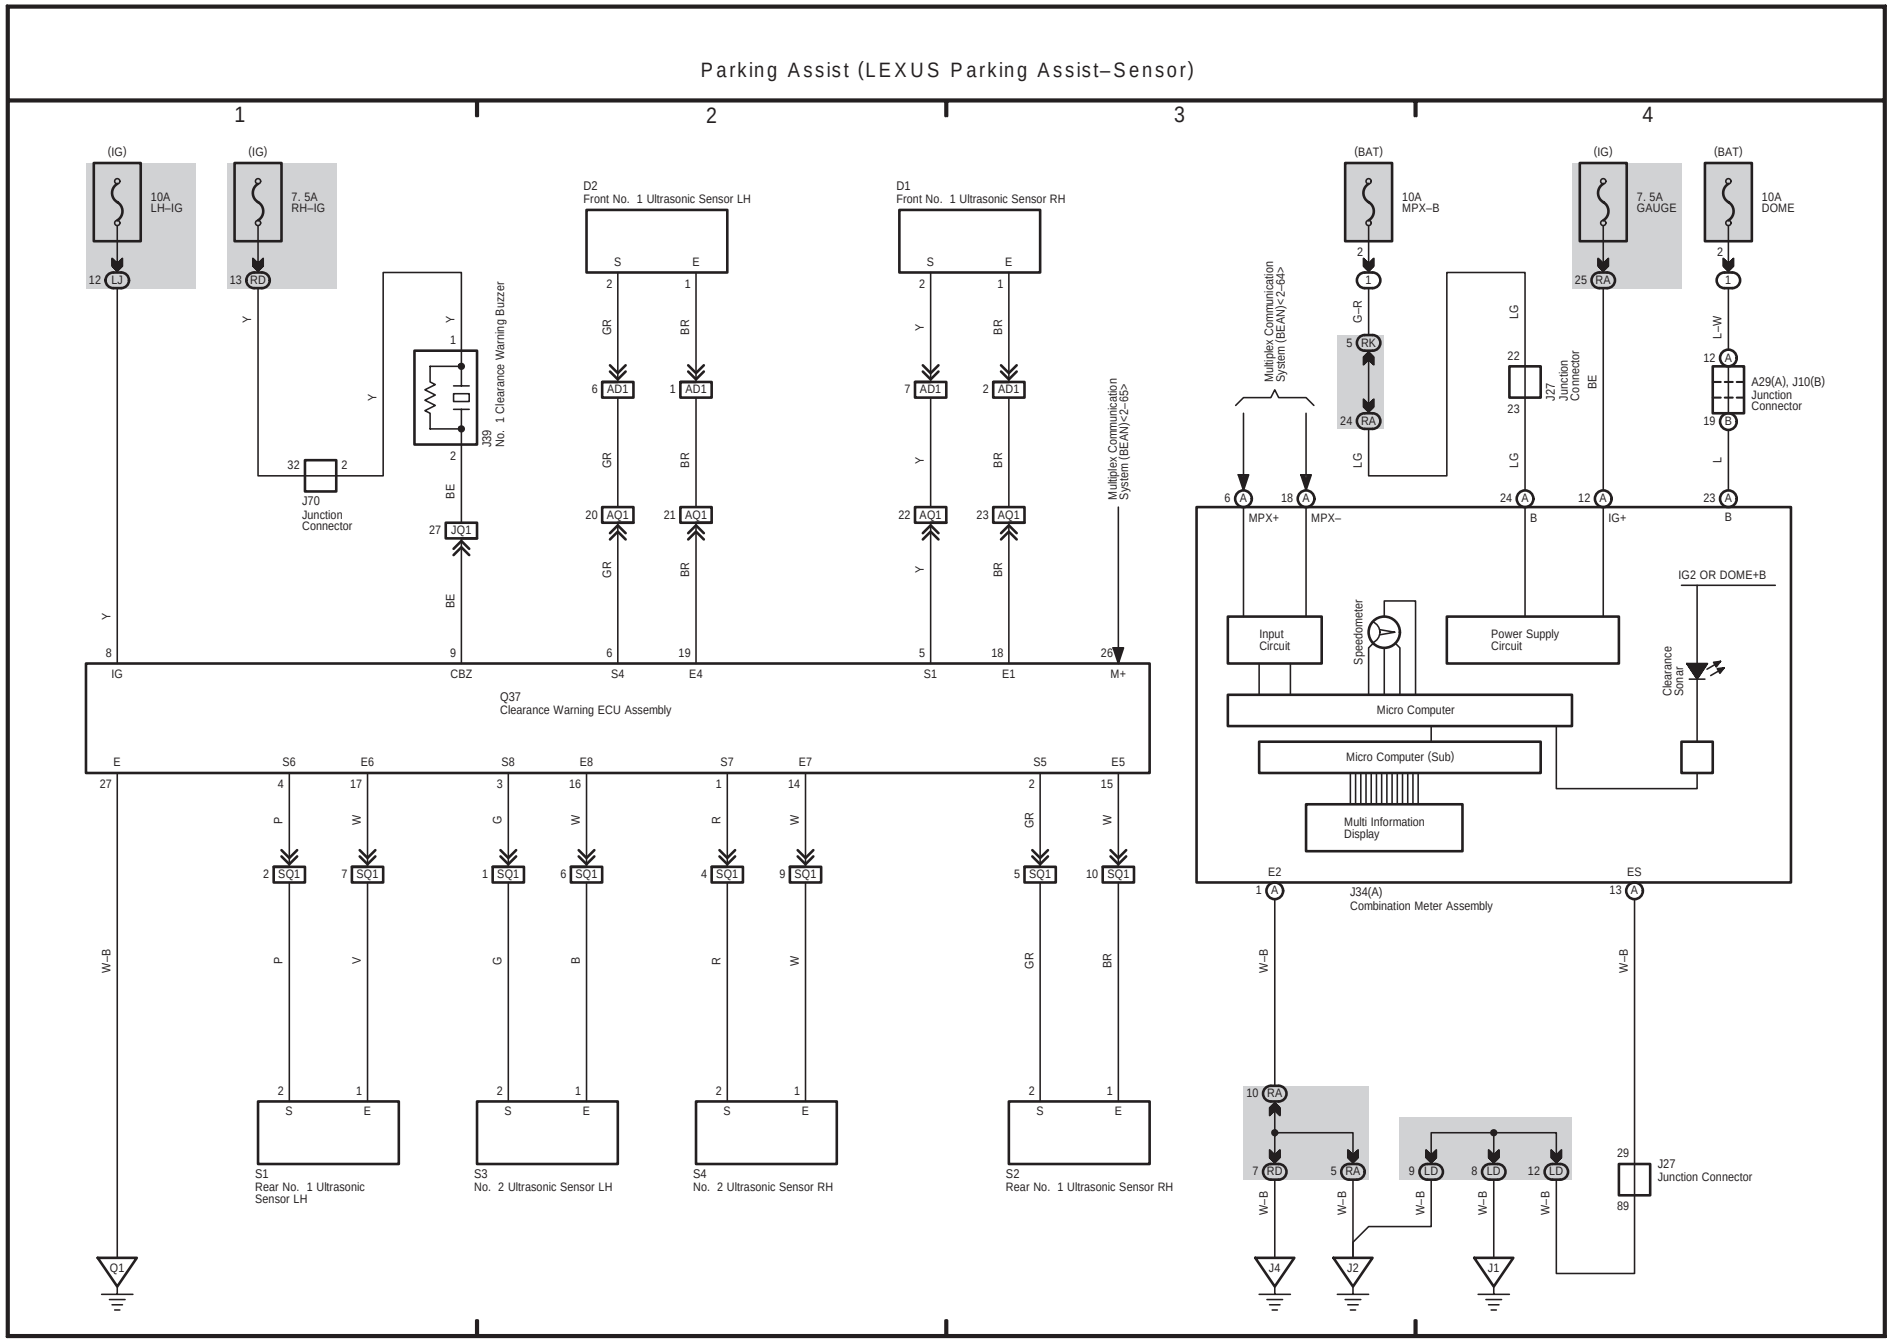
Parking Assist (LEXUS Parking Assist–Sensor)
1
2
3
4
(IG)
10A
LH–IG
7. 5A
RH–IG
D2
Front No. 1 Ultrasonic Sensor LH
D1
Front No. 1 Ultrasonic Sensor RH
J39
No. 1 Clearance Warning Buzzer
J70
Junction
Connector
Multiplex Communication
System (BEAN)<2–65>
Q37
Clearance Warning ECU Assembly
IG
CBZ
S4
E4
S1
E1
M+
S1
Rear No. 1 Ultrasonic
Sensor LH
S3
No. 2 Ultrasonic Sensor LH
S4
No. 2 Ultrasonic Sensor RH
S2
Rear No. 1 Ultrasonic Sensor RH
Q1
(BAT)
10A
MPX–B
7. 5A
GAUGE
10A
DOME
Multiplex Communication
System (BEAN)<2–64>
J27
Junction
Connector
A29(A), J10(B)
Junction
Connector
MPX+
MPX–
IG2 OR DOME+B
Input
Circuit
Speedometer
Power Supply
Circuit
Clearance
Sonar
Micro Computer
Micro Computer (Sub)
Multi Information
Display
J34(A)
Combination Meter Assembly
J27
Junction Connector
J4
J2
J1