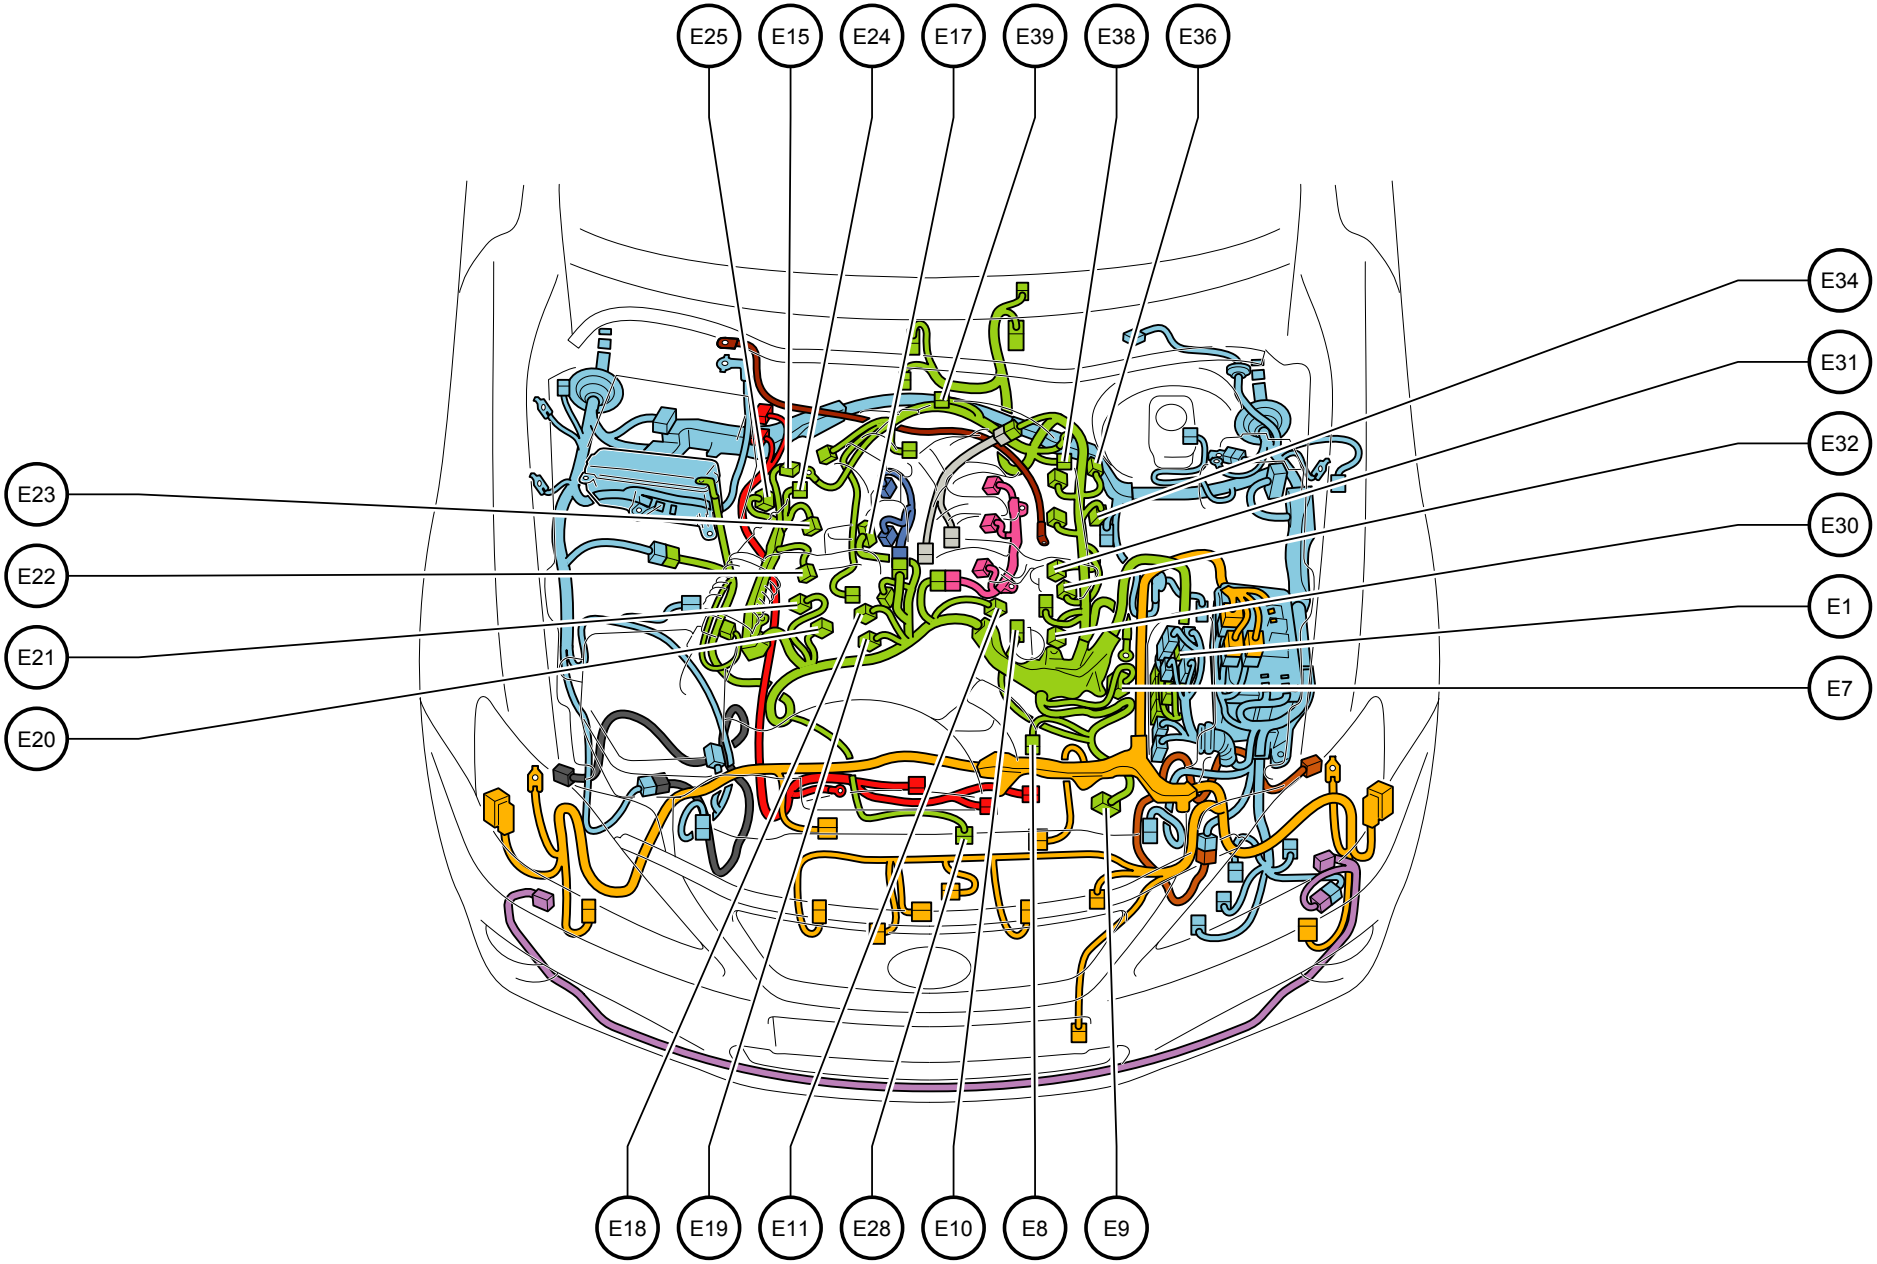
E25
E15
E24
E17
E39
E38
E36
E34
E31
E32
E30
E1
E7
E23
E22
E21
E20
E18
E19
E11
E28
E10
E8
E9

E 1 Junction Connector
E 7 Generator Assembly
E 8 With Magnet Clutch Compressor Assembly
E 9 Crank Position Sensor
E 10 Starter Assembly
E 11 Cam Timing Oil Control Valve Assembly (Bank 2 Intake Side)
E 15 Purge VSV
E 17 Throttle with Motor Body Assembly
E 18 Cam Timing Oil Control Valve Assembly (Bank 1 Intake Side)
E 19 VVT Sensor (Bank 1 Intake Side)
E 20 Noise Filter (Ignition No. 1)
E 21 Cam Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
E 22 Ignition Coil Assembly No. 1
E 23 Ignition Coil Assembly No. 3
E 24 Ignition Coil Assembly No. 5
E 25 VVT Sensor (Bank 1 Exhaust Side)
E 28 Engine Oil Pressure Switch Assembly
E 30 VVT Sensor (Bank 2 Intake Side)
E 31 Cam Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
E 32 Ignition Coil Assembly No. 2
E 34 VVT Sensor (Bank 2 Exhaust Side)
E 36 Noise Filter (Ignition No. 2)
E 38 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
E 39 Water By-Pass Glow Plug

E 1
Gray

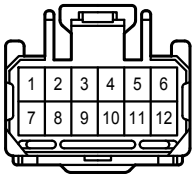


E 7
Black

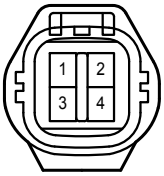


E 8
Gray

E 9
Black

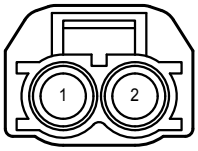


E 10
Black

E 11
Black

E 15
Black

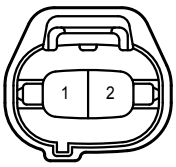


E 17
Black

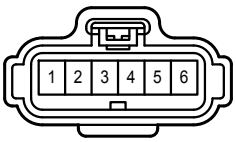


E 18
Black

E 19
Black

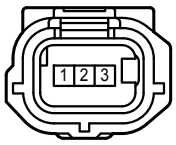


E 20
Gray

E 21
Black

E 22
Gray

E 23
Black




E 24
Gray

E 25
Black

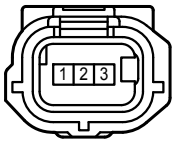


E 28
Gray

E 30
Black

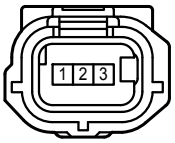


E 31
Black

E 32
Gray

E 34
Black

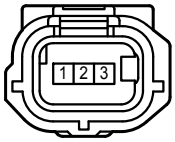


E 36
Gray

E 38
Dark Gray

E 39
Dark Gray