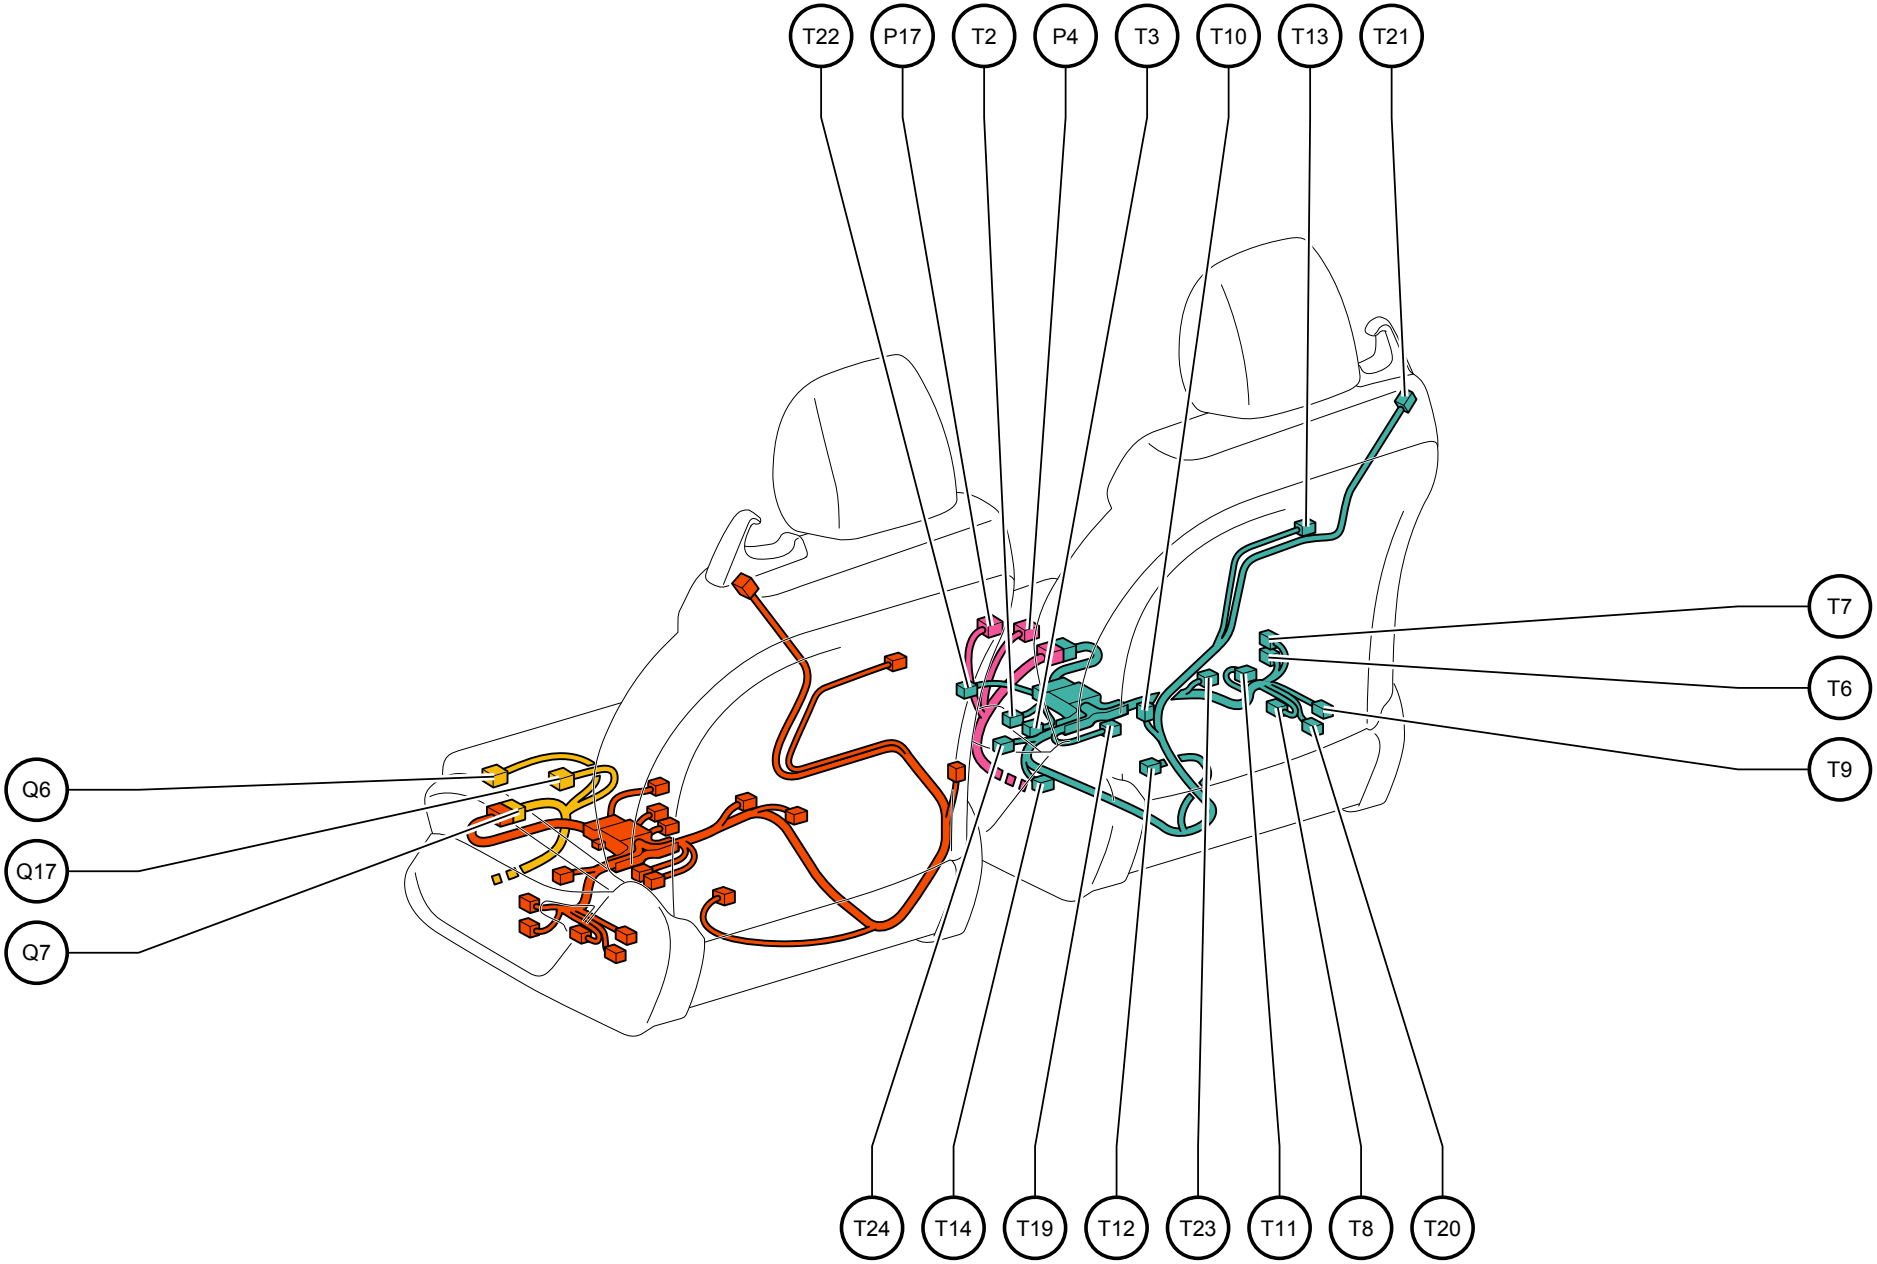
T22
P17
T2
P4
T3
T10
T13
T21
T7
T6
T9
Q6
Q17
Q7
T24
T14
T19
T12
T23
T11
T8
T20

P 4 Front Seat Inner Belt Assembly RH
P 17 Side Airbag Squib Circuit RH

Q 6 Front Seat Inner Belt Assembly LH
Q 7 Junction Connector
Q 17 Side Airbag Squib Circuit LH

T 2 Seat Heater Control Sub-Assembly RH
T 3 Front Seat Inner Belt Assembly RH
T 6 Front Position Control ECU & Switch Assembly RH
T 7 Front Position Control ECU & Switch Assembly RH
T 8 Front Lumbar Power Seat Switch RH
T 9 Front Power Seat Reclining Position Motor Assembly RH
T 10 Front Lumbar Support Motor Assembly RH
T 11 Junction Connector
T 12 Seat Cushion Climate Control Blower RH
T 13 Seat Back Climate Control Blower RH
T 14 Junction Connector
T 19 Diode (Tension Reducer RH)
T 20 Reclining Position Sensor RH
T 21 Front Power Seat Slide Switch Assembly RH
T 22 Front Power Seat Slide Position Motor and Sensor RH (Front Seat Adjuster Assembly RH)
T 23 Front Power Seat Vertical Position Motor and Sensor RH (Front Seat Adjuster Assembly RH)
T 24 Front Power Seat Lifter Position Motor and Sensor RH (Front Seat Adjuster Assembly RH)

P 4
Gray

P 17
Yellow

Q 6
Gray

Q 7
White

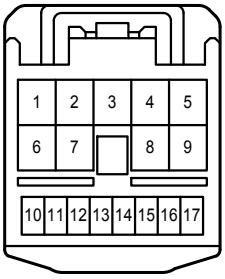

Q 17
Yellow

T 2
White

T 3
White

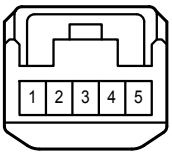

T 6
White



T 7
White

T 8
White

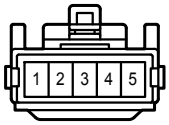

T 9
Black



T 10
White



T 11
White



T 12
White

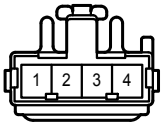

T 13
White

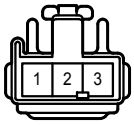

T 14
White

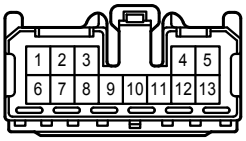

T 19
White

T 20
White

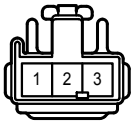

T 21
White

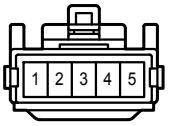

T 22
Black

T 23
Black

T 24
Black