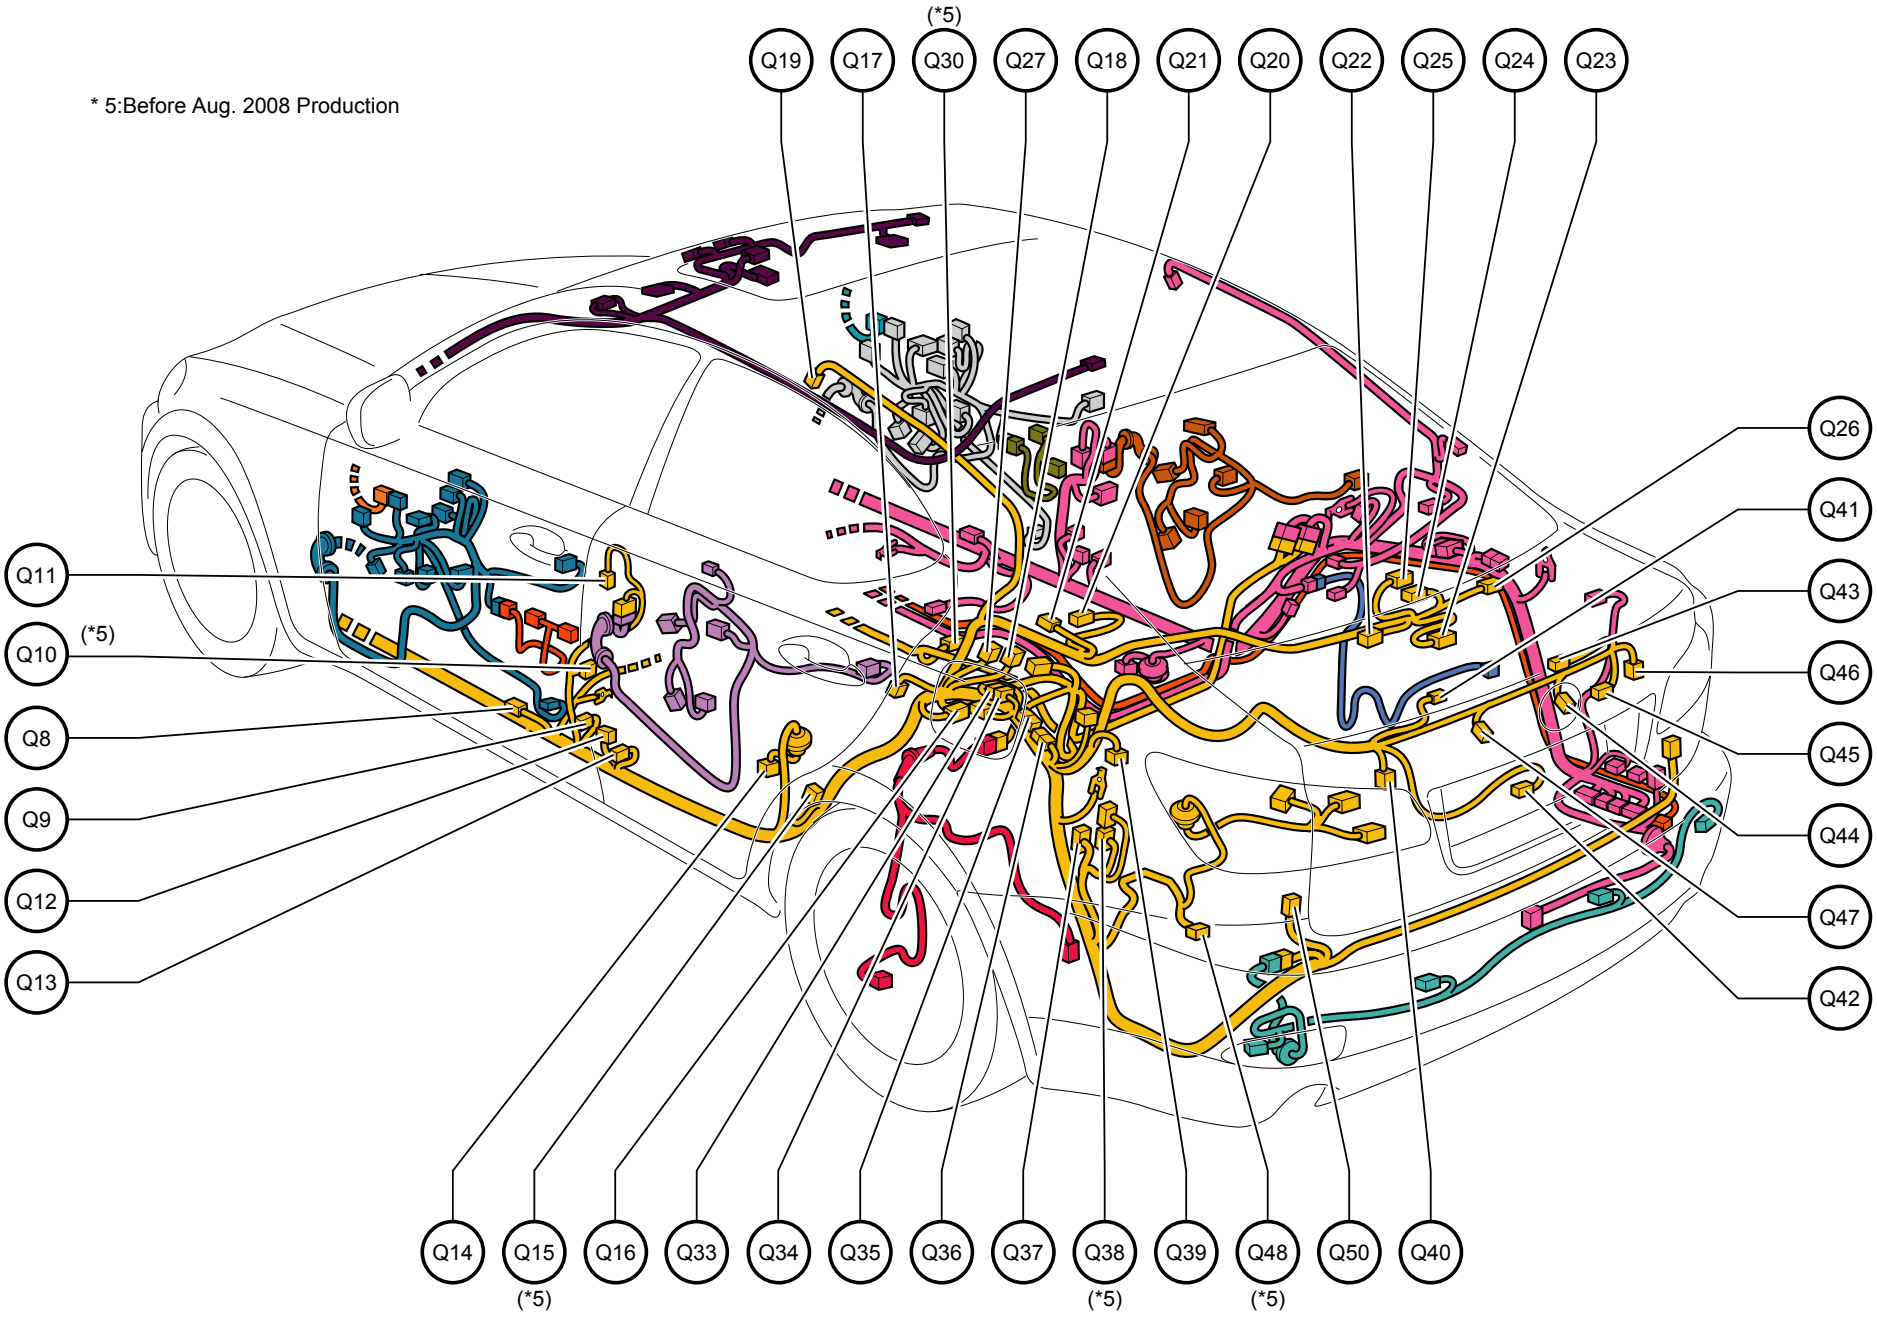
* 5:Before Aug. 2008 Production
Q19
Q17
(*5)
Q30
Q27
Q18
Q21
Q20
Q22
Q25
Q24
Q23
Q26
Q41
Q43
Q46
Q45
Q44
Q47
Q42
Q11
Q10
(*5)
Q8
Q9
Q12
Q13
Q14
Q15
(*5)
Q16
Q33
Q34
Q35
Q36
Q37
Q38
(*5)
Q39
Q48
(*5)
Q50
Q40

Q 8 Outer Scuff Lamp (LH)
Q 9 Front Seat Outer Belt (LH)
Q 10 Side Airbag Sensor (Front LH)
Q 11 Door Courtesy SW (Front LH)
Q 12 Pretensioner (Front LH)
Q 13 Front Seat Outer Belt Motor (LH)
Q 14 Fuel Suction Pump and Gage Assembly
Q 15 Side Airbag Sensor (Rear LH)
Q 16 Diode (Luggage Room Lamp)
Q 17 Door Courtesy SW (Rear LH)
Q 18 Noise Filter (Stop Lamp)
Q 19 Curtain Shield Airbag Squib (LH)
Q 20 Pretensioner (Rear LH)
Q 21 Rear Window Defogger
Q 22 Speaker (Satellite LH)
Q 23 Room Lamp (Luggage)
Q 24 Rear Sunshade Relay
Q 25 Center Stop Lamp
Q 26 Speaker (Satellite RH)
Q 27 Noise Filter (Luggage Room Lamp)
Q 30 Electrical Key Oscillator (Rear Seat)
Q 33 Junction Connector
Q 34 Junction Connector
Q 35 Junction Connector
Q 36 Junction Connector
Q 37 Clearance Warning ECU
Q 38 Seat Belt Control ECU
Q 39 Fuel Lid Opener Motor
Q 40 Rear Combination Lamp (LH)
Q 41 Luggage Compartment Door Lock Cylinder
Q 42 Door Lock Assembly (Luggage)
Q 43 Television Camera
Q 44 License Plate Lamp (RH)
Q 45 Luggage Electrical Key SW
Q 46 Rear Combination Lamp (RH)
Q 47 License Plate Lamp (LH)
Q 48 Electrical Key Oscillator (Inside Luggage Room)
Q 50 Rear Combination Lamp (LH)

Q 8
White

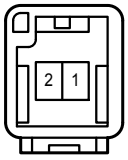

Q 9
White



Q 10
Yellow

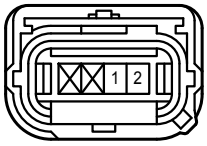

Q 11
White

Q 12
Yellow

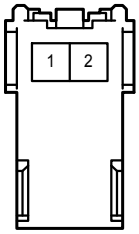

Q 13
White



Q 14
White

Q 15
Yellow

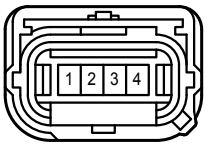

Q 16
Black

Q 17
White

Q 18
Gray

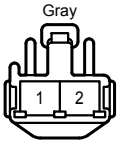

Q 19
Black



Q 20
Yellow

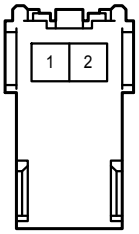

Q 21
White

Q 22
Blue



Q 23
Gray

Q 24
Black

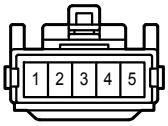

Q 25
White



Q 26
Blue



Q 27
Gray

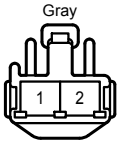

Q 30
White

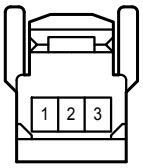

Q 33
White

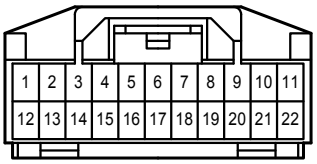

Q 34
White

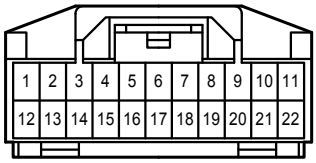

Q 35
White



Q 36
White

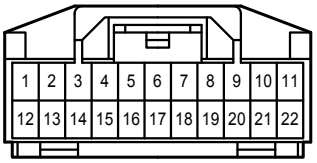

Q 37
White

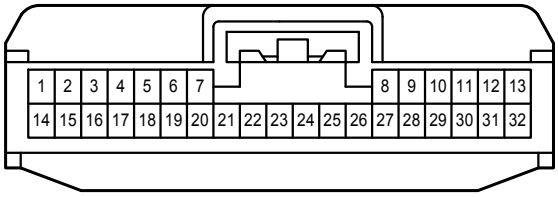

Q 38
White

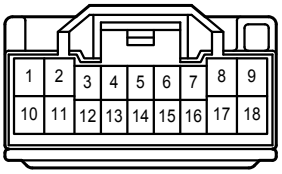

Q 39
Black

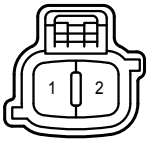

Q 40
White



Q 41
White



Q 42
Black

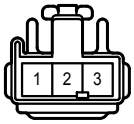

Q 43
White



Q 44
Gray

Q 45
White



Q 46
White



Q 47
Gray



Q 48
White

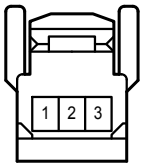

(Before Jul. 2006 Production)

Q 48
Blue

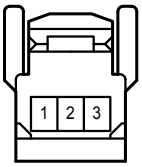

(From Jul. 2006 Production)
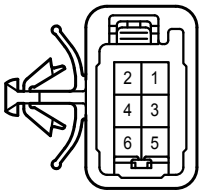
Q 50
White