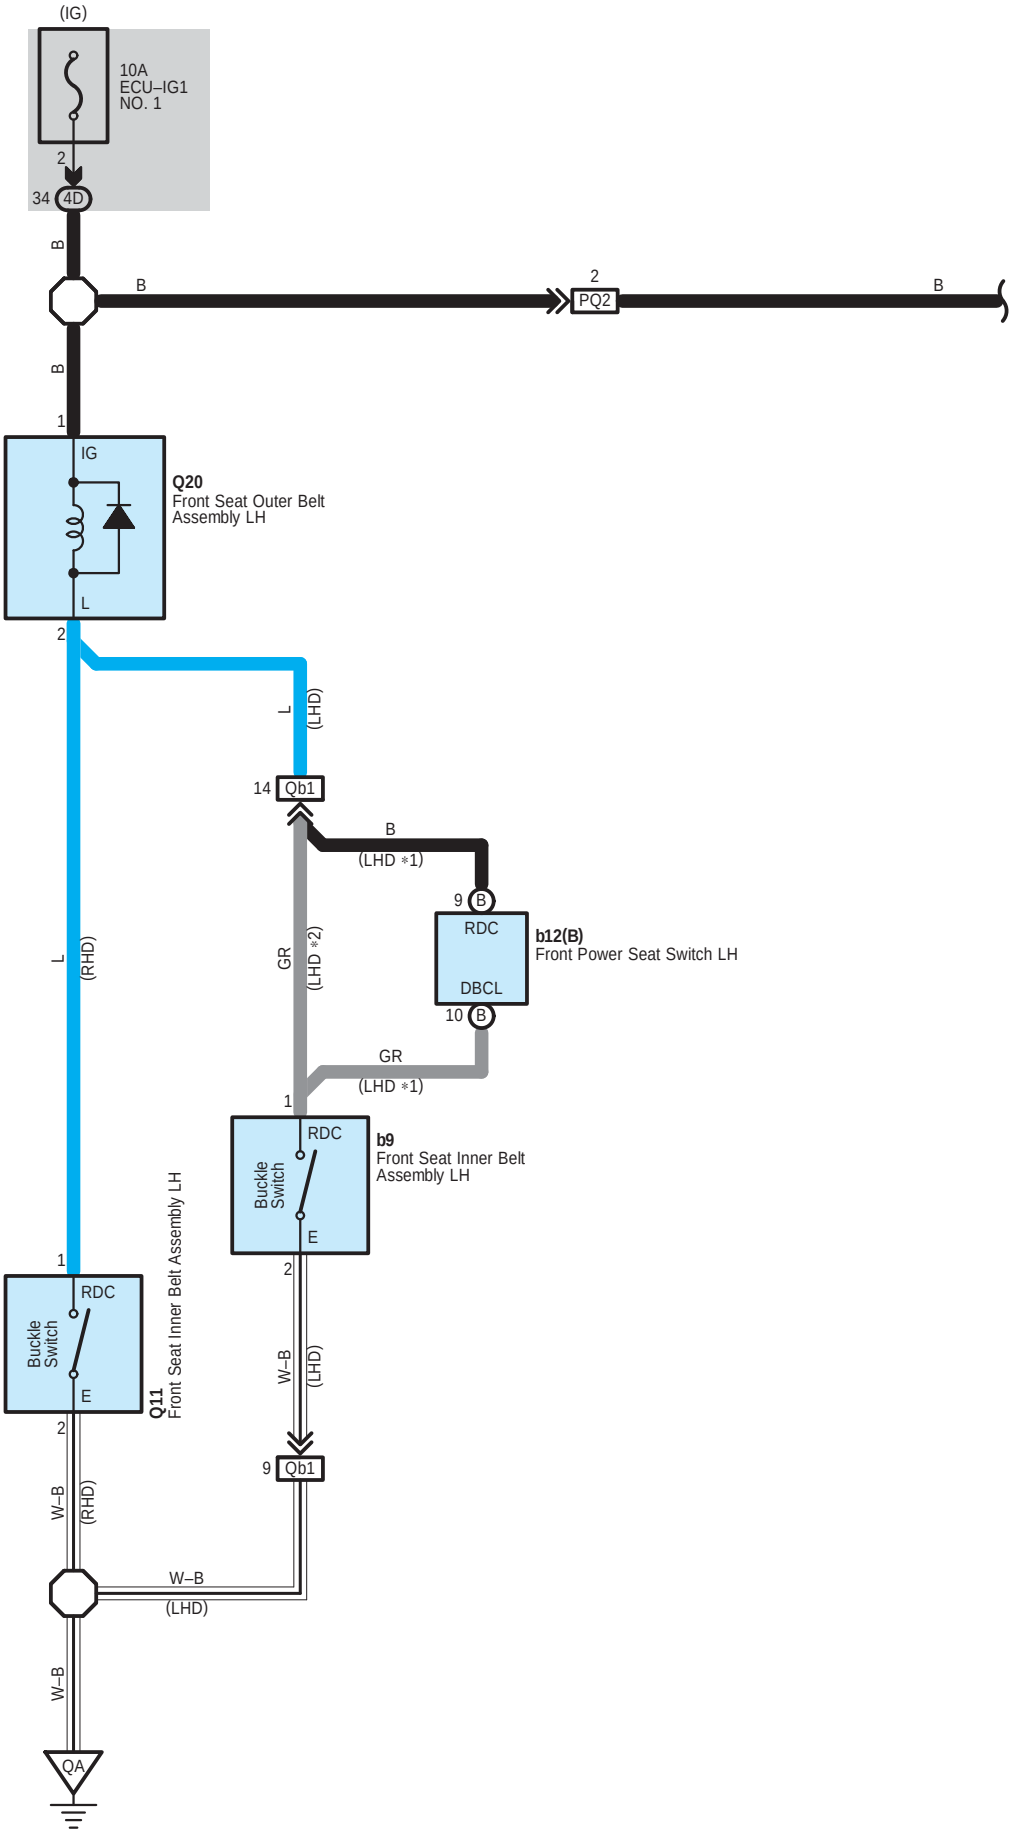
(IG)
10A
ECU–IG1
NO. 1
2
34 4D
B
B
2
PQ2
B
B
1
IG
Q20
Front Seat Outer Belt
Assembly LH
L
2
L
(LHD)
14 Qb1
B
(LHD *1)
9 B
RDC
b12(B)
Front Power Seat Switch LH
DBCL
10 B
L
(RHD)
GR
(LHD *2)
GR
(LHD *1)
1
RDC
b9
Front Seat Inner Belt
Assembly LH
Buckle
Switch
E
2
1
RDC
Buckle
Switch
E
Q11
Front Seat Inner Belt Assembly LH
W–B
(LHD)
2
9 Qb1
W–B
(RHD)
W–B
(LHD)
W–B
QA

∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
∗ 3 : w/ Power Seat w/ Seat Position Memory
∗ 4 : w/ Power Seat w/o Seat Position Memory
∗ 5 : w/o Power Seat

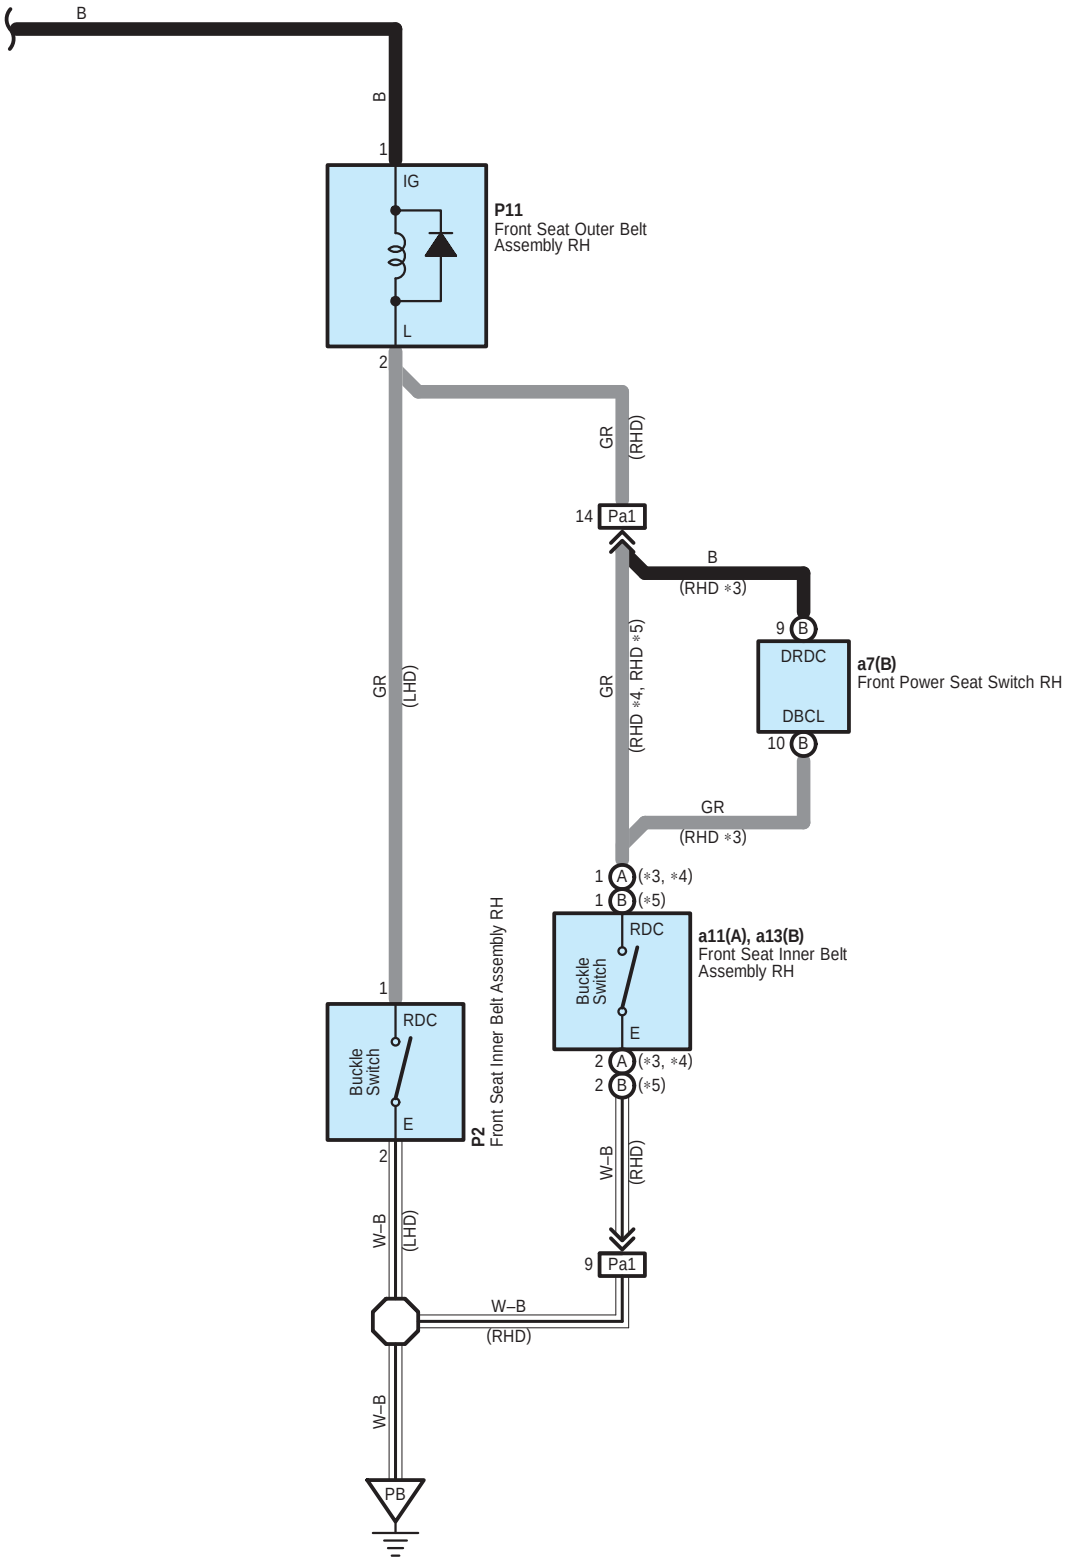

P2
White

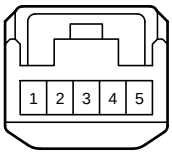

90980-12366

P11
White



90980-12063

Q11
White

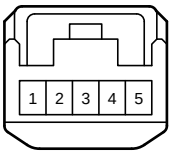

90980-12366

Q20
White



90980-12063

a7
White

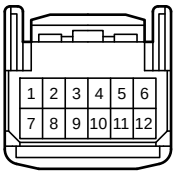

90980-12552

a11
White

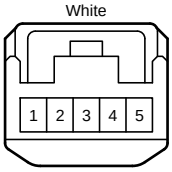

90980-12366

a13
White

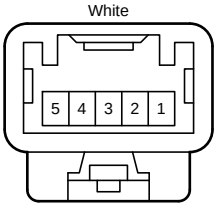

90980-12365

b9
White

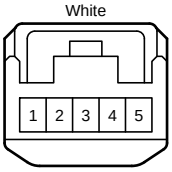

90980-12366

b12
White

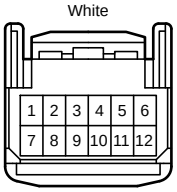

90980-12552

4D
White

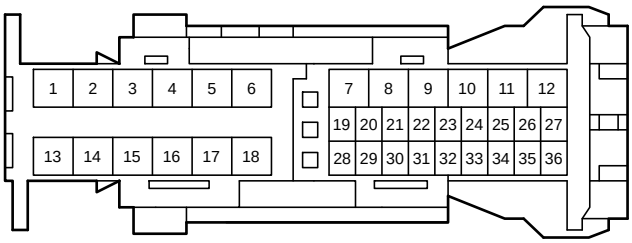

90980-12944

PQ2
White

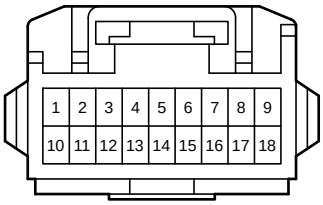

82824-53070

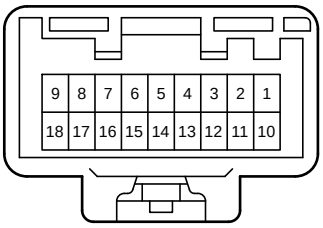

82824-53060

Pa1
White

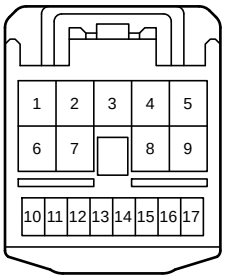

90980-12374

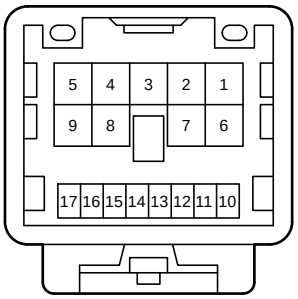

90980-12373

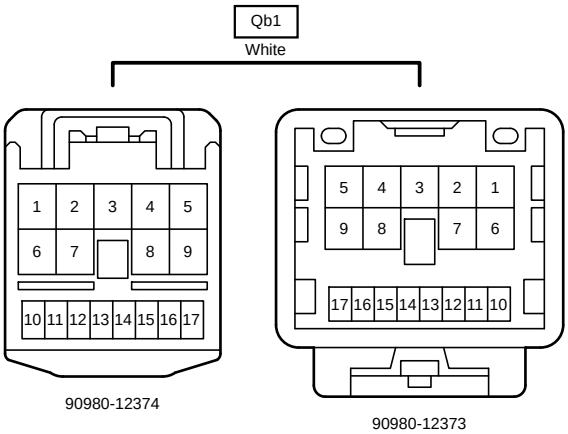
Qb1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
90980-12374
90980-12373