: Driver Side J/B	Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)

* 1:30A P/SEAT D NO.1

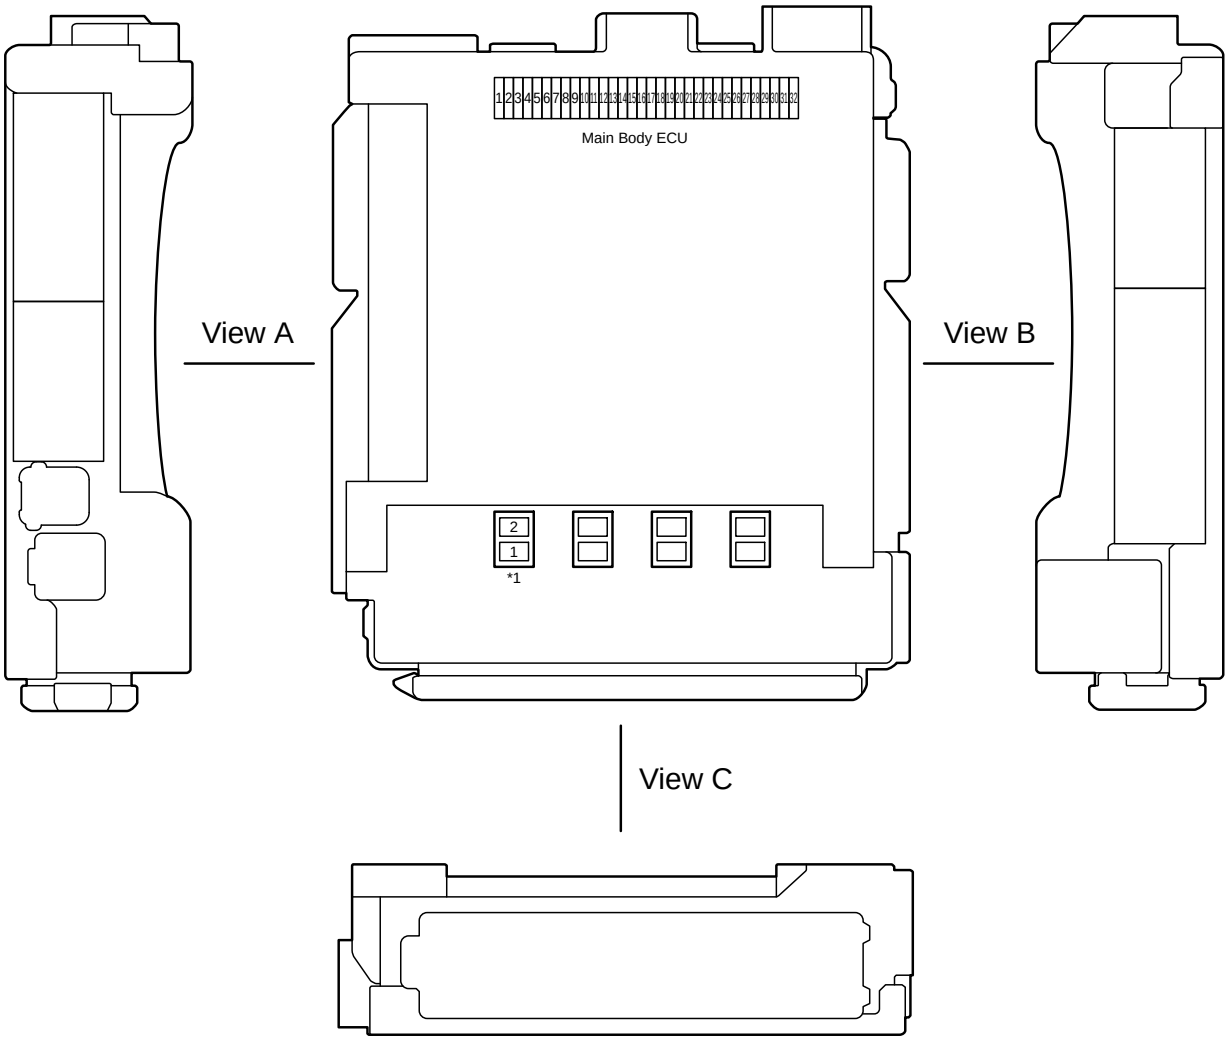

: Driver Side J/B	Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)

View A

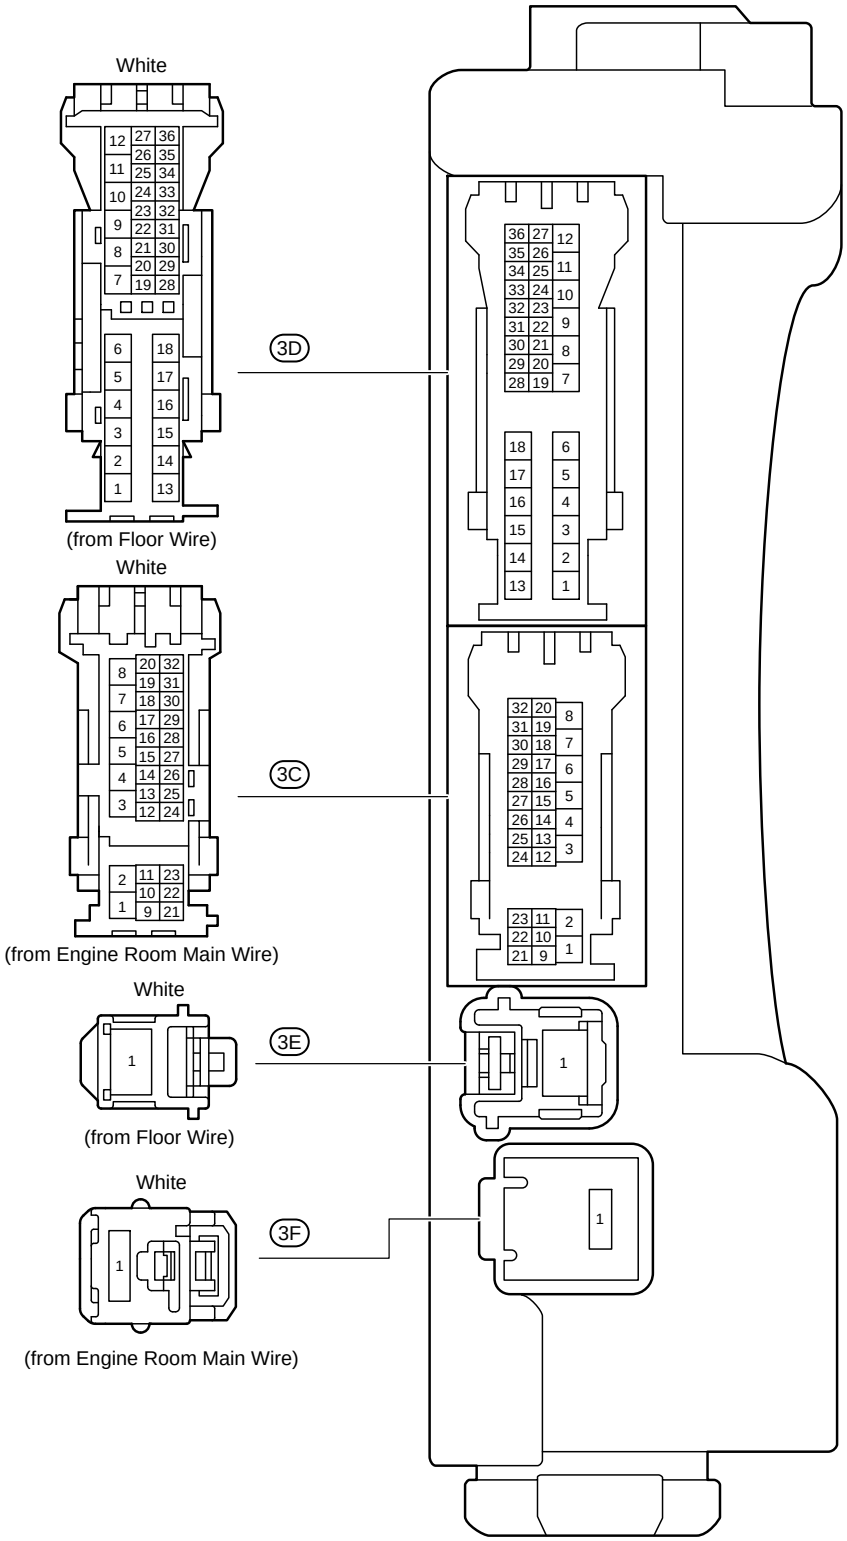

: Driver Side J/B	Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)

View B

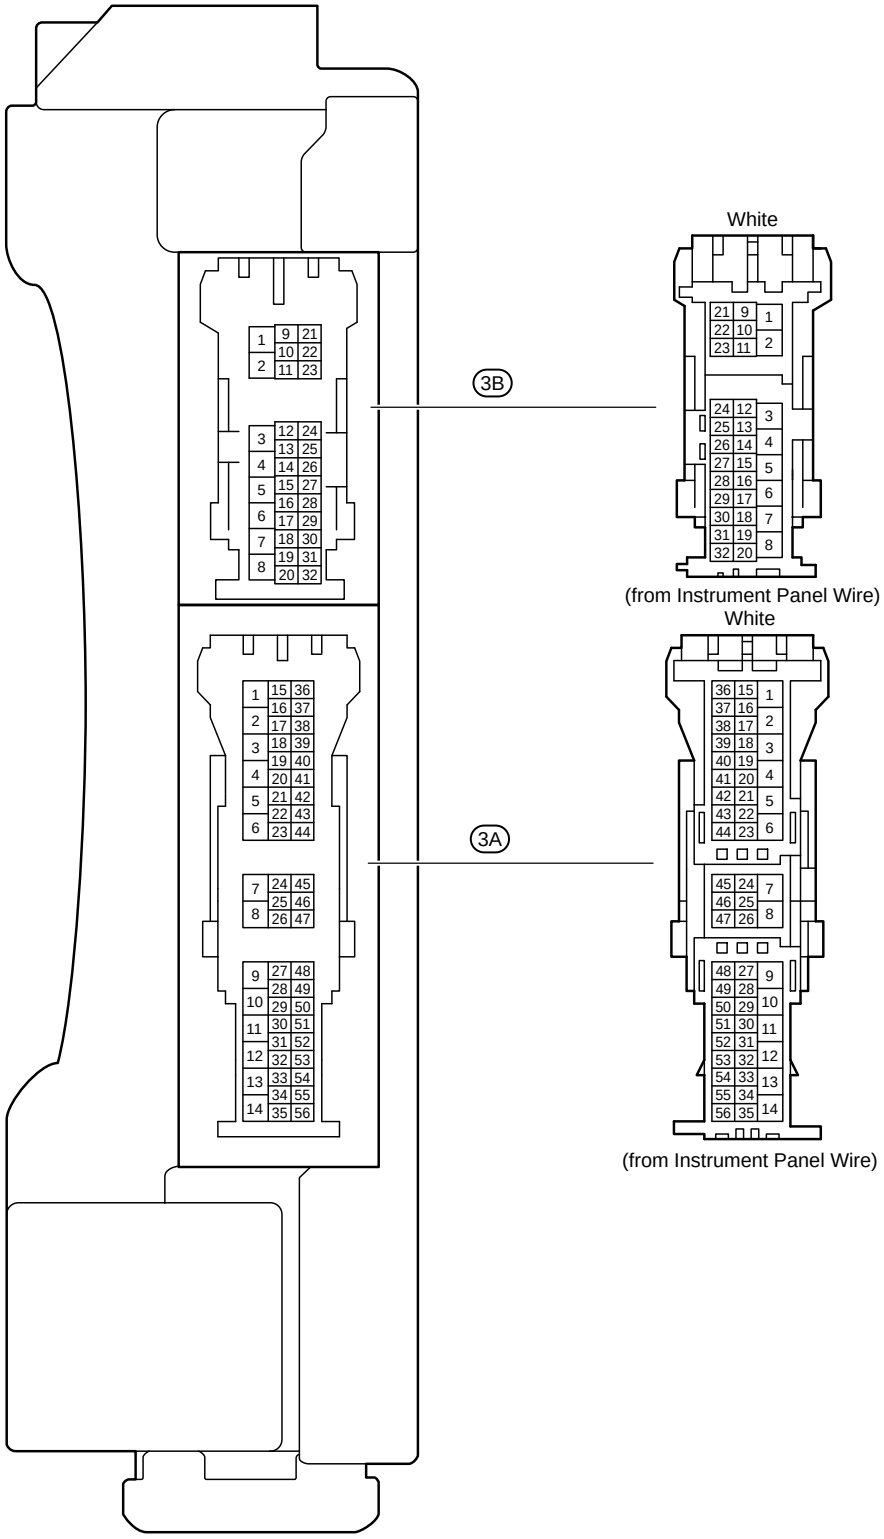

: Driver Side J/B	Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)

View C
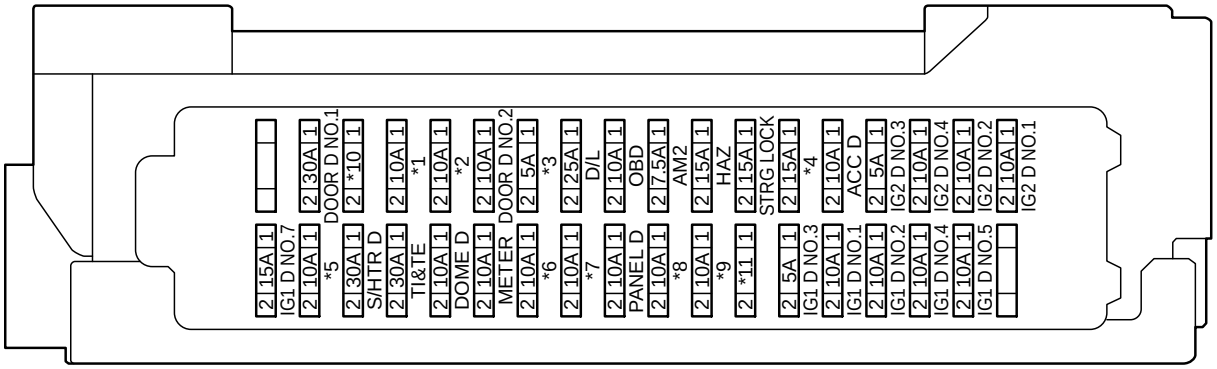
* 1:ABS MAIN NO.1
* 2:ABS MAIN NO.2
* 3:ECU-B D NO.1
* 4:P/OUTLET NO.1
* 5:ABS MAIN NO.3
* 6:MPX-B D NO.2
* 7:MPX-B D NO.1
* 8:DOOR D NO.3 (LHD)
  PANEL D (RHD)
* 9:ECU-B D NO.2
* 10:15A FUEL OPN (LHD)
  5A STOP (RHD)
* 11:5A STOP (LHD)
  10A DOOR D NO.3 (RHD)