Position of Parts in Instrument Panel (LHD)

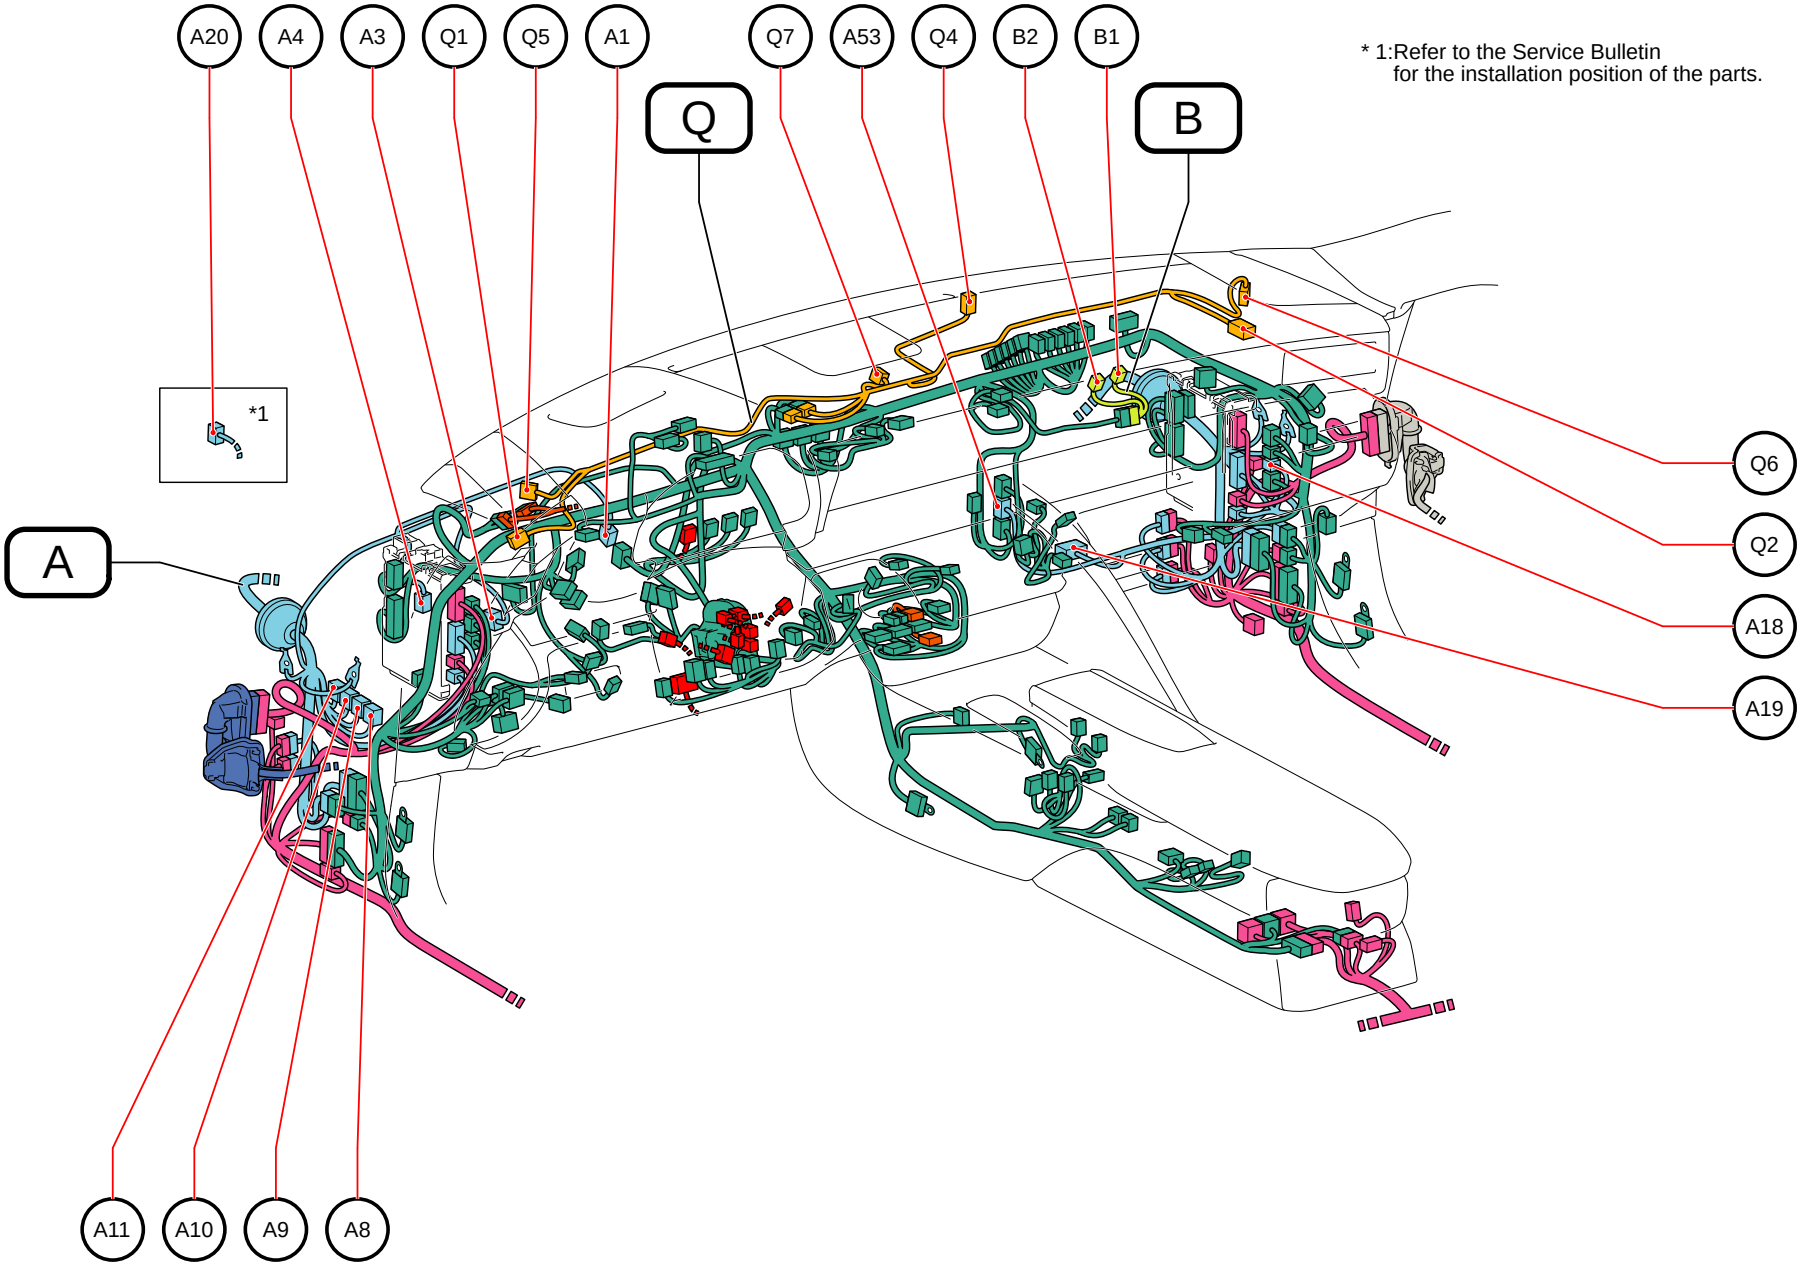

* 1:Refer to the Service Bulletin
for the installation position of the parts.

A1 Accelerator Pedal Sensor Assembly
A3 Brake Pedal Stroke Sensor Assembly
A4 Stop Light Switch Assembly
A8 Skid Control ECU Assembly
A9 Skid Control ECU Assembly
A10 Skid Control ECU Assembly
A11 Skid Control ECU Assembly
A18 Front Steering Control ECU
A19 Blower Motor with Fan Sub-Assembly
A20 Certification ECU
A53 Shift Control ECU

B1 Instrument Panel Passenger Airbag without Door Assembly
B2 Instrument Panel Passenger Airbag without Door Assembly

Q1 No. 1 Instrument Panel Register Assembly
Q2 No. 2 Instrument Panel Register Assembly
Q4 Automatic Light Control Sensor
Q5 Front No. 1 Speaker Assembly LH
Q6 Front No. 1 Speaker Assembly RH
Q7 Front No. 2 Speaker Assembly

Position of Parts in Instrument Panel (LHD)

A1
Black

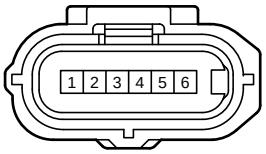

90980-12831

A3
Black

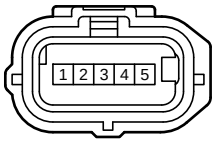

90980-12292

A4
Black

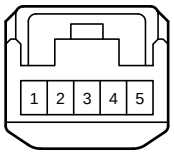

90980-12366

A8
Black

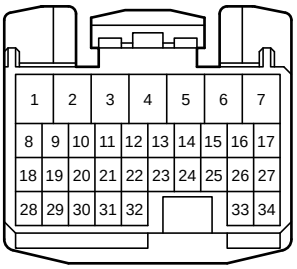

90980-12527

A9
Black

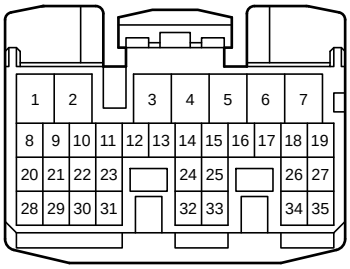

90980-12528

A10
Black

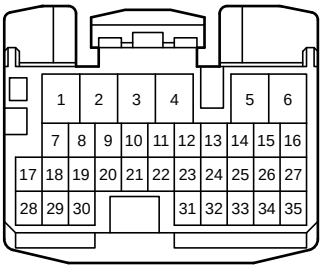

90980-12529

A11
Black

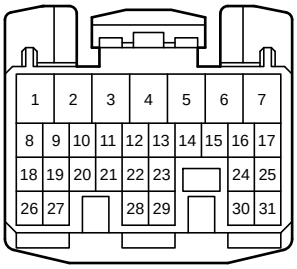

90980-12525

A18
White

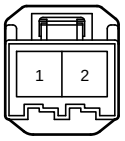

82824-30590

A19
Black

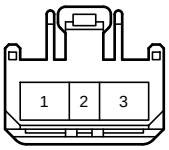

90980-11667

A20
White

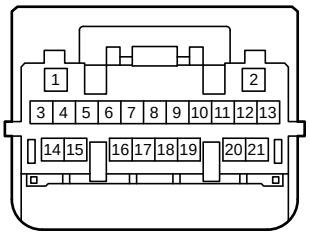

90980-12B76

A53
White

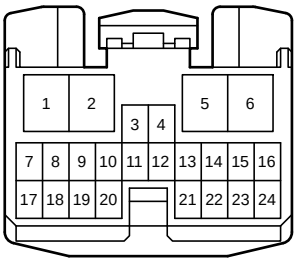

90980-12560

B1
Orange



90980-12224

B2
Black



90980-12219

Q1
White

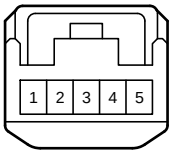

90980-12366

Q2
White

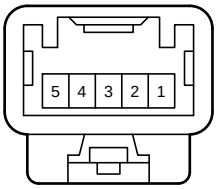

90980-12365

Q4
White

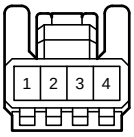

82824-50130

Q5
Black

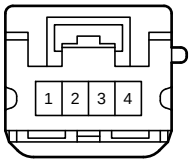

90980-12733

Q6
Black

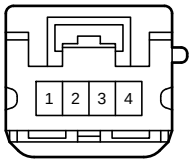

90980-12733

Q7
Black

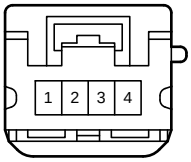

90980-12733