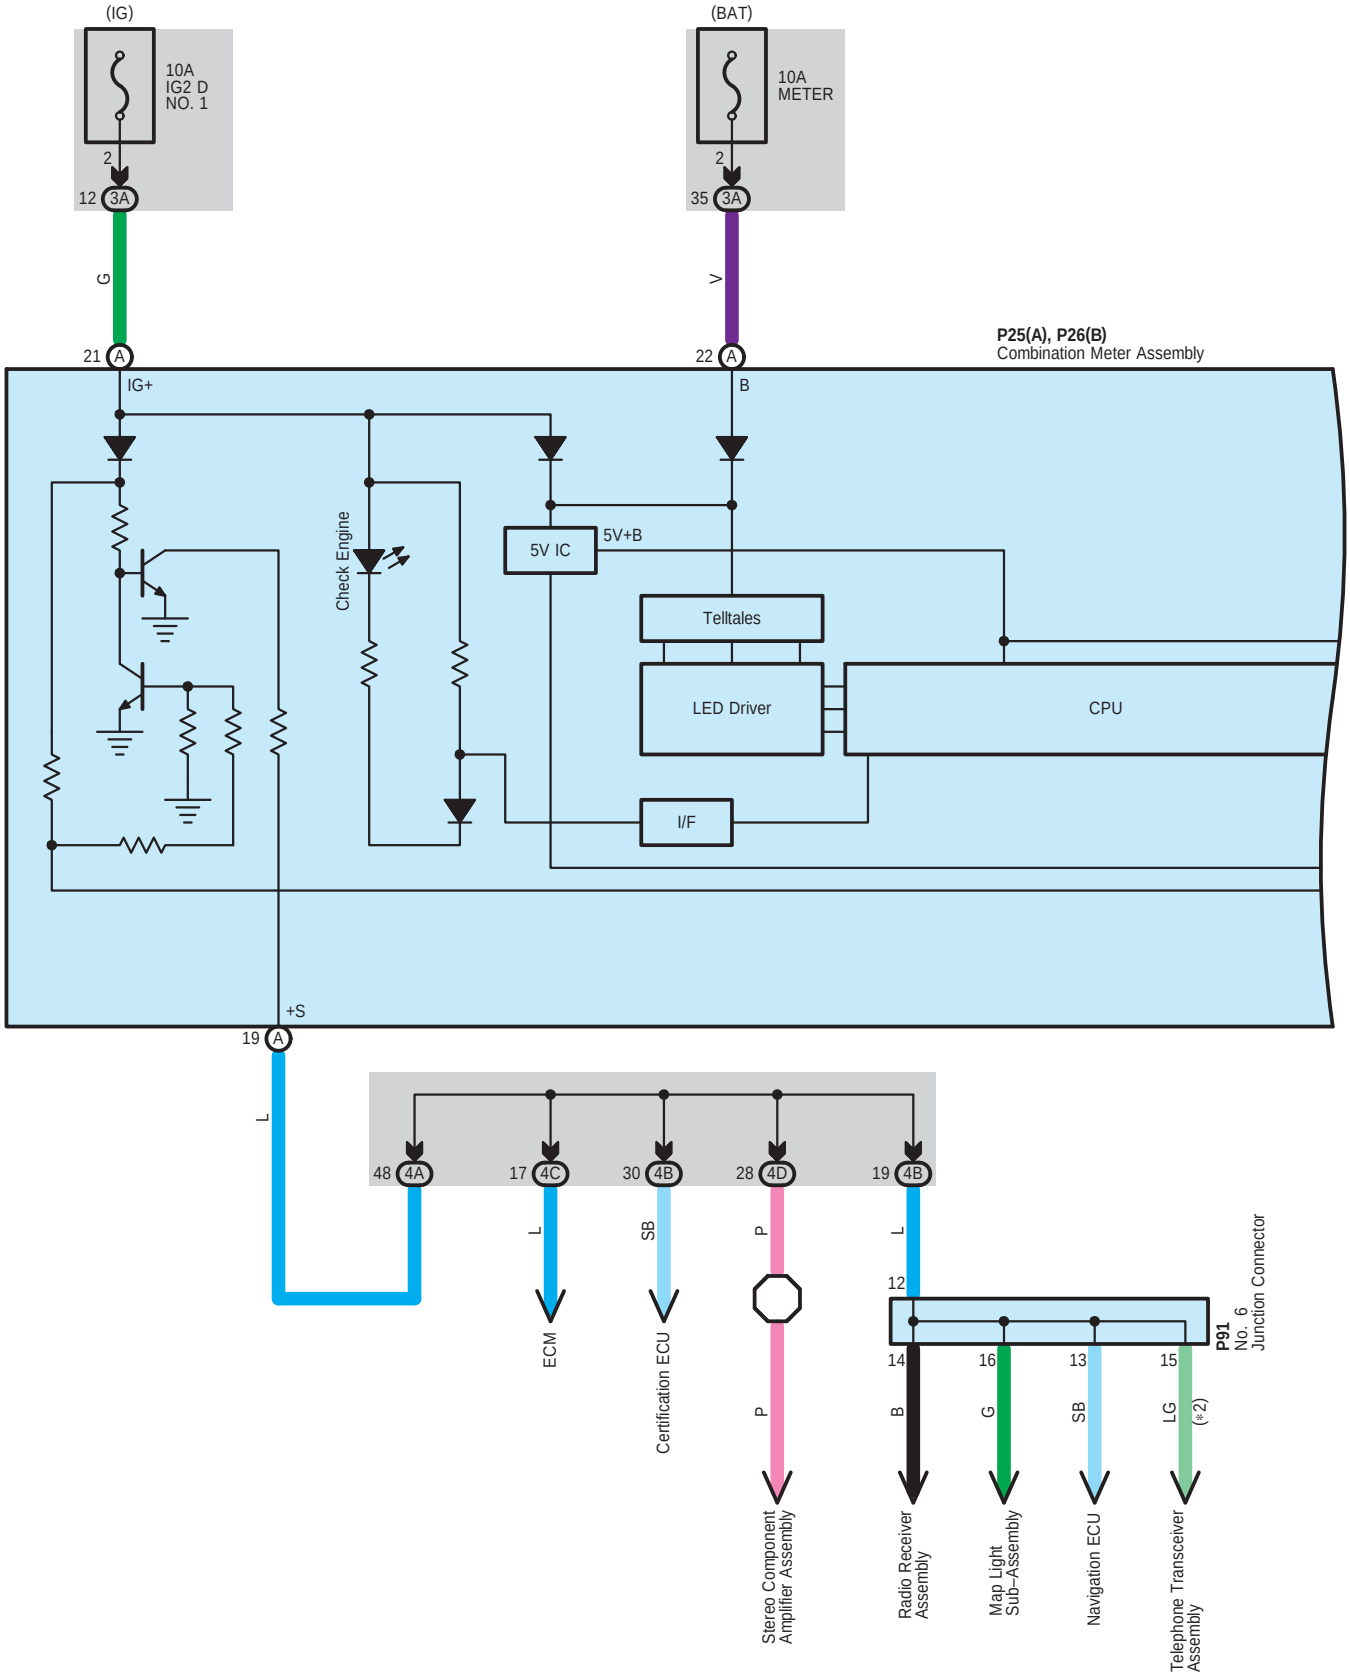
(IG)
10A
IG2 D
NO. 1
2
12 3A
G
21 A
IG+
(BAT)
10A
METER
2
35 3A
V
22 A
B
P25(A), P26(B)
Combination Meter Assembly
Check Engine
5V IC
5V+B
Telltales
LED Driver
CPU
I/F
+S
19 A
L
48 4A
17 4C
30 4B
28 4D
19 4B
L
ECM
SB
Certification ECU
P
P
Stereo Component
Amplifier Assembly
L
12
P91
No. 6
Junction Connector
14
16
13
15
B
G
SB
LG
(*2)
Radio Receiver
Assembly
Map Light
Sub–Assembly
Navigation ECU
Telephone Transceiver
Assembly

∗ 2 : w/ Telematics System

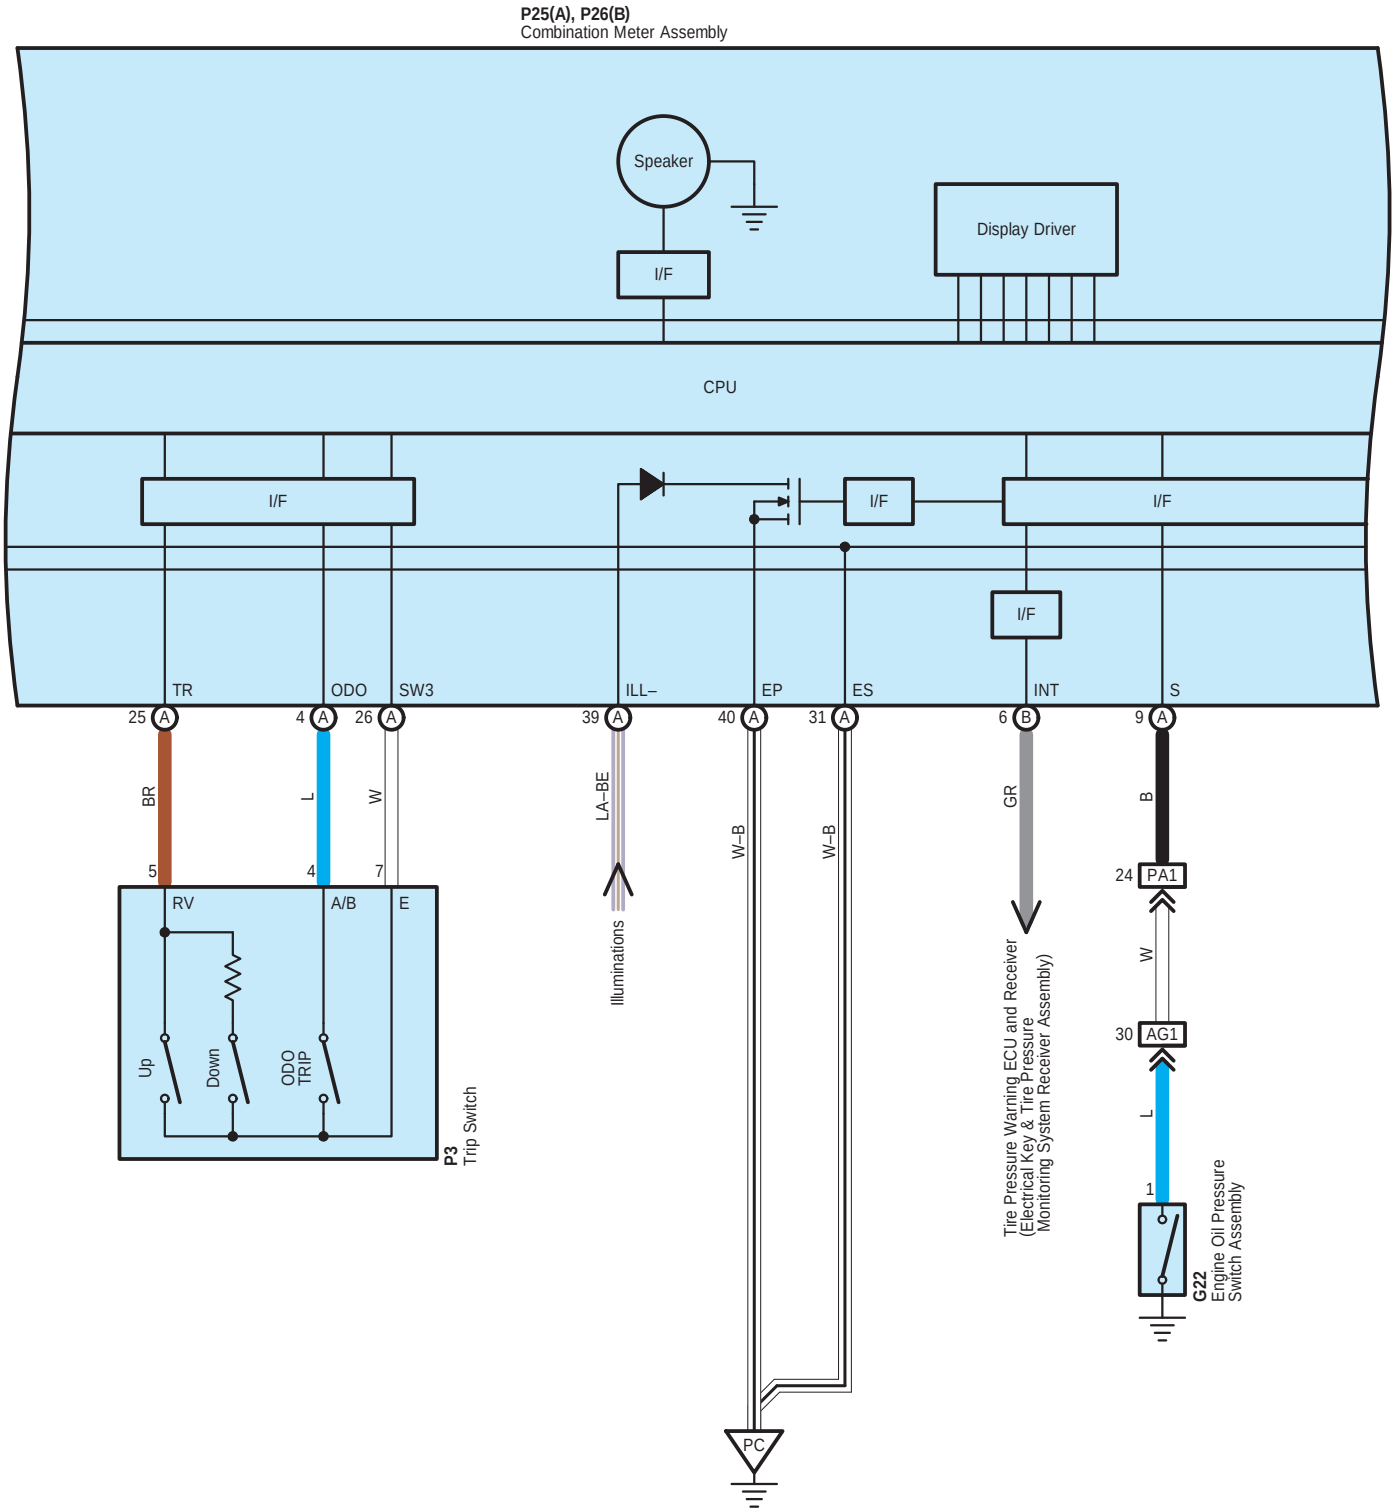

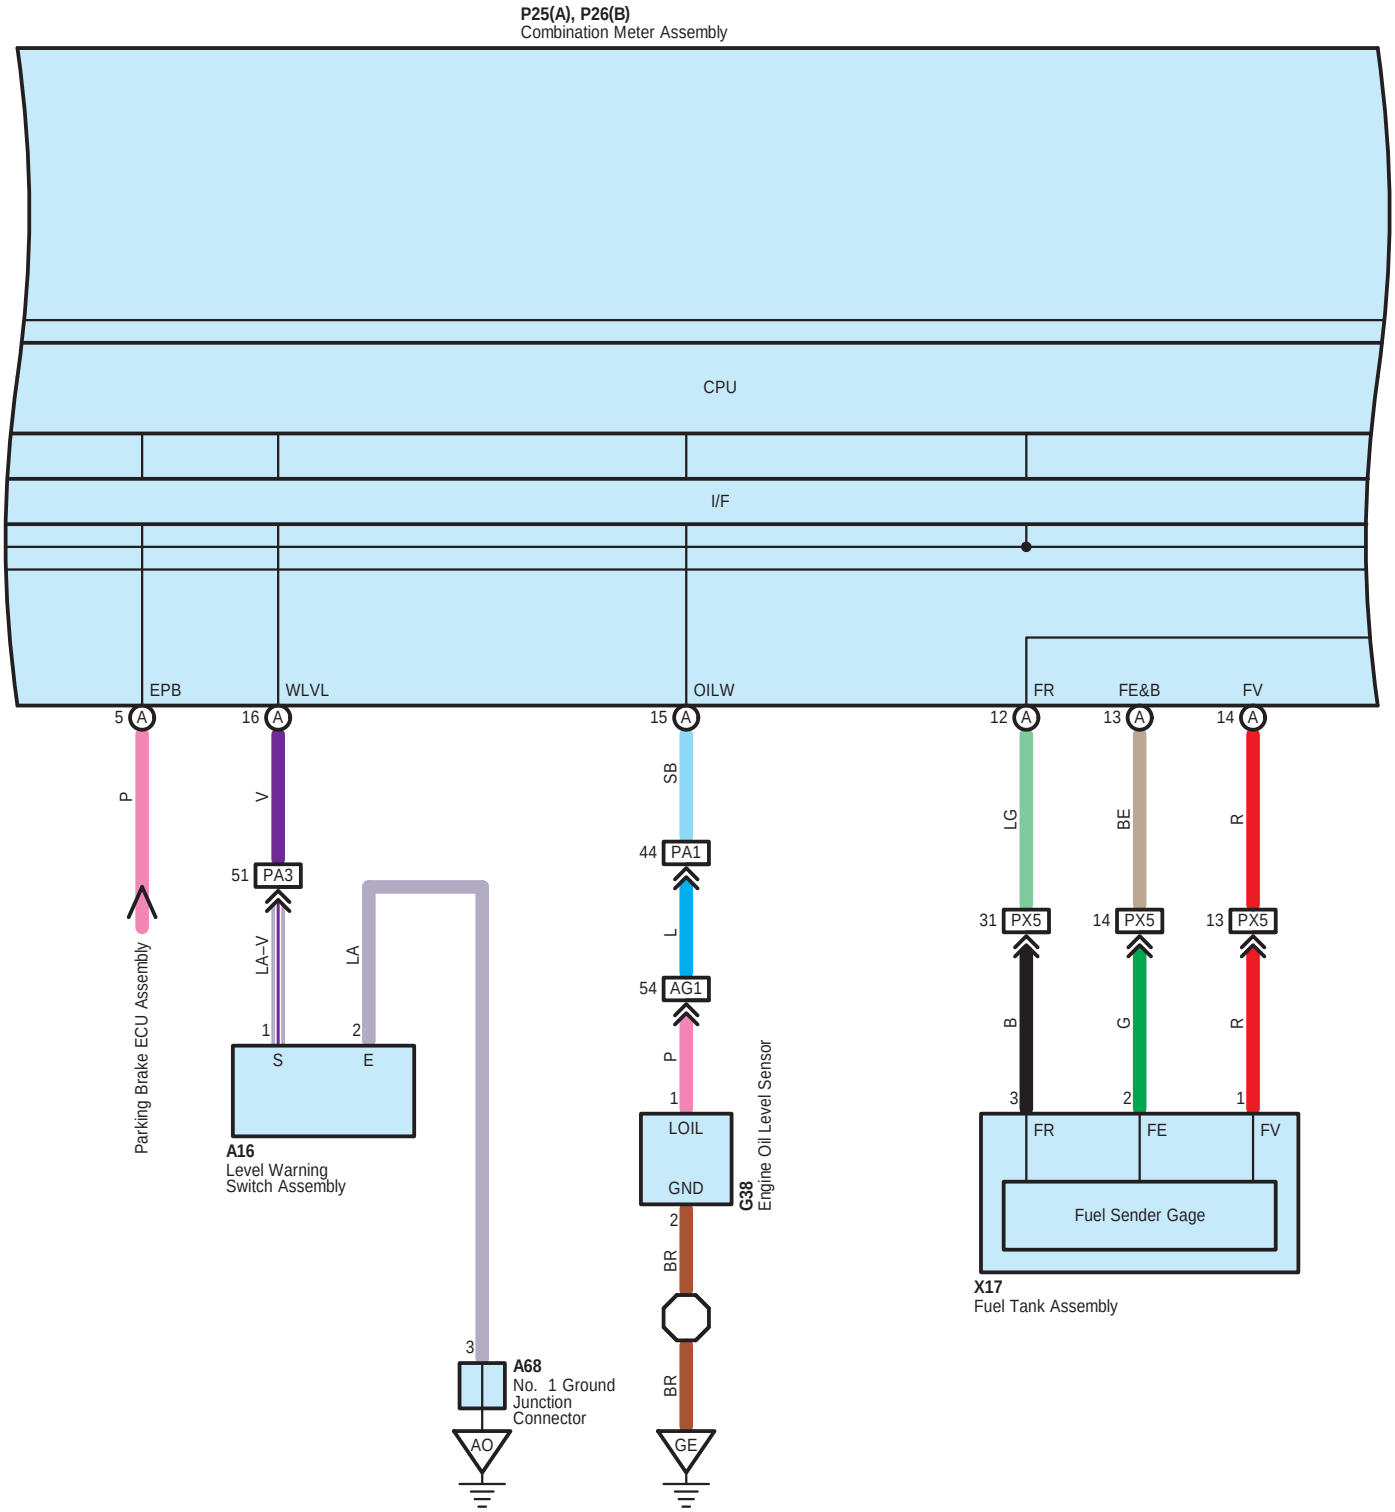
P25(A), P26(B)
Combination Meter Assembly
CPU
I/F
EPB
WLVL
OILW
FR
FE&B
FV
5 A
16 A
15 A
12 A
13 A
14 A
P
V
SB
LG
BE
R
51 PA3
44 PA1
31 PX5
14 PX5
13 PX5
LA–V
LA
L
54 AG1
B
G
R
1
2
S
E
P
1
3
2
1
Parking Brake ECU Assembly
A16
Level Warning
Switch Assembly
LOIL
GND
G38
Engine Oil Level Sensor
FR
FE
FV
Fuel Sender Gage
X17
Fuel Tank Assembly
2
BR
BR
3
A68
No. 1 Ground
Junction
Connector
AO
GE

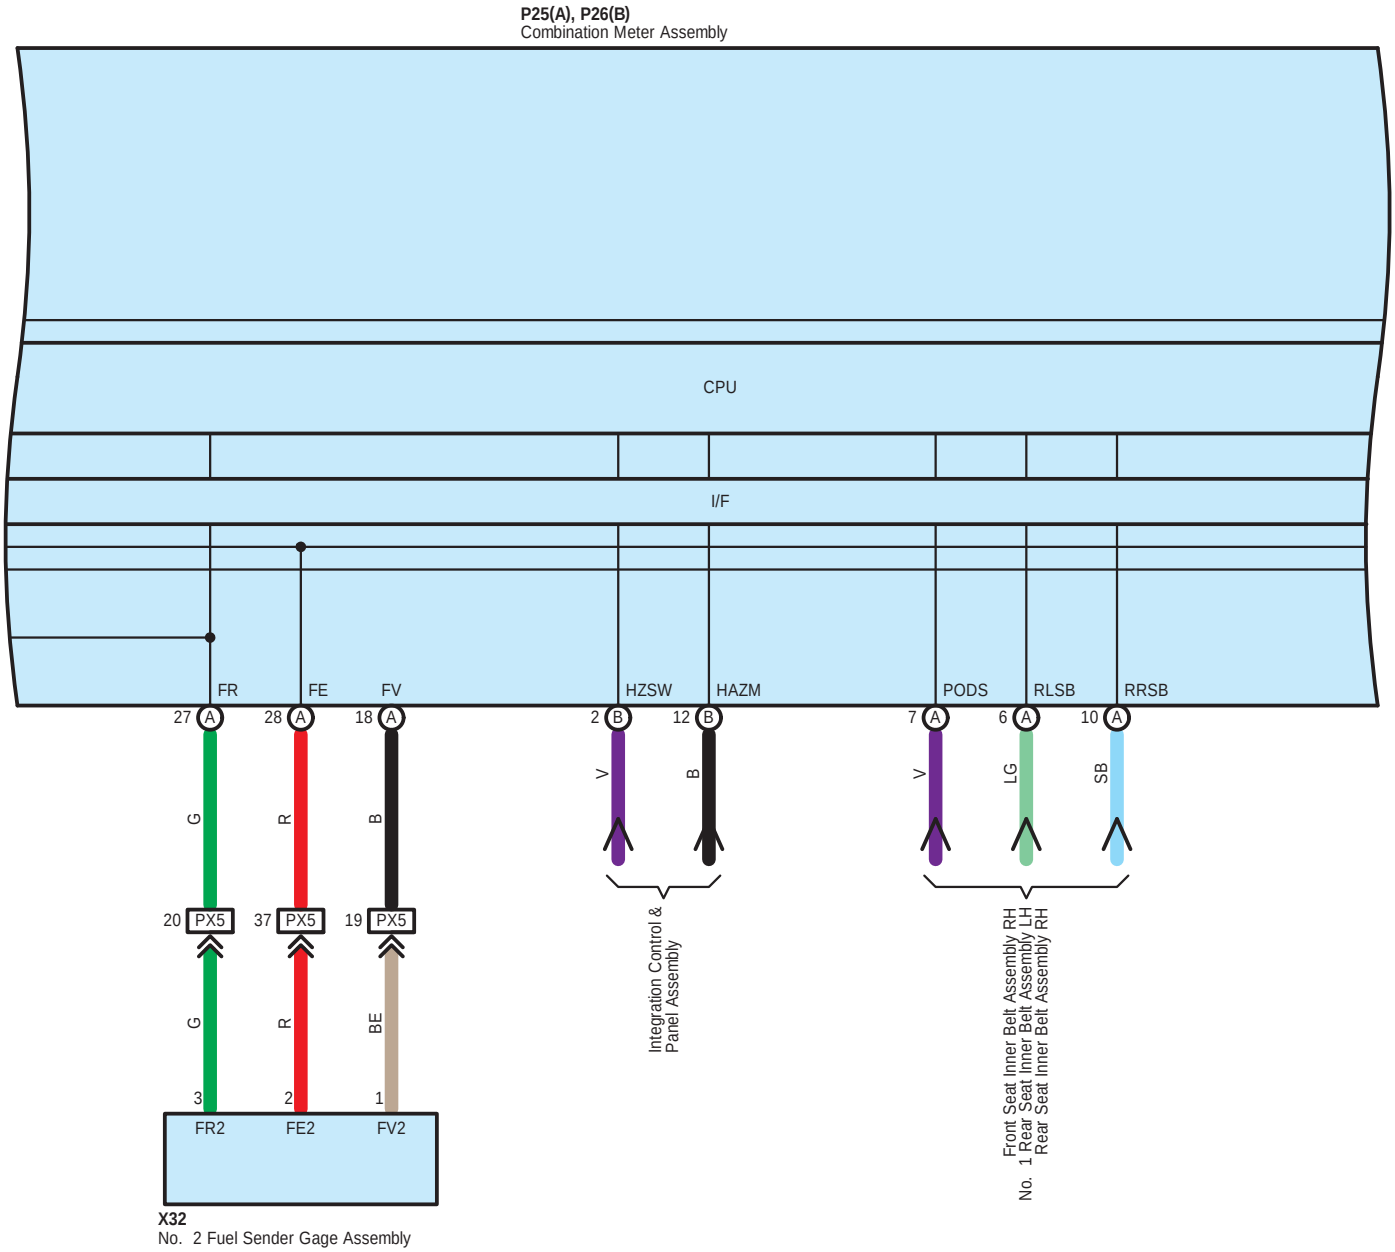
P25(A), P26(B)
Combination Meter Assembly
CPU
I/F
FR
FE
FV
HZSW
HAZM
PODS
RLSB
RRSB
27 A
28 A
18 A
2 B
12 B
7 A
6 A
10 A
G
R
B
V
B
V
LG
SB
20 PX5
37 PX5
19 PX5
G
R
BE
3
2
1
FR2
FE2
FV2
X32
No. 2 Fuel Sender Gage Assembly
Integration Control & Panel Assembly
No. 1 Front Seat Inner Belt Assembly RH
Rear Seat Inner Belt Assembly LH
Rear Seat Inner Belt Assembly RH

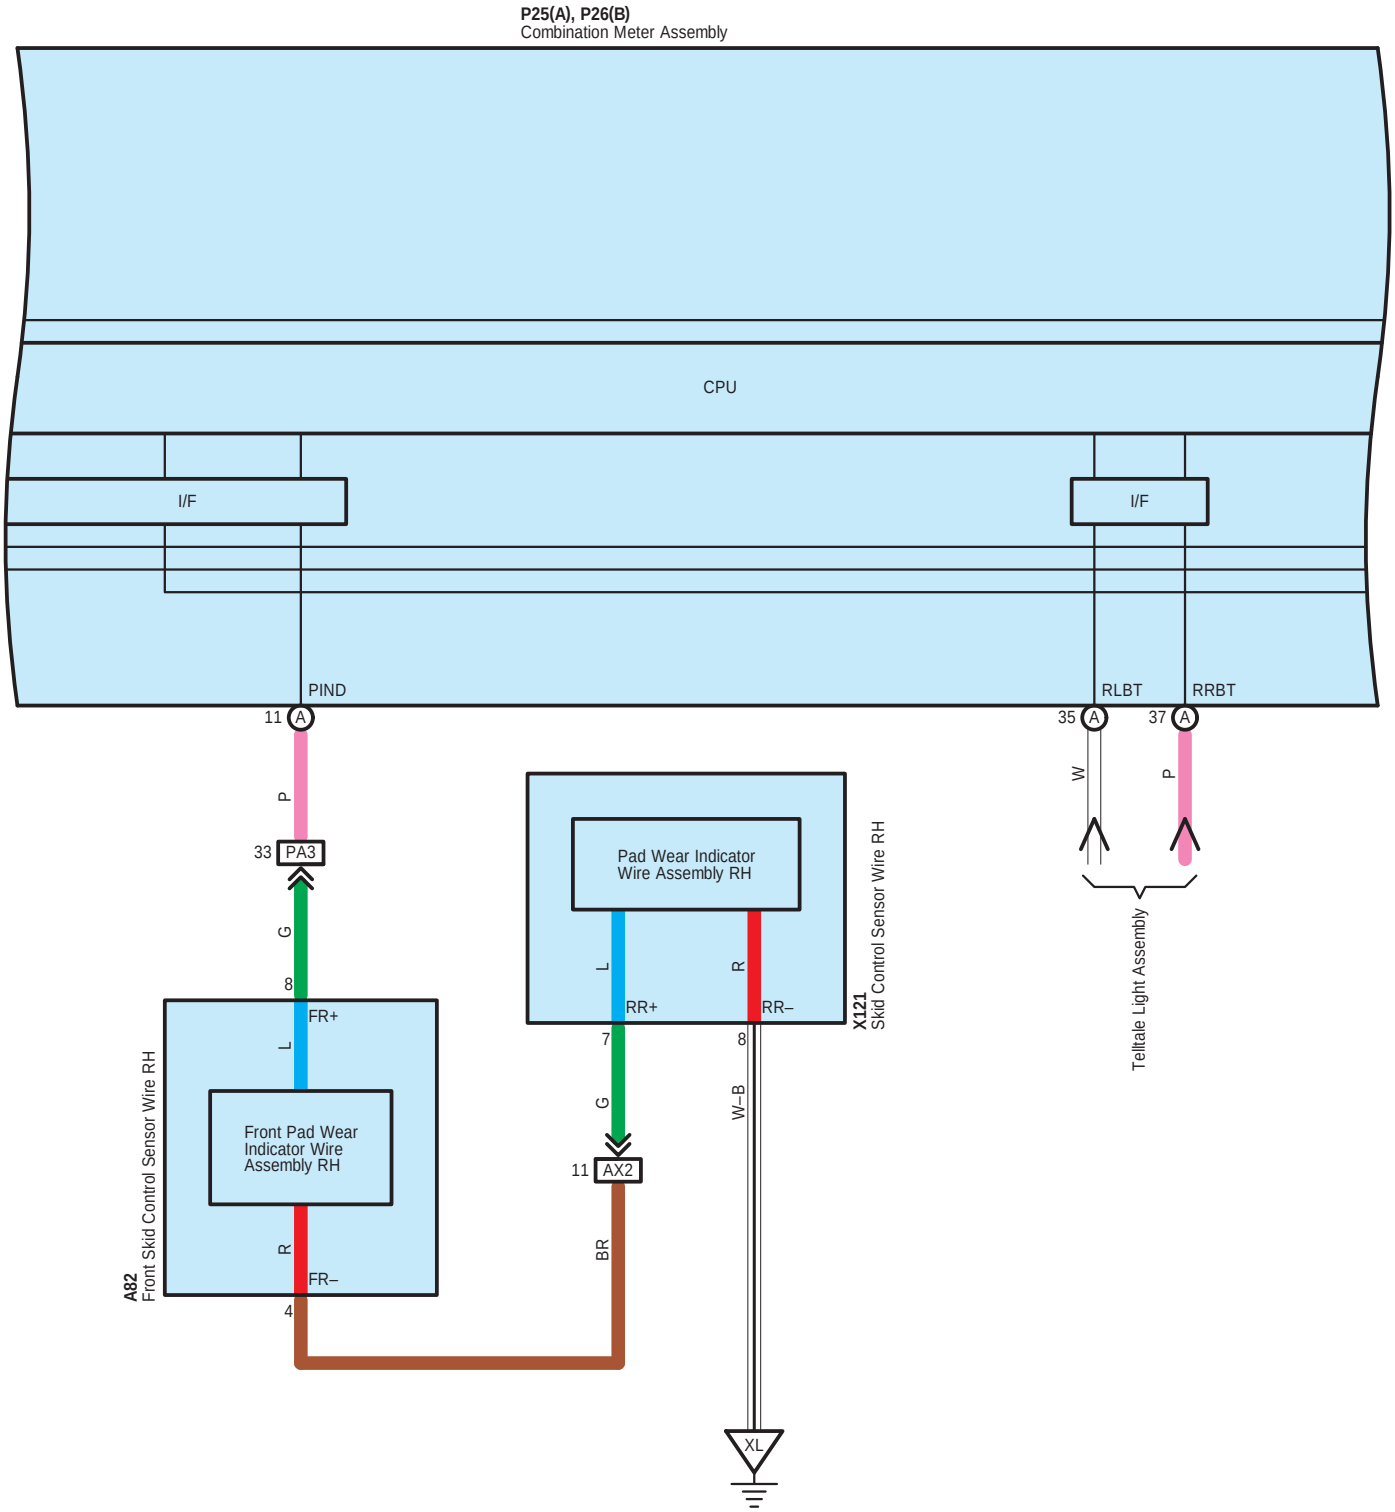
P25(A), P26(B)
Combination Meter Assembly
CPU
I/F
I/F
PIND
RLBT
RRBT
11
A
35
A
37
A
P
W
P
33
PA3
G
8
FR+
L
Front Pad Wear Indicator Wire Assembly RH
R
FR–
4
A82
Front Skid Control Sensor Wire RH
Pad Wear Indicator Wire Assembly RH
L
R
RR+
RR–
7
8
X121
Skid Control Sensor Wire RH
G
W–B
11
AX2
BR
XL
Telltale Light Assembly

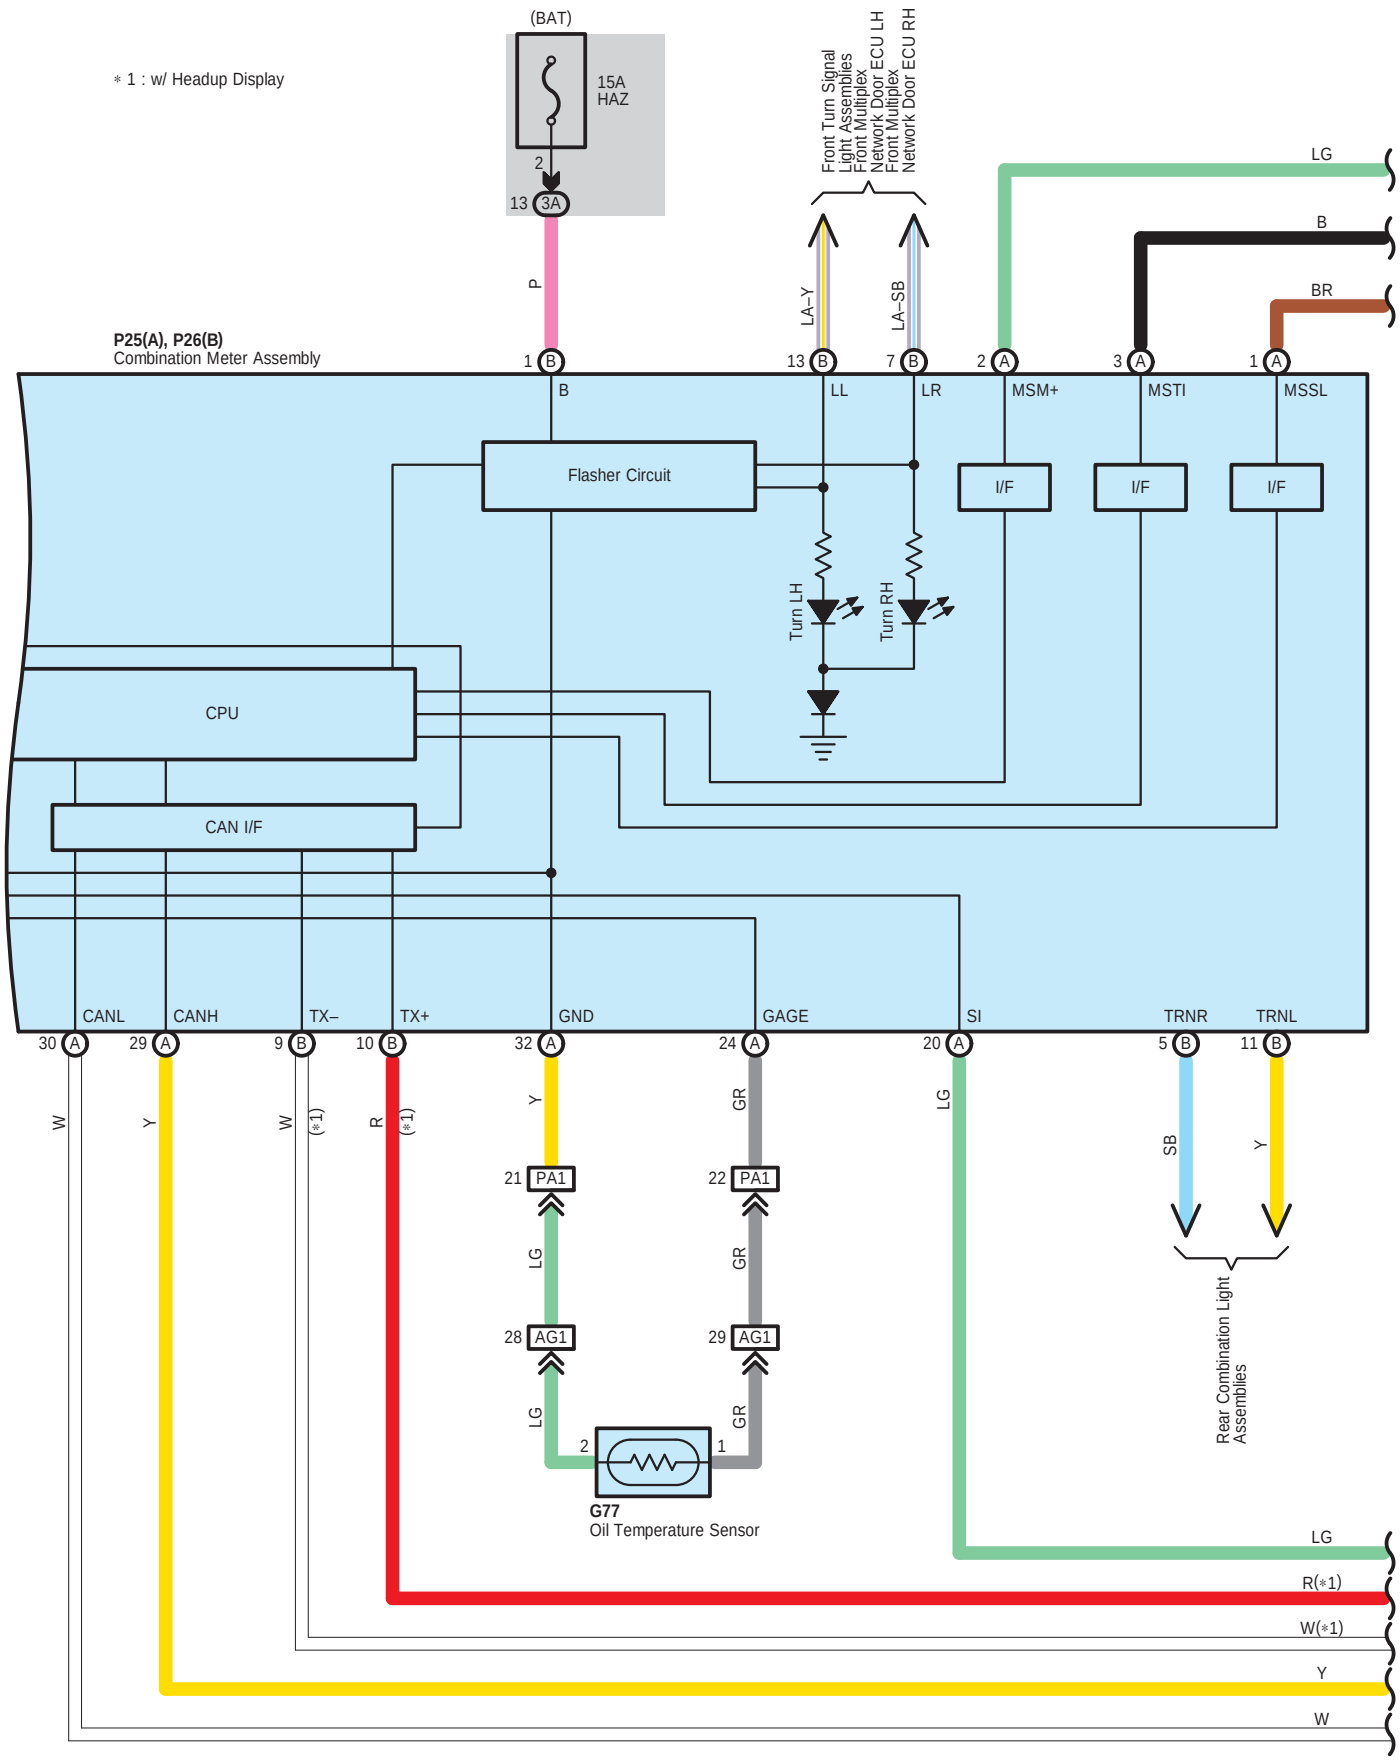
∗1 : w/ Headup Display
(BAT)
15A
HAZ
2
13 3A
P
Front Turn Signal Light Assemblies
Front Multiplex Network Door ECU LH
Front Multiplex Network Door ECU RH
LA–Y
LA–SB
LG
B
BR
P25(A), P26(B)
Combination Meter Assembly
1 B
13 B
7 B
2 A
3 A
1 A
B
LL
LR
MSM+
MSTI
MSSL
Flasher Circuit
I/F
I/F
I/F
Turn LH
Turn RH
CPU
CAN I/F
CANL
CANH
TX–
TX+
GND
GAGE
SI
TRNR
TRNL
30 A
29 A
9 B
10 B
32 A
24 A
20 A
5 B
11 B
W
Y
W
(∗1)
R
(∗1)
Y
GR
LG
SB
Y
21 PA1
22 PA1
LG
GR
28 AG1
29 AG1
LG
GR
2
1
G77
Oil Temperature Sensor
Rear Combination Light Assemblies
LG
R(∗1)
W(∗1)
Y
W

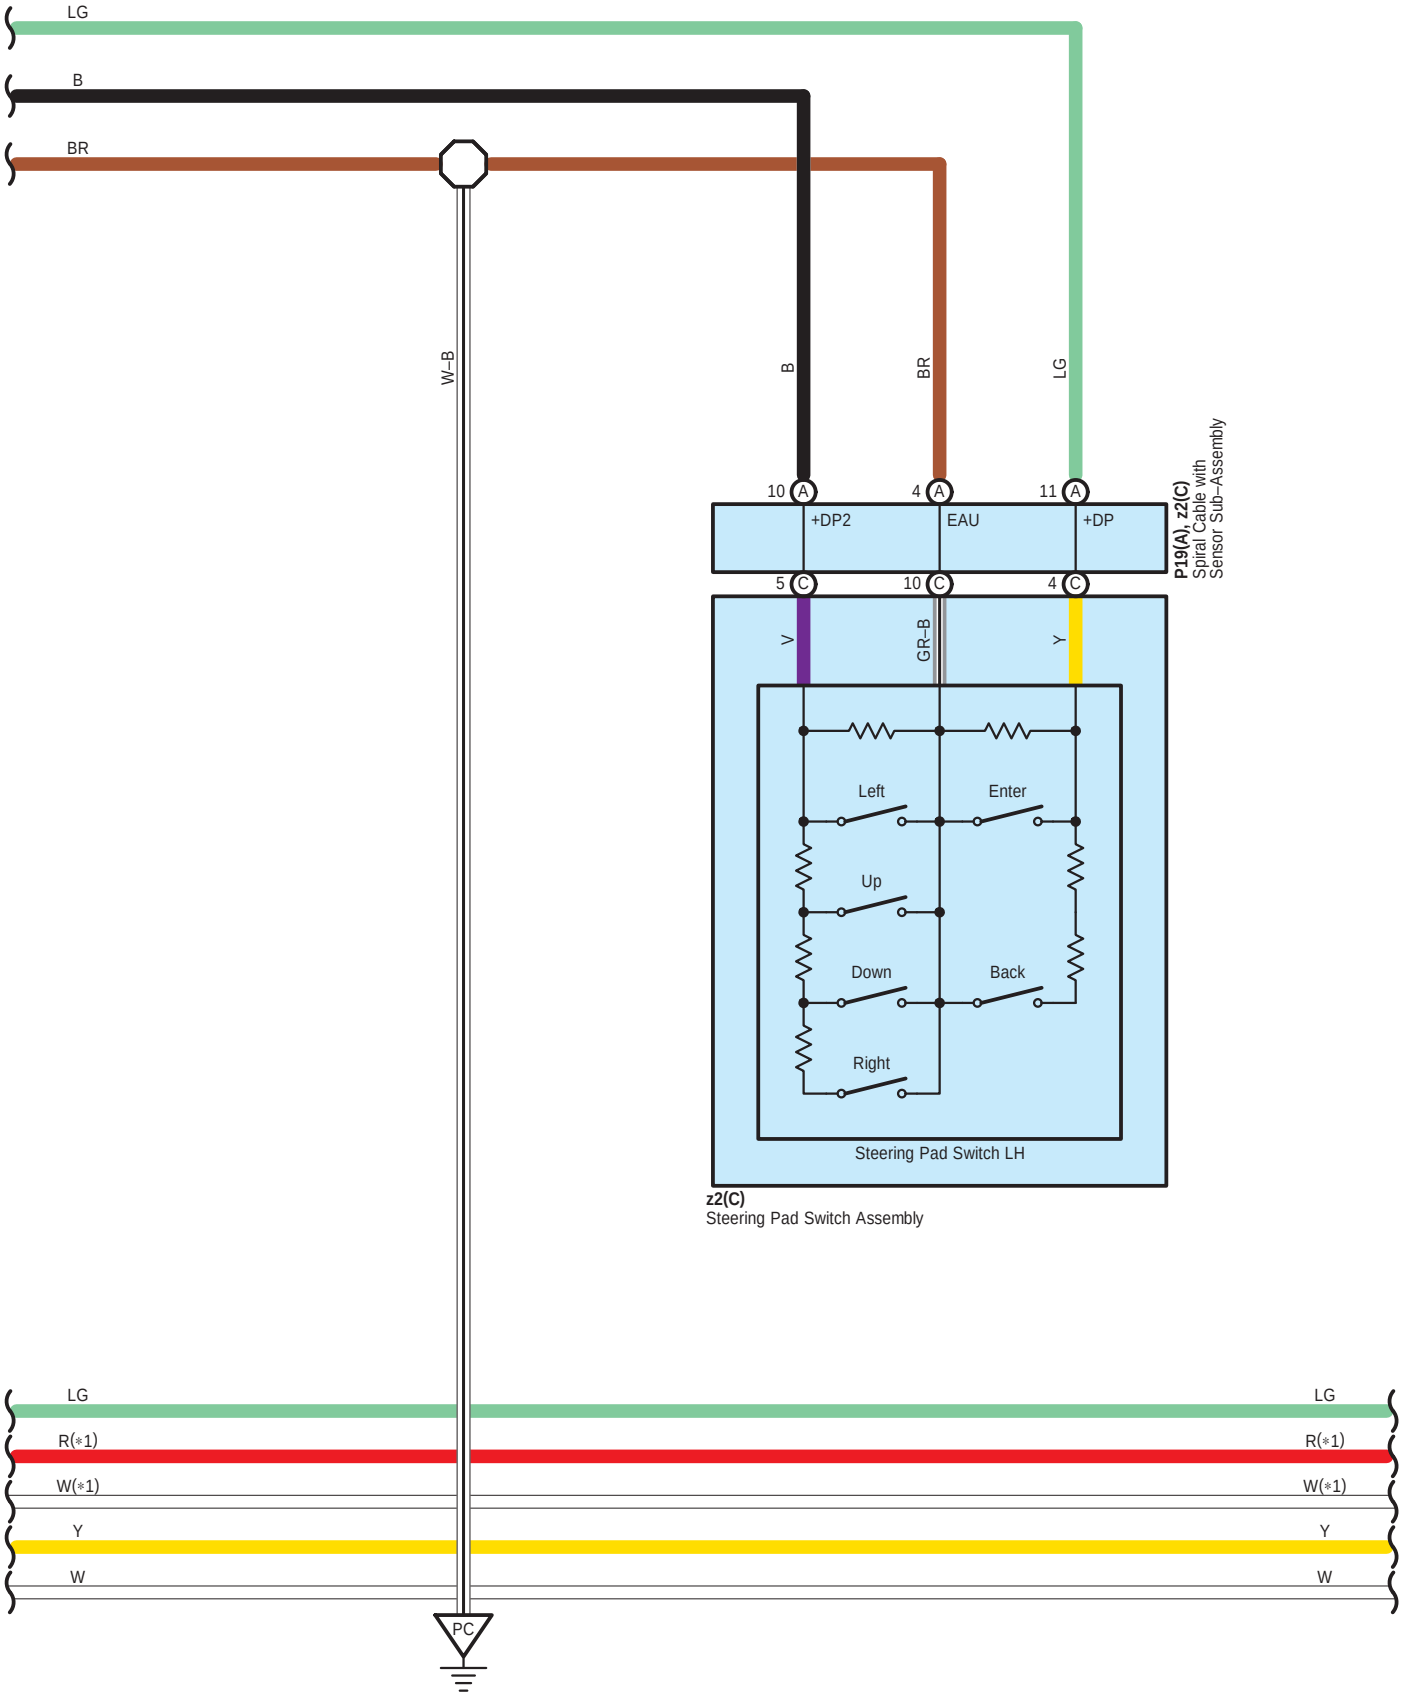
LG
B
BR
W–B
B
BR
LG
10 A
4 A
11 A
+DP2
EAU
+DP
P19(A), z2(C)
Spiral Cable with
Sensor Sub–Assembly
5 C
10 C
4 C
V
GR–B
Y
Left
Enter
Up
Down
Back
Right
Steering Pad Switch LH
z2(C)
Steering Pad Switch Assembly
LG
R(∗1)
W(∗1)
Y
W
LG
R(∗1)
W(∗1)
Y
W
PC

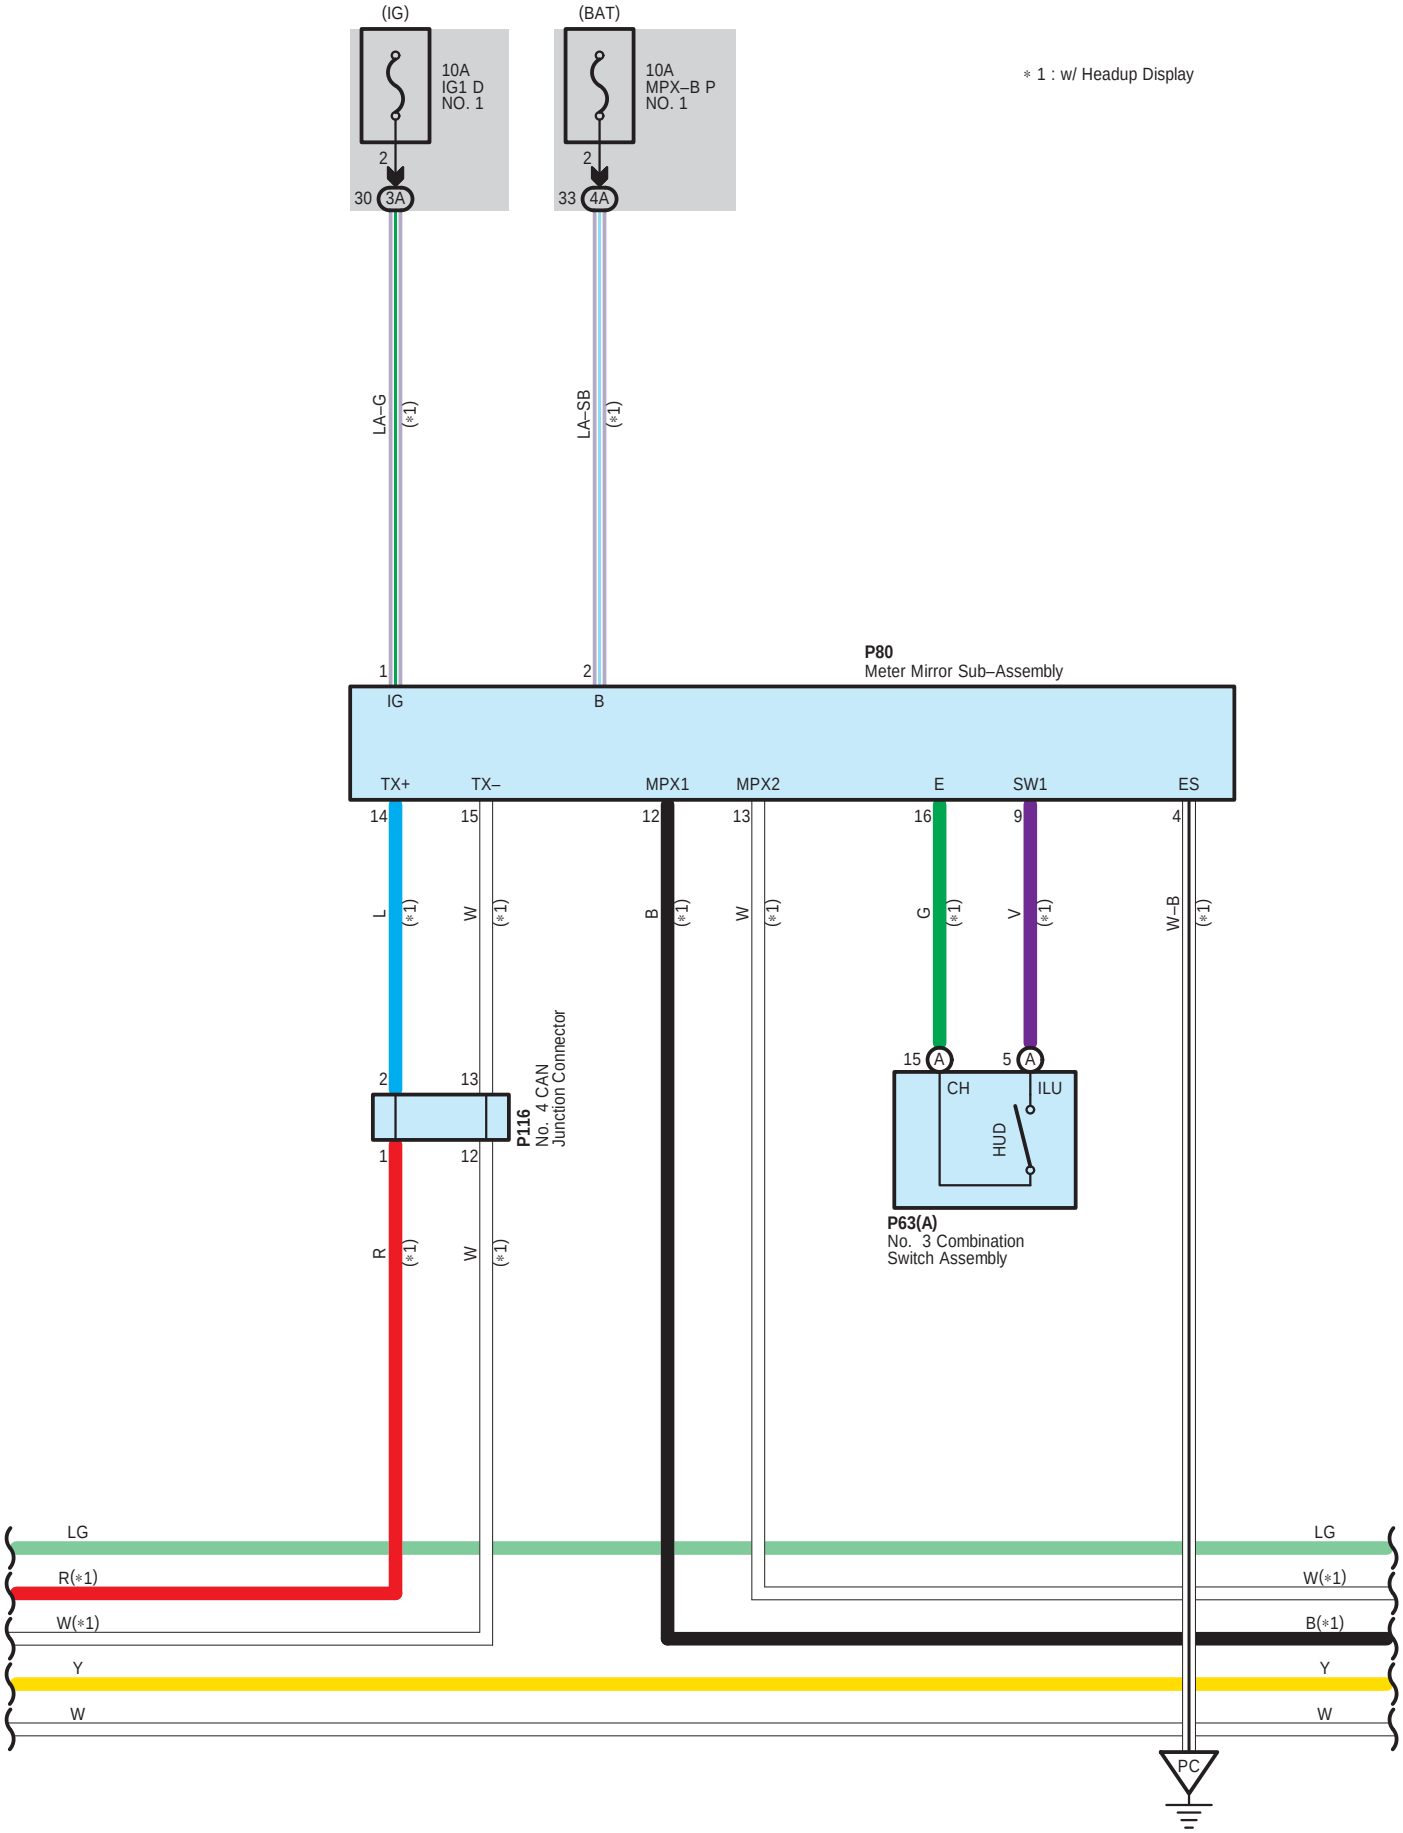
(IG)
10A
IG1 D
NO. 1
2
30 3A
(BAT)
10A
MPX–B P
NO. 1
2
33 4A
∗1 : w/ Headup Display
LA–G
(∗1)
LA–SB
(∗1)
1
2
P80
Meter Mirror Sub–Assembly
IG
B
TX+
TX–
MPX1
MPX2
E
SW1
ES
14
15
12
13
16
9
4
L
W
B
W
G
V
W–B
2
13
P116
No. 4 CAN
Junction Connector
1
12
R
15 A
5 A
CH
ILU
HUD
P63(A)
No. 3 Combination
Switch Assembly
LG
R(∗1)
W(∗1)
Y
W
B(∗1)
PC

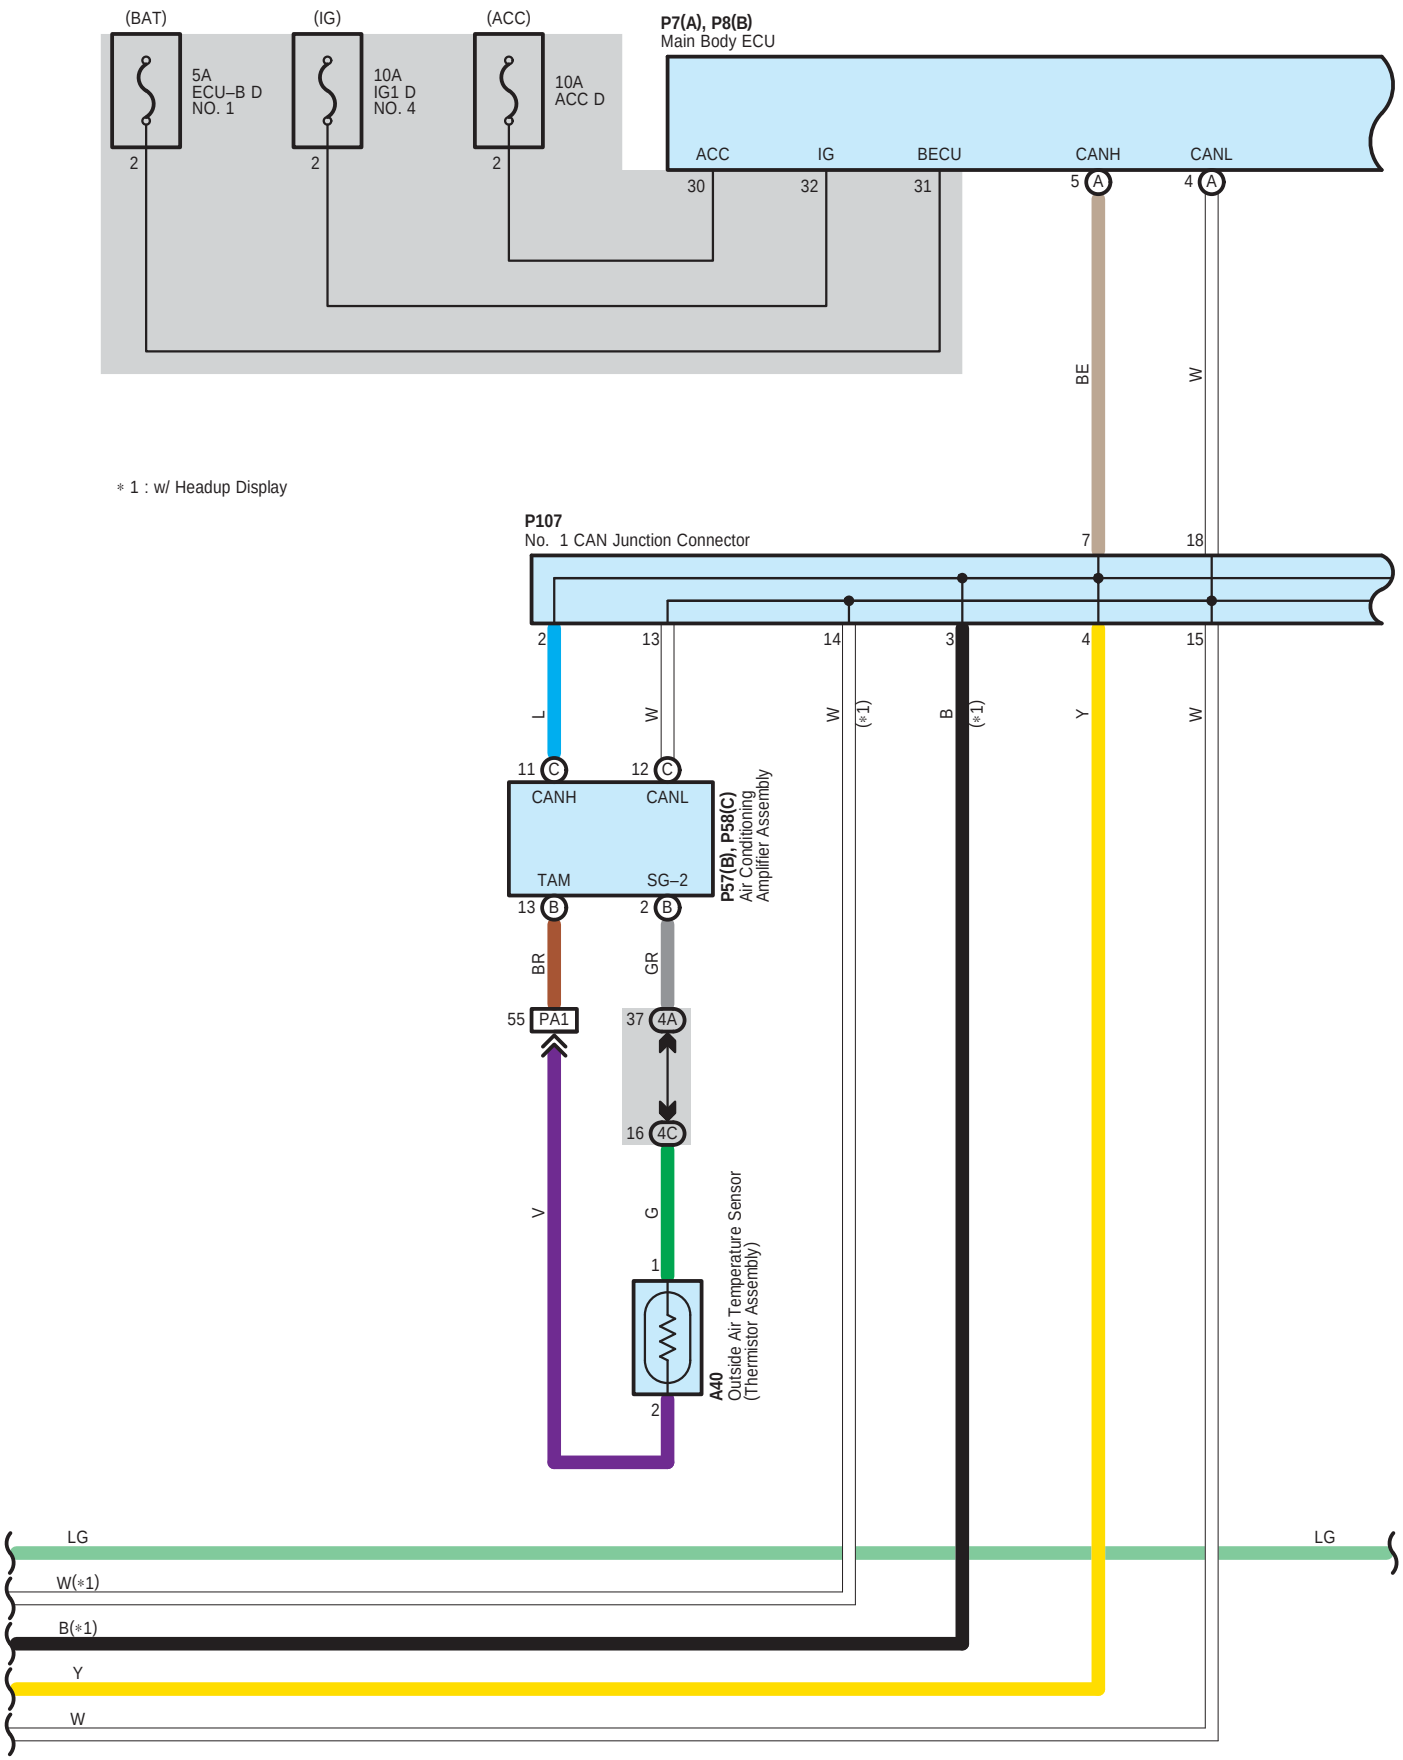
(BAT)
(IG)
(ACC)
5A
ECU–B D
NO. 1
10A
IG1 D
NO. 4
10A
ACC D
2
2
2
P7(A), P8(B)
Main Body ECU
ACC
IG
BECU
CANH
CANL
30
32
31
5 A
4 A
BE
W
∗1 : w/ Headup Display
P107
No. 1 CAN Junction Connector
7
18
2
13
14
3
4
15
L
W
W
(∗1)
B
(∗1)
Y
W
11 C
12 C
CANH
CANL
TAM
SG–2
P57(B), P58(C)
Air Conditioning
Amplifier Assembly
13 B
2 B
BR
GR
55 PA1
37 4A
16 4C
V
G
1
2
A40
Outside Air Temperature Sensor
(Thermistor Assembly)
LG
LG
W(∗1)
B(∗1)
Y
W

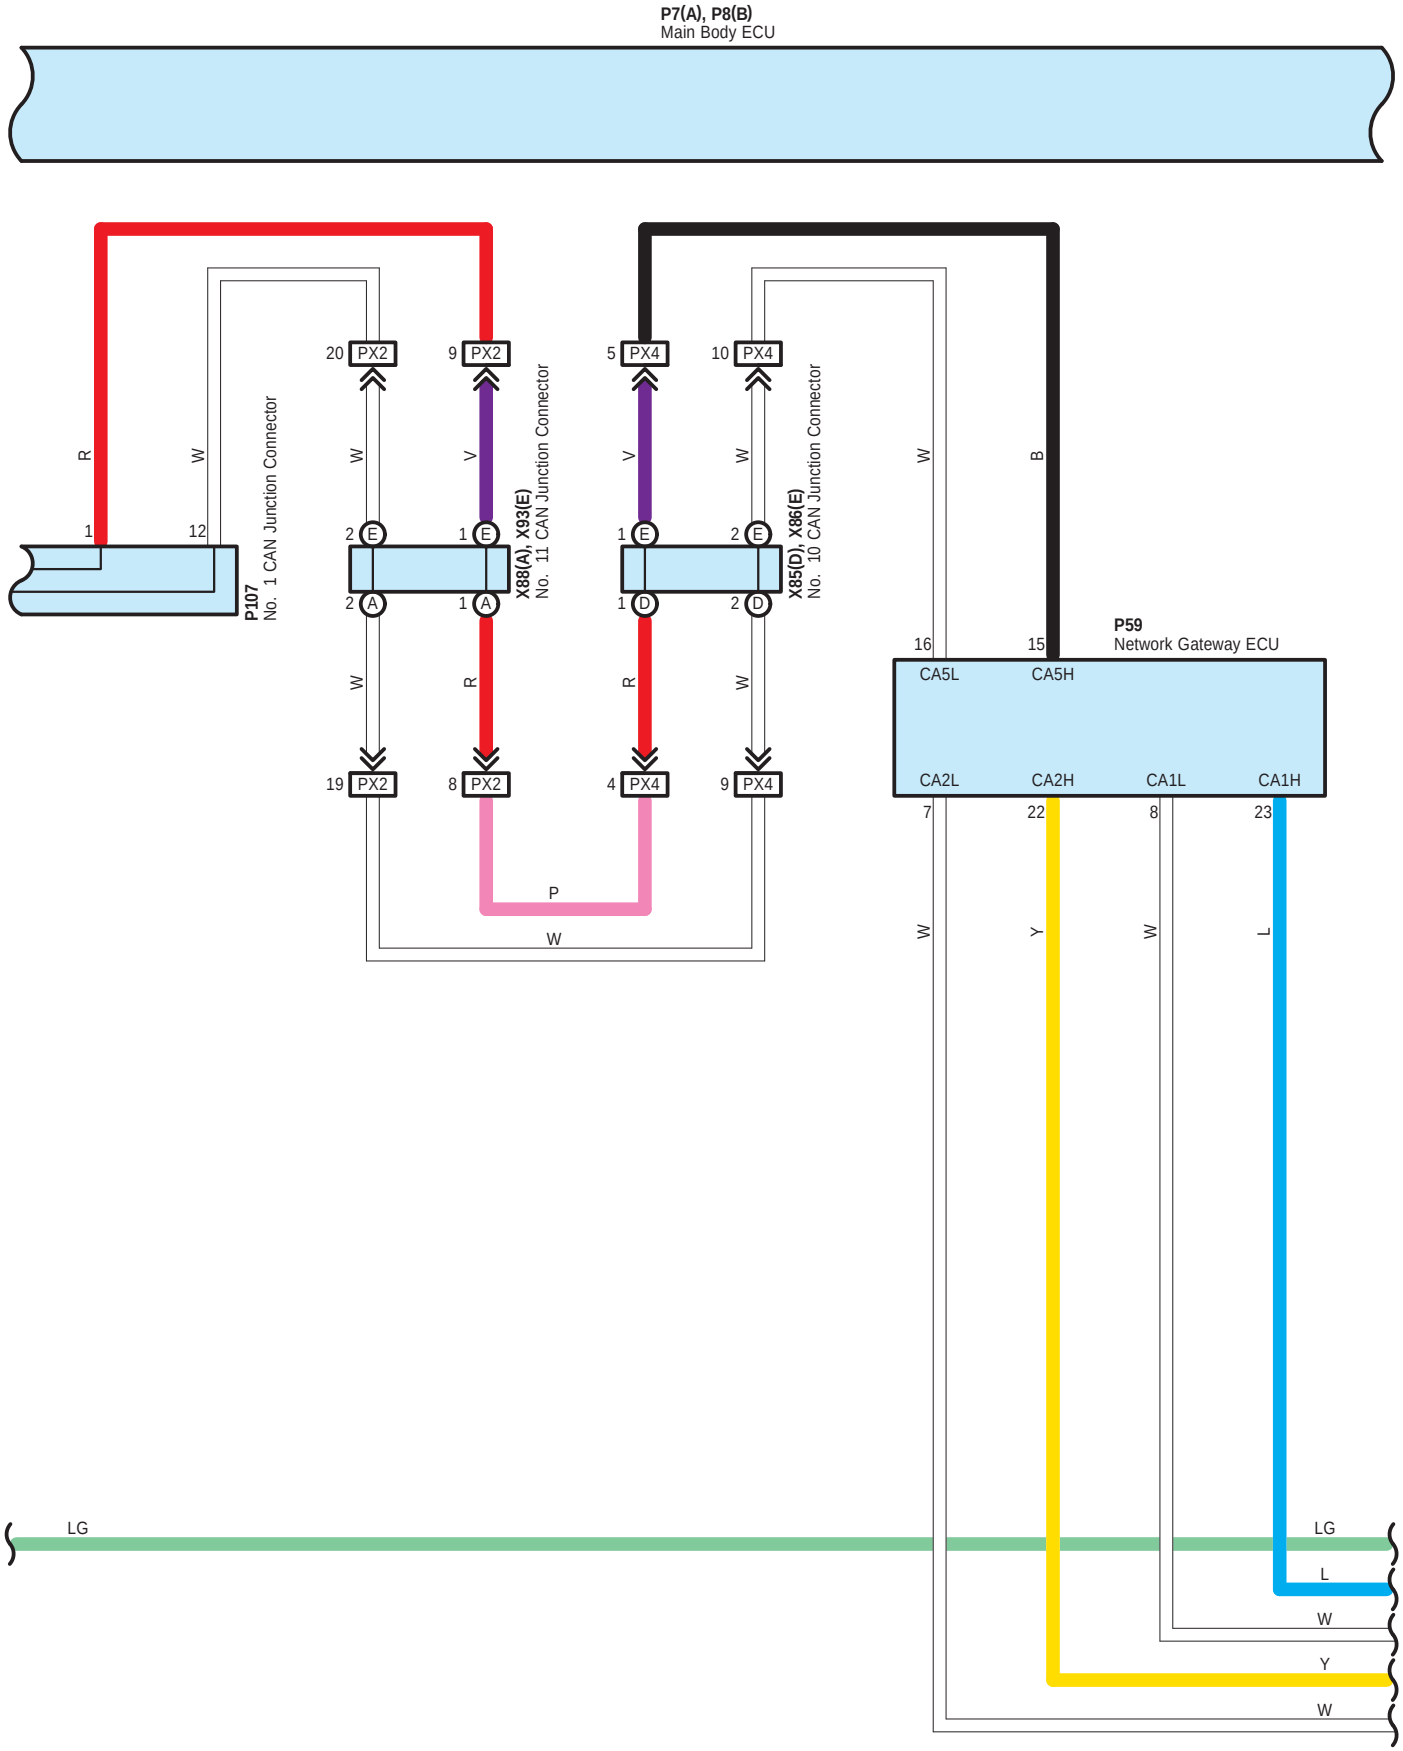
P7(A), P8(B)
Main Body ECU
P107
No. 1 CAN Junction Connector
X88(A), X93(E)
No. 11 CAN Junction Connector
X85(D), X86(E)
No. 10 CAN Junction Connector
P59
Network Gateway ECU
CA5L
CA5H
CA2L
CA2H
CA1L
CA1H
PX2
PX4
R
W
V
B
P
Y
L
LG

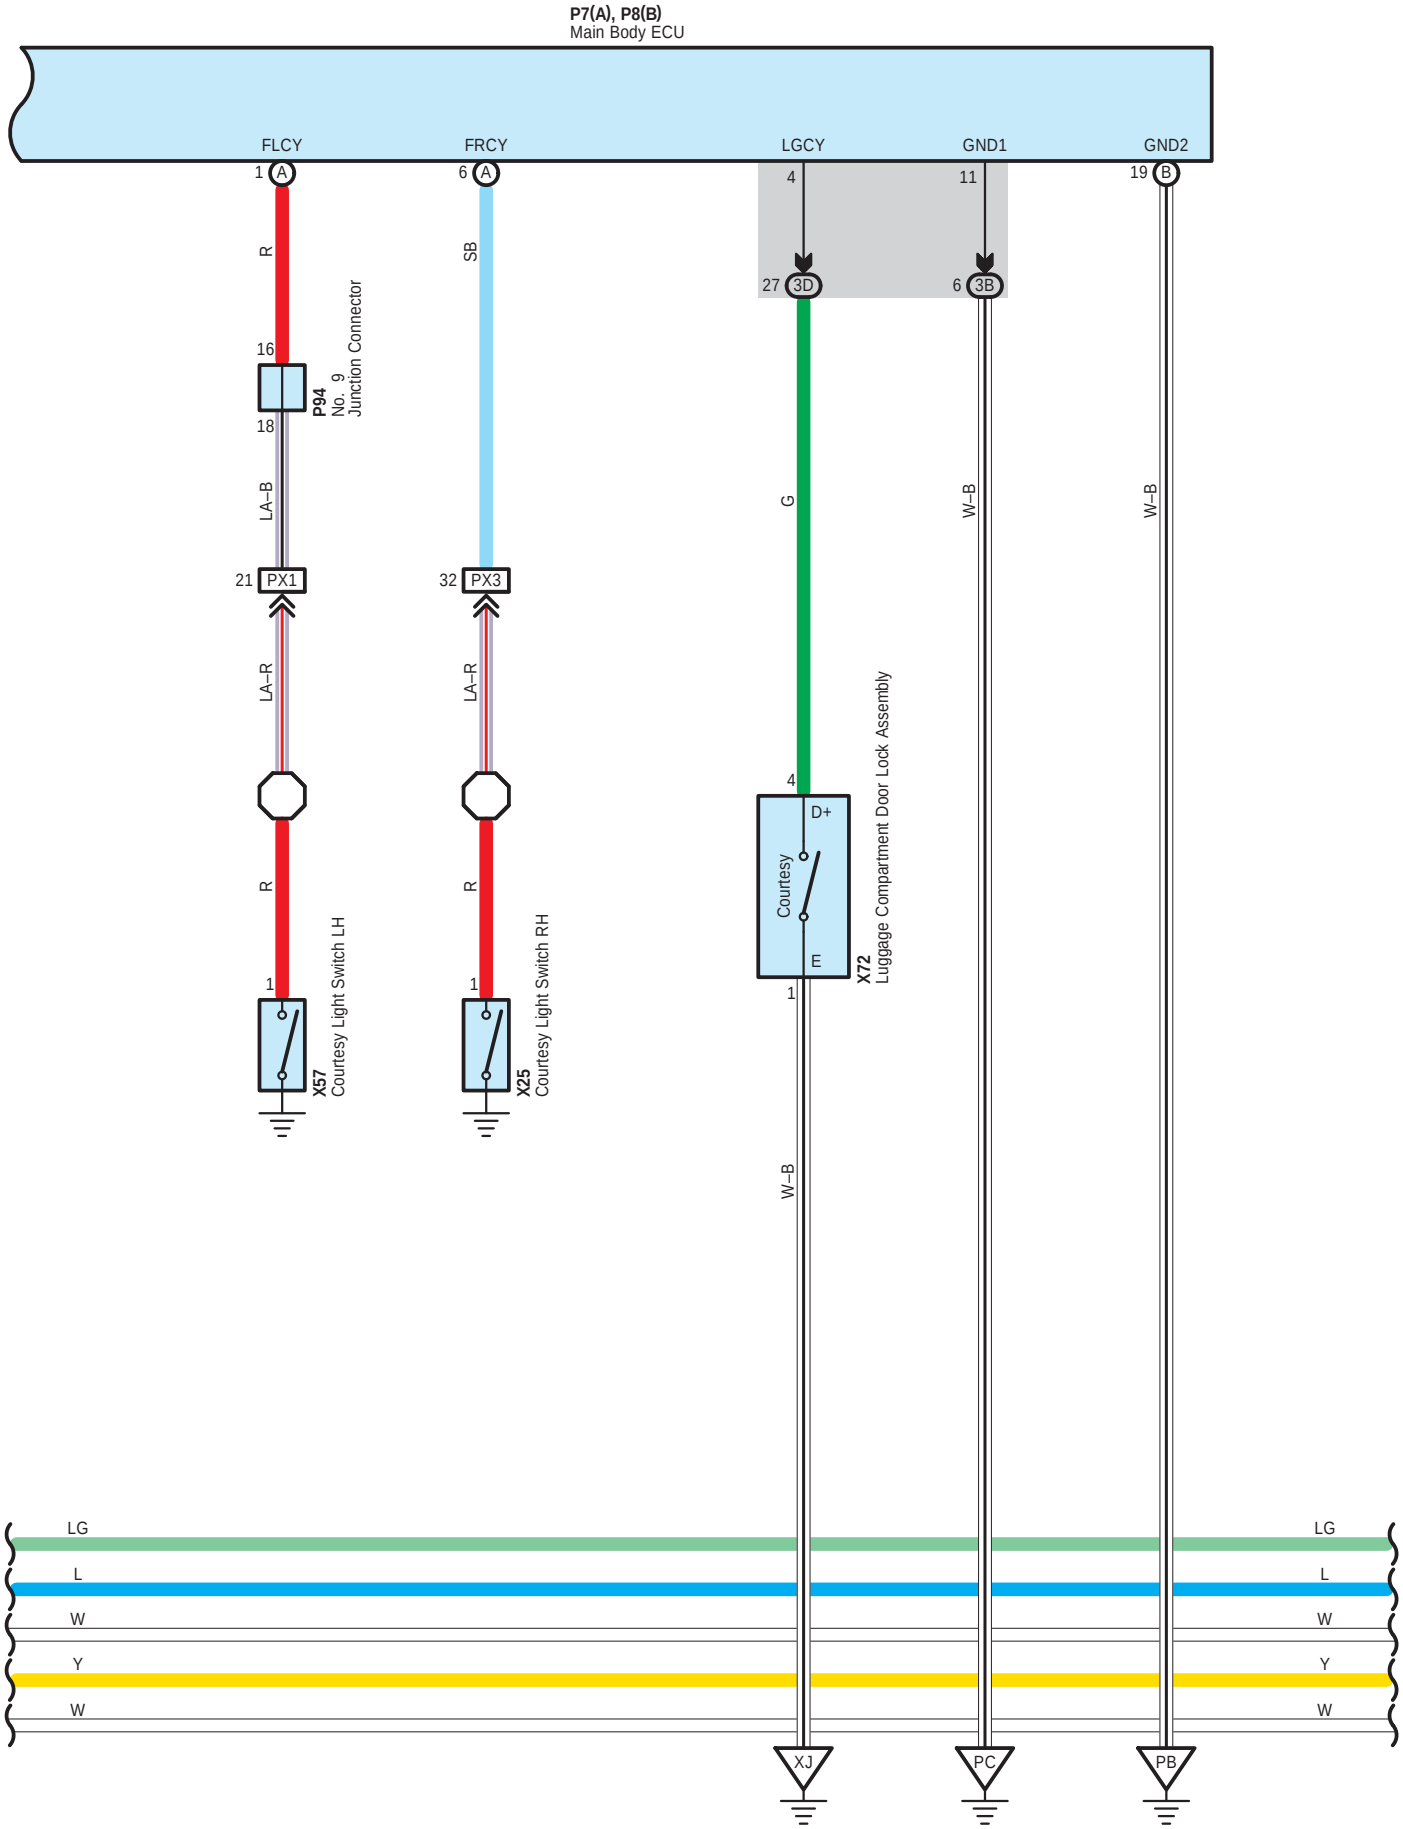
P7(A), P8(B)
Main Body ECU
FLCY
FRCY
LGCY
GND1
GND2
1 A
6 A
4
11
19 B
27 3D
6 3B
R
SB
G
W–B
W–B
16
18
P94
No. 9
Junction Connector
LA–B
21 PX1
32 PX3
LA–R
LA–R
4
D+
Courtesy
E
1
X72
Luggage Compartment Door Lock Assembly
R
R
1
1
X57
Courtesy Light Switch LH
X25
Courtesy Light Switch RH
W–B
LG
L
W
Y
W
LG
L
W
Y
W
XJ
PC
PB

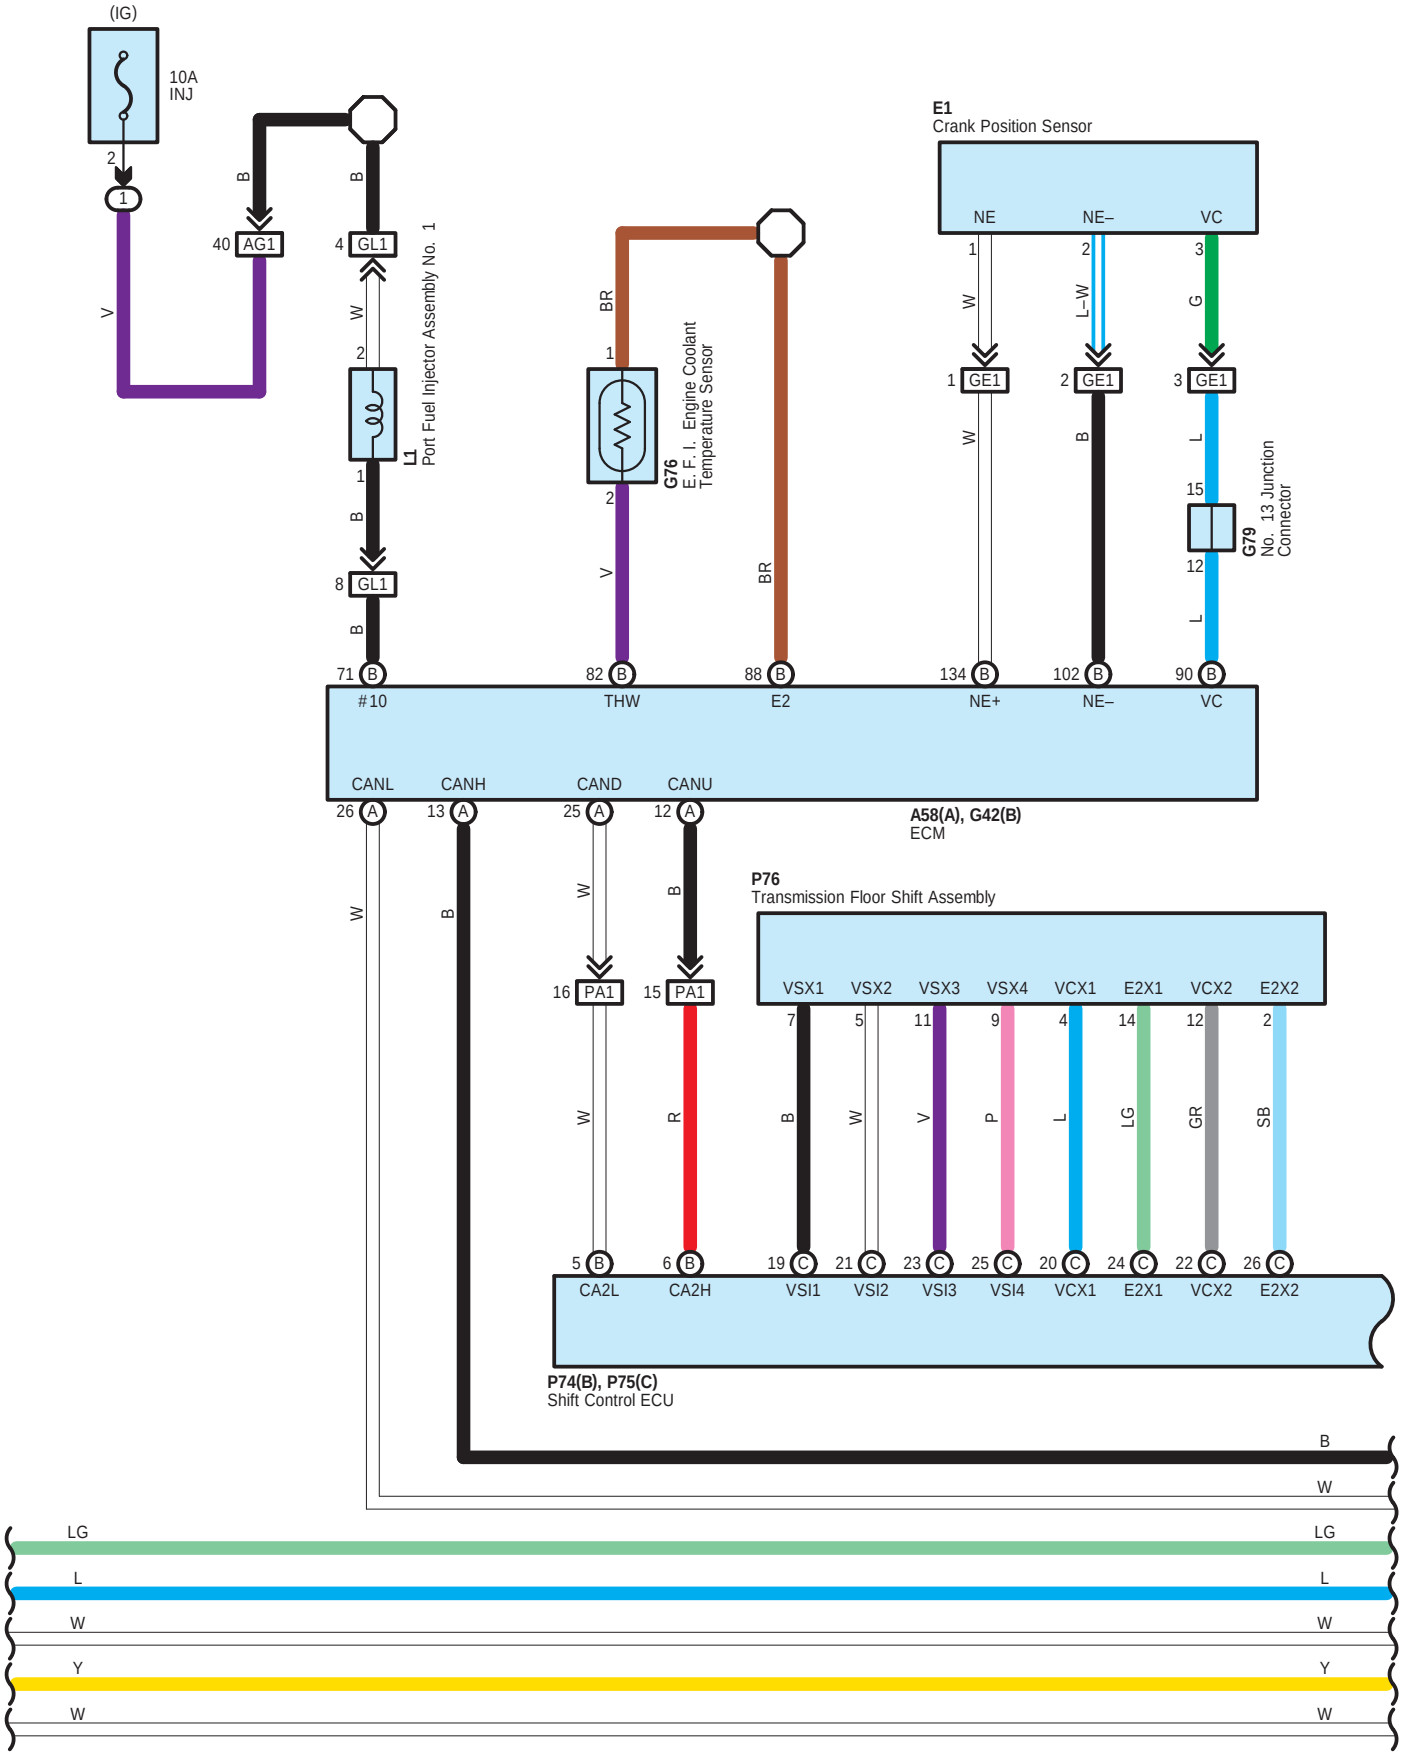
(IG)
10A
INJ
2
1
V
B
40 AG1
B
4 GL1
W
2
1
B
8 GL1
B
L1
Port Fuel Injector Assembly No. 1
BR
1
2
V
G76
E. F. I. Engine Coolant
Temperature Sensor
BR
E1
Crank Position Sensor
NE
NE–
VC
1
2
3
W
L–W
G
1 GE1
2 GE1
3 GE1
W
B
L
15
12
L
G79
No. 13 Junction
Connector
71 B
#10
82 B
THW
88 B
E2
134 B
NE+
102 B
NE–
90 B
VC
CANL
CANH
CAND
CANU
26 A
13 A
25 A
12 A
A58(A), G42(B)
ECM
W
B
W
B
16 PA1
15 PA1
P76
Transmission Floor Shift Assembly
VSX1
VSX2
VSX3
VSX4
VCX1
E2X1
VCX2
E2X2
7
5
11
9
4
14
12
2
W
R
B
W
V
P
L
LG
GR
SB
5 B
6 B
19 C
21 C
23 C
25 C
20 C
24 C
22 C
26 C
CA2L
CA2H
VSI1
VSI2
VSI3
VSI4
VCX1
E2X1
VCX2
E2X2
P74(B), P75(C)
Shift Control ECU
B
W
LG
L
W
Y
W
LG
L
W
Y
W

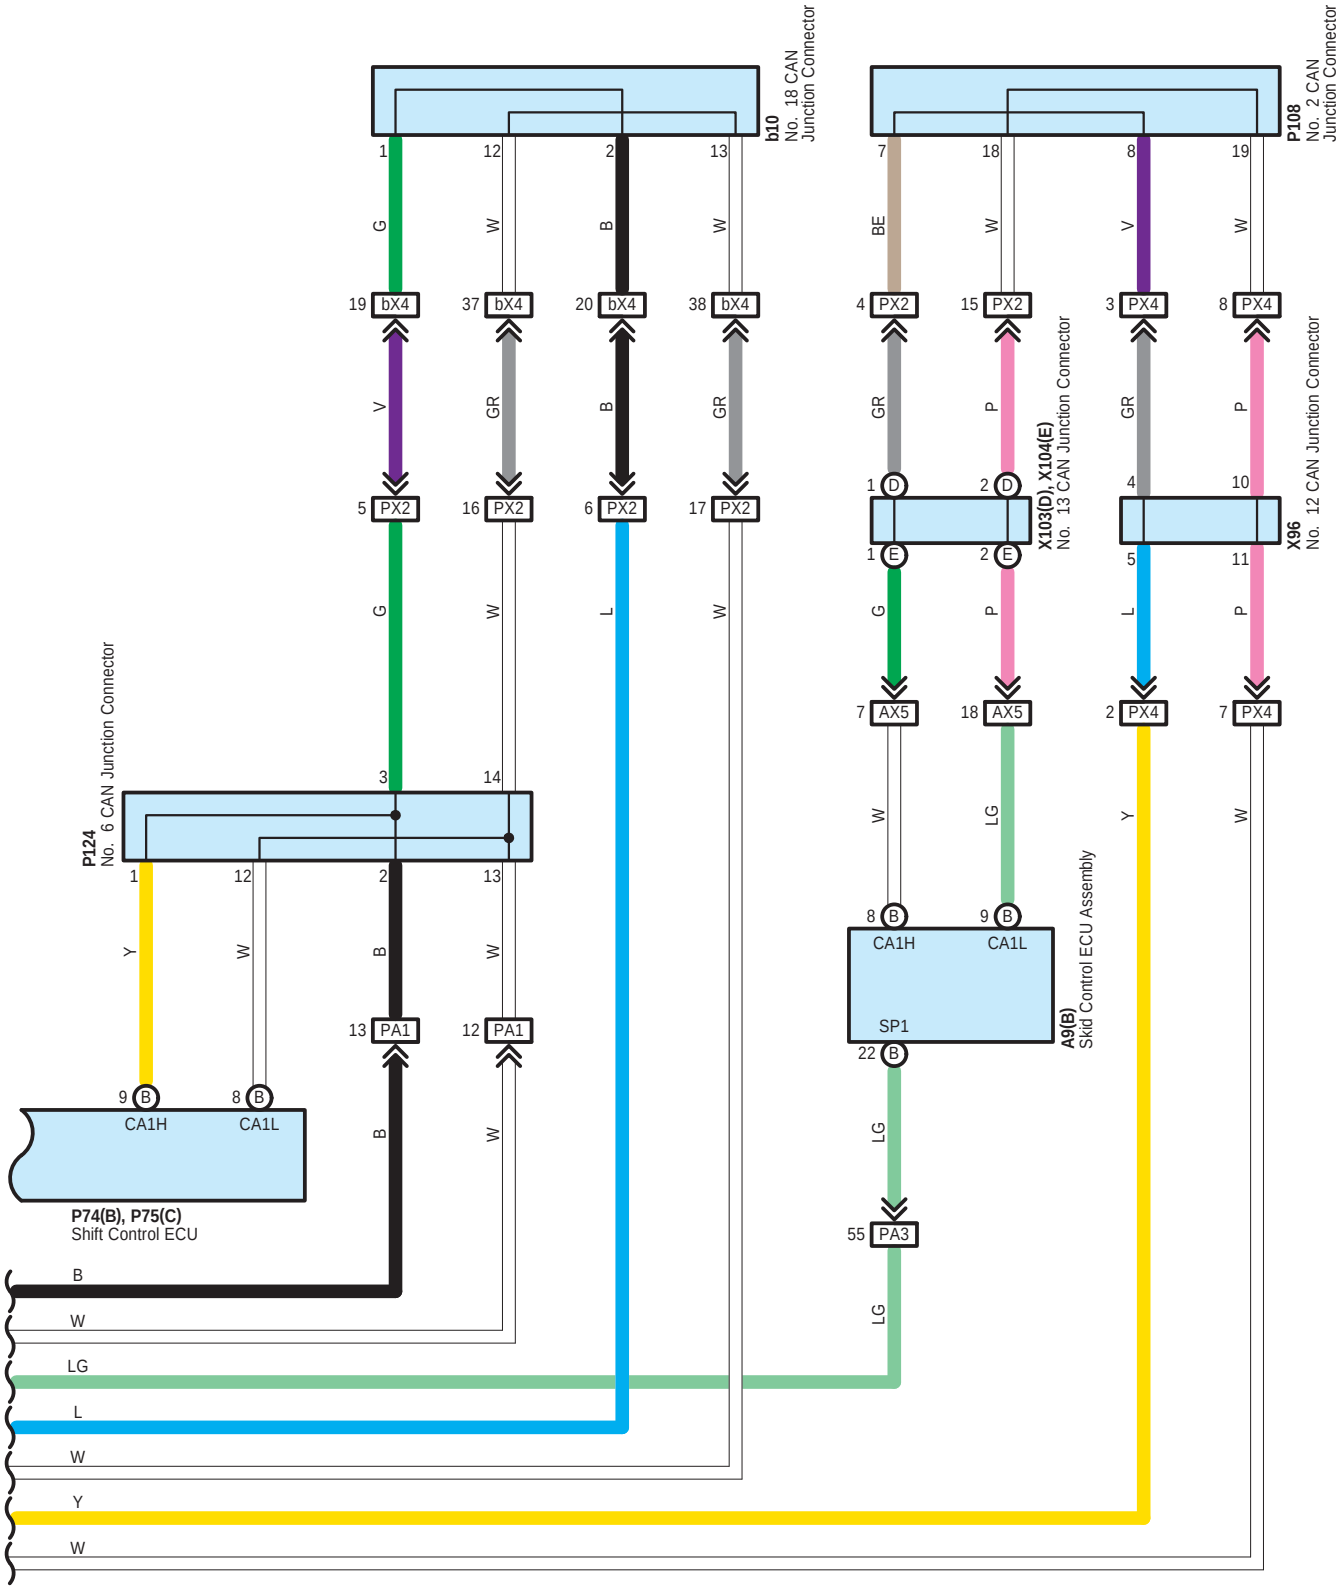
b10
No. 18 CAN
Junction Connector
P108
No. 2 CAN
Junction Connector
X103(D), X104(E)
No. 13 CAN Junction Connector
X96
No. 12 CAN Junction Connector
P124
No. 6 CAN Junction Connector
A9(B)
Skid Control ECU Assembly
P74(B), P75(C)
Shift Control ECU
CA1H
CA1L
SP1
bX4
PX2
PX4
AX5
PA1
PA3
B
W
LG
L
Y

A9
Black

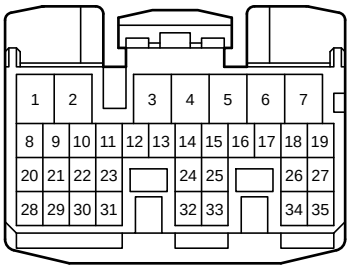

90980-12528

A16
Black

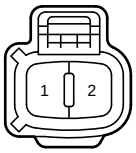

90980-11068

A40
Black

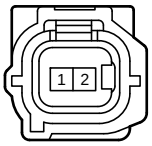

90980-12416

A58
Black

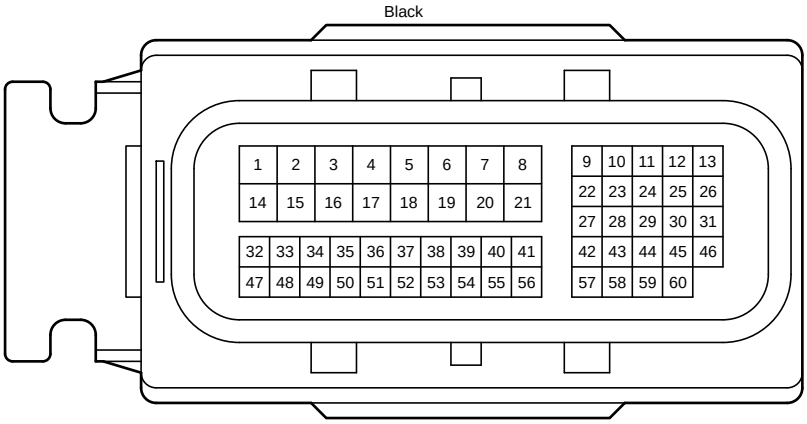

90980-12931

A68
Black

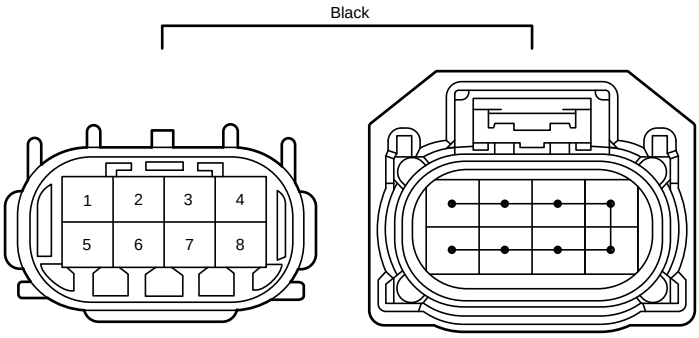

90980-12B56

A82
Gray

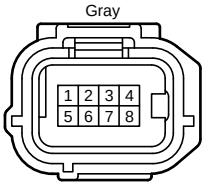

90980-12520

E1
Black

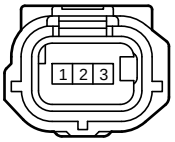

90980-12353

G22
Gray

90980-11363

G38
Gray

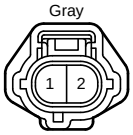

90980-11235

G42
Black

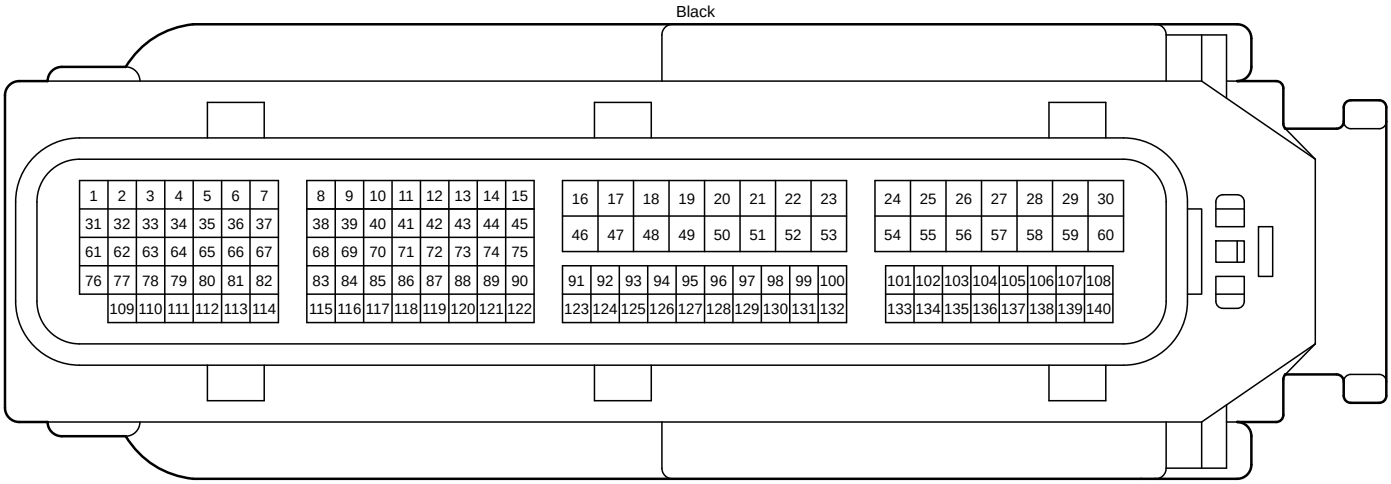

90980-12966

G76
Black

90980-10735

G77
Gray

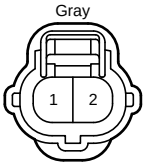

90980-11025

G79
Gray

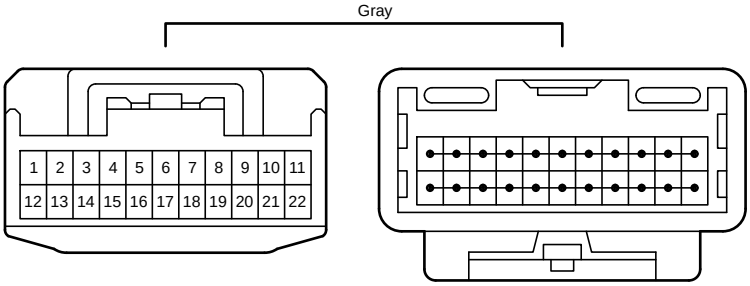

90980-12372

L1
Black

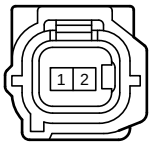

90980-12728

P3
White

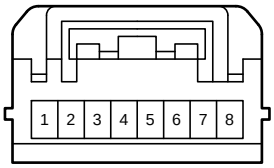

90980-12550

P7
Black

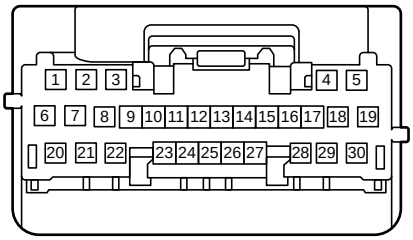

90980-12C62

P8
Black

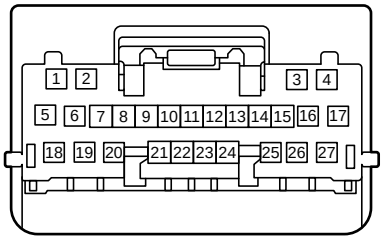

90980-12C63

P19
Black

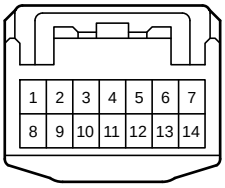

90980-12370

P25
Black

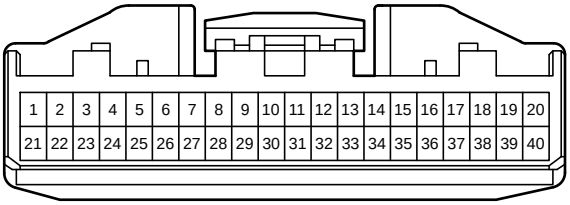

90980-12557

P26
Black

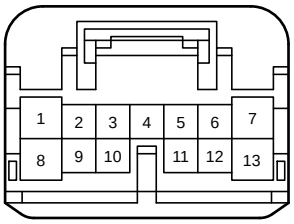

90980-12767

P57
White

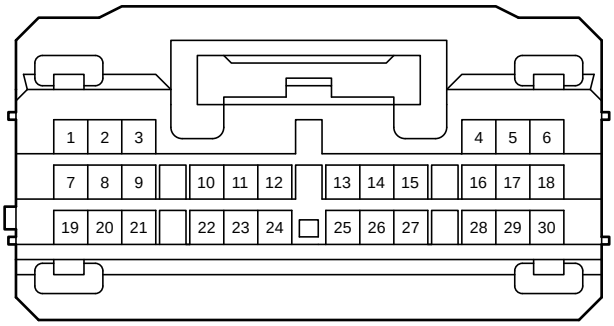

90980-12761

P58
White

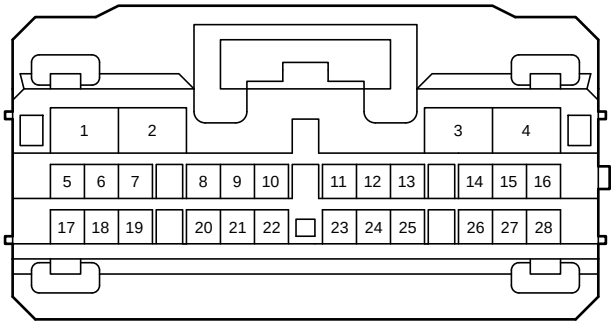

90980-12760

P59
Black

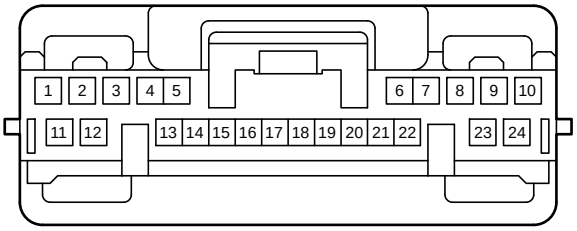

90980-12912

P63
White

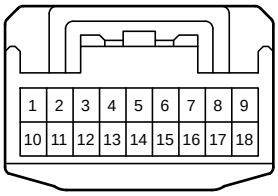

90980-12412

P74
White

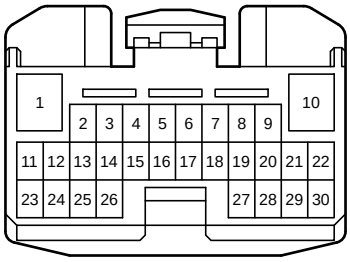

90980-12562

P75
White

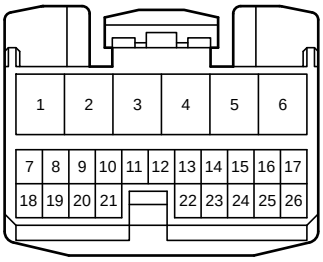

90980-12561

P76
White

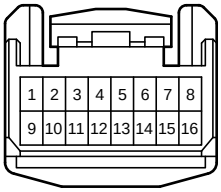

90980-12553

P80
White

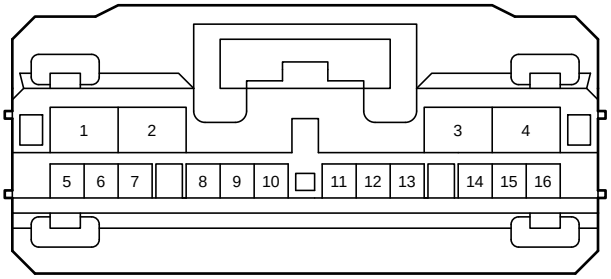

90980-12763

P91
Blue

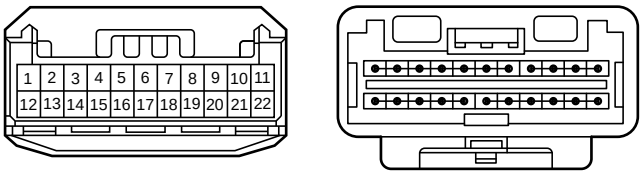

90980-12B54

P94
Blue

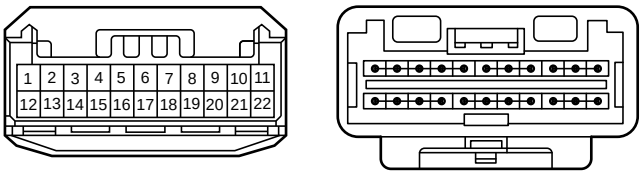

90980-12B54

P107
White

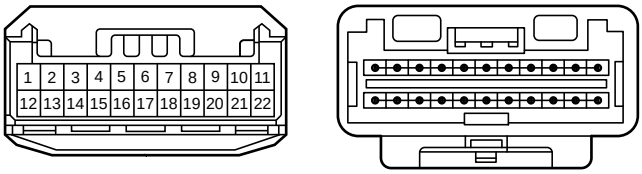

90980-12B54

P108
White

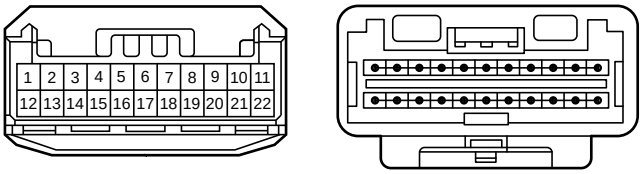

90980-12B54

P116
Black

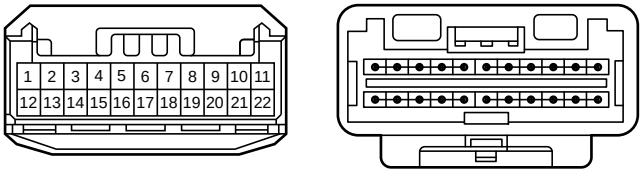

90980-12B54

P124
Black

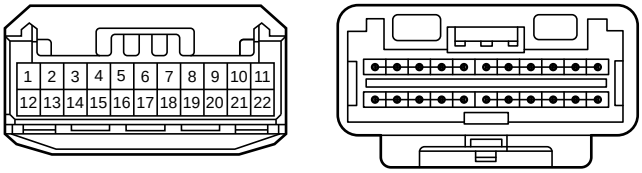

90980-12B54

X17
White

90980-11077

X25
Black

90980-10871

X32
Gray

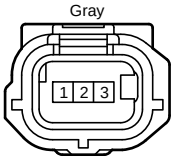

90980-12353

X57
Black

90980-10871

X72
White



90980-12211

X85
White



90980-12827

X86
White



90980-12827

X88
White



90980-12827

X93
White



90980-12827

X96
White

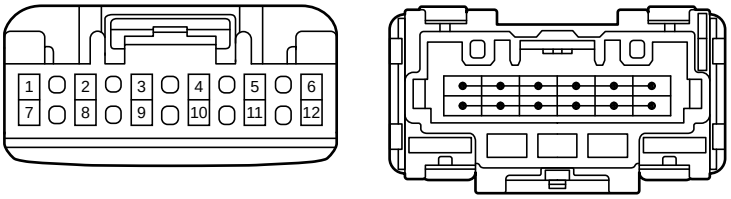

90980-12C68

X103
White



90980-12827

X104
White



90980-12827

X121
White

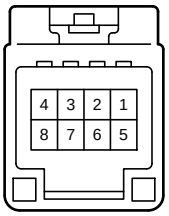

90980-12248

b10
Black

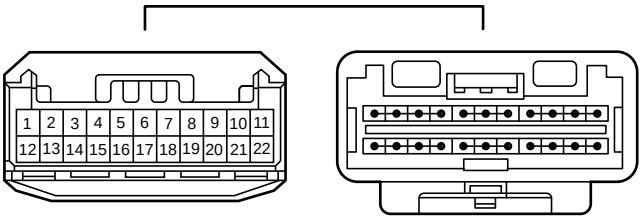

90980-12B54

z2
Black

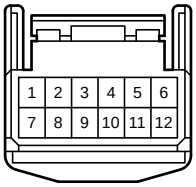

90980-12559

3A
White

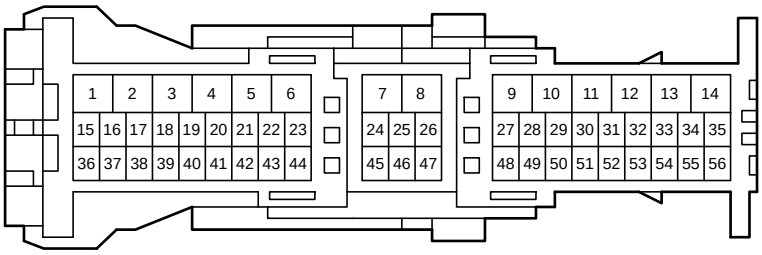

90980-12943

3B
White

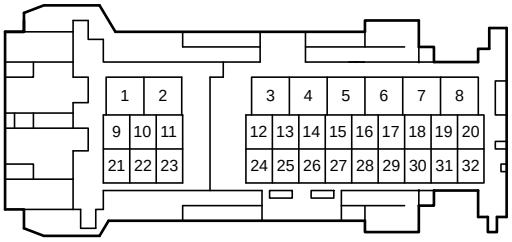

90980-12A48

3D
White

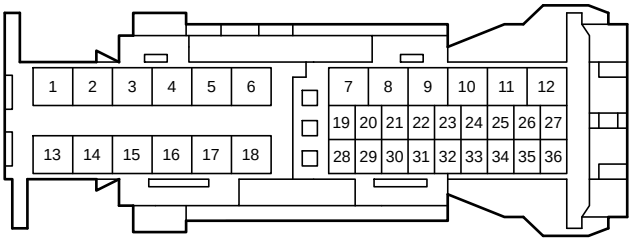

90980-12944

4A
White

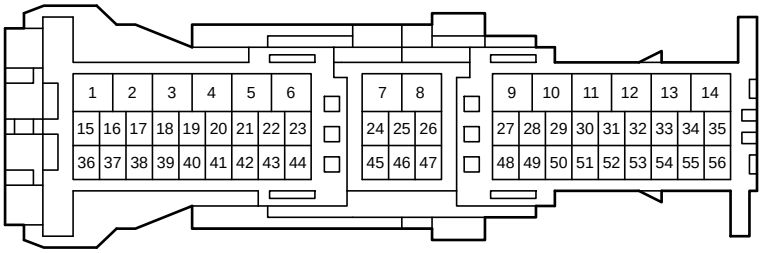

90980-12943

4B
White

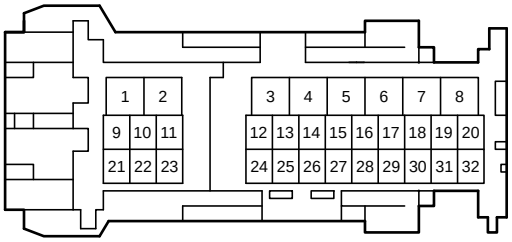

90980-12A48

4C
White

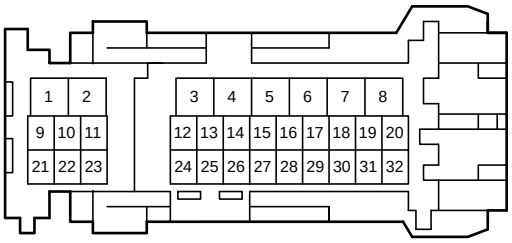

90980-12A47

4D
White

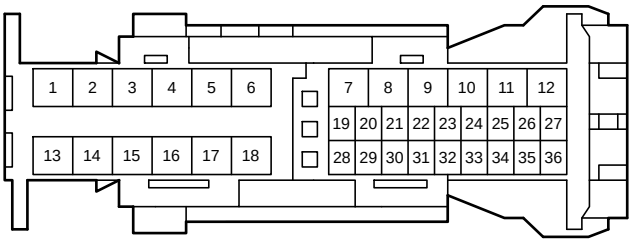

90980-12944

AG1
White

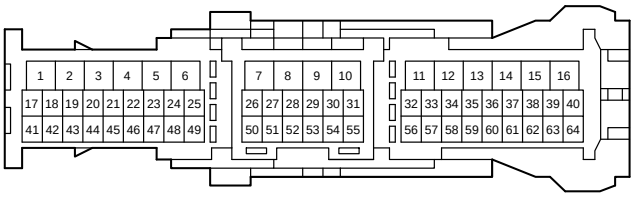

90980-12774

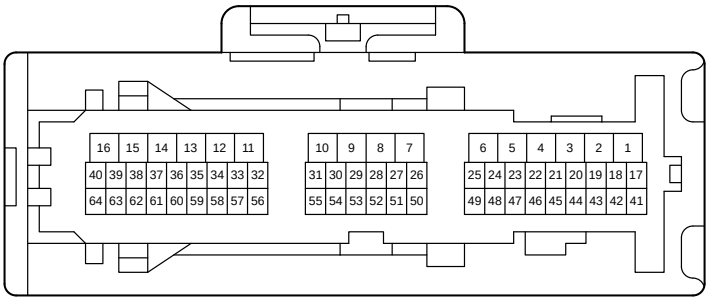

90980-12798

AX2
White

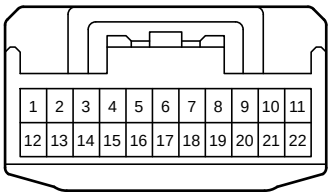

90980-12372

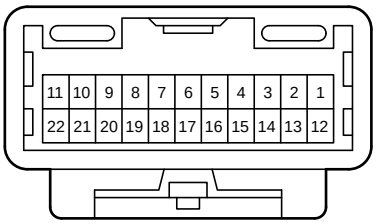

90980-12371

AX5
White

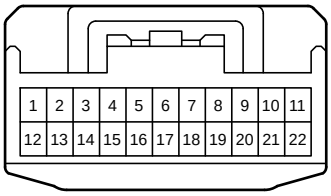

90980-12372

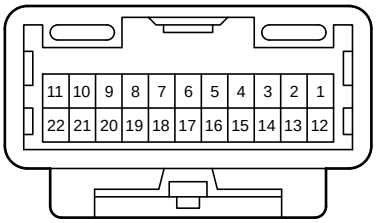

90980-12371

GE1
Black

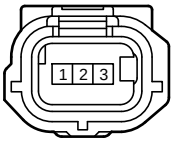

90980-12353

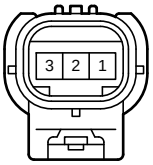

90980-12719

GL1
Gray

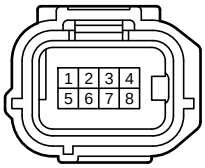

90980-12520

90980-12519

PA1
White

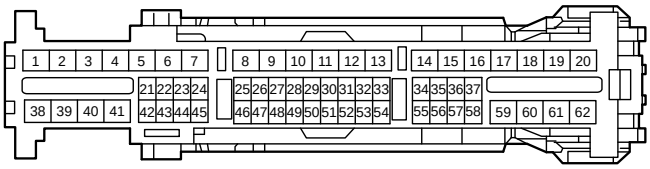

90980-12B22

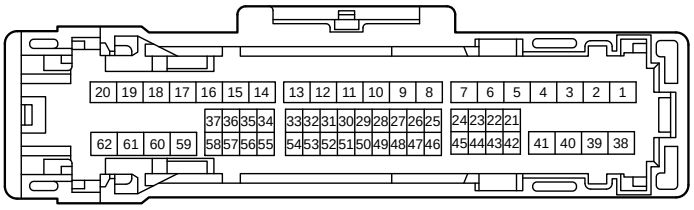

90980-12B21

PA3
White

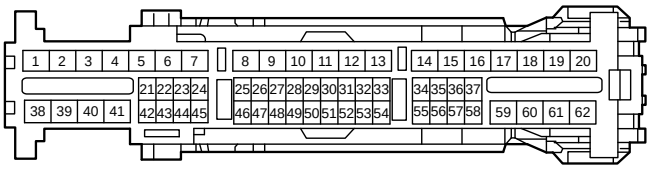

90980-12B22

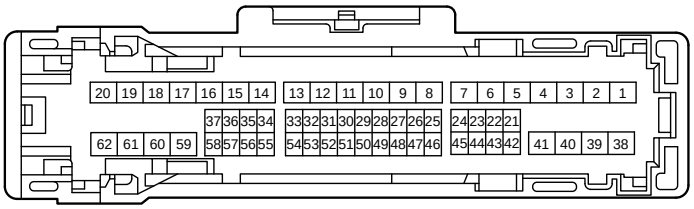

90980-12B21

PX1
Gray

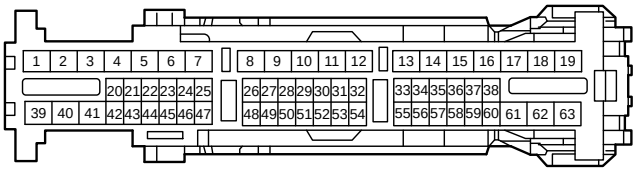

90980-12B20

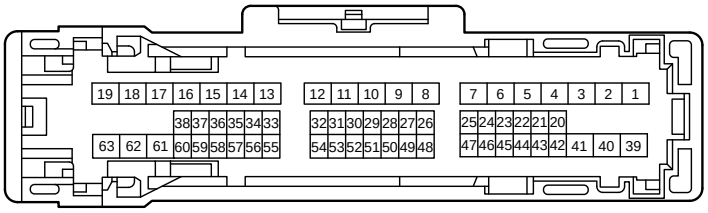

90980-12B19

PX2
White

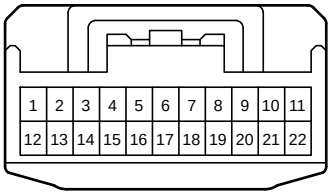

90980-12372

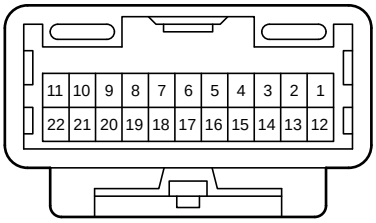

90980-12371

PX3
Gray

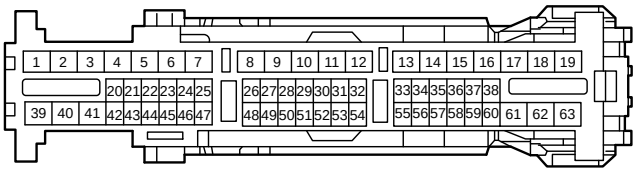

90980-12B20

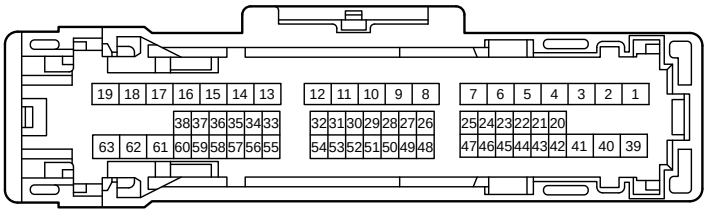

90980-12B19

PX4
White

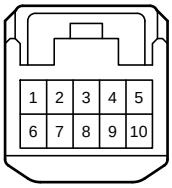

90980-12368

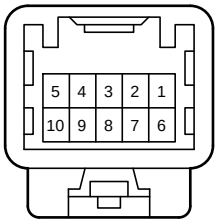

90980-12367

PX5
White

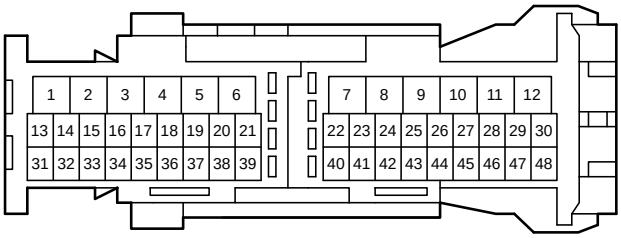

90980-12779

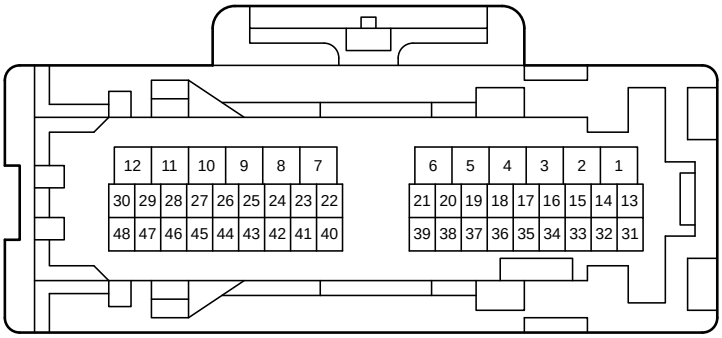

90980-12799

bX4
White

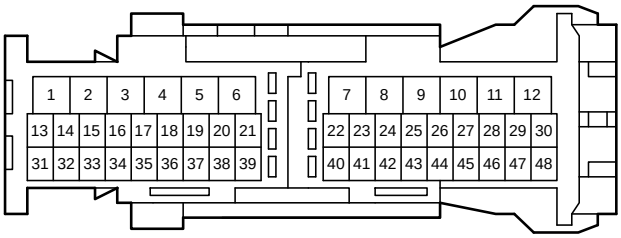

90980-12779

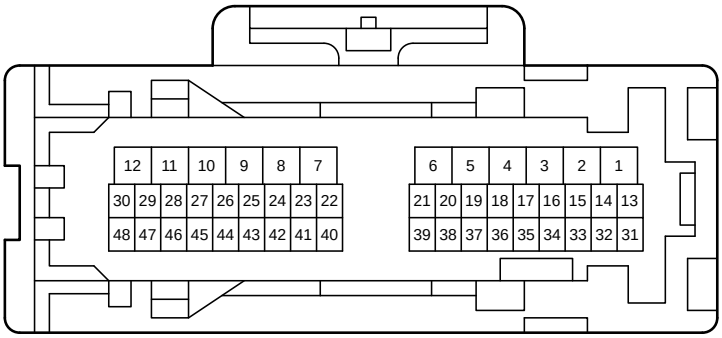

90980-12799