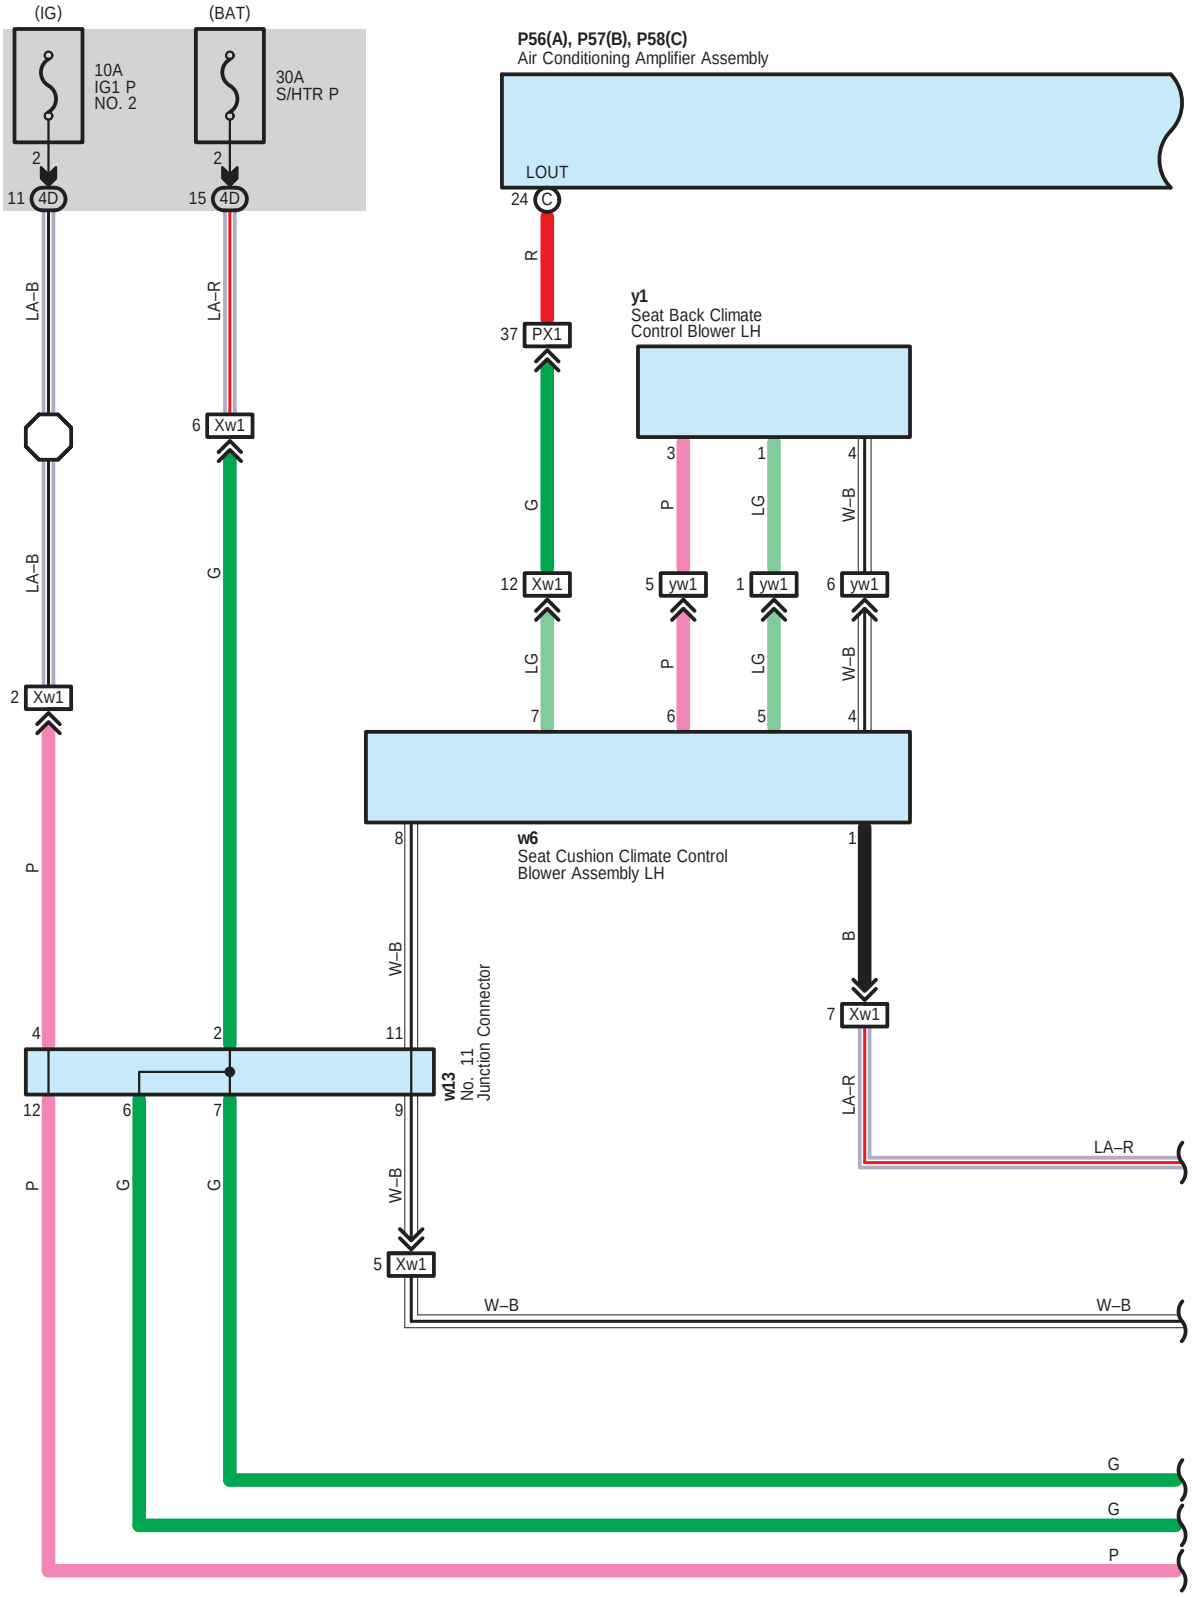
(IG)
(BAT)
10A
IG1 P
NO. 2
30A
S/HTR P
P56(A), P57(B), P58(C)
Air Conditioning Amplifier Assembly
LOUT
y1
Seat Back Climate
Control Blower LH
w6
Seat Cushion Climate Control
Blower Assembly LH
w13
No. 11
Junction Connector
LA–B
LA–R
W–B
LA–R
W–B
W–B
G
G
P

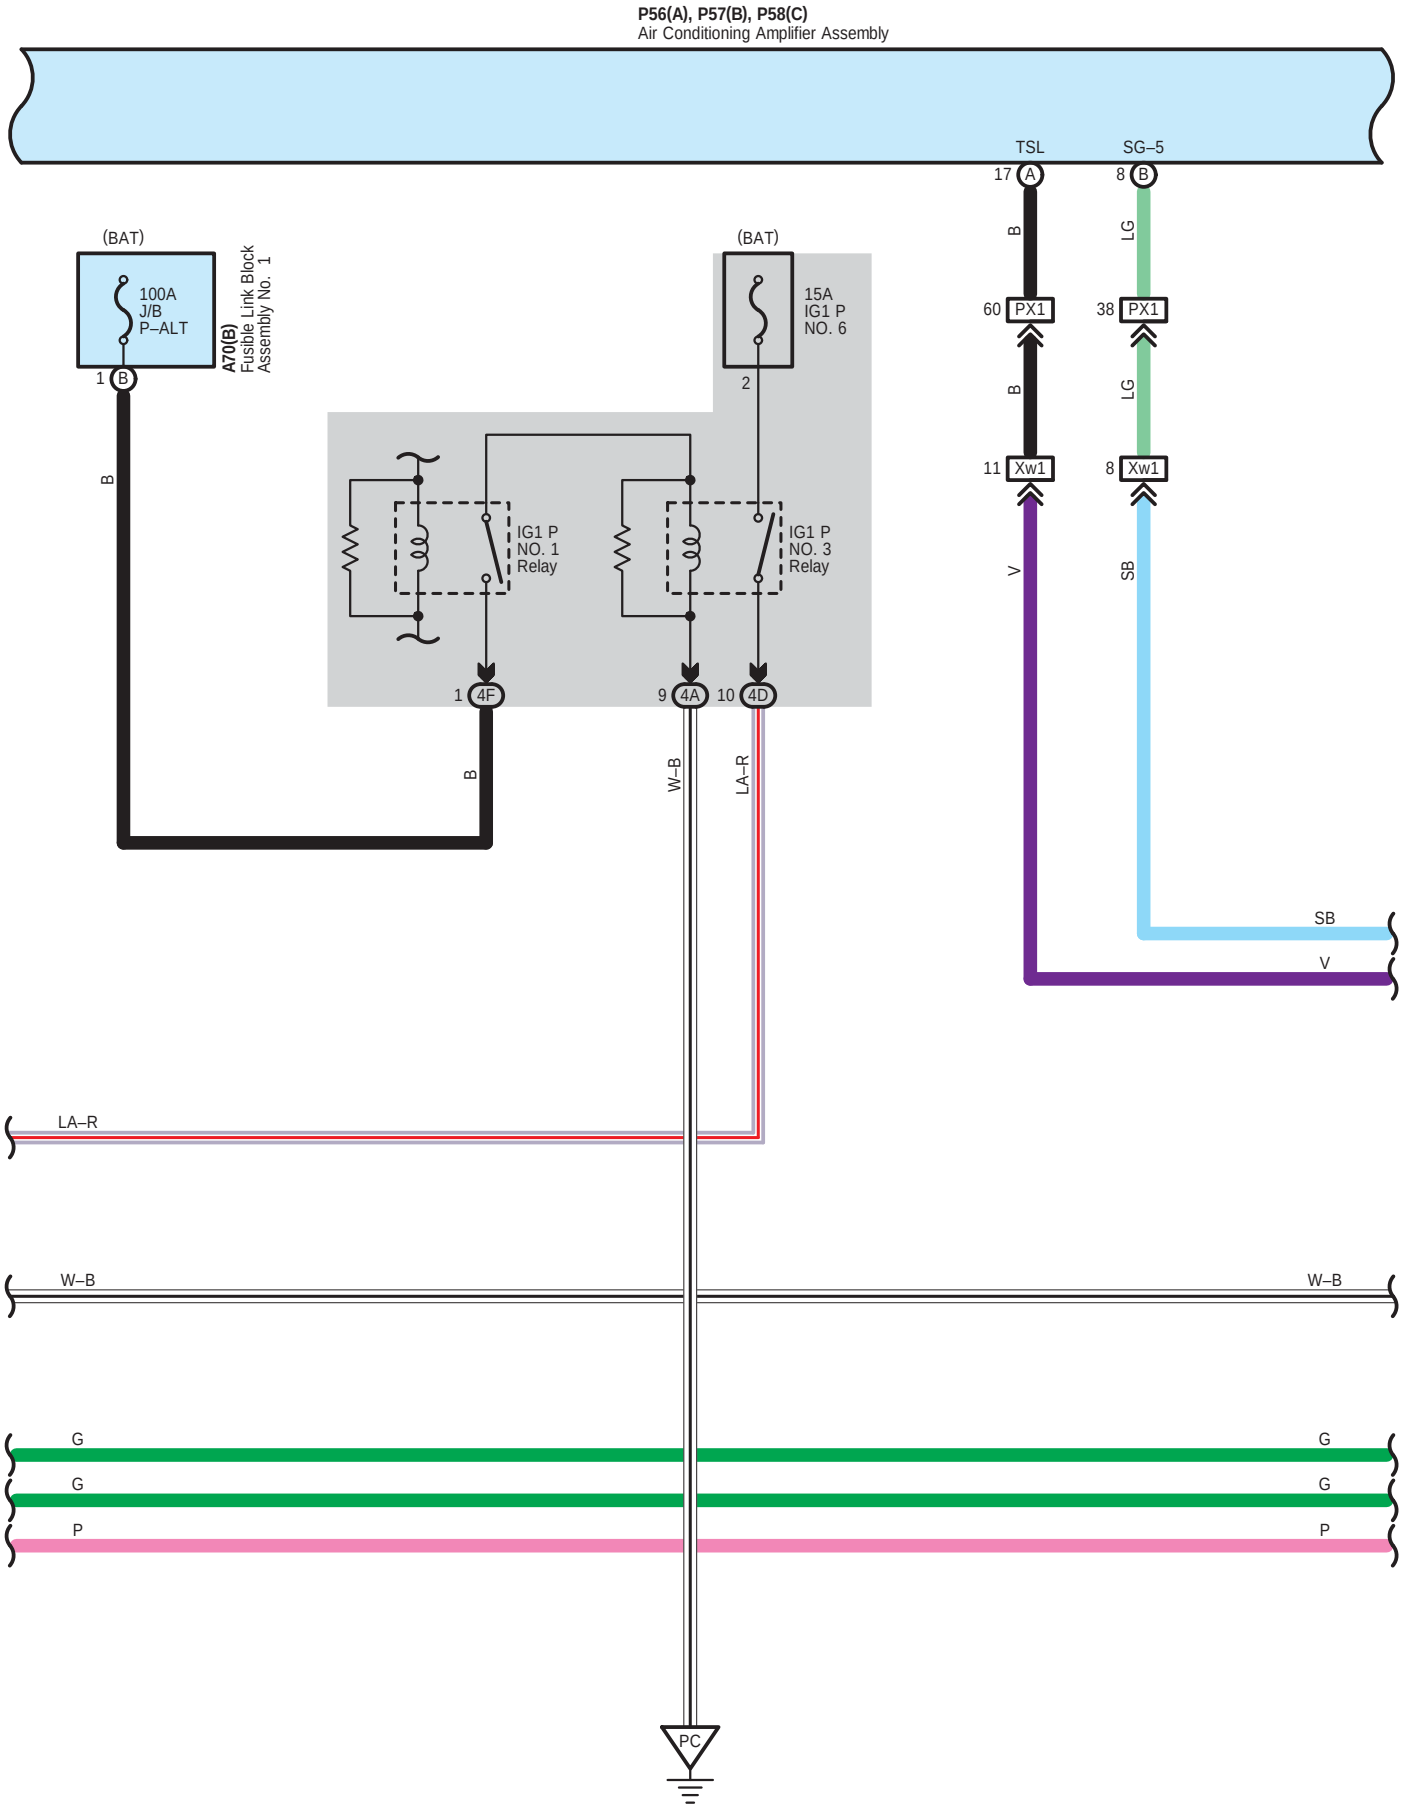
P56(A), P57(B), P58(C)
Air Conditioning Amplifier Assembly
TSL
SG–5
17 A
8 B
B
LG
60 PX1
38 PX1
B
LG
11 Xw1
8 Xw1
V
SB
(BAT)
100A
J/B
P–ALT
1 B
A70(B)
Fusible Link Block
Assembly No. 1
B
(BAT)
15A
IG1 P
NO. 6
2
IG1 P
NO. 1
Relay
IG1 P
NO. 3
Relay
1 4F
9 4A
10 4D
B
W–B
LA–R
SB
V
LA–R
W–B
W–B
G
G
G
G
P
P
PC

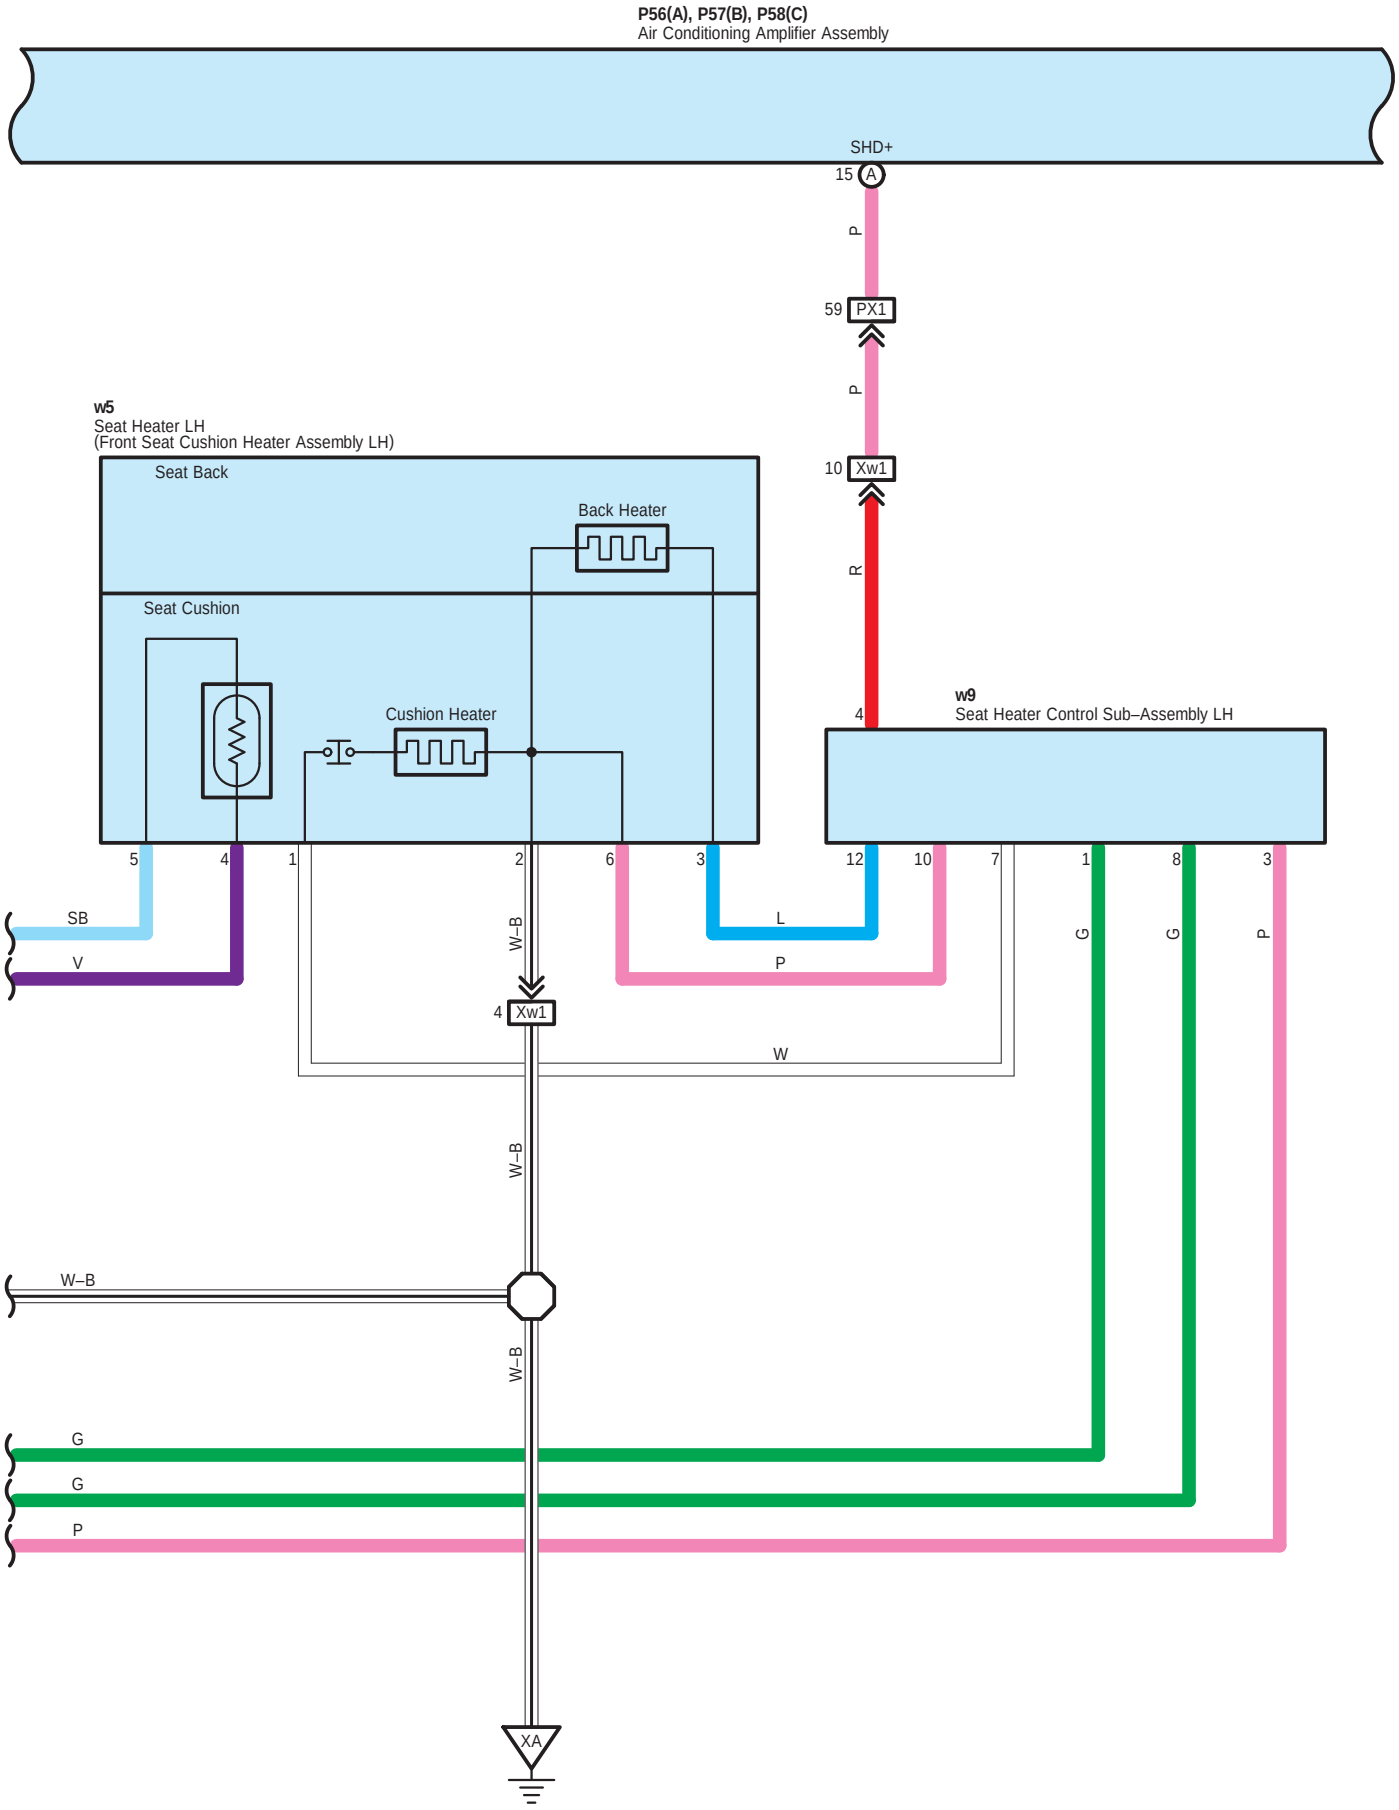
P56(A), P57(B), P58(C)
Air Conditioning Amplifier Assembly
SHD+
15 A
P
59 PX1
P
10 Xw1
R
w5
Seat Heater LH
(Front Seat Cushion Heater Assembly LH)
Seat Back
Back Heater
Seat Cushion
Cushion Heater
w9
Seat Heater Control Sub–Assembly LH
4
5
4
1
2
6
3
12
10
7
1
8
3
SB
V
W–B
L
P
G
G
P
4 Xw1
W
W–B
W–B
W–B
G
G
P
XA

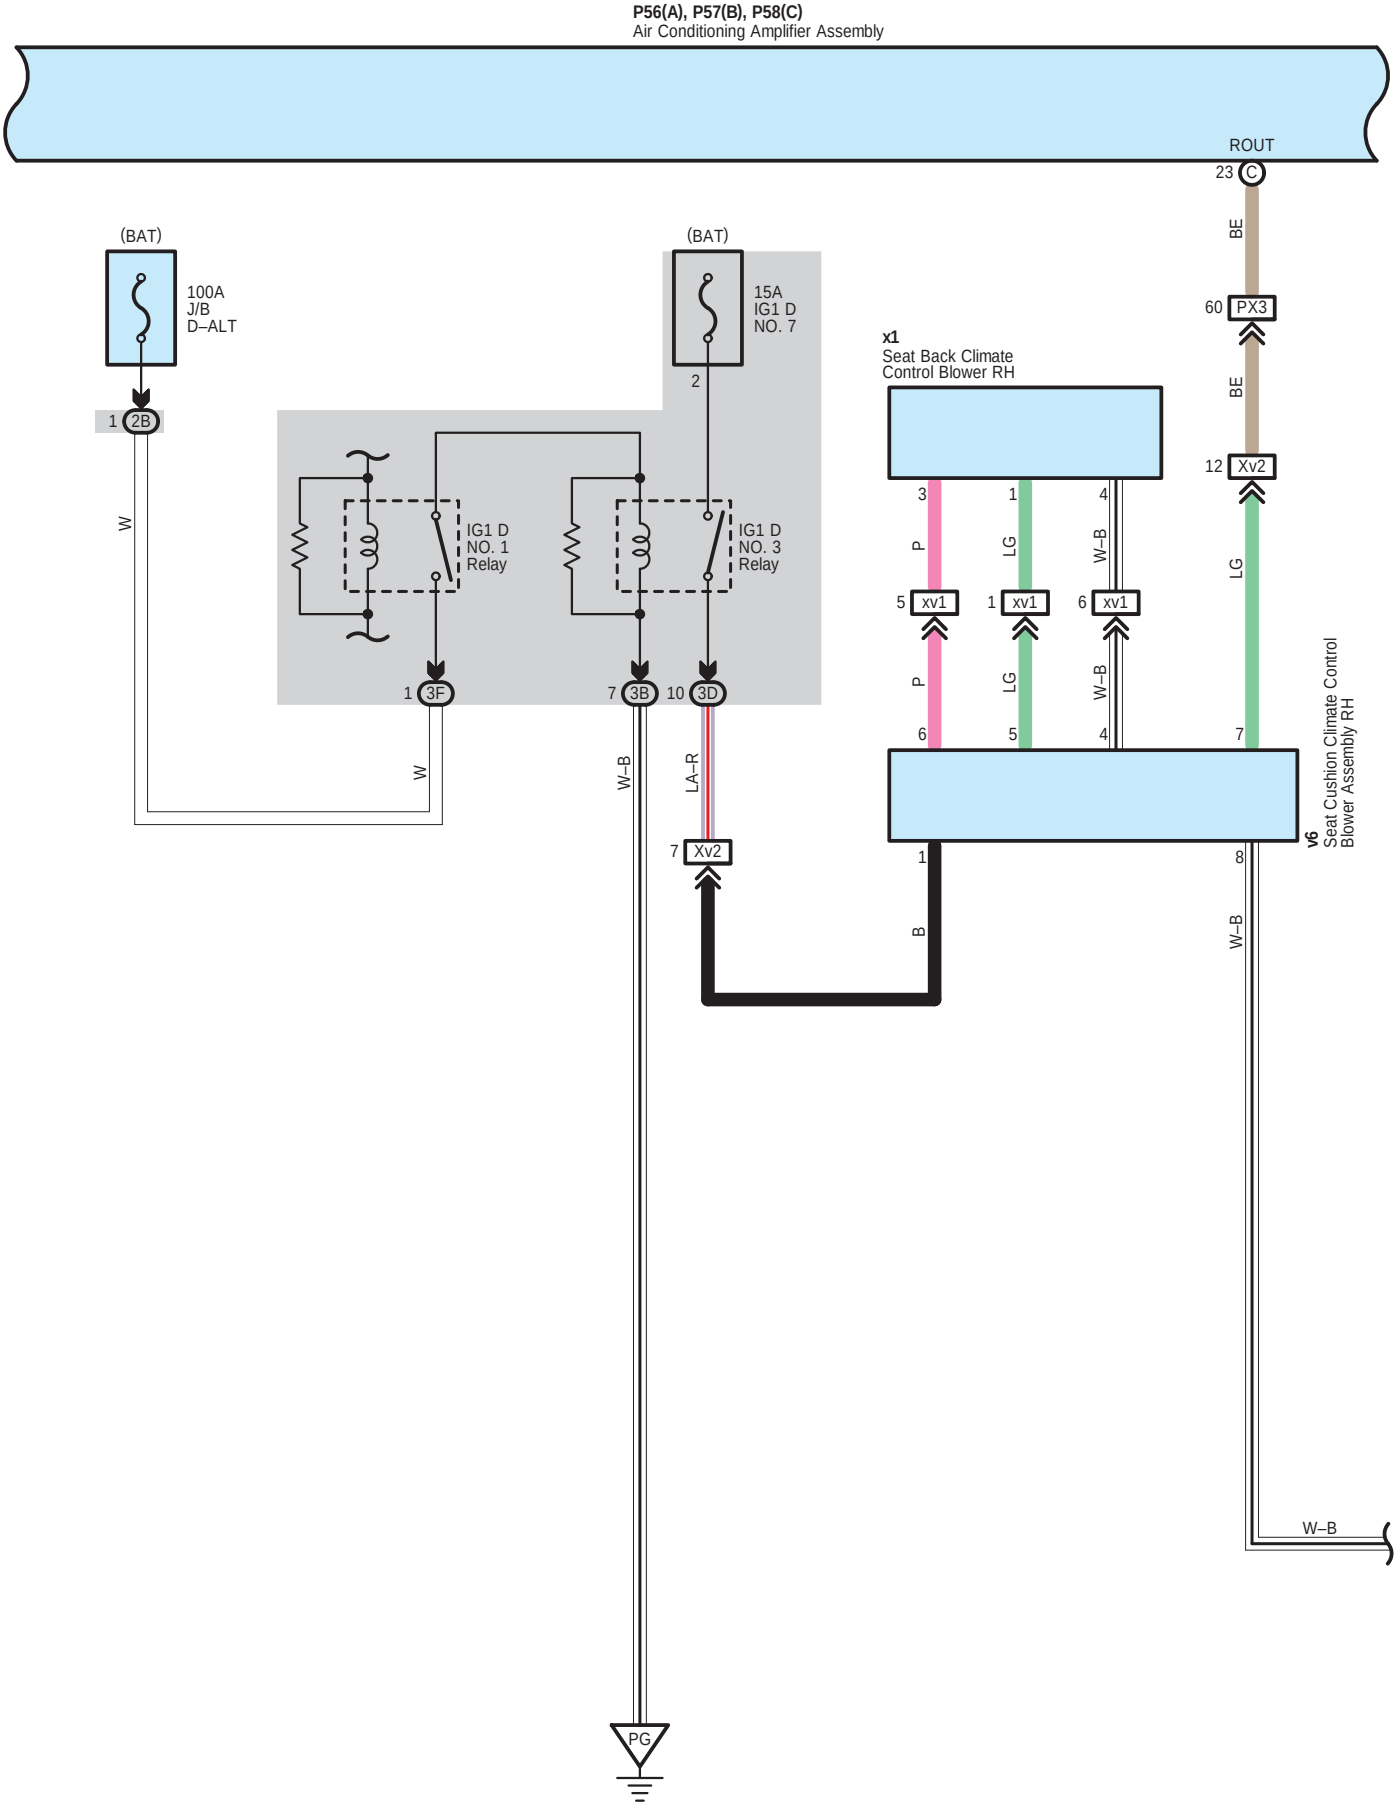
P56(A), P57(B), P58(C)
Air Conditioning Amplifier Assembly
ROUT
23 C
BE
60 PX3
BE
12 Xv2
LG
(BAT)
100A
J/B
D–ALT
1 2B
W
(BAT)
15A
IG1 D
NO. 7
2
IG1 D
NO. 1
Relay
IG1 D
NO. 3
Relay
1 3F
7 3B
10 3D
W
W–B
LA–R
7 Xv2
x1
Seat Back Climate
Control Blower RH
3
1
4
P
LG
W–B
5 xv1
1 xv1
6 xv1
P
LG
W–B
6
5
4
7
1
B
8
W–B
v6
Seat Cushion Climate Control
Blower Assembly RH
W–B
PG

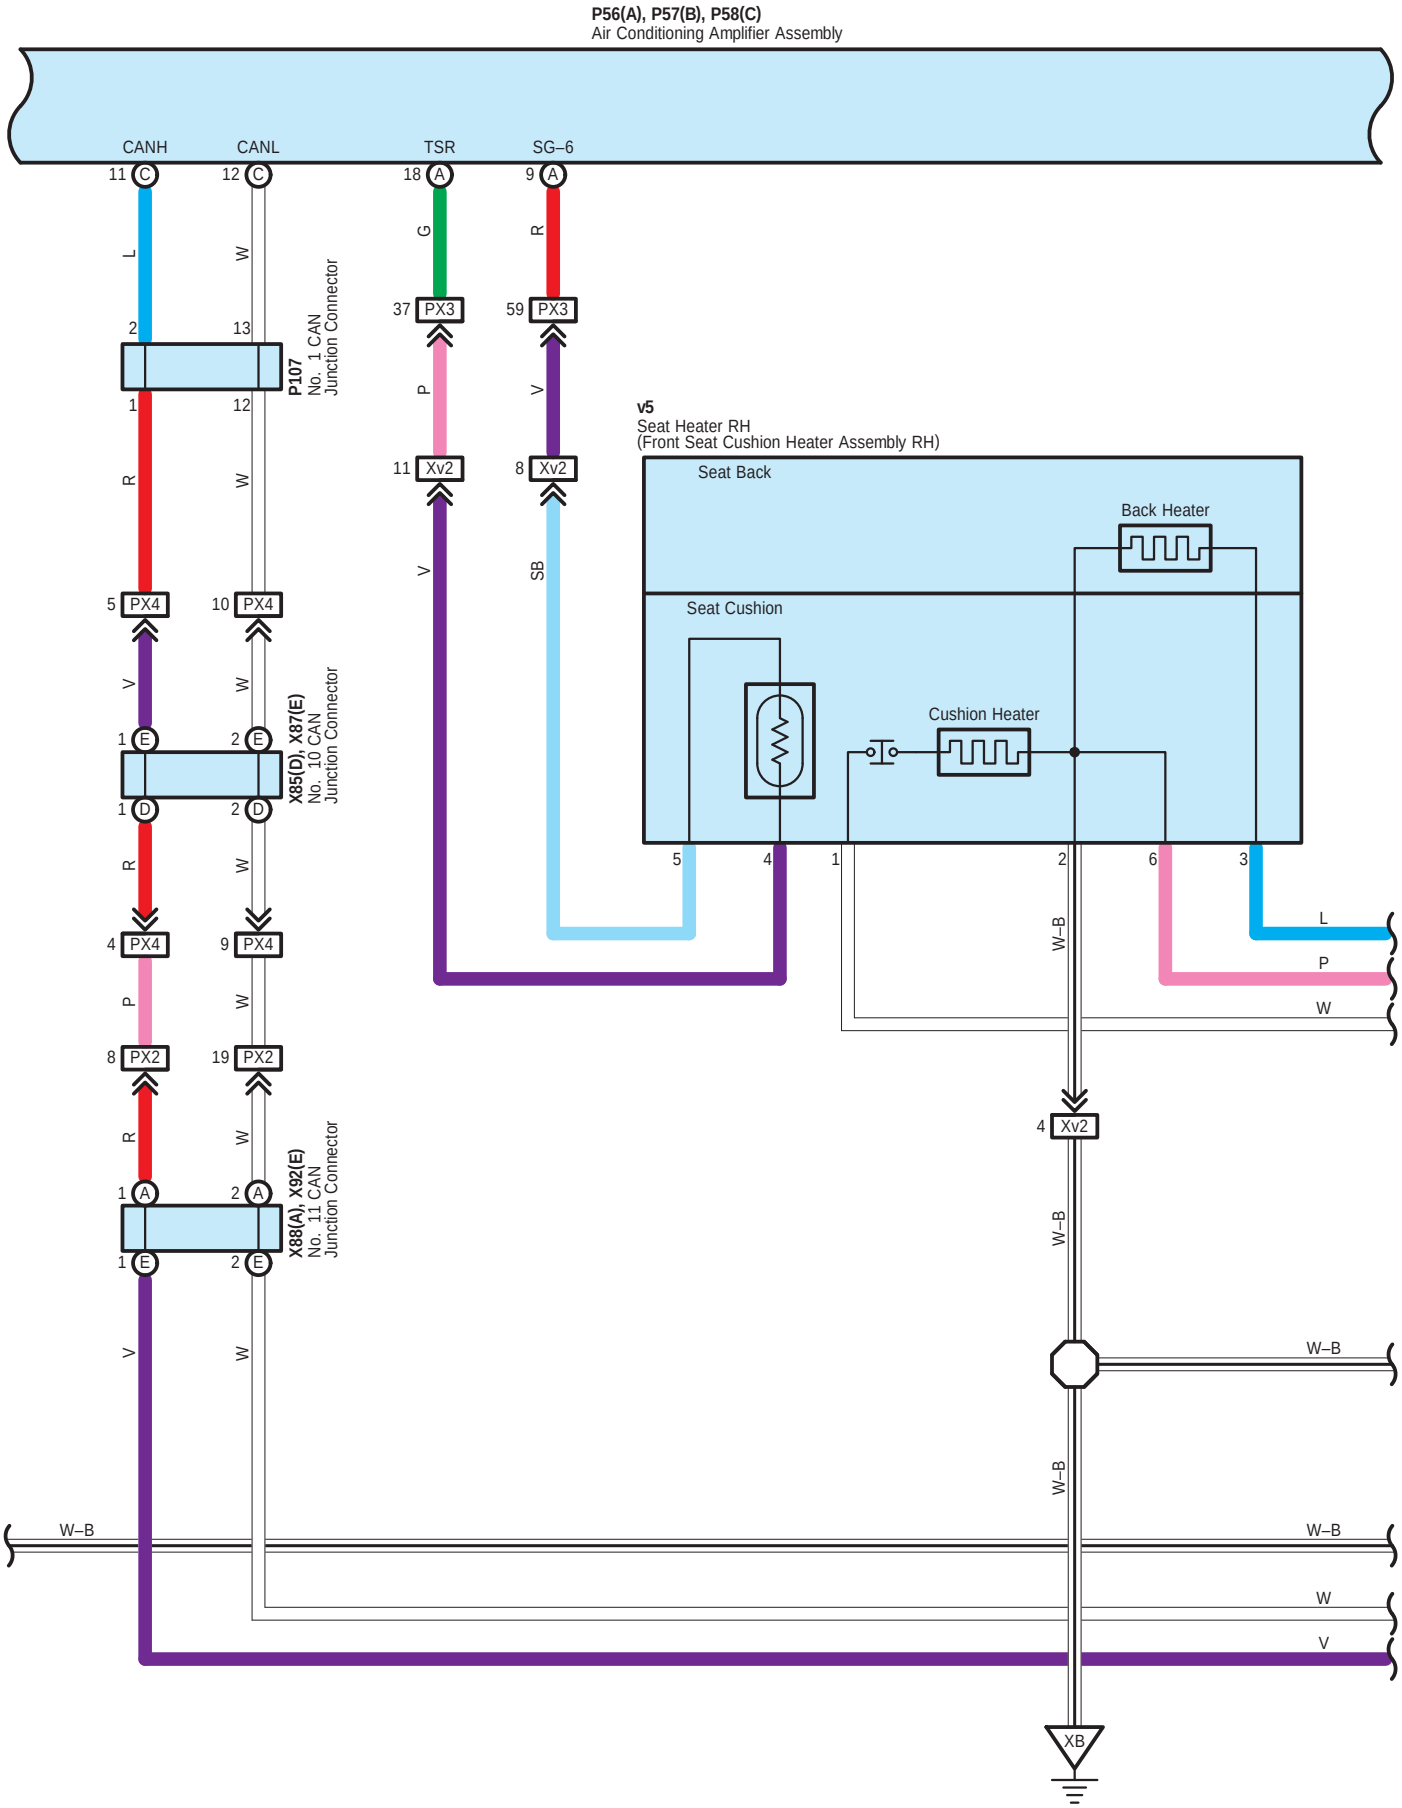
P56(A), P57(B), P58(C)
Air Conditioning Amplifier Assembly
CANH
CANL
TSR
SG–6
P107
No. 1 CAN
Junction Connector
X85(D), X87(E)
No. 10 CAN
Junction Connector
X88(A), X92(E)
No. 11 CAN
Junction Connector
PX3
PX4
PX2
Xv2
v5
Seat Heater RH
(Front Seat Cushion Heater Assembly RH)
Seat Back
Back Heater
Seat Cushion
Cushion Heater
W–B
XB

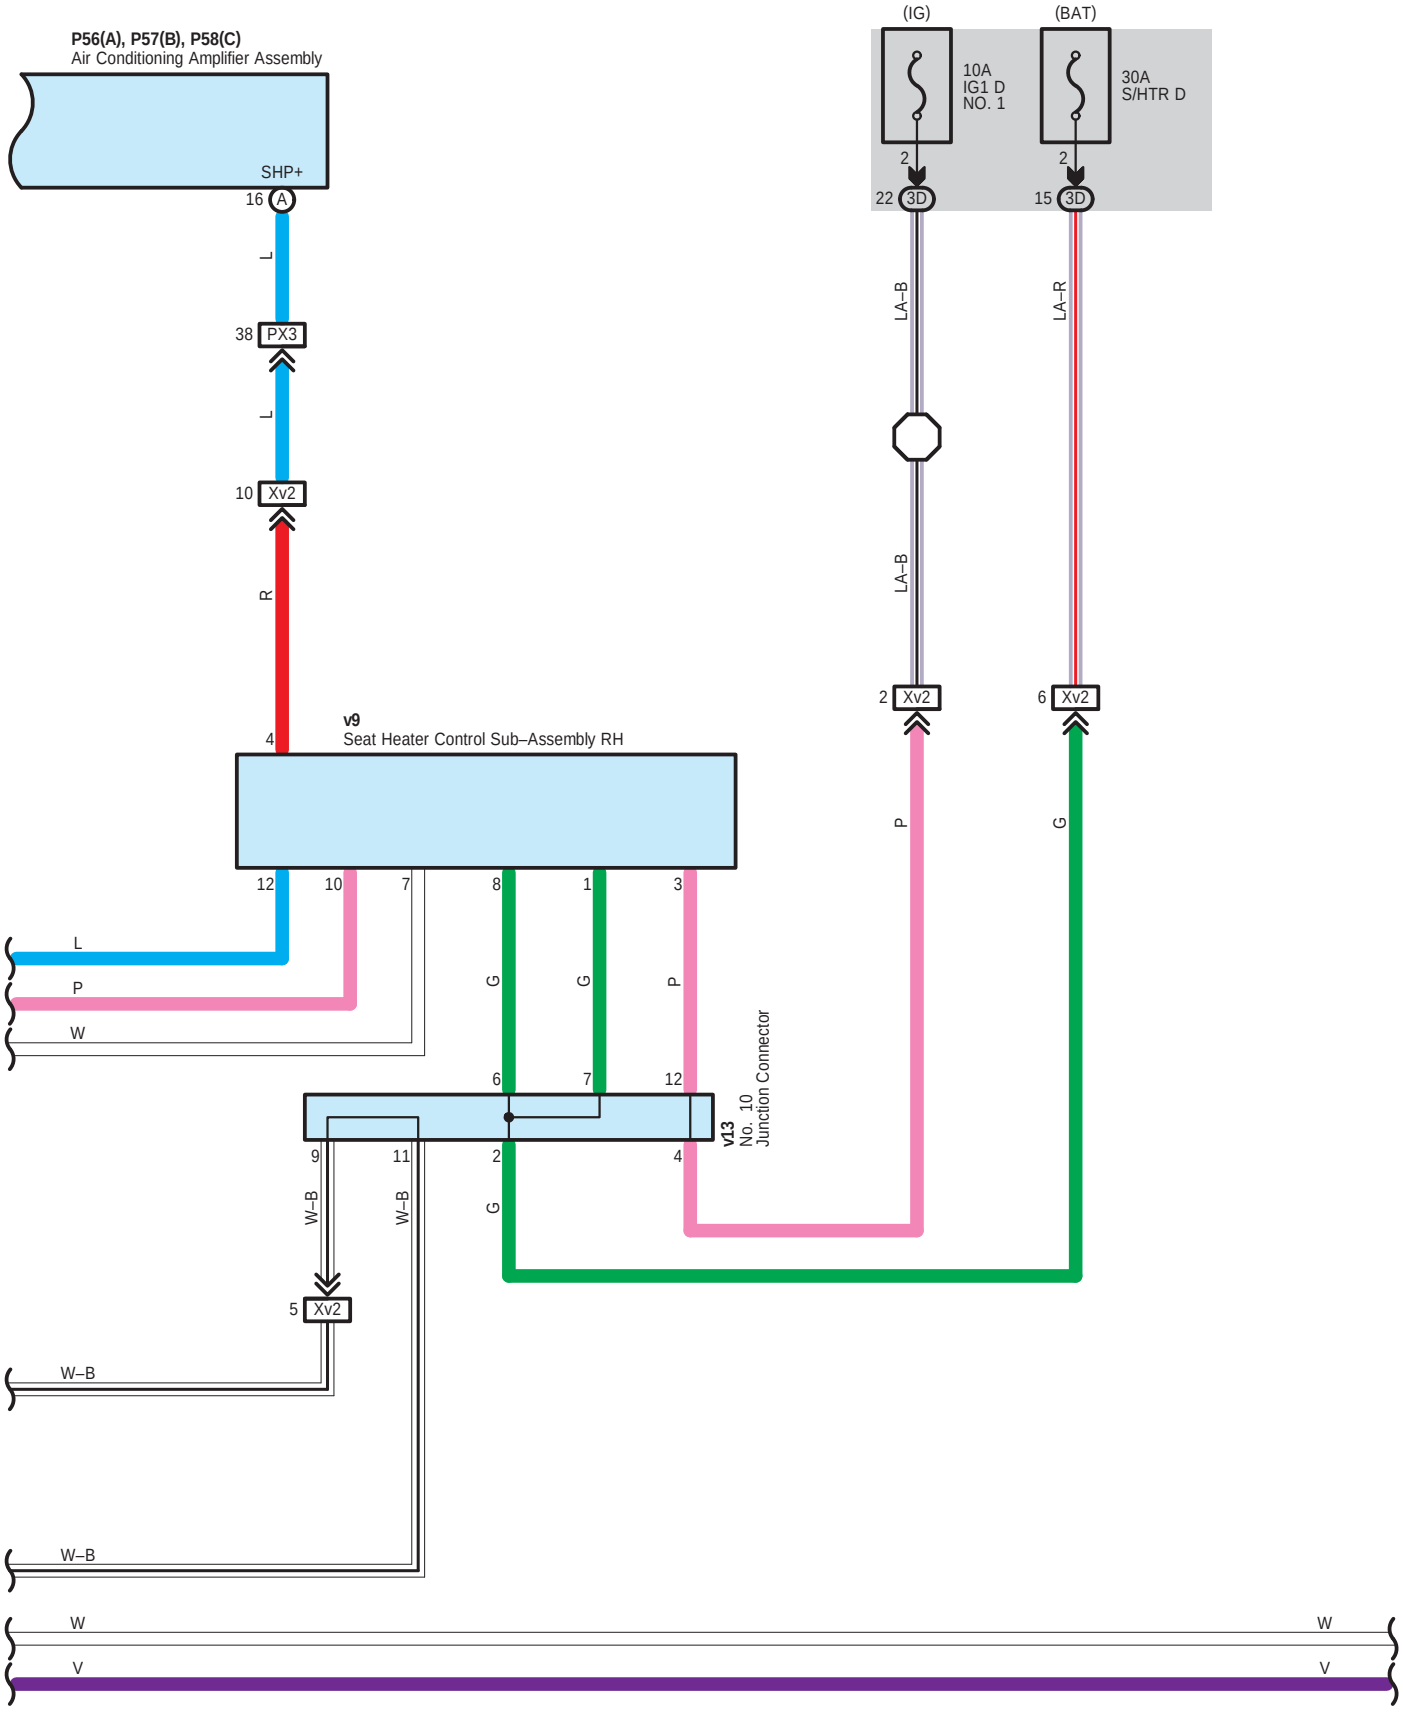
P56(A), P57(B), P58(C)
Air Conditioning Amplifier Assembly
SHP+
16 A
L
38 PX3
L
10 Xv2
R
4
v9
Seat Heater Control Sub–Assembly RH
12
10
7
8
1
3
L
P
W
G
G
P
6
7
12
v13
No. 10
Junction Connector
9
11
2
4
W–B
W–B
G
5 Xv2
W–B
W–B
(IG)
(BAT)
10A
IG1 D
NO. 1
30A
S/HTR D
2
2
22 3D
15 3D
LA–B
LA–R
LA–B
2 Xv2
6 Xv2
P
G
W
W
V
V

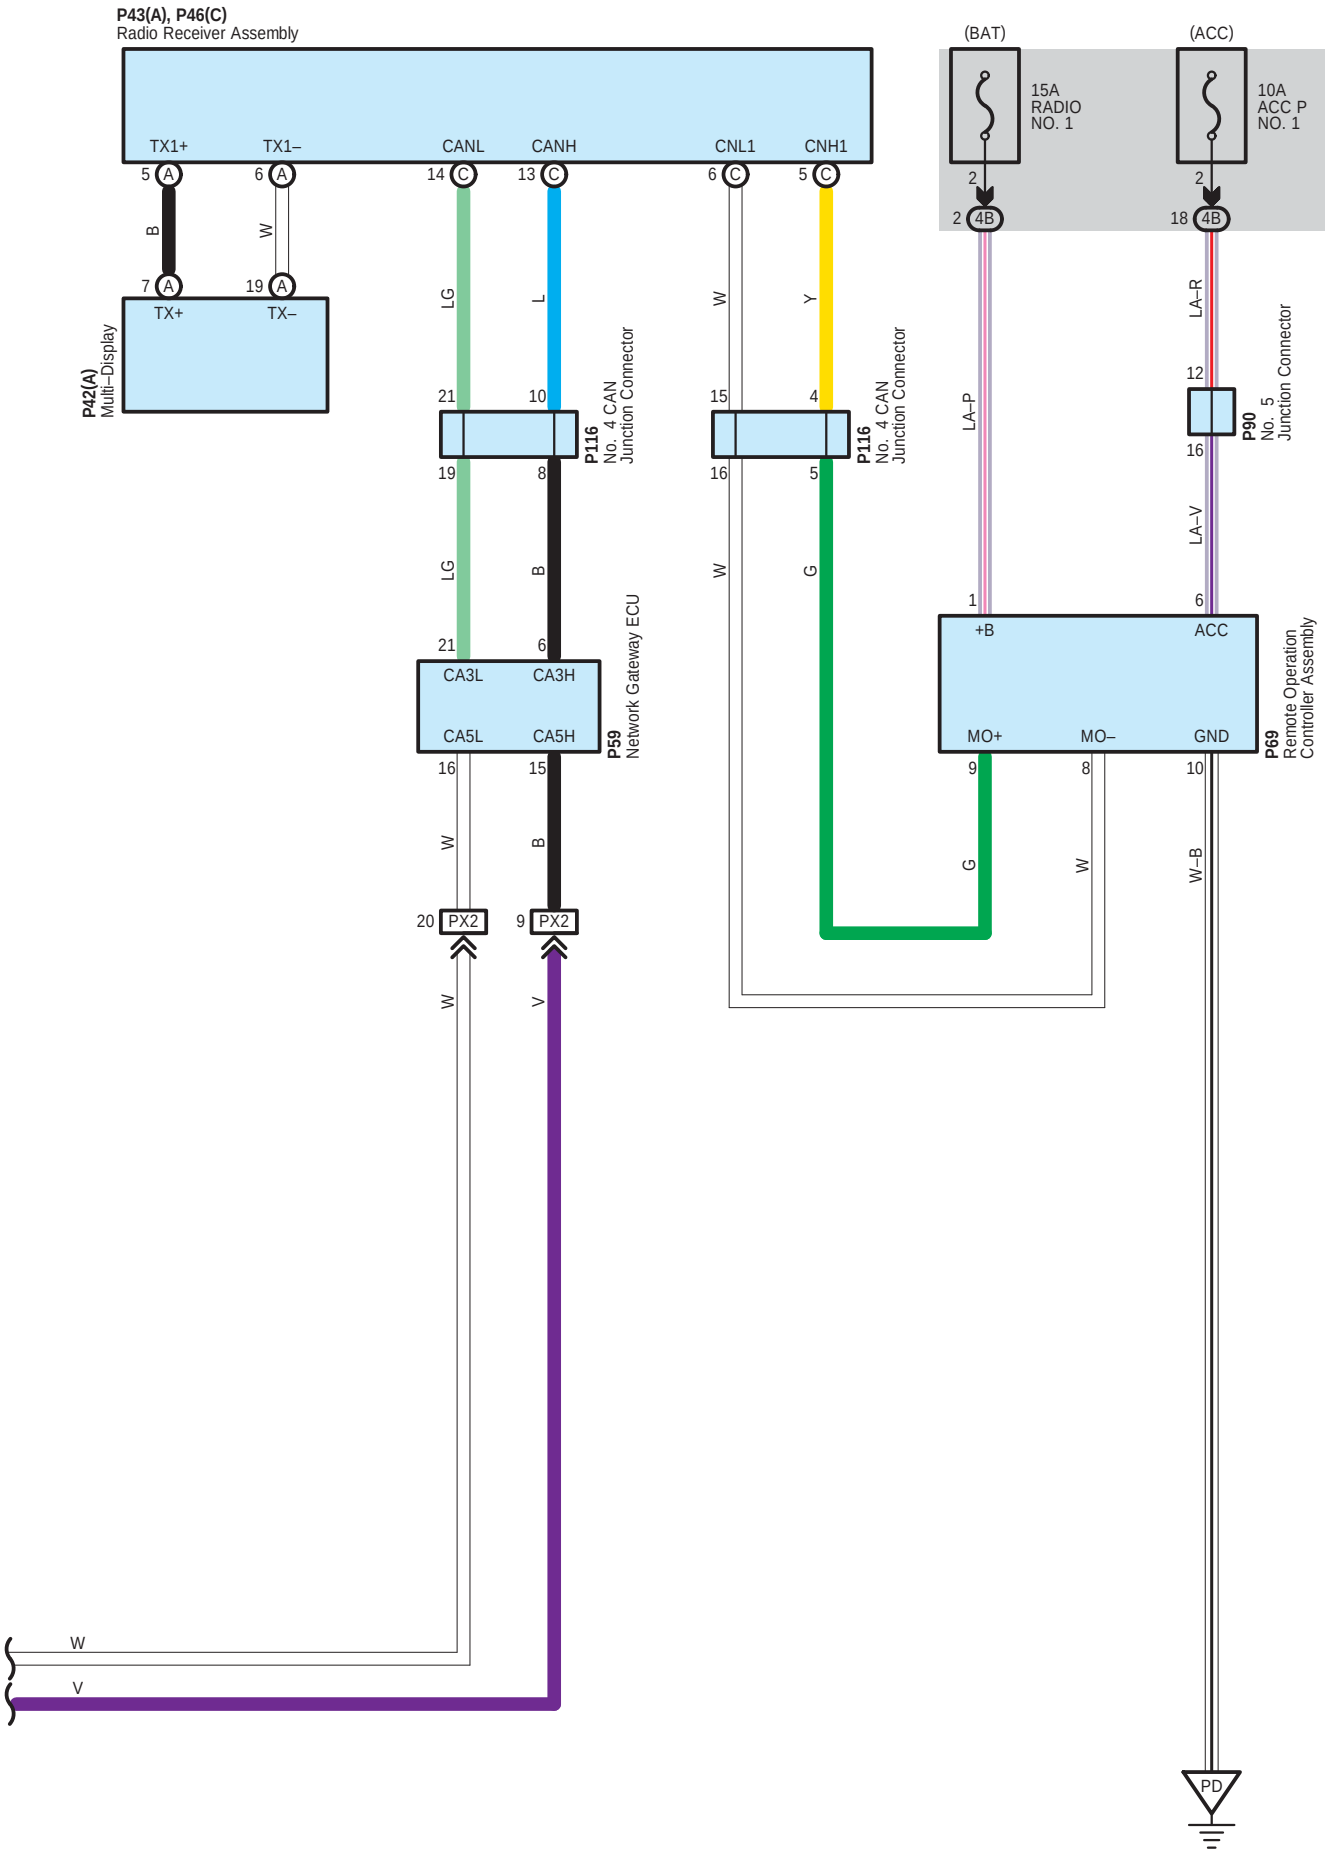
P43(A), P46(C)
Radio Receiver Assembly
TX1+
TX1–
CANL
CANH
CNL1
CNH1
5 A
6 A
14 C
13 C
6 C
5 C
B
W
7 A
19 A
TX+
TX–
P42(A)
Multi–Display
LG
L
W
Y
21
10
15
4
P116
No. 4 CAN
Junction Connector
19
8
16
5
LG
B
W
G
21
6
CA3L
CA3H
CA5L
CA5H
P59
Network Gateway ECU
16
15
W
B
20 PX2
9 PX2
W
V
(BAT)
(ACC)
15A
RADIO
NO. 1
10A
ACC P
NO. 1
2
2 4B
2
18 4B
LA–P
LA–R
12
16
P90
No. 5
Junction Connector
LA–V
1
6
+B
ACC
MO+
MO–
GND
P69
Remote Operation
Controller Assembly
9
8
10
G
W
W–B
W
V
PD

A70



P42
Black

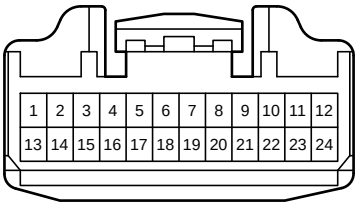

90980-12554

P43
White

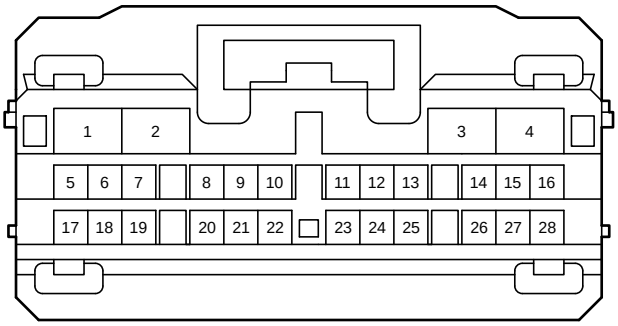

82824-52380

P46
White

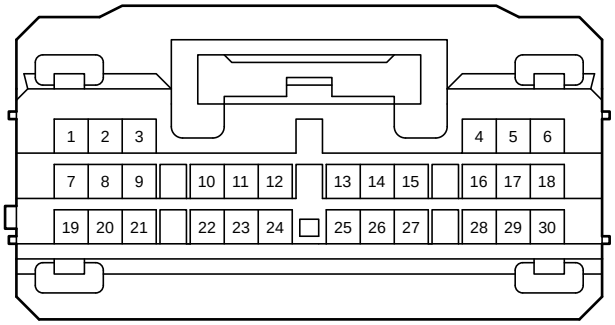

90980-12761

P56
White

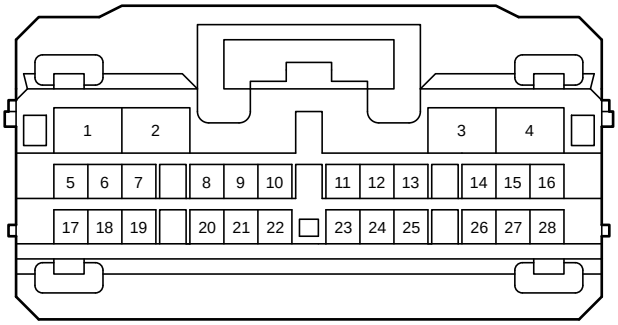

82824-52380

P57
White

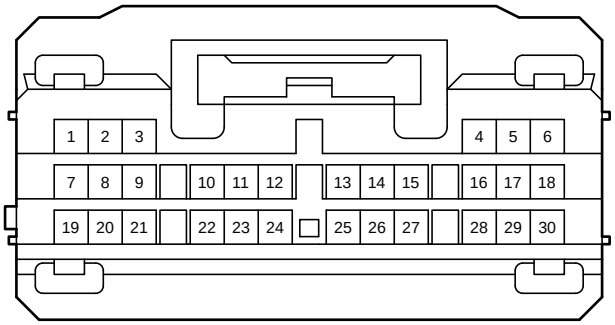

90980-12761

P58
White

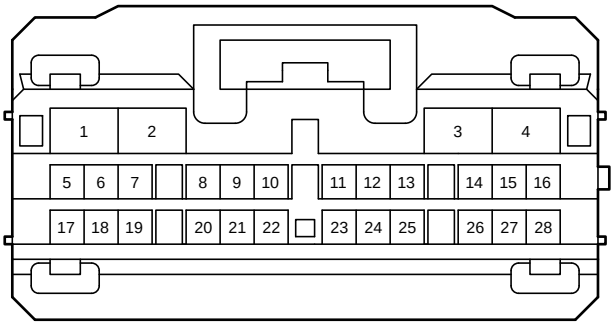

90980-12760

P59
Black

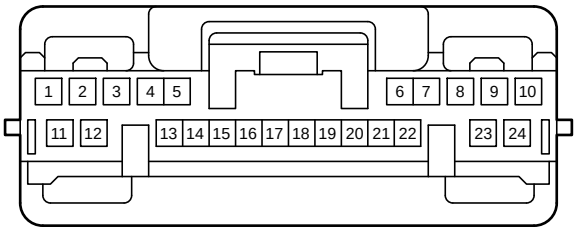

90980-12912

P69
Black

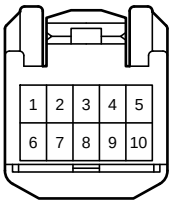

90980-12361

P90
White

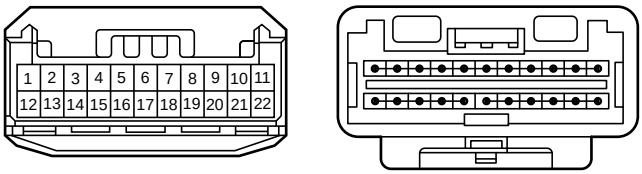

90980-12B54

P107
White

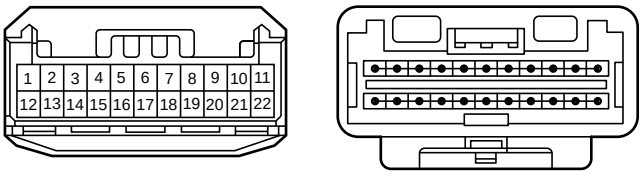

90980-12B54

P116
Black

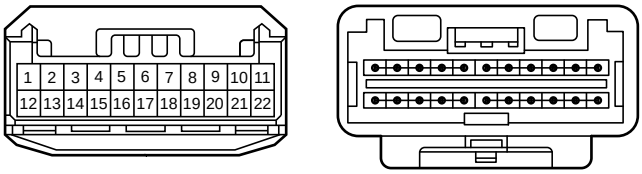

90980-12B54

X85
White



90980-12827

X87
White



90980-12827

X88
White



90980-12827

X92
White



90980-12827

v5
Black

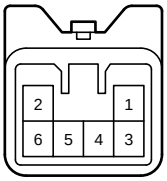

90980-10796

v6
White

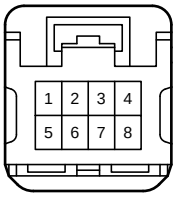

90980-12735

v9
White

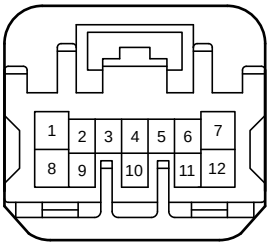

90980-12812

v13
White

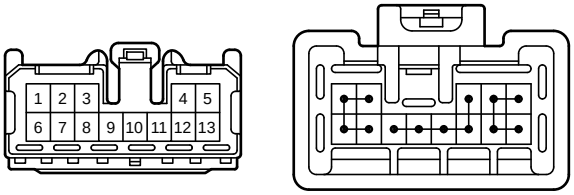

90980-12346

w5
Black

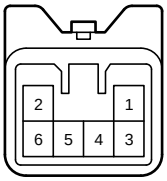

90980-10796

w6
White

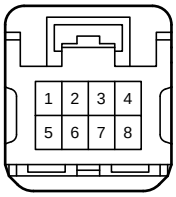

90980-12735

w9
White

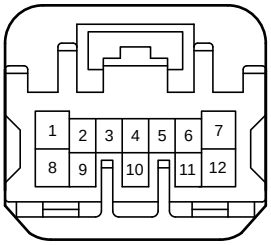

90980-12812

w13
White

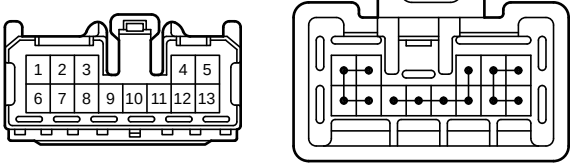

90980-12346

x1
White

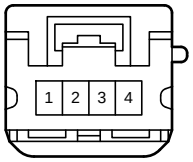

90980-12733

y1
White

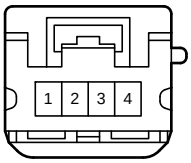

90980-12733

2B



3B
White

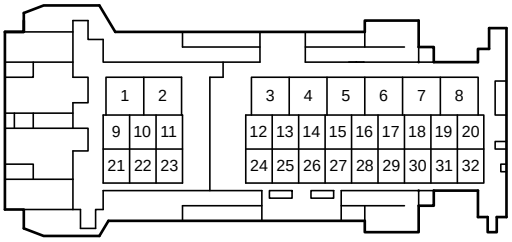

90980-12A48

3D
White

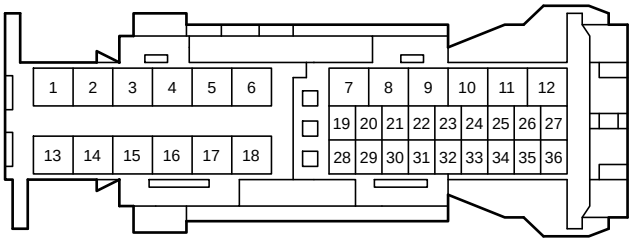

90980-12944

3F
White

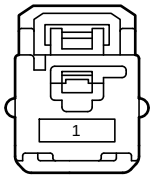

90980-12756

4A
White

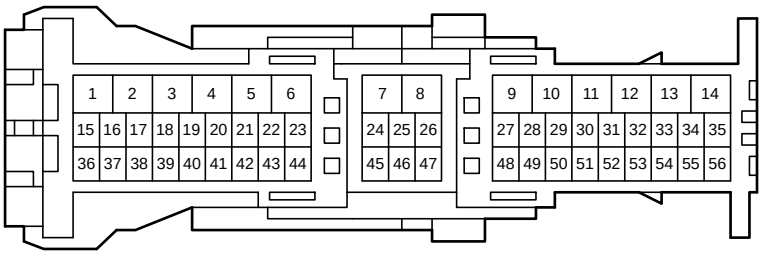

90980-12943

4B
White

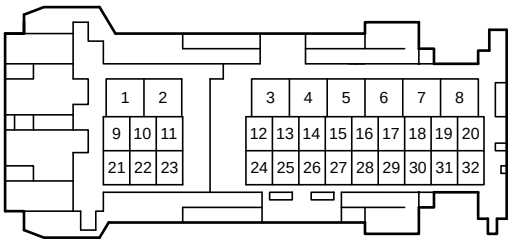

90980-12A48

4D
White

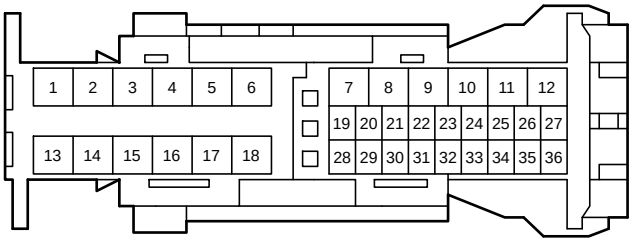

90980-12944

4F
Gray

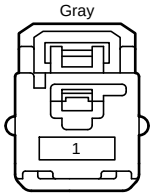

90980-12756

PX1
Gray

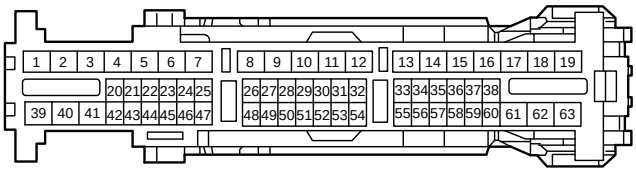

90980-12B20

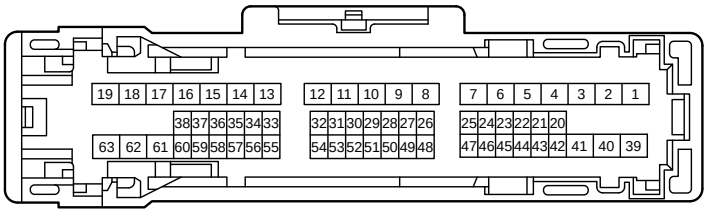

90980-12B19

PX2
White

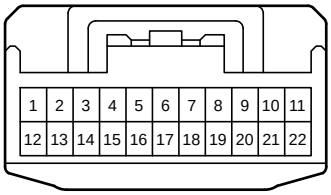

90980-12372

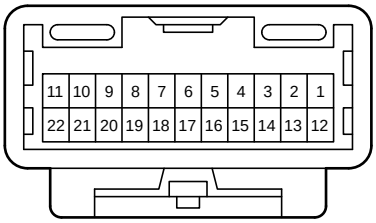

90980-12371

PX3
Gray

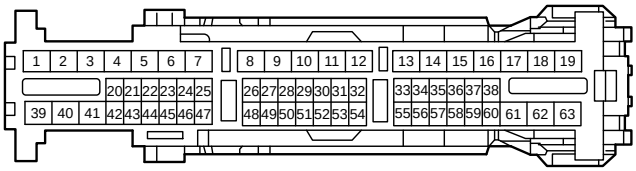

90980-12B20

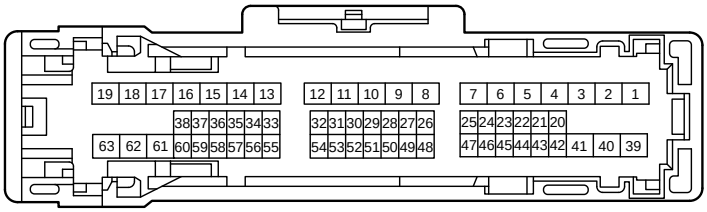

90980-12B19

PX4
White

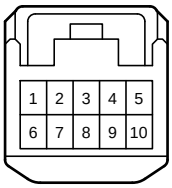

90980-12368

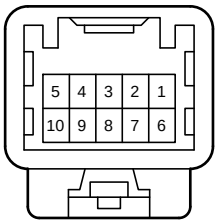

90980-12367

Xv2
White

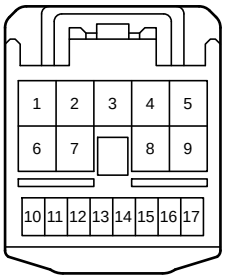

90980-12374

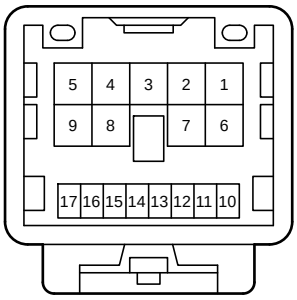

90980-12373

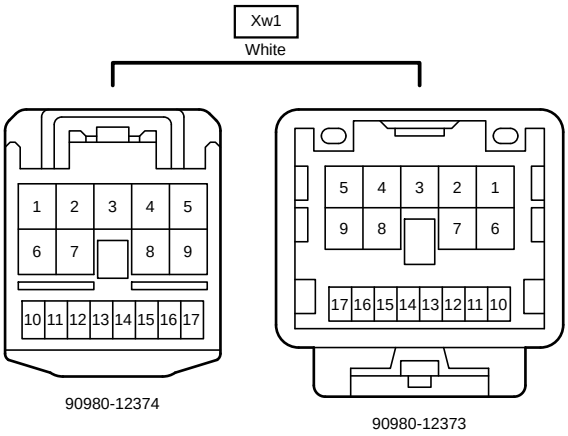

90980-12374

90980-12373

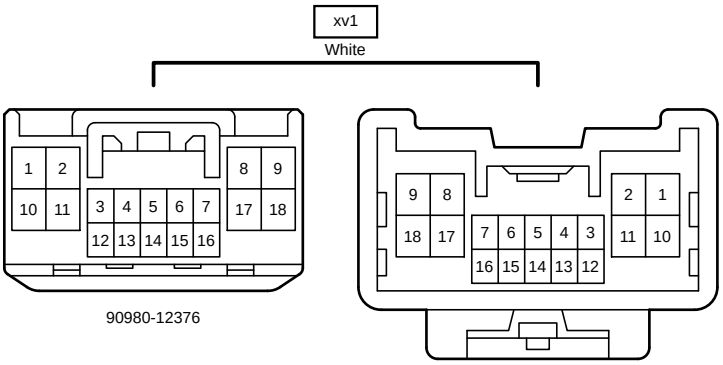

90980-12376

90980-12375

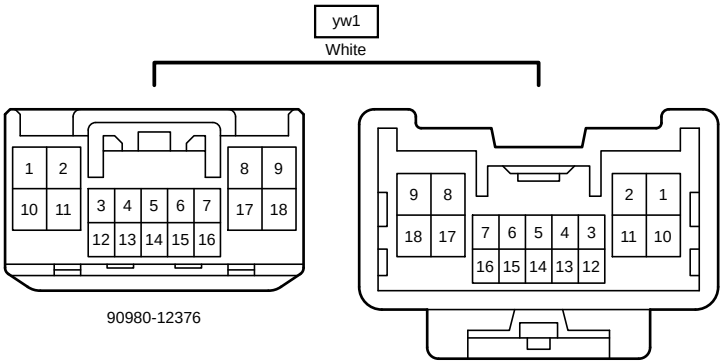

90980-12376

90980-12375