F RELAY LOCATIONS

② : Engine Room R/B No.2	Engine Compartment Right (See Page 20, 21)
⬭ : Engine Room J/B No.2	

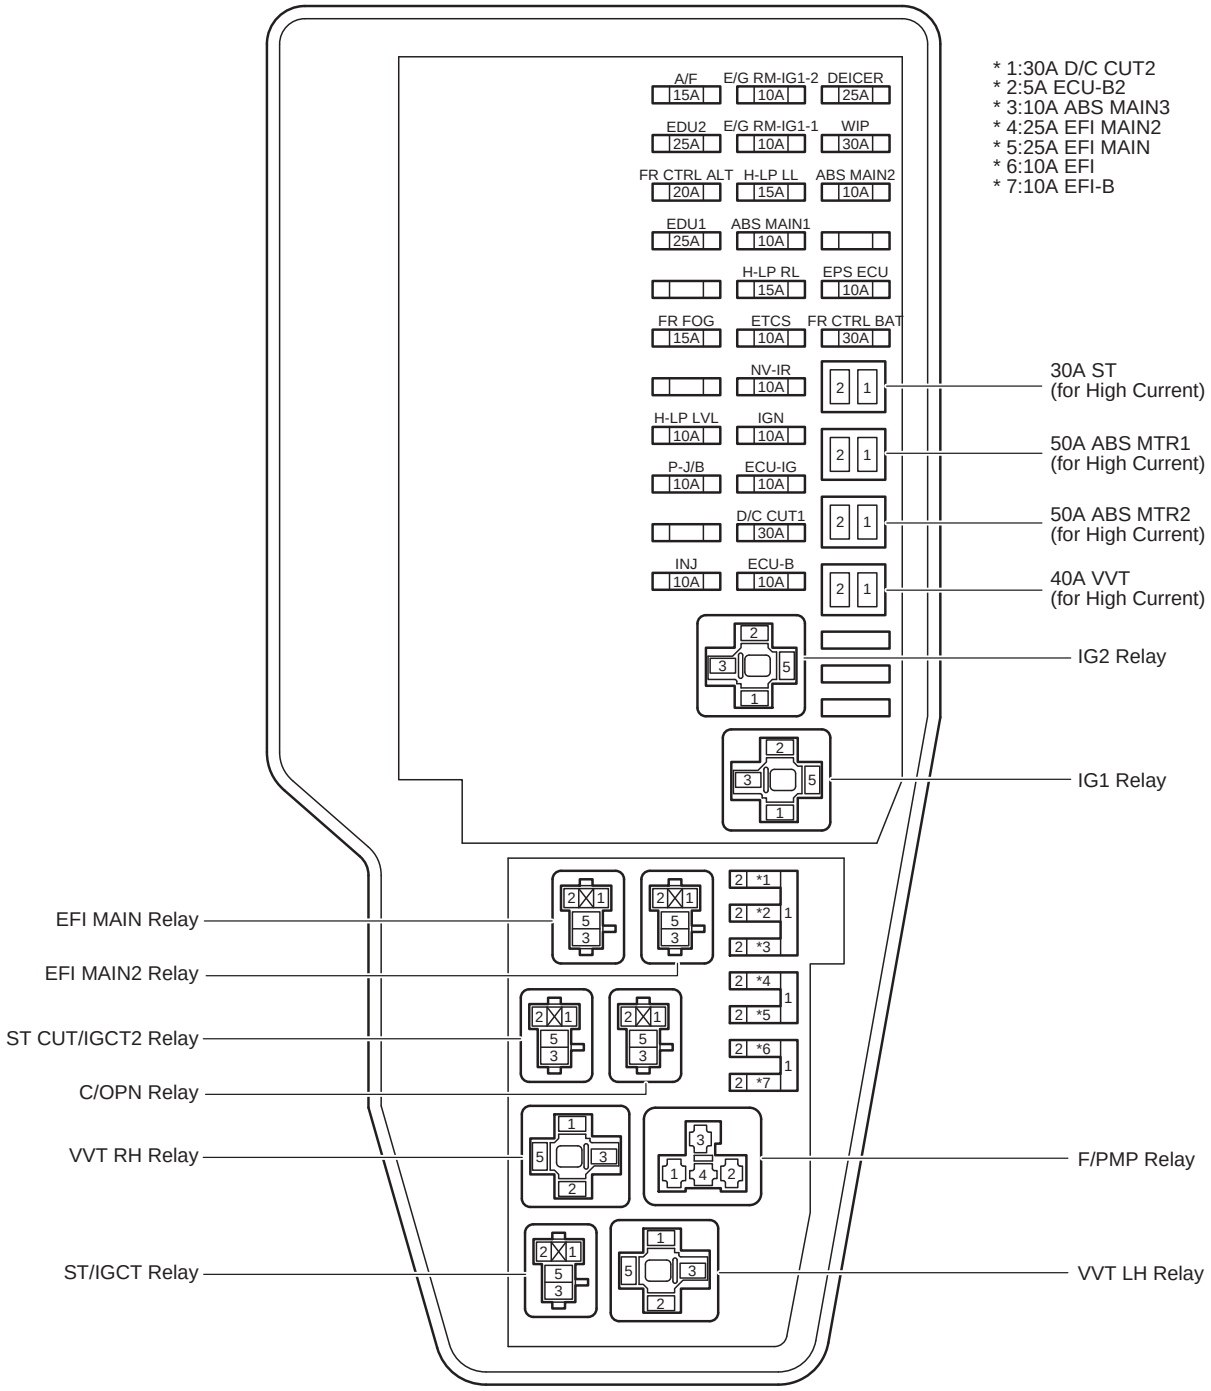

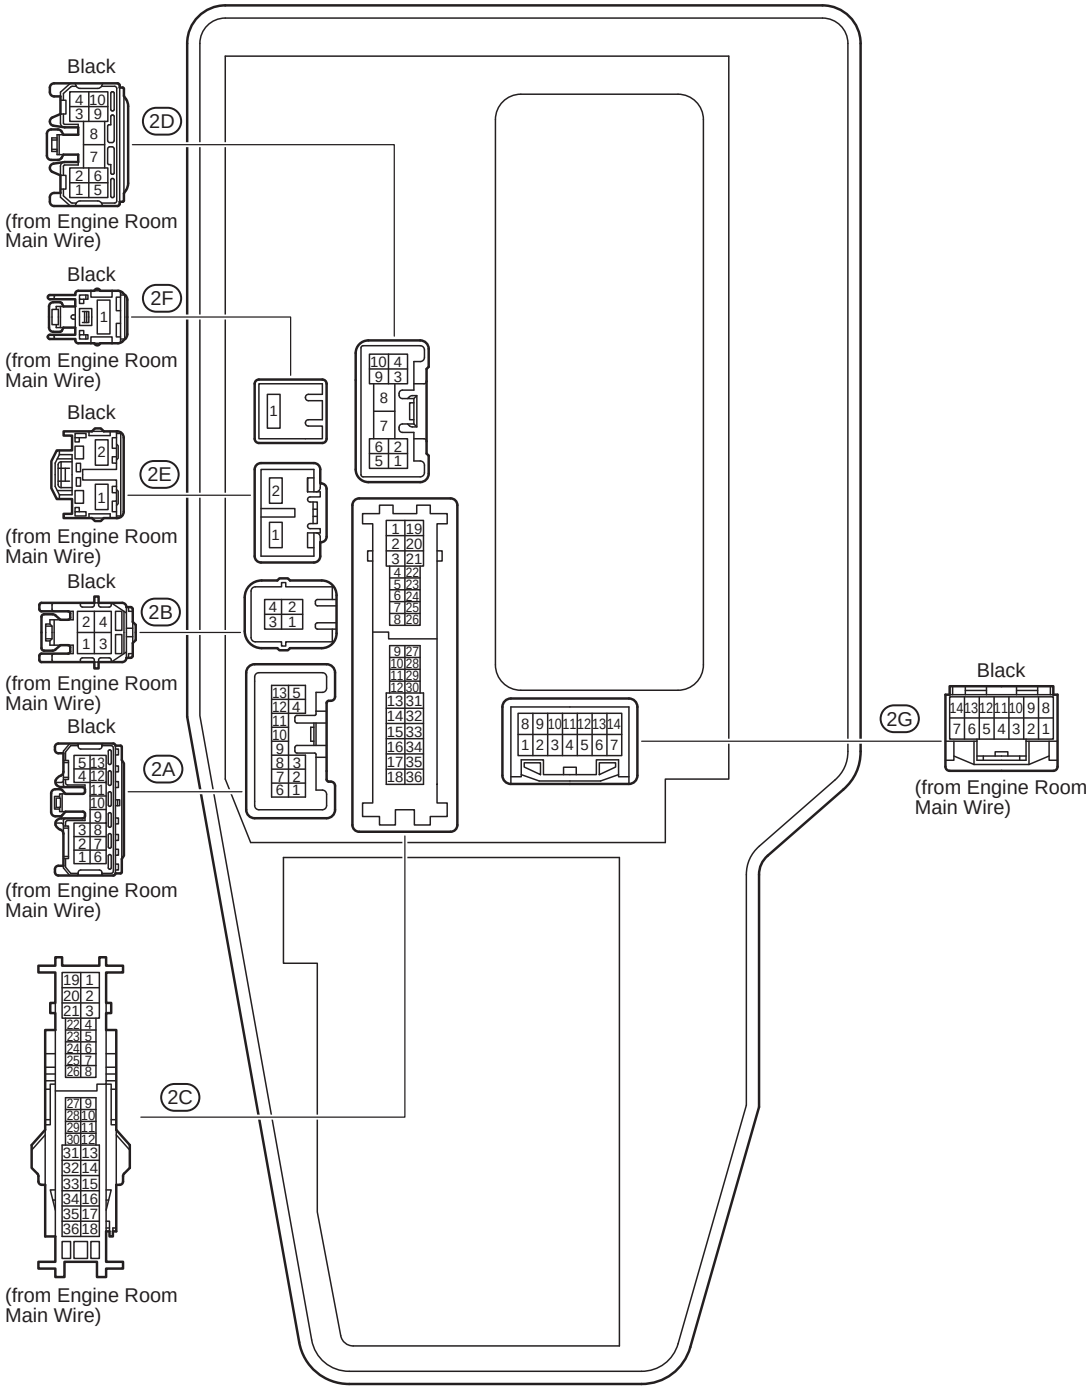
Black
2D
(from Engine Room Main Wire)
Black
2F
(from Engine Room Main Wire)
Black
2E
(from Engine Room Main Wire)
Black
2B
(from Engine Room Main Wire)
Black
2A
(from Engine Room Main Wire)
2C
(from Engine Room Main Wire)
Black
2G
(from Engine Room Main Wire)