F RELAY LOCATIONS

: Luggage Room J/B	Luggage Room Left (See Page 24)

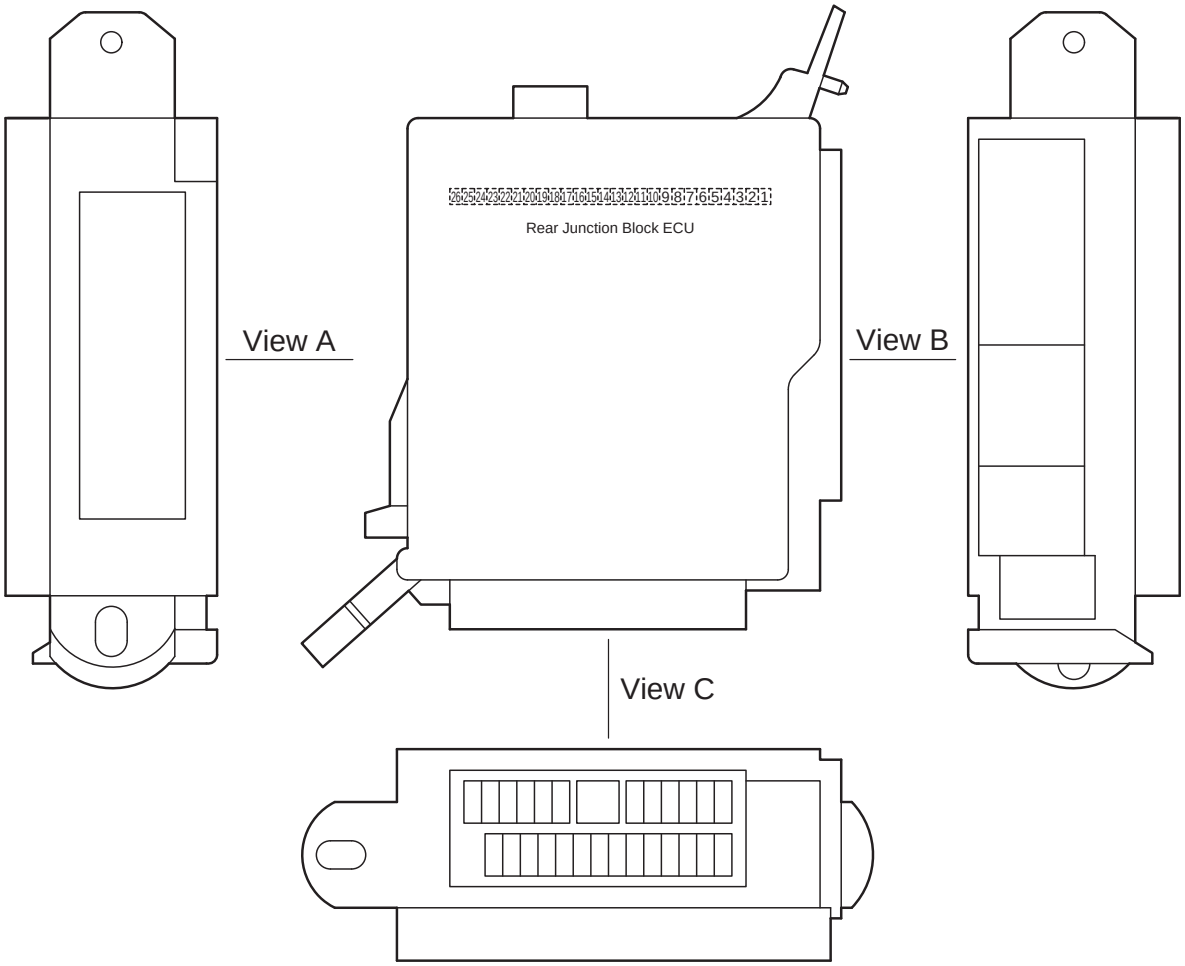

View C

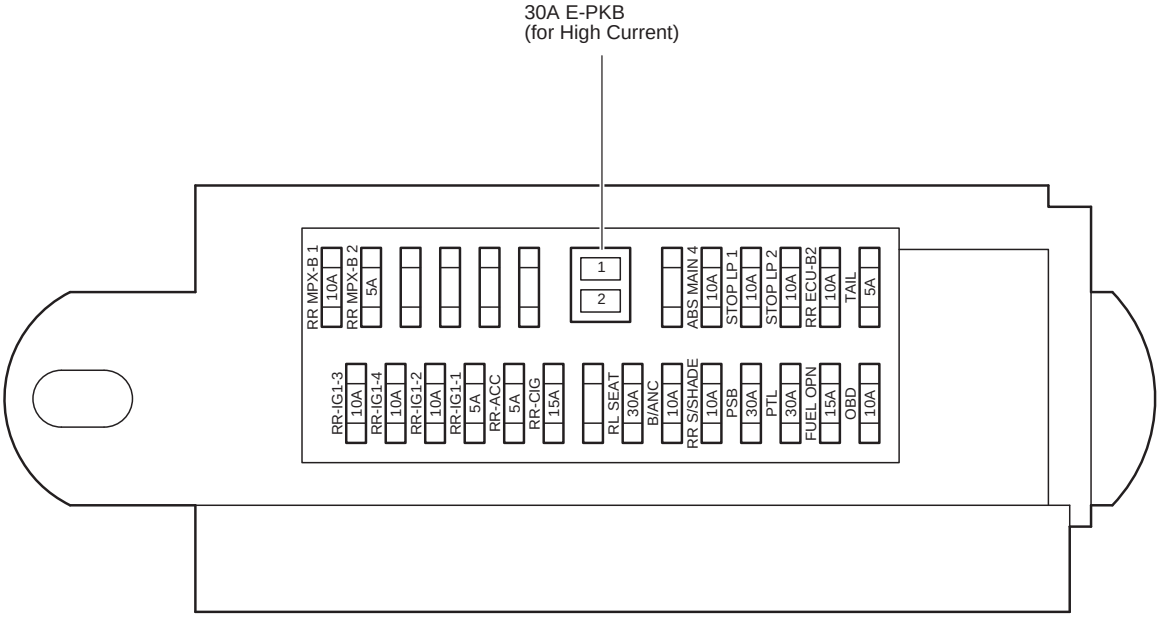
30A E-PKB
(for High Current)
1
2
RR MPX-B 1
10A
RR MPX-B 2
5A
ABS MAIN 4
10A
STOP LP 1
10A
STOP LP 2
10A
RR ECU-B2
10A
TAIL
5A
RR-IG1-3
10A
RR-IG1-4
10A
RR-IG1-2
10A
RR-IG1-1
5A
RR-ACC
5A
RR-CIG
15A
RL SEAT
30A
B/ANC
10A
RR S/SHADE
10A
PSB
30A
PTL
30A
FUEL OPN
15A
OBD
10A

F RELAY LOCATIONS

⬭ : Luggage Room J/B	Luggage Room Left (See Page 24)

View A

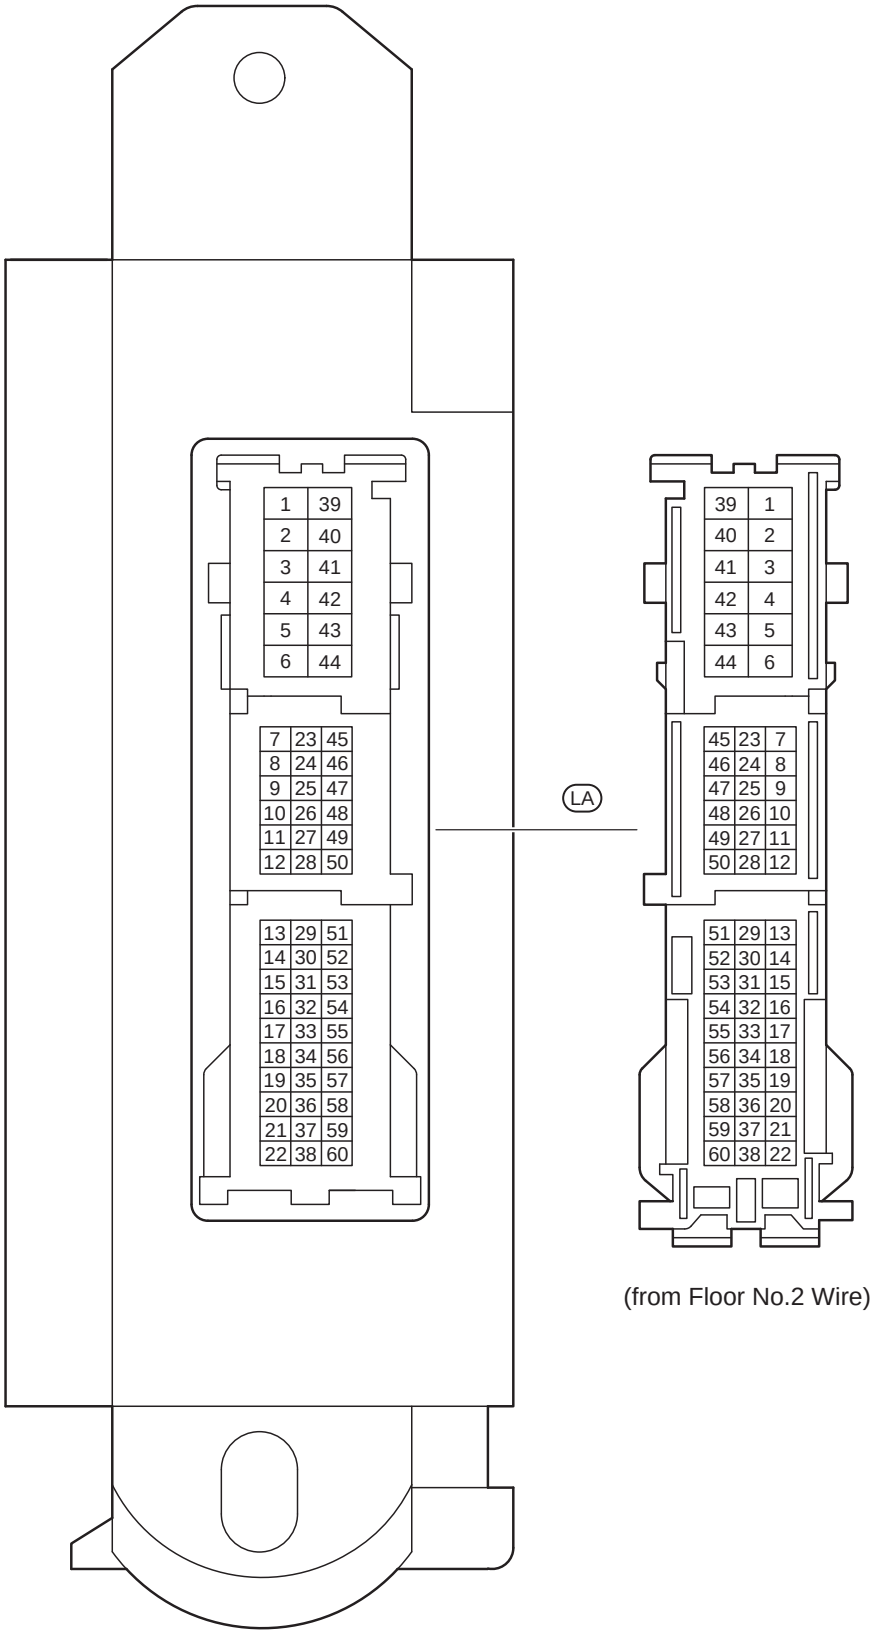

View B

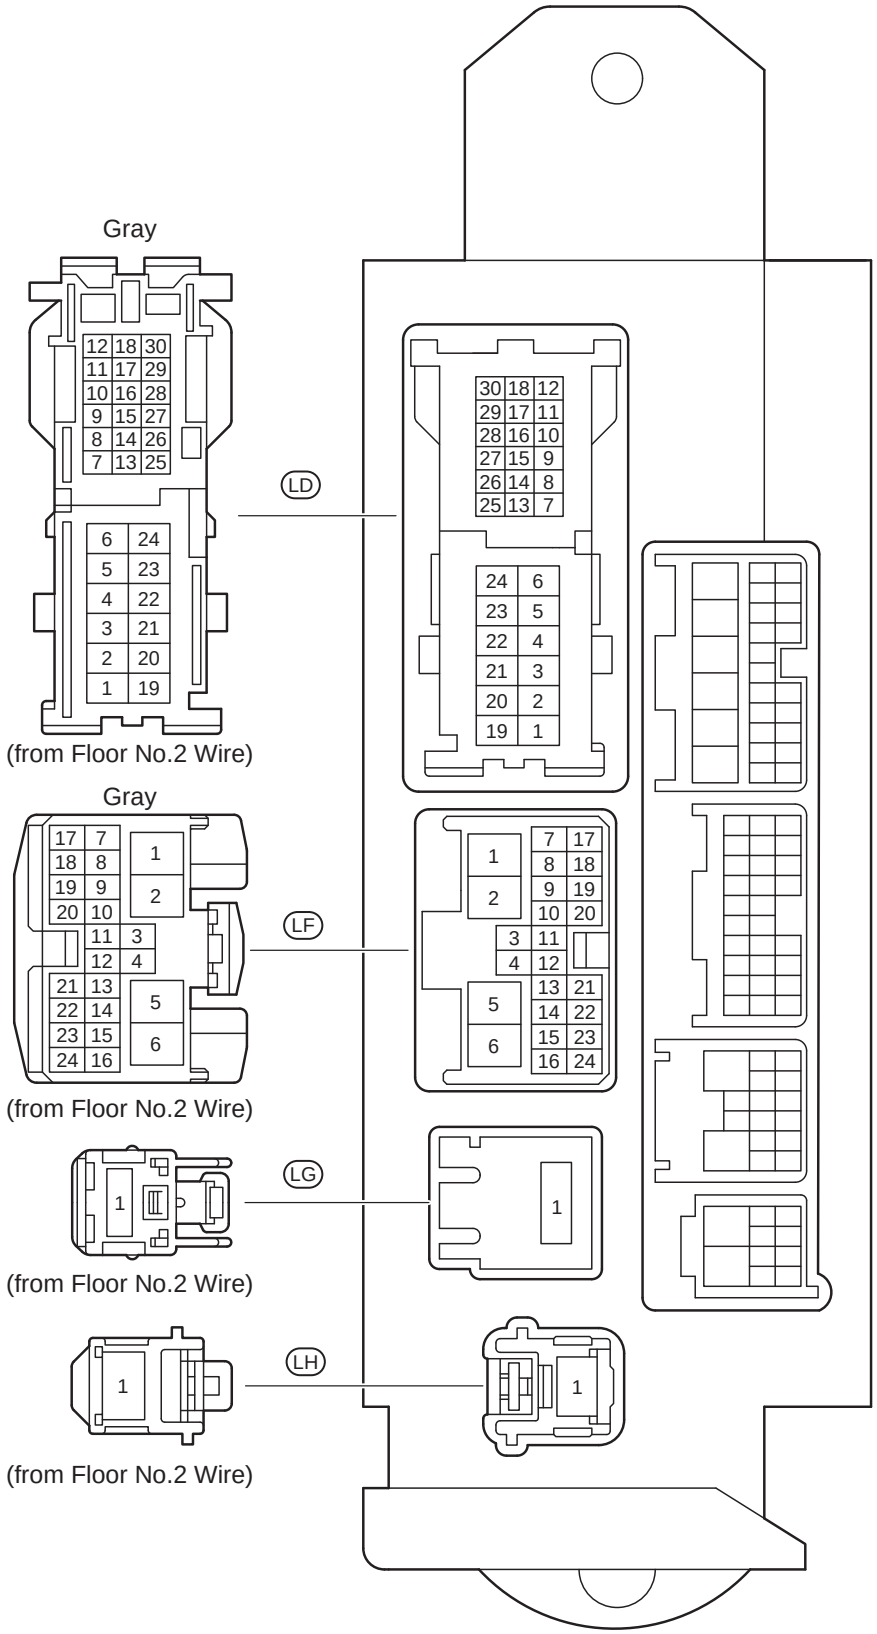
Gray
12 18 30
11 17 29
10 16 28
9 15 27
8 14 26
7 13 25
6 24
5 23
4 22
3 21
2 20
1 19
(from Floor No.2 Wire)
LD
30 18 12
29 17 11
28 16 10
27 15 9
26 14 8
25 13 7
24 6
23 5
22 4
21 3
20 2
19 1
Gray
17 7
18 8
19 9
20 10
11 3
12 4
21 13
22 14
23 15
24 16
1
2
5
6
(from Floor No.2 Wire)
LF
7 17
8 18
9 19
10 20
3 11
4 12
13 21
14 22
15 23
16 24
LG
1
(from Floor No.2 Wire)
LH
1
(from Floor No.2 Wire)