Position of Parts in Engine Compartment <RHD Before Sep. 2012 Production>

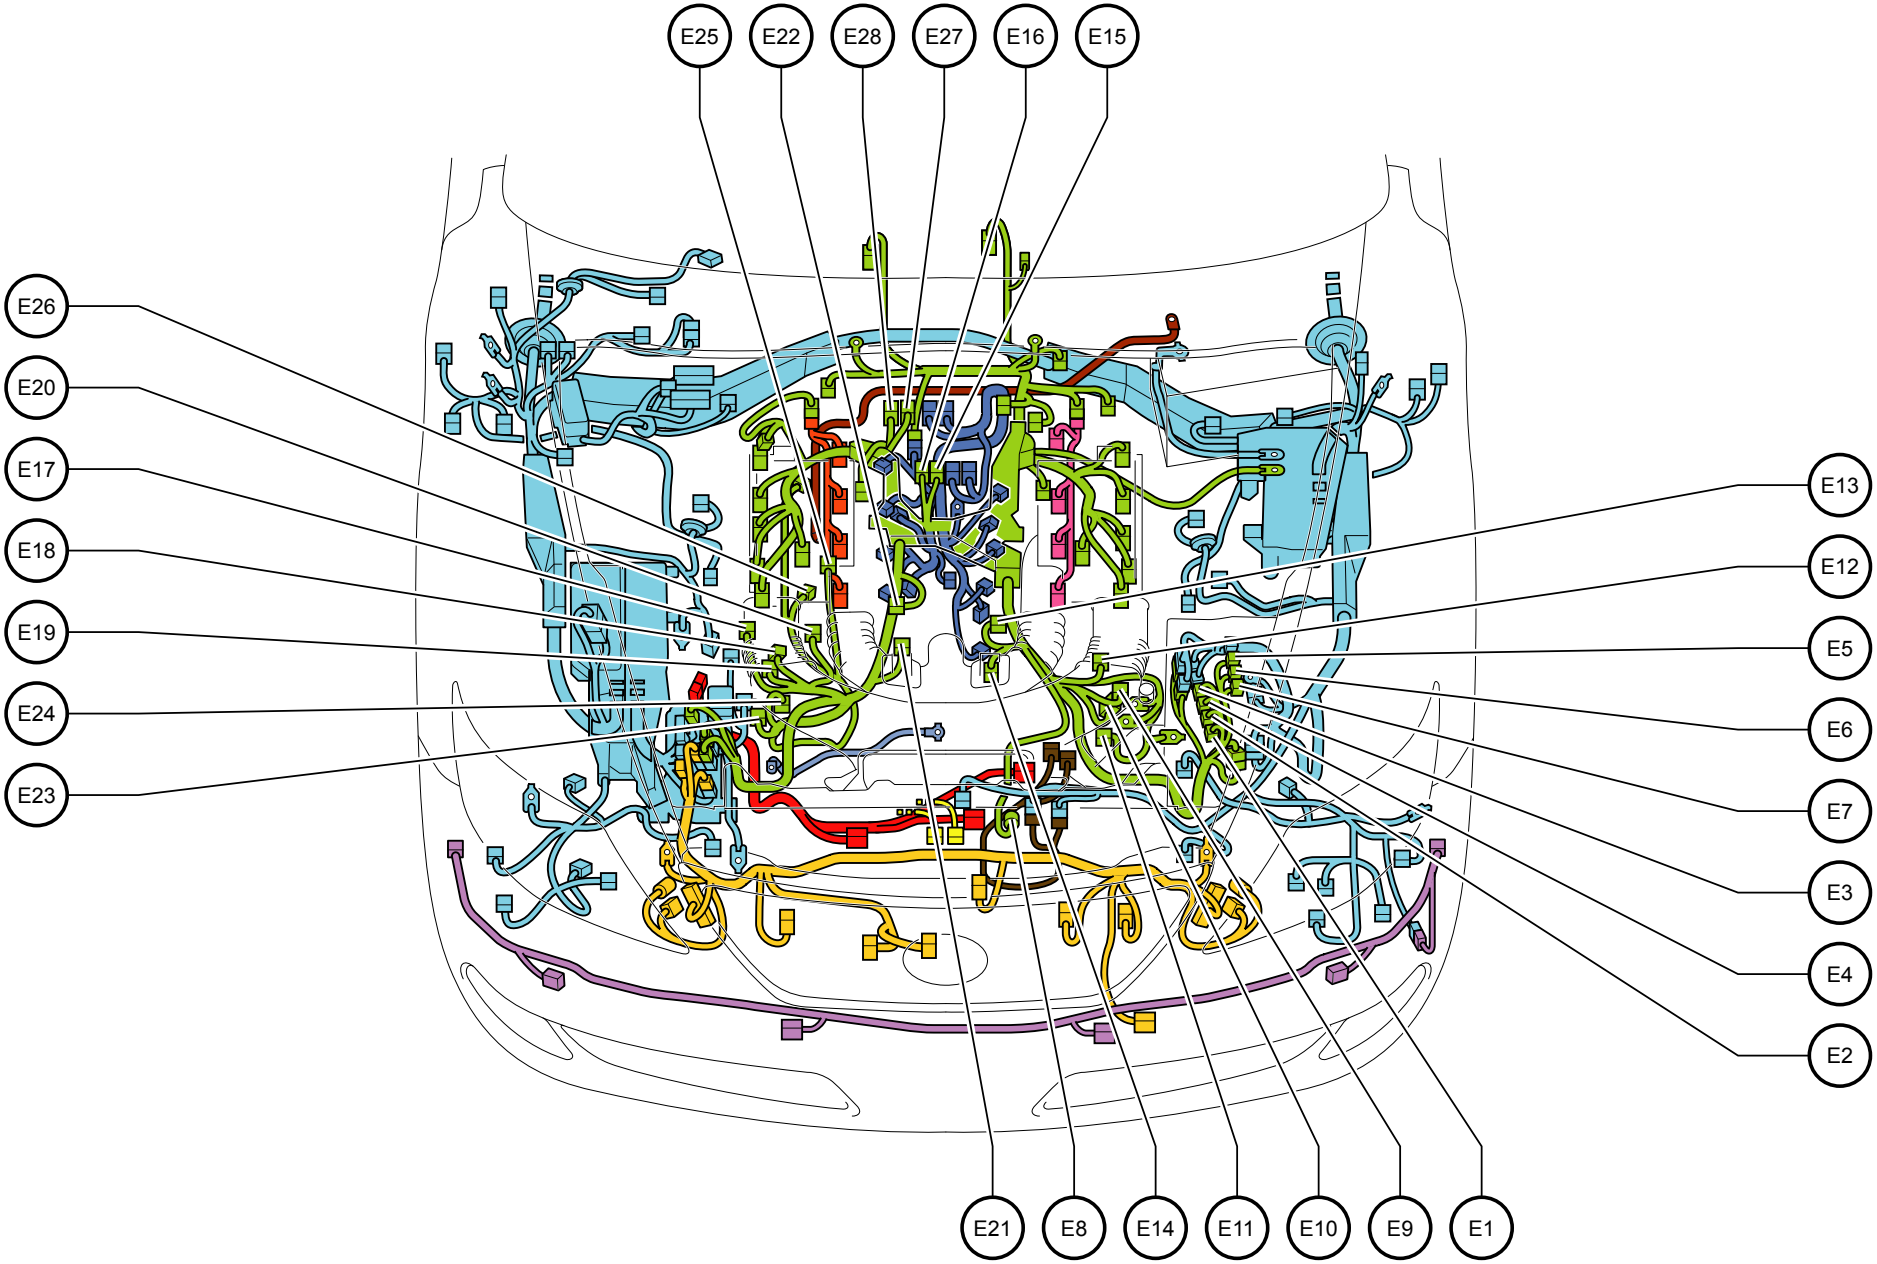

E 1 Engine ECU
E 2 Engine ECU
E 3 Engine ECU
E 4 Engine ECU
E 5 Transmission Control ECU
E 6 Transmission Control ECU
E 7 Transmission Control ECU
E 8 Oil Pressure Switch
E 9 Camshaft Control Motor (Bank 1)
E 10 Camshaft Control Motor (Bank 1)
E 11 A/C Compressor
E 12 Camshaft Timing Oil Control Valve (Bank 1)
E 13 Air Flow Meter (Bank 1)
E 14 Engine Coolant Temperature Sensor
E 15 Injector Driver (No. 1)
E 16 Injector Driver (No. 1)
E 17 Camshaft Timing Oil Control Valve (Bank 2)
E 18 Camshaft Control Motor (Bank 2)
E 19 Camshaft Control Motor (Bank 2)
E 20 Camshaft Position Sensor
E 21 Throttle Position Sensor
E 22 Air Flow Meter (Bank 2)
E 23 Alternator
E 24 Alternator
E 25 Starter
E 26 Engine Oil Level Sensor
E 27 Injector Driver (No. 2)
E 28 Injector Driver (No. 2)

E 1
White

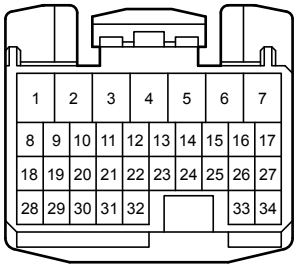

E 2
White

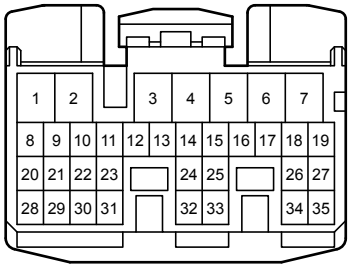

E 3
White

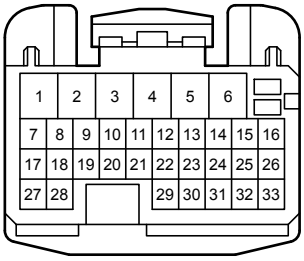

E 4
White

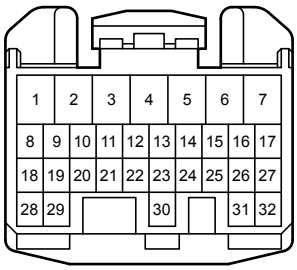

E 5
Gray

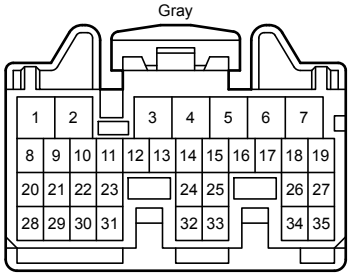

E 6
Gray

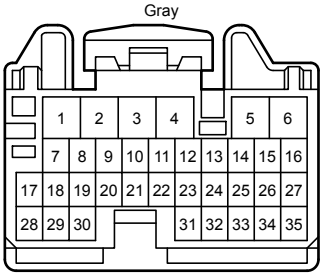

E 7
Gray

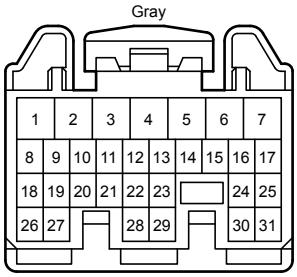

E 8
Gray

E 9
Black

E 10
Black

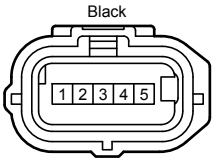

E 11
Black

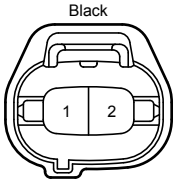

E 12
Black

E 13
Black

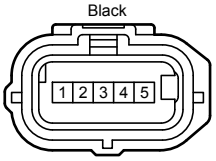

E 14
Dark Gray

E 15
Gray

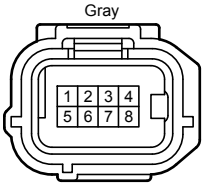

E 16
Gray

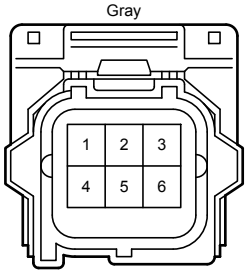

E 17
Black

E 18
Black

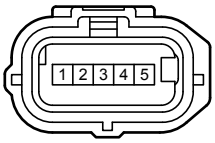

E 19
Black

E 20
Black

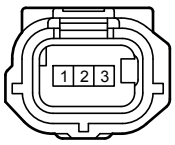

E 21
Black

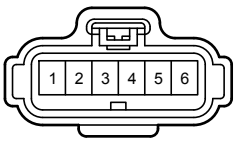

E 22
Black

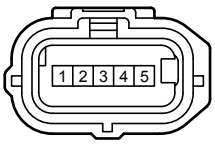

E 23



(Before Sep. 2009 Production)

E 23



(From Sep. 2009 Production)

E 24
Black

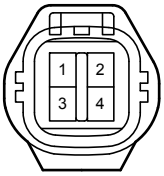

E 25
Black

E 26
Gray

E 27
Gray

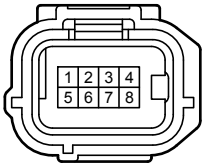
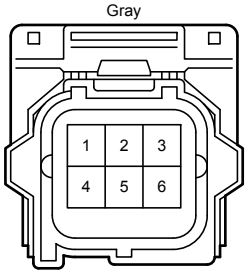
E 28
Gray