Position of Parts in Engine Compartment <RHD From Sep. 2012 Production>

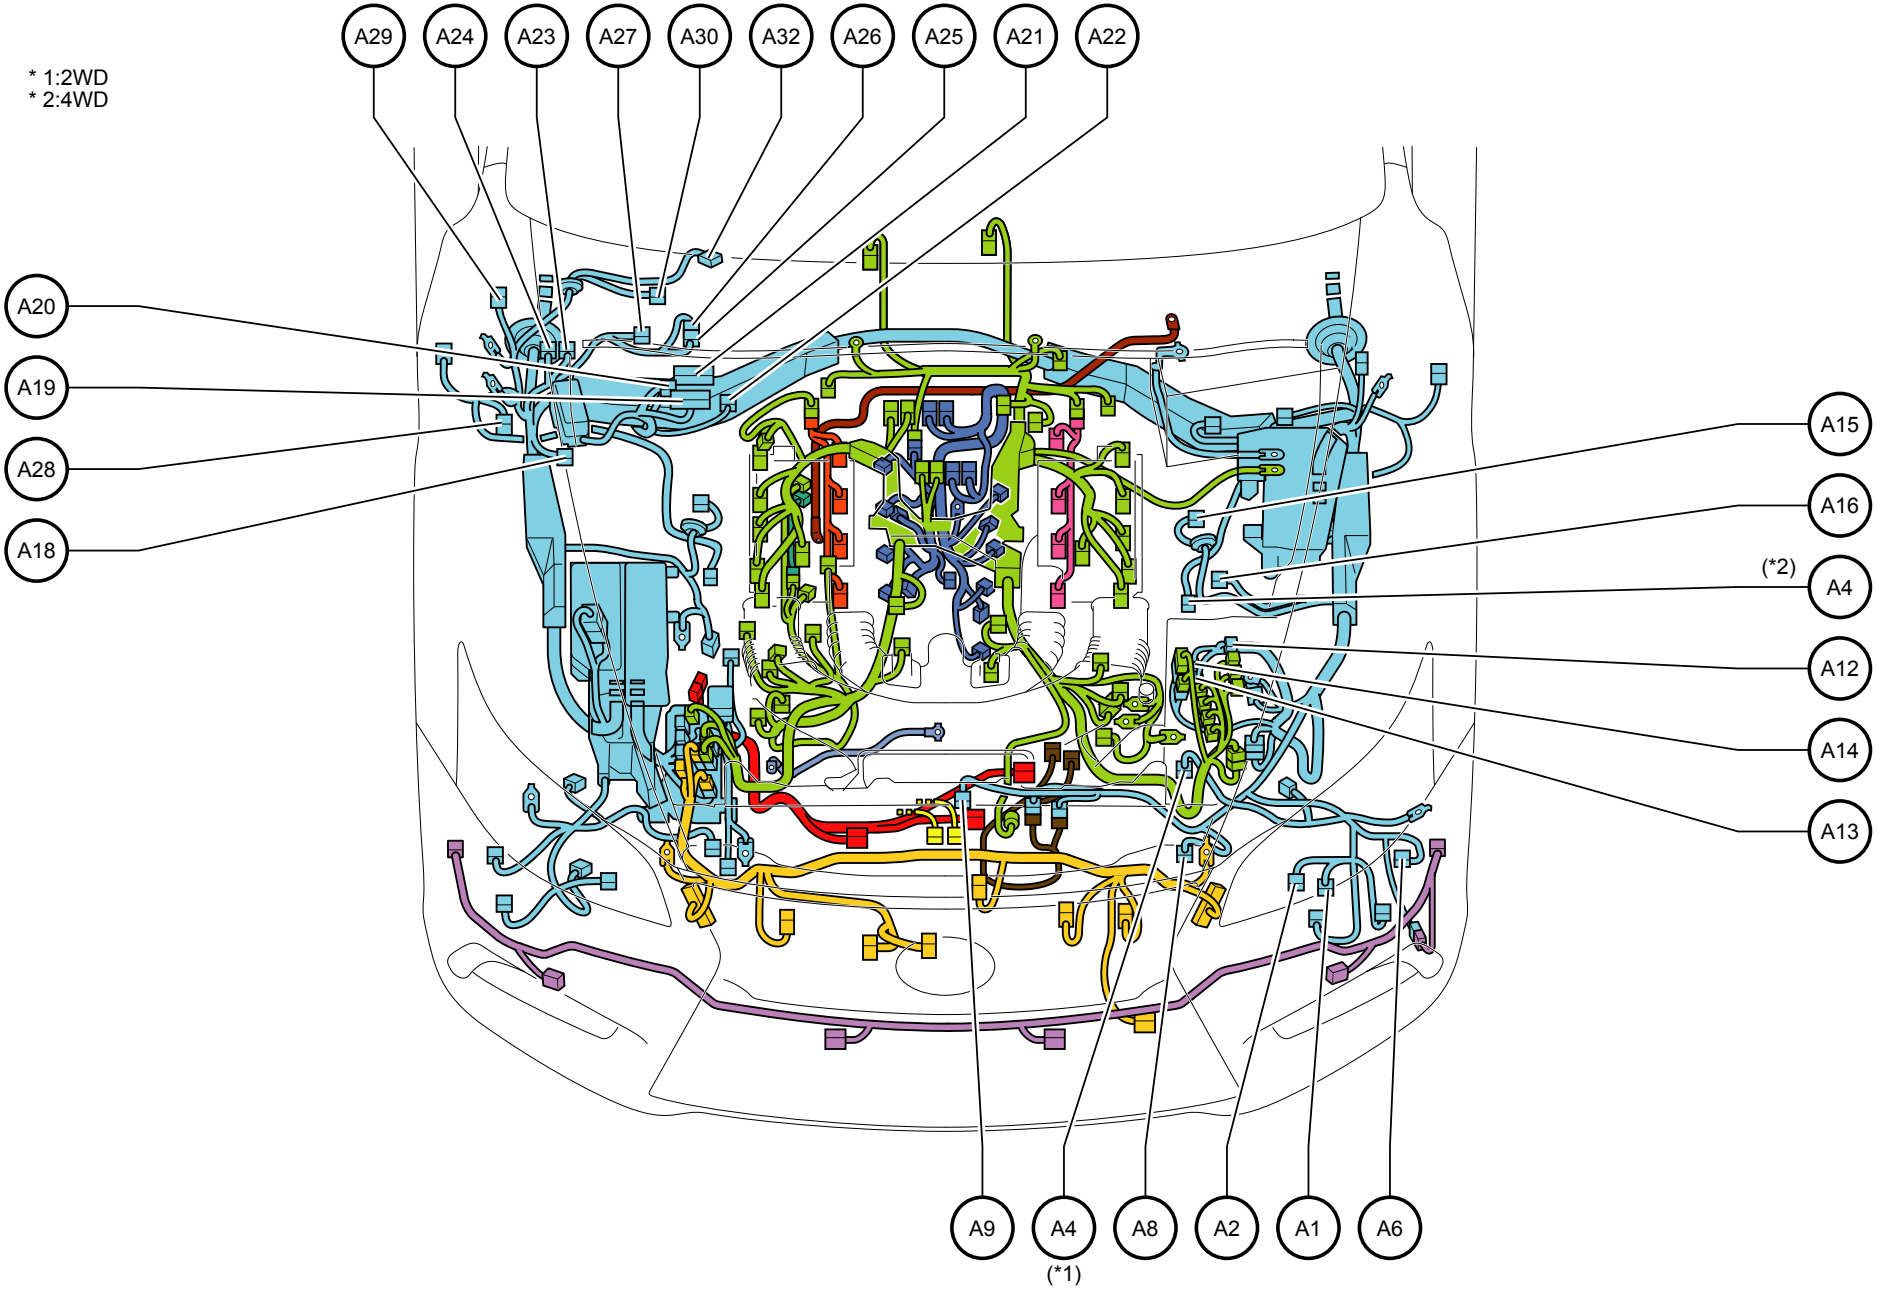

A	1	Washer Motor
A	2	Washer Fluid Level Sensor
A	4	Front Height Control Sensor LH
A	6	Headlight Cleaner Relay
A	8	Front Airbag Sensor LH
A	9	Fan Control ECU
A	12	Transmission Control ECU
A	13	Engine ECU
A	14	Engine ECU
A	15	Front Suspension Control Actuator LH
A	16	Fuel Pump Resistor
A	18	Brake Fluid Level Warning Switch
A	19	Skid Control ECU
A	20	Skid Control ECU
A	21	Skid Control ECU
A	22	Brake Stroke Simulator
A	23	Brake Accumulator Pump
A	24	Brake Accumulator Pump
A	25	Short Connector (Brake Stroke Simulator Cylinder)
A	26	Short Connector (Brake Stroke Simulator Cylinder)
A	27	Brake Actuator
A	28	Wireless Door Lock Buzzer
A	29	Security Horn
A	30	Front Wiper Deicer
A	32	Wiper Motor

A 1
Black

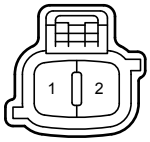

A 2
Black

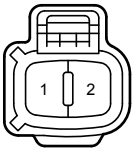

A 4
Black

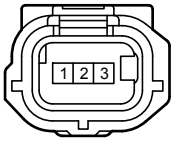

A 6
Gray

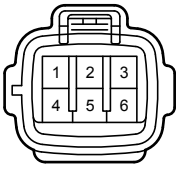

A 8
Yellow

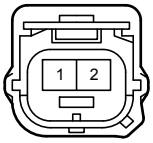

A 9
Black

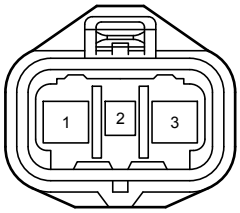

A 12
Gray

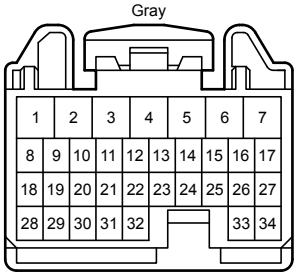

A 13
White

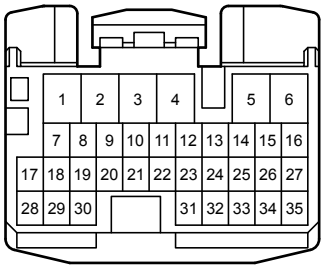

A 14
White

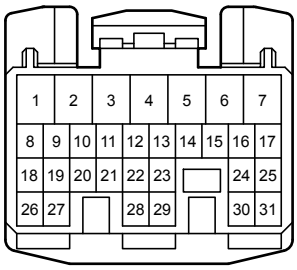

A 15
Black

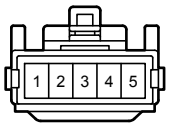

A 16
Black

A 18
Black

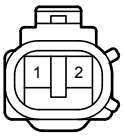

A 19
Black

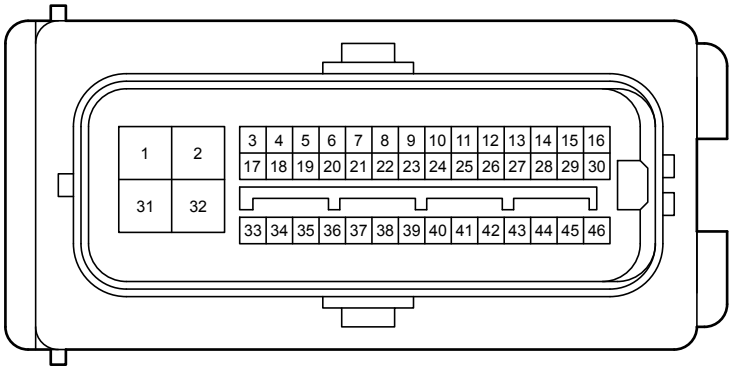

A 20
Black

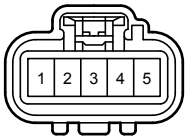

A 21
Gray

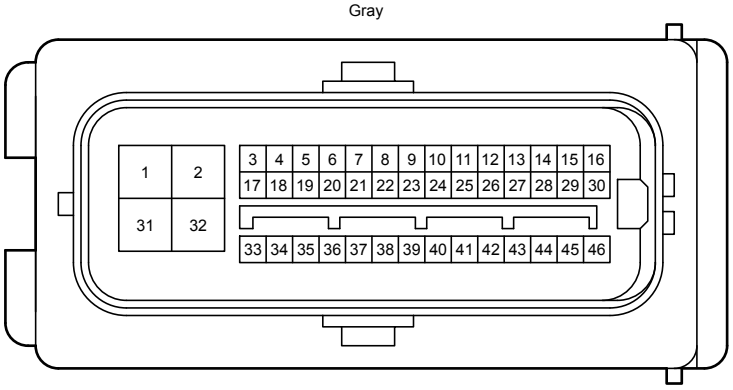

A 22
Gray

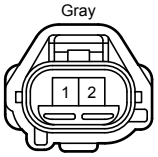

A 23
Black

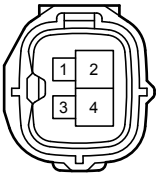

A 24
Black

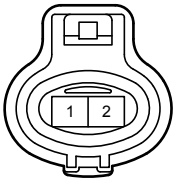

A 25
Gray

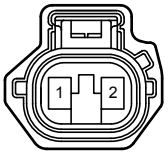

A 26
Gray

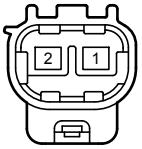

A 27
Black

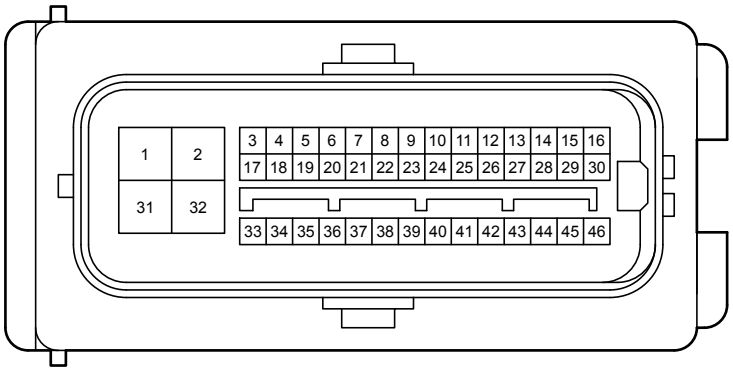

A 28
Black



A 29
Black



A 30
Gray

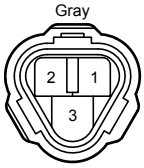
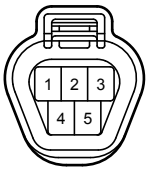
A 32
Black