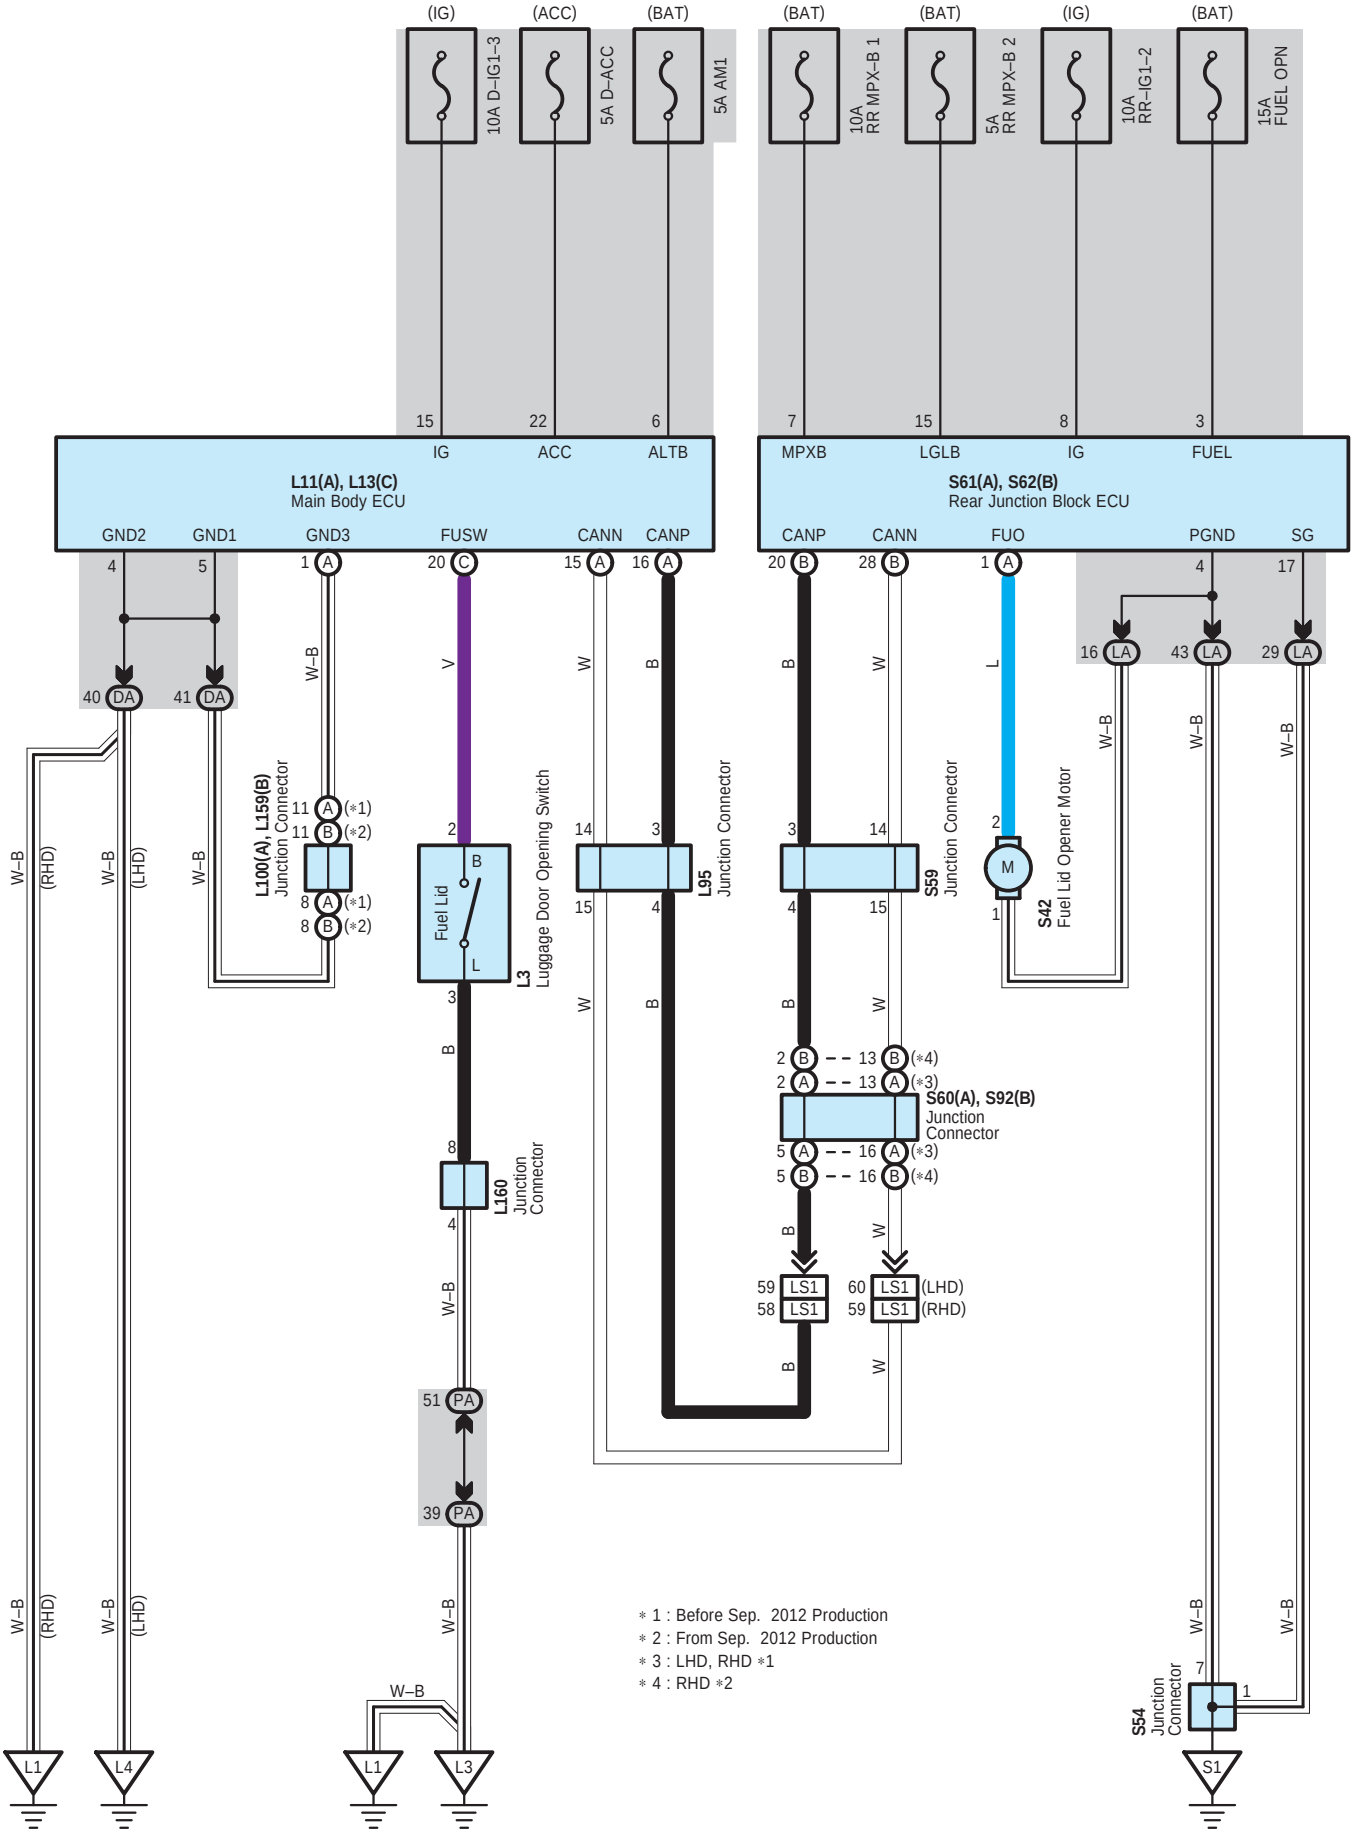
(IG)
(ACC)
(BAT)
(BAT)
(BAT)
(IG)
(BAT)
10A D–IG1–3
5A D–ACC
5A AM1
10A RR MPX–B 1
5A RR MPX–B 2
10A RR–IG1–2
15A FUEL OPN
15
22
6
7
15
8
3
IG
ACC
ALTB
MPXB
LGLB
IG
FUEL
L11(A), L13(C)
Main Body ECU
S61(A), S62(B)
Rear Junction Block ECU
GND2
GND1
GND3
FUSW
CANN
CANP
CANP
CANN
FUO
PGND
SG
40 DA
41 DA
16 LA
43 LA
29 LA
L100(A), L159(B)
Junction Connector
Fuel Lid
L3
Luggage Door Opening Switch
L95
Junction Connector
S59
Junction Connector
S42
Fuel Lid Opener Motor
S60(A), S92(B)
Junction Connector
L160
Junction Connector
59 LS1
58 LS1
60 LS1 (LHD)
59 LS1 (RHD)
51 PA
39 PA
S54
Junction Connector
W–B
(RHD)
(LHD)
L1
L4
L3
S1
∗ 1 : Before Sep. 2012 Production
∗ 2 : From Sep. 2012 Production
∗ 3 : LHD, RHD ∗1
∗ 4 : RHD ∗2

L 3
Black

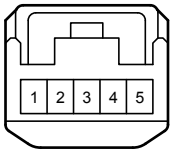

L 11
White

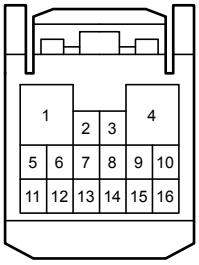

L 13
White

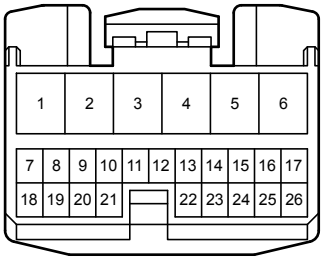

L 95
Gray

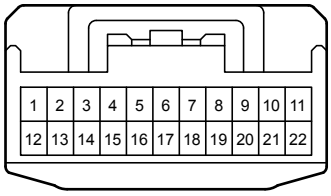

L100
Blue



L159
Blue



L160
Gray

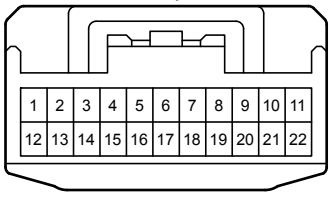

S 42
Black

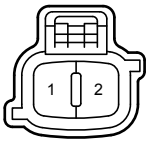

S 54
White

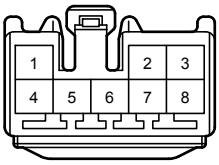

S 59
Black

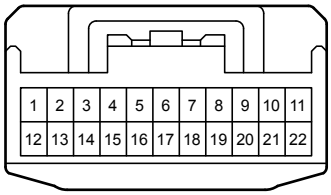

S 60
Black

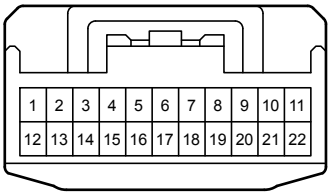

S 61
White

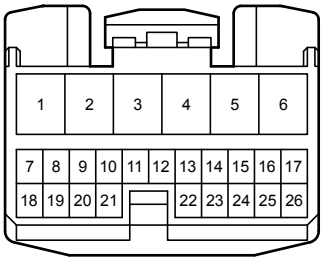

S 62
White

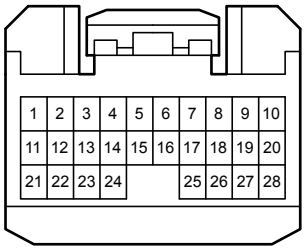

S 92
Gray

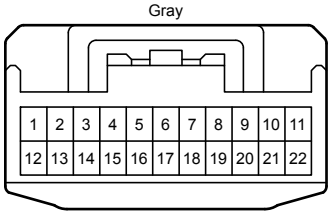

DA
White

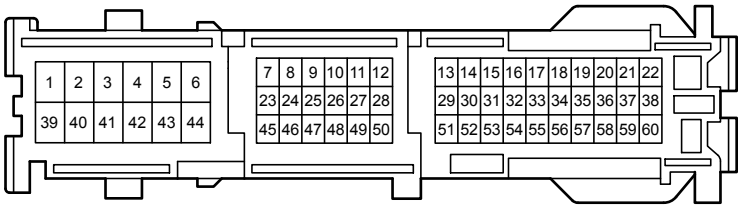

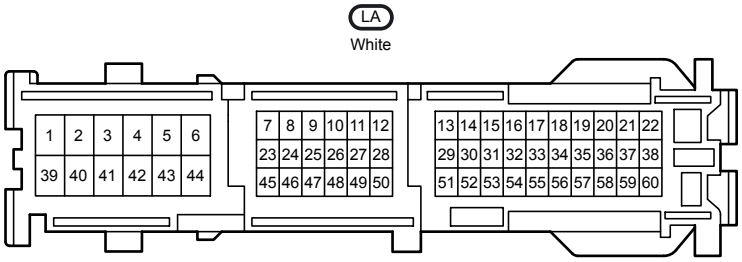
LA
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60

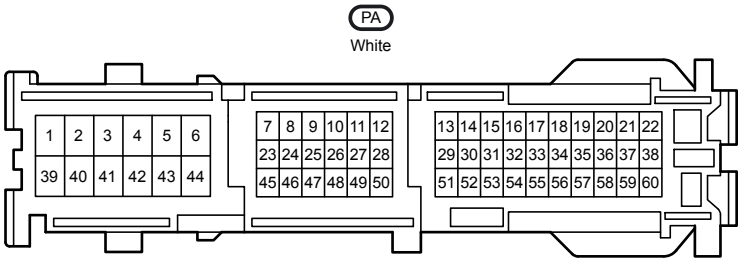
PA
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60

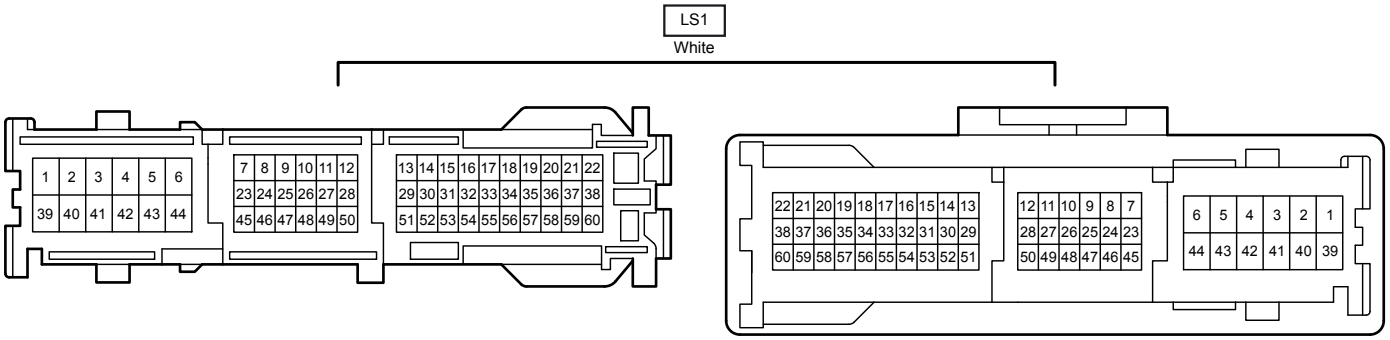
LS1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39