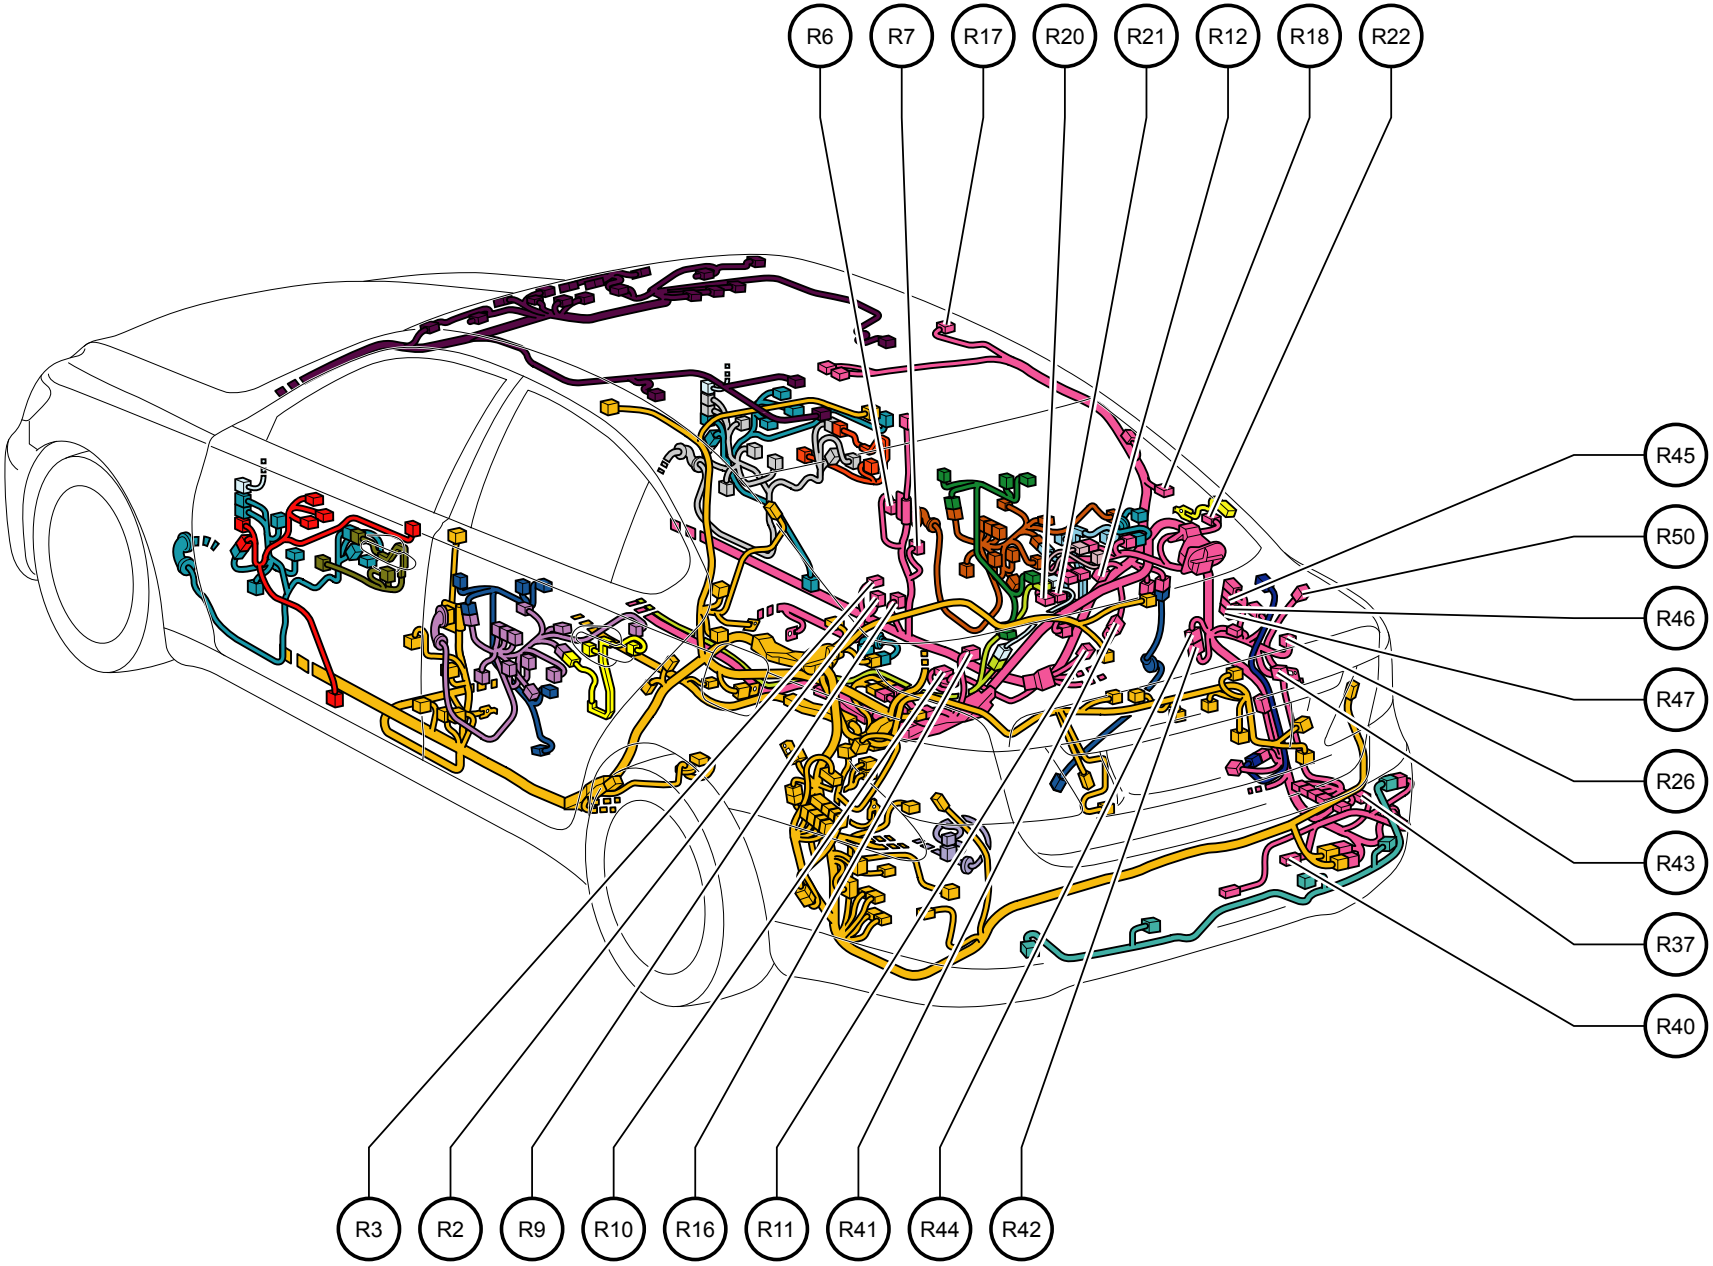
R6
R7
R17
R20
R21
R12
R18
R22
R45
R50
R46
R47
R26
R43
R37
R40
R3
R2
R9
R10
R16
R11
R41
R44
R42

R 2 Front Pre-Crash Seat Belt Motor RH
R 3 Front Pretensioner RH
R 6 Front Door Courtesy Light Switch Assembly RH
R 7 Side Airbag Sensor Assembly RH
R 9 Front Tension Reducer RH
R 10 Sub Fuel Sender Gauge Assembly
R 11 Rear Airbag Sensor RH
R 12 Rear Door Courtesy Light Switch Assembly RH
R 16 Disc Player Controller
R 17 Curtain Shield Airbag Assembly RH
R 18 Rear Header Speaker Assembly RH
R 20 Floor Stereo Component Speaker Assembly
R 21 No.2 Clearance Warning Buzzer
R 22 Rear Pretensioner RH
R 26 Rear Acceleration Sensor Assembly
R 37 Door Control Receiver
R 40 Outside Luggage Electrical Key Antenna
R 41 Junction Connector
R 42 Junction Connector
R 43 Junction Connector
R 44 Junction Connector
R 45 Junction Connector
R 46 Junction Connector
R 47 Junction Connector
R 50 Theft Warning Siren Assembly

R 2
White




R 3
Yellow

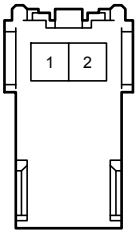


R 6
White

R 7
Yellow

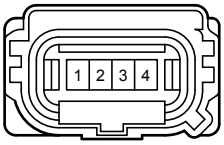


R 9
White

R 10
White




R 11
Yellow

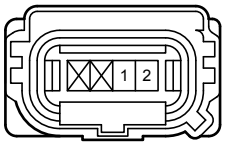


R 12
White

R 16
White

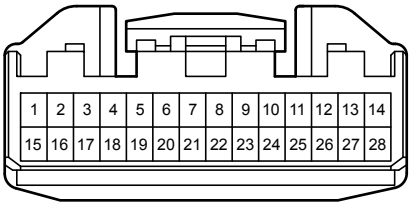


R 17
Black

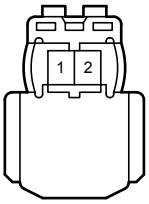


R 18
White




R 20
White




R 21
Black




R 22
Yellow

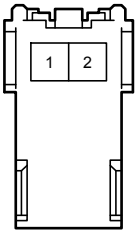


R 26
Black

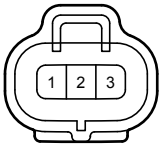


R 37
White

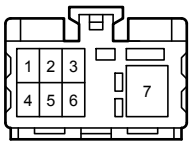


R 40
White




R 41
White

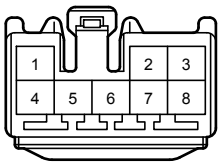


R 42
Black

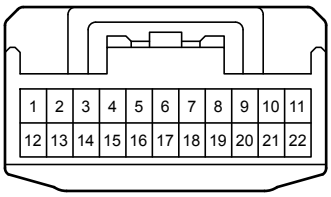


R 43
White

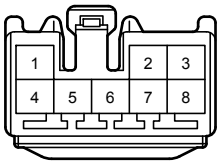


R 44
Black

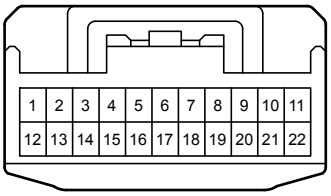


R 45
White




R 46
White




R 47
White
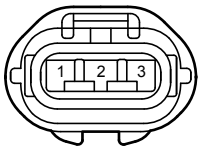
R 50
Black