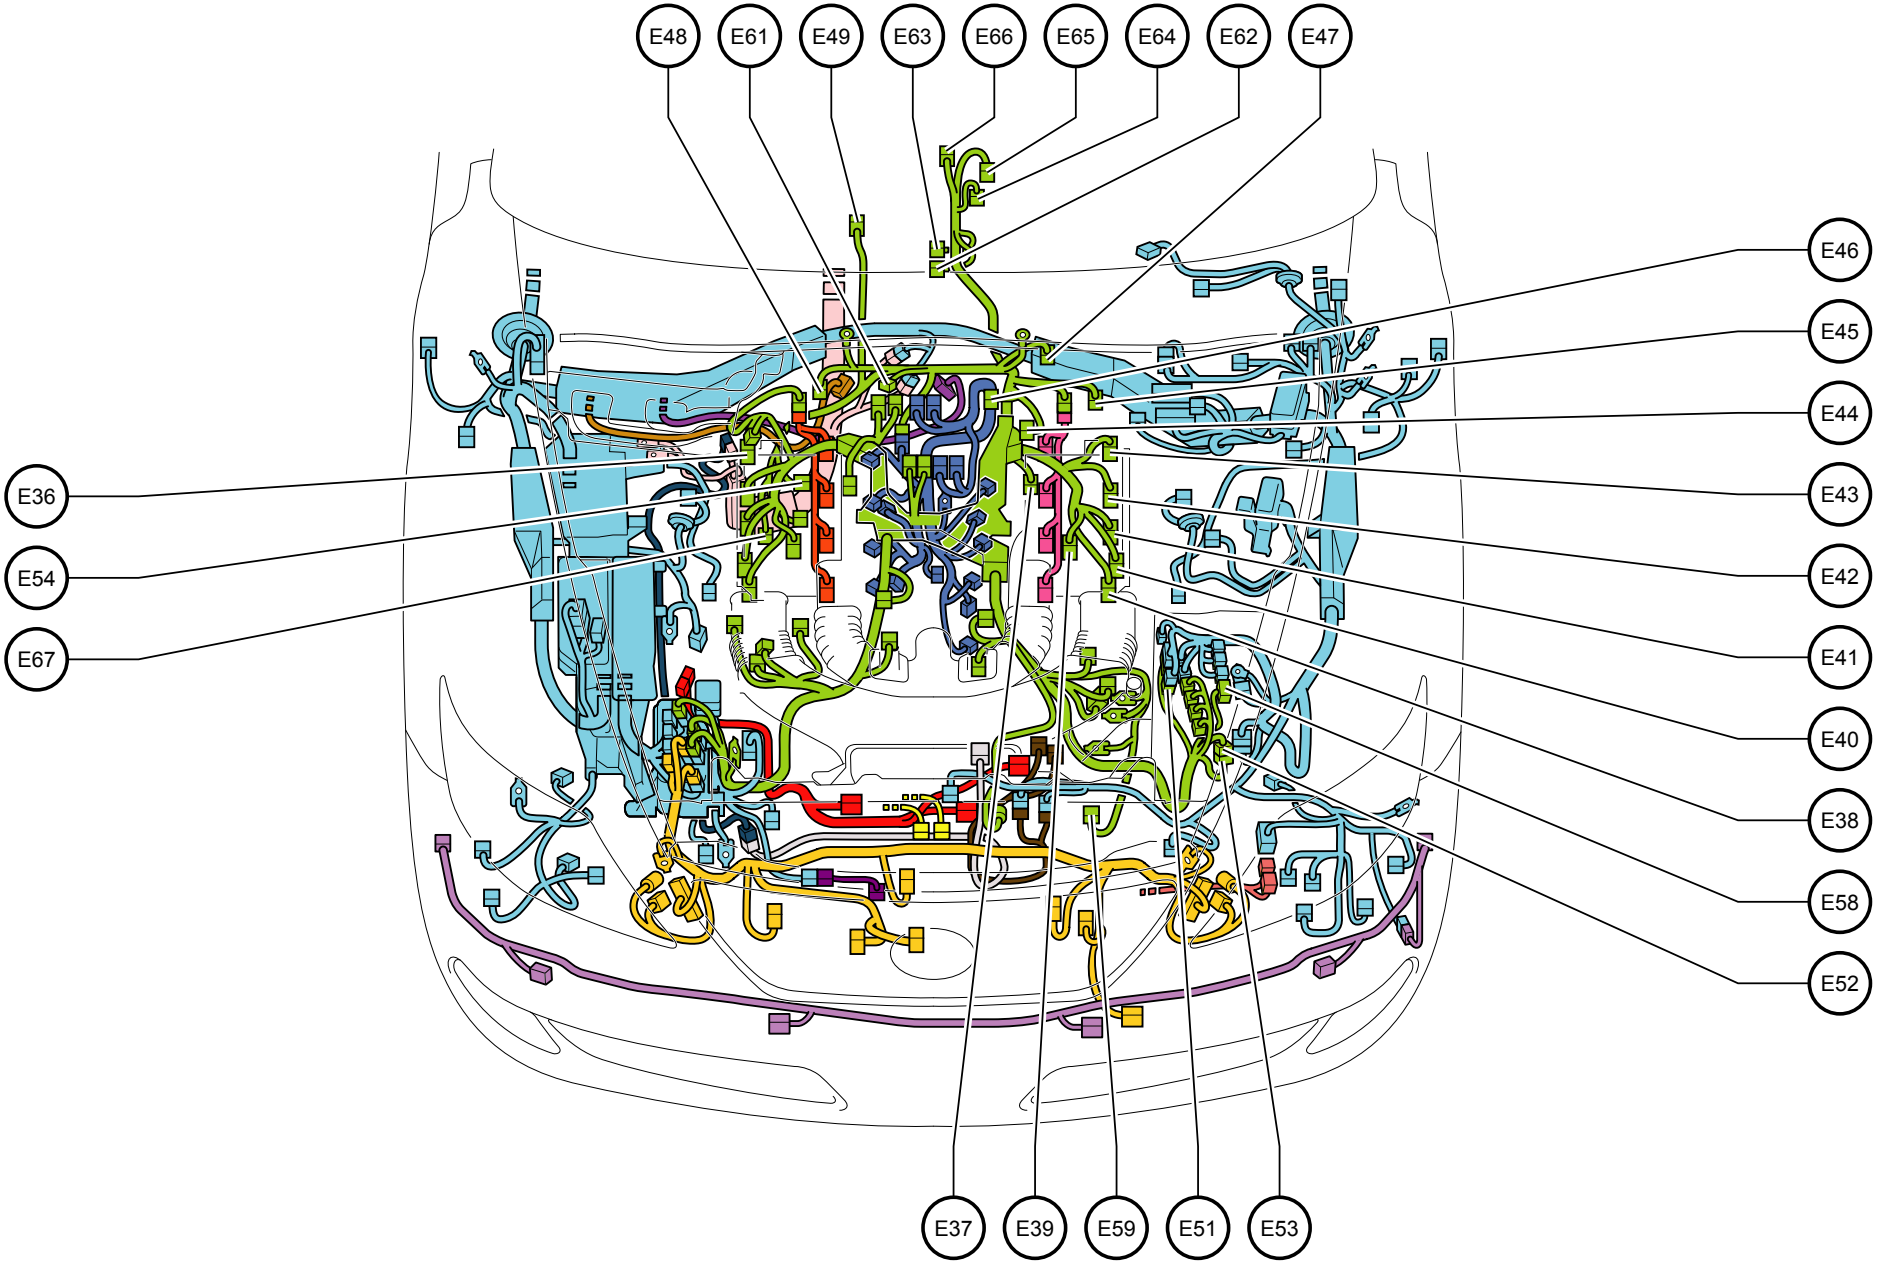
E48
E61
E49
E63
E66
E65
E64
E62
E47
E46
E45
E44
E43
E42
E41
E40
E38
E58
E52
E36
E54
E67
E37
E39
E59
E51
E53

E 36 Ignition Coil Assembly No.8
E 37 Noise Filter (Ignition Bank 1)
E 38 Ignition Coil Assembly No.1
E 39 VVT Sensor (Bank 1 Intake Side)
E 40 VVT Sensor (Bank 1 Exhaust Side)
E 41 Ignition Coil Assembly No.3
E 42 Ignition Coil Assembly No.5
E 43 Spill Control Valve (Bank 1)
E 44 Purge VSV
E 45 Ignition Coil Assembly No.7
E 46 Intake Air Control Valve Actuator
E 47 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E 48 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
E 49 Park/Neutral Position Switch
E 51 Junction Connector
E 52 Junction Connector
E 53 Junction Connector
E 54 Crankshaft Position Sensor
E 58 Hybrid Vehicle Control ECU
E 59 With Motor Compressor Assembly
E 61 Fuel Relief Valve Assembly
E 62 Motor Generator No.1
E 63 Motor Generator No.2
E 64 Electronically Controlled Transmission Solenoid
E 65 Oxygen Sensor (Bank 1 Sensor 2)
E 66 Transmission Revolution Sensor
E 67 Oil Pump Thermistor

E 36
Black



E 37
Gray

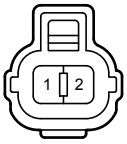

E 38
Gray



E 39
Black

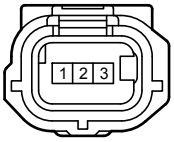

E 40
Black

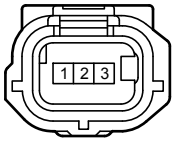

E 41
Black



E 42
Gray

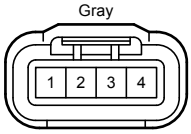

E 43
Gray

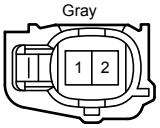

E 44
Black

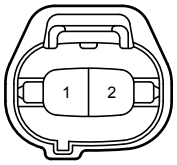

E 45
Black



E 46
Black

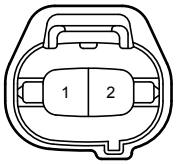

E 47
Dark Gray

E 48
Dark Gray

E 49
Gray

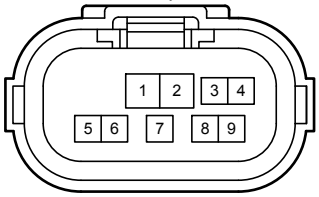

E 51
Blue

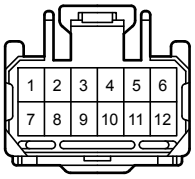

E 52
Black

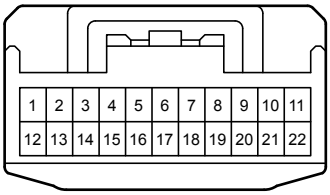

E 53
Black

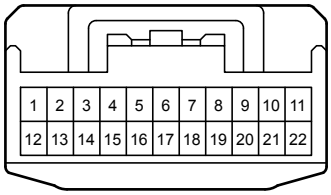

E 54
Black

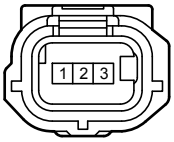

E 58
Gray

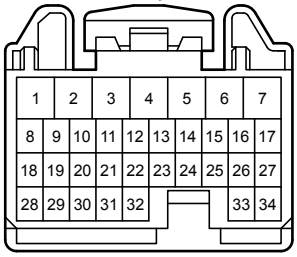

E 59
Gray

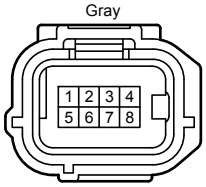

E 61
Gray

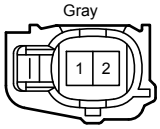

E 62
Gray

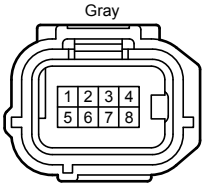

E 63
Gray

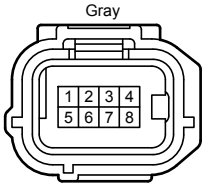

E 64
Gray

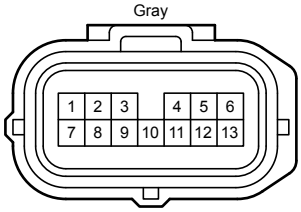

E 65
Dark Gray

E 66
Black

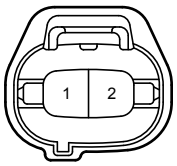
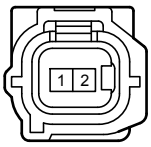
E 67
Black